


# Instructions

AS-ZPPDGMV-001

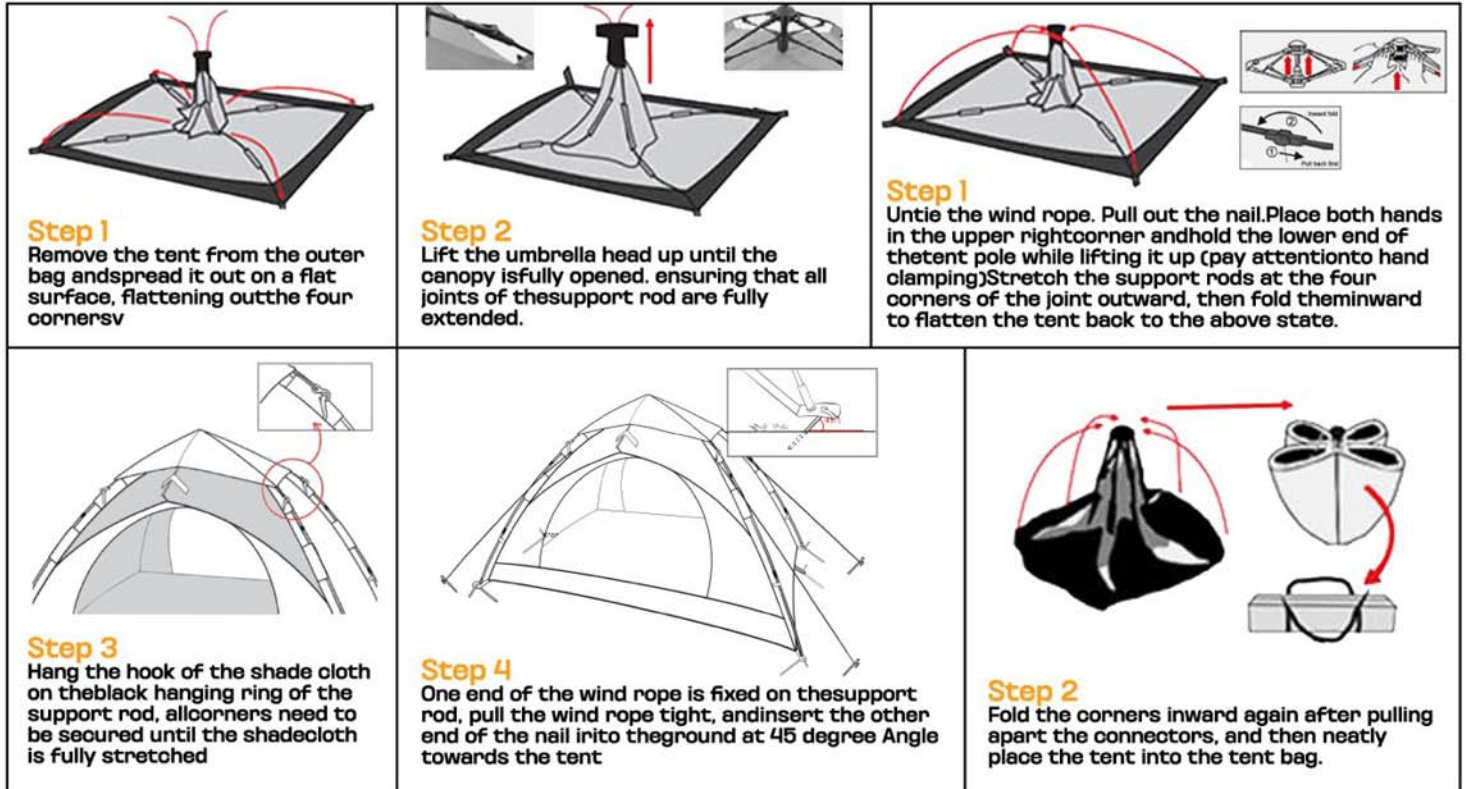

**Note: Make sure that all doors are open when dismantling to avoid air chambers. Beginners should plan a little more time the first time.**

## Maintenance Instructions and Tips for Tent Usage:

1. This tent is a leisure tent and is well-suited for parks, beaches, campsites, festivals, and other everyday environments. However, it should not be used in very strong winds, heavy rain, or snowfall. (In general, camping should be avoided during weather warnings.)
  2. Choose the campsite wisely to avoid possible floods, rockfalls, lightning strikes, avalanches, or other terrain hazards.
  3. Set up the tent on a flat surface, remove sharp objects such as stones that could damage the tent. It should also be placed away from fire sources and heating devices.
  4. Prolonged exposure to sunlight (for a period of 4 consecutive weeks) should be avoided, as high temperatures can lead to deformations and discoloration of the tent poles. After using the tent, pack it back into the provided tent bag.
  5. Rain protection properties improve when you attach the rain cover to the tent's roof.
  6. Entering the tent with shoes is not recommended. Use the vestibule for this purpose.
  7. On rainy days, dig drainage trenches around the tent to allow rainwater to flow away easily.
  8. Thoroughly clean the interior and exterior of the tent and dry it after each use.
  9. The tent features screen doors on both sides for ventilation and quick drying. (Depending on the tent, windows may also be included.)
  10. The tent is packed in a fabric tent bag.
  11. In the event of a fire, evacuate the tent immediately if the fire cannot be extinguished independently. Quickly open the tent door closest to you to escape the fire and prevent the tent poles from collapsing, potentially trapping you inside. Safety comes first.
1. Avoid cooking, smoking, high temperatures, and open flames inside the tent. If it's necessary to cook in the tent during bad weather, use a fire-resistant mat or other insulating materials under the stove, and keep all doors and windows of the tent open.
  2. Do not use candles and other open flames inside the tent; instead, use headlamps, flashlights, and tent lights.
  3. Place sharp objects in the corner of the tent or in the vestibule to prevent scratches on the tent.
  4. After each trip, clean and tidy the interior and exterior of the tent, the poles, guy lines, and tent stakes. The primary cleaning targets are coarse dirt and moisture, such as rain, snow, and dust.
  5. Pay special attention to ensuring the tent is dried after each camping excursion. The purpose of drying is to keep the tent dry and eliminate moisture, which increases the tent's lifespan.
  6. The tent should not be machine-washed but can be cleaned with water (be sure to spray with cold water; hot water, hand rubbing, and other washing methods are prohibited). After cleaning with non-alkaline detergents, let it dry in a ventilated place, fold it, place it in the storage bag, and store it in a dry and cool place. Avoid folding the tent too regularly, as excessive folding after repeated use can lead to hardening and cracking.