 
Application Instruction

- 28 Au

1.Gradually pull the handle, it will be more advantageous to protect the cartridge

 
2.Contrarotate the left handle is for hot water, the greater angle you open, the larger flowrate you get.Conversely the smaller angle you open, the little flowrate you get till turn off. Clockwise rotation the right handle is for cold water, the greater angle you open, the larger flowrate you get. Conversely the smaller angle you open, the little flowrate you get till turn off.






Installation Condition

870




Notice: In order to have the perfect condition of the water flow, please turn both handles to 30 degree angle slowly so that the air inside the tubes can be clean when you use this product at the 1st time.

Two Handles Basin Mixer Installation Instruction

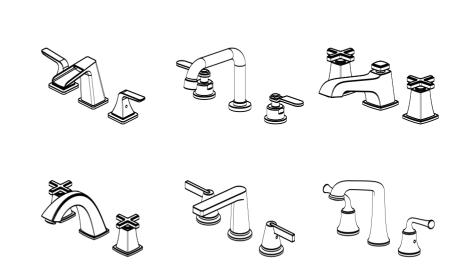

Standard Part List

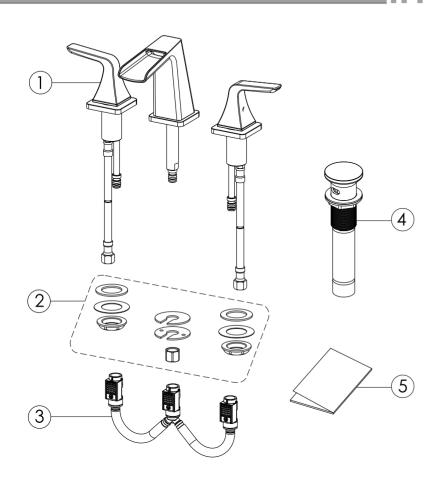

5.0 A.

NO.	Part Name	Quantity
1	Body Assy	1
2	Fitting Assy	1
3	Hose	1
4	Рор-ир	1
5	Instruction	1

一 1. Please flush the water pipe for at least 2 minutes before installation, ensure that no impurities interference, and supplies hot and cold water from angle valve. 2. Pass the body (left/hot) through the reserved hole of the basin 卢 3. Pass the body (right/cold) through the reserved hole of 4. Pass the spout through the reserved hole of the basin. the basin. ö 000 <u>10</u>00 10 Î Î Ê 6. Connect the inlet hose to the angle valve the tube connected to the hot water angle valve, and the cold warer angle valve, with the angle valve and the main body of the faucet whether is leaking, installation is completed. 5. Adjust direction of faucet and spout Install spout lock screw and gasket to faucet and scre tight. Gasket first.