




WARNING!


Children have died from furniture tipover. Fixed wall device have been included with this product; you must install the fixed wall device according to these instructions in order to minimize the risk of furniture. If you have any questions about this product or the Fixed wall device, please contact us immediately.

Never allow children to climb or hang on furniture, including drawers or cabinet doors.


In addition to installing the restraints, to help prevent tip-over:

1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.

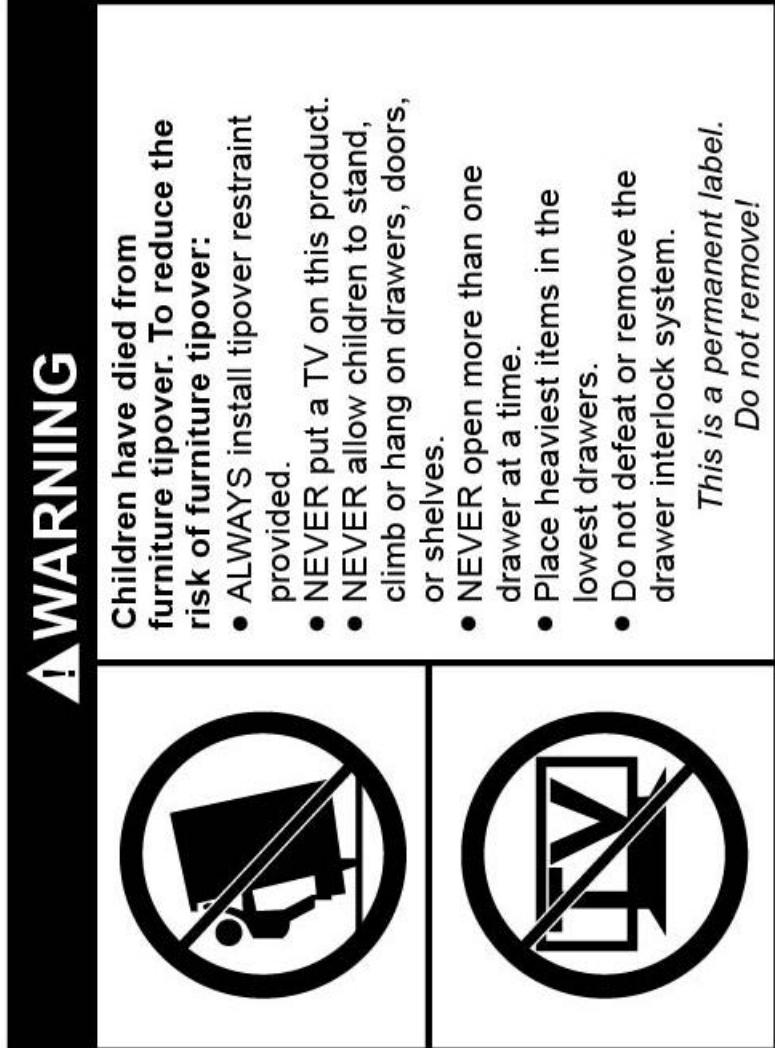

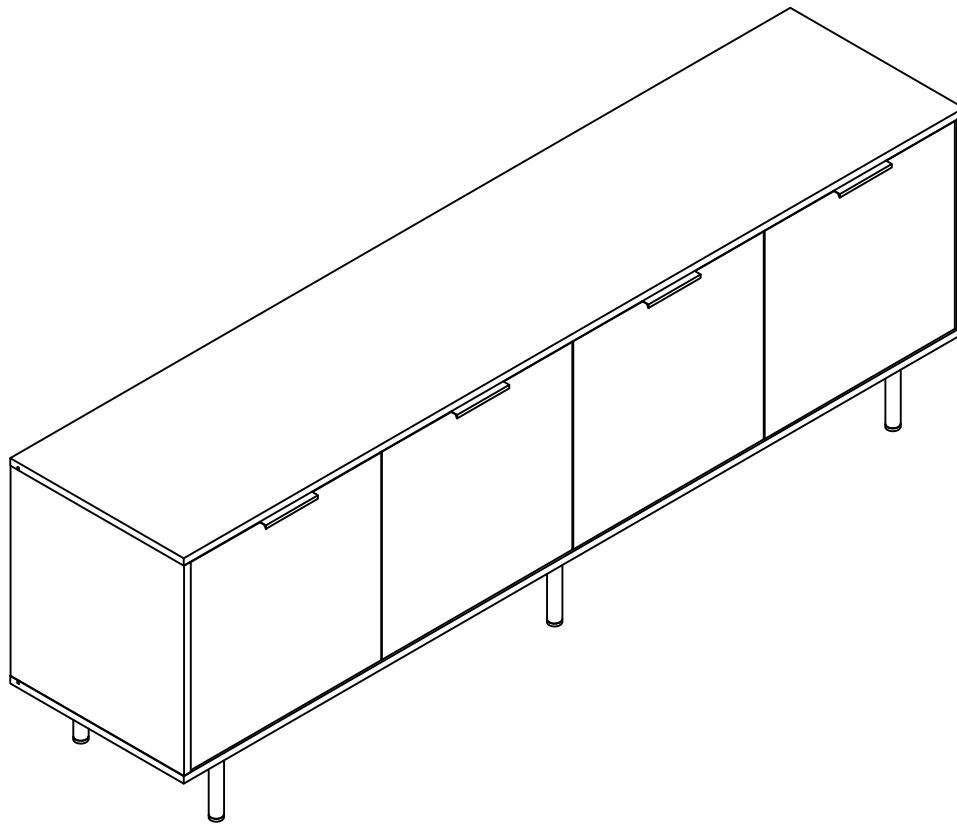


JMY2208077

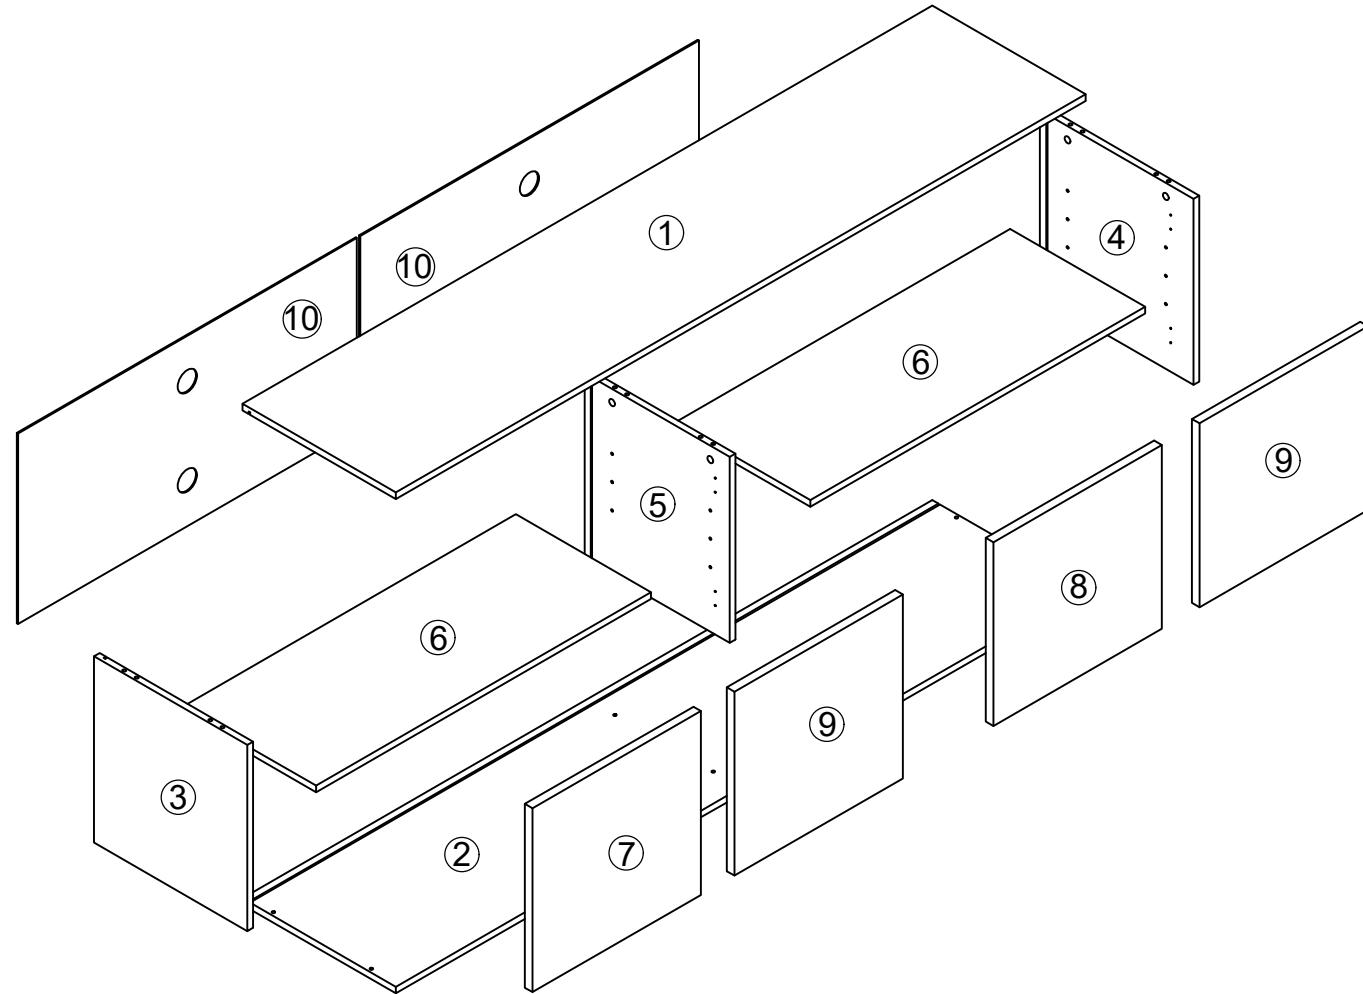


K 96mm 4PCS	L 2PCS	M 150mm 6PCS	N 2PCS							
A 6PCS	B 6PCS	C 8*40 6PCS	D 3.5*14 84PCS	E 7*50 6PCS	F 4PCS	G 4PCS	H 12PCS	I 3*12 12PCS	J 8PCS	

1

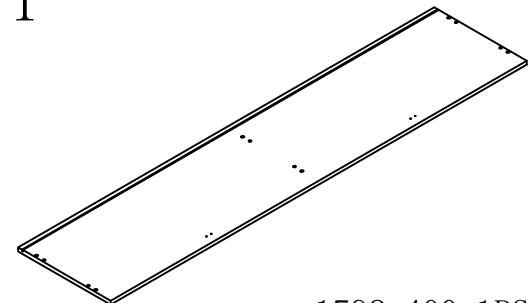


1798*400 1PS

2

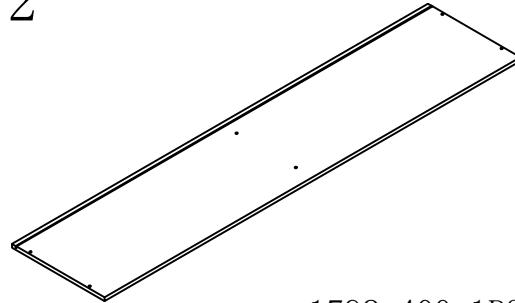


1798*400 1PS

3

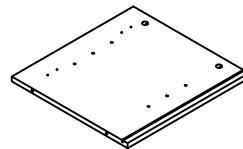


420*400 1PS

4

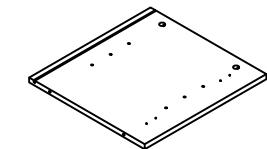


420*400 1PS

5

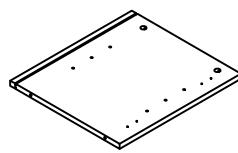


420*378 1PS

6

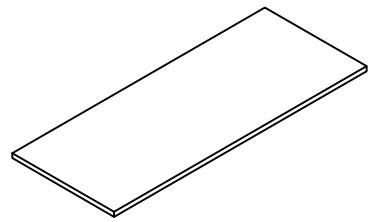


873*352 2PS

7

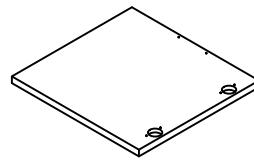


415*439 1PS

8

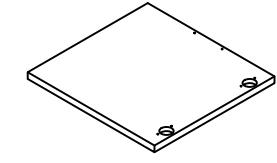


415*439 1PS

9

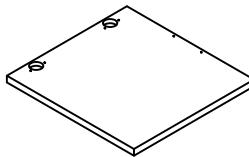

415*439 2PS

10

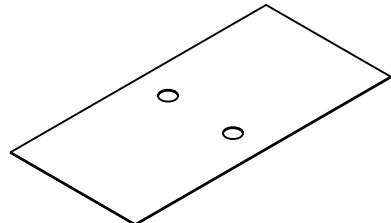


883*430 2PS




Hardware installation demonstration

NOTE:Please make sure "A"hardware tightened and can't be pulled out!


I

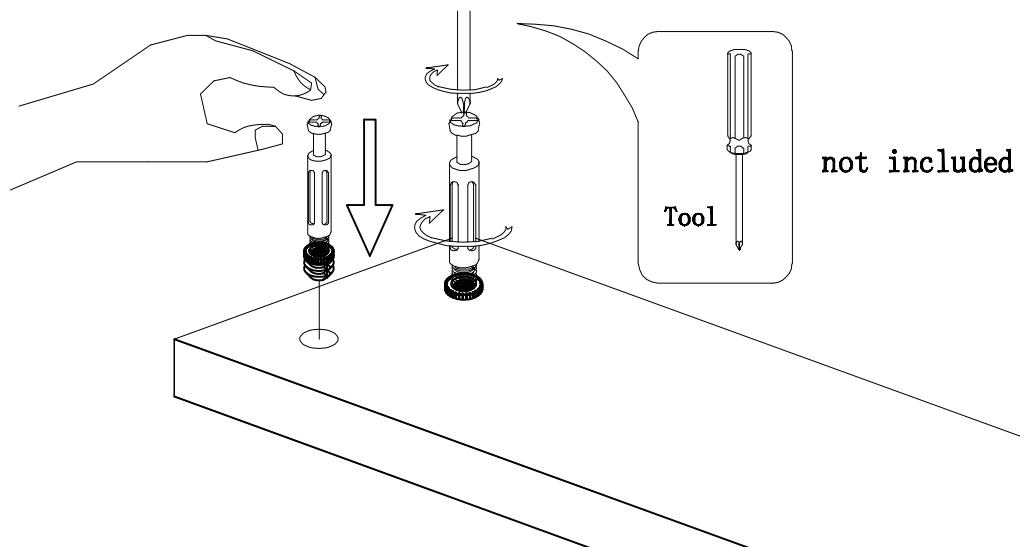

II

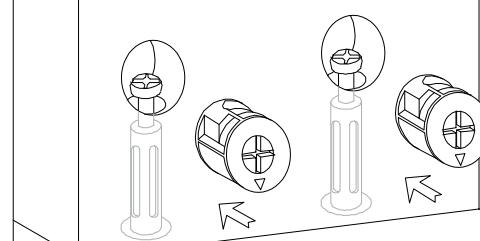

III

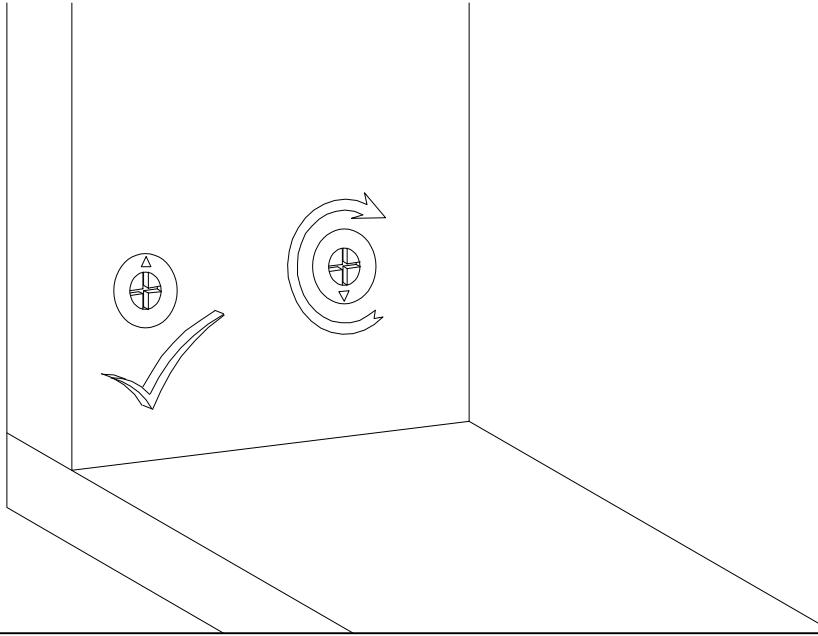


IV



Scan QR code for assembly video


1

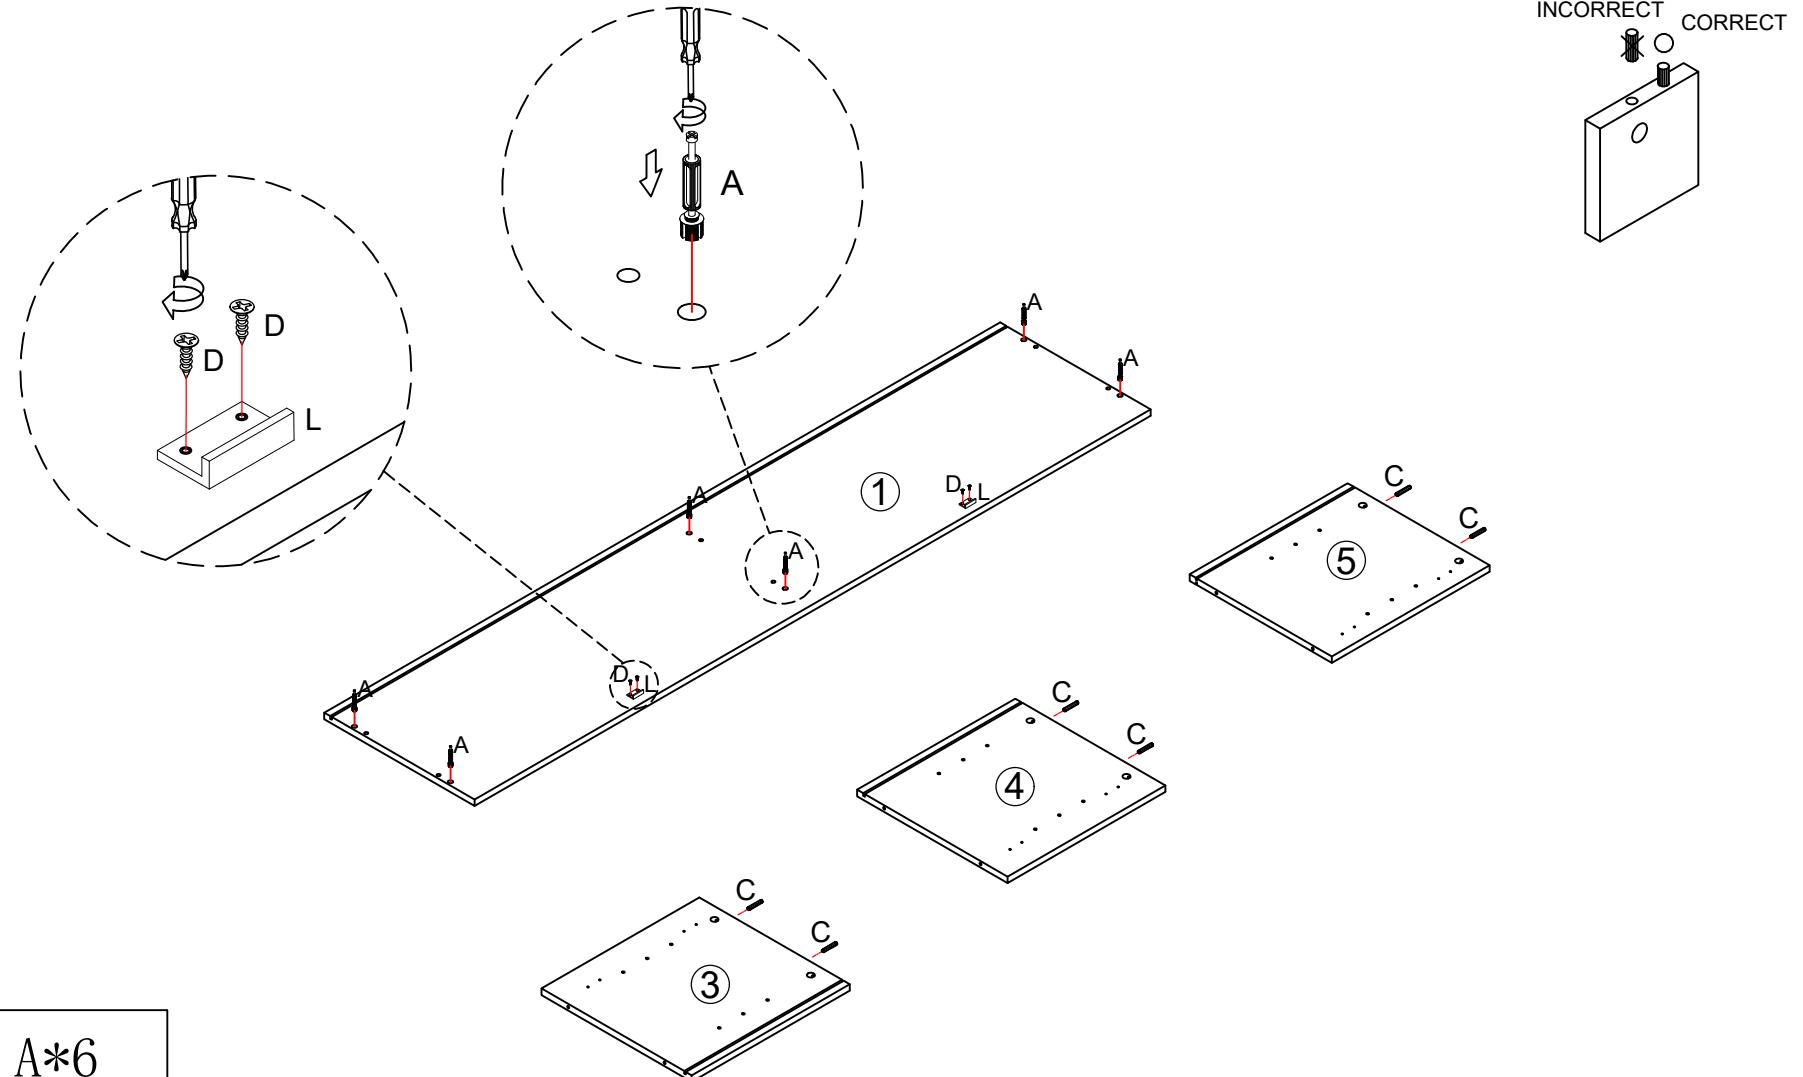

	A*6
	C*6
	D*4
	L*2


put A on board ①
put C on board ③④⑤

2

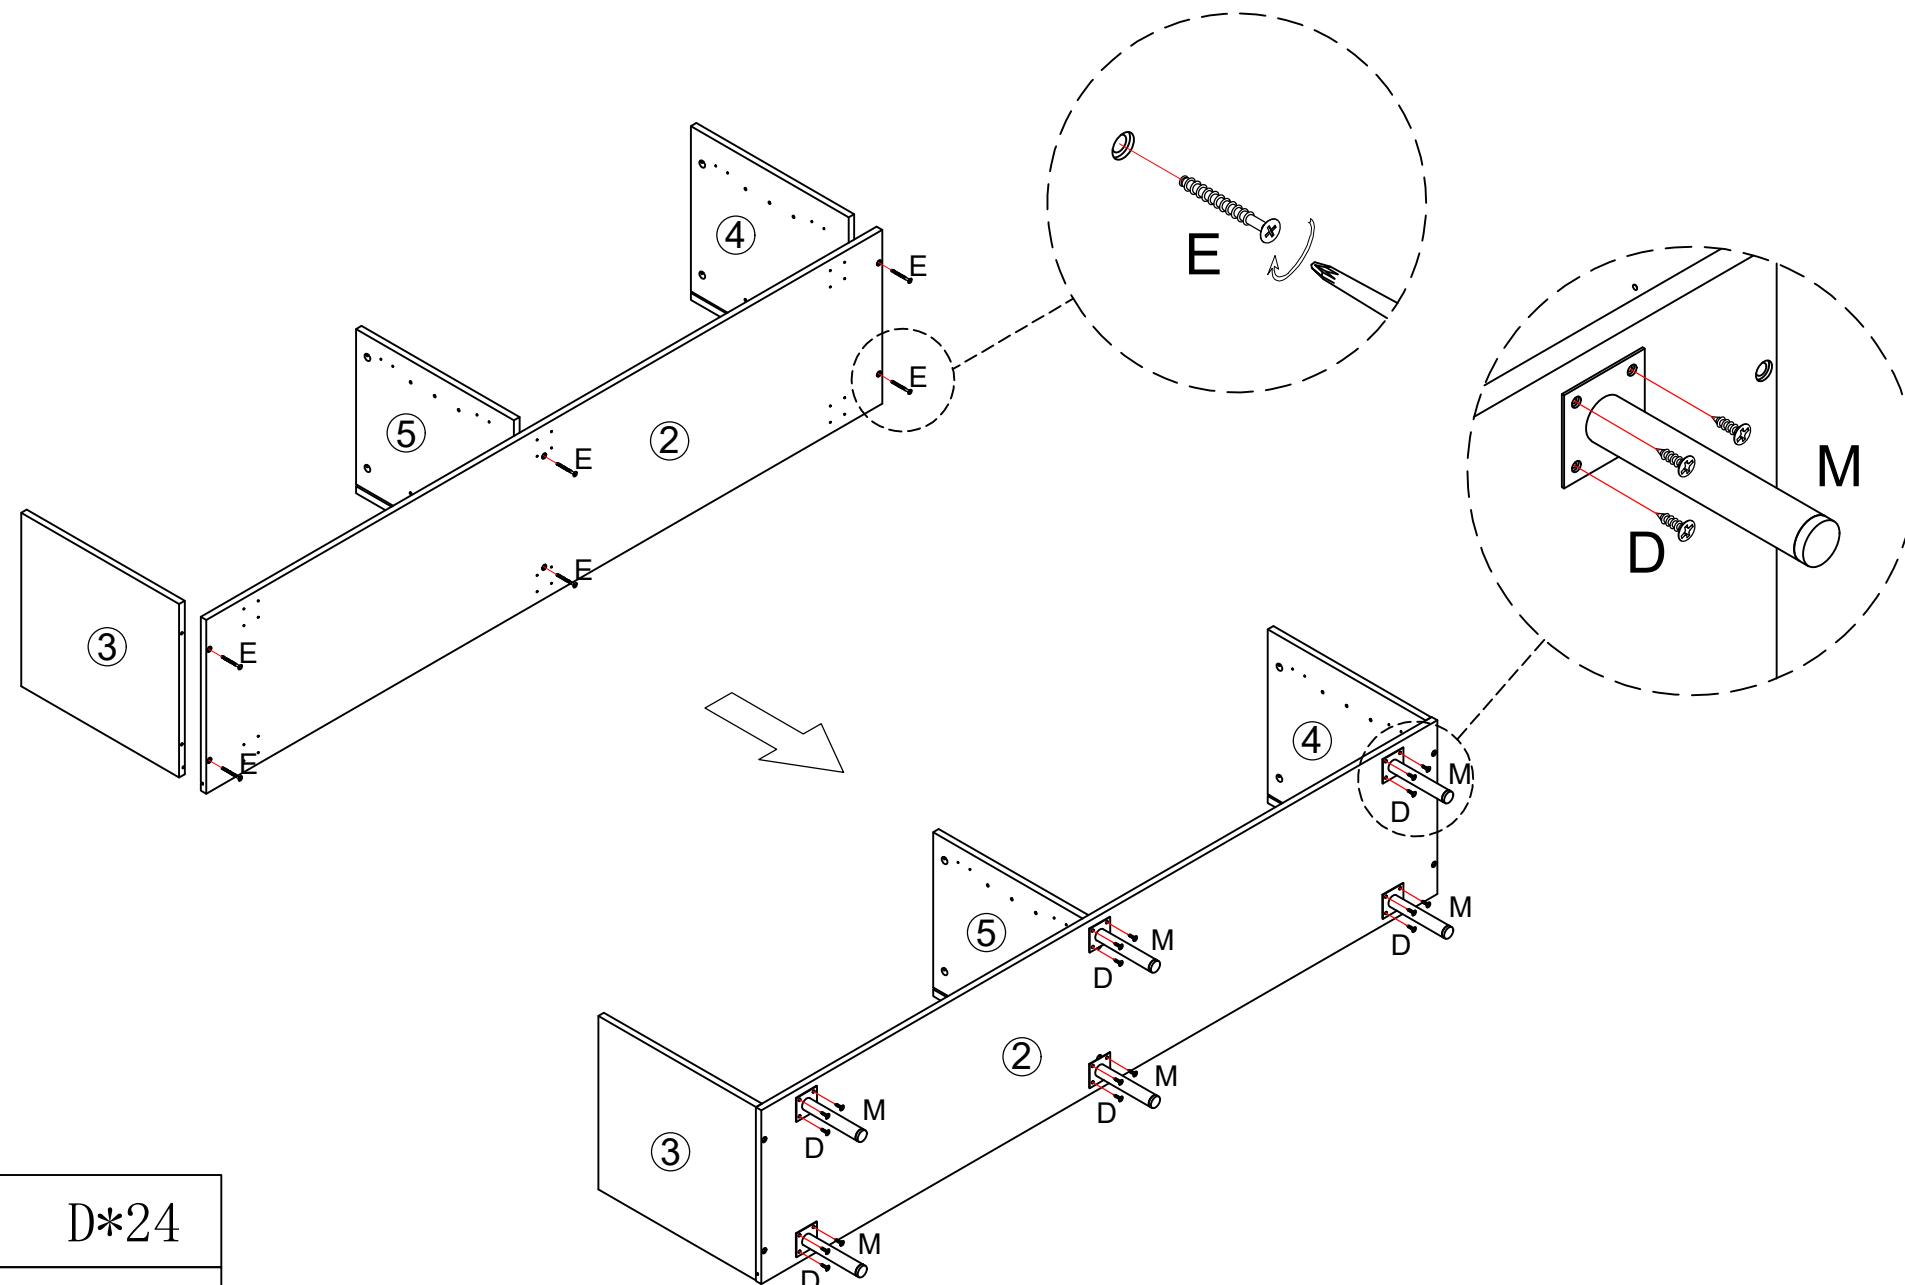


	D*24
	E*6
	M*6

3

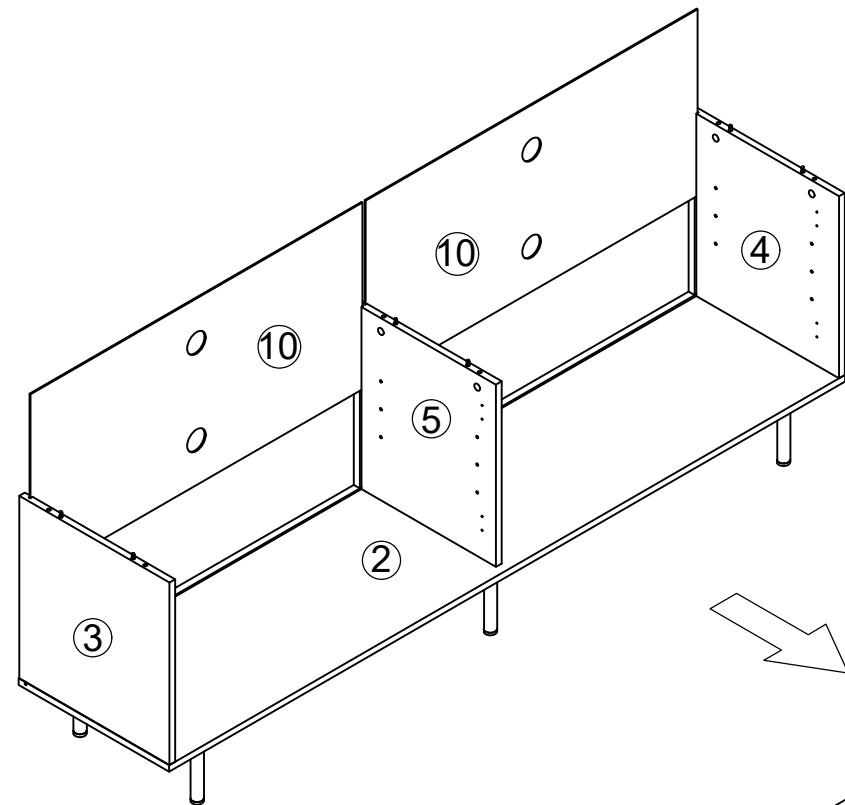


Make sure the arrow on the screw align to the hole on the side.

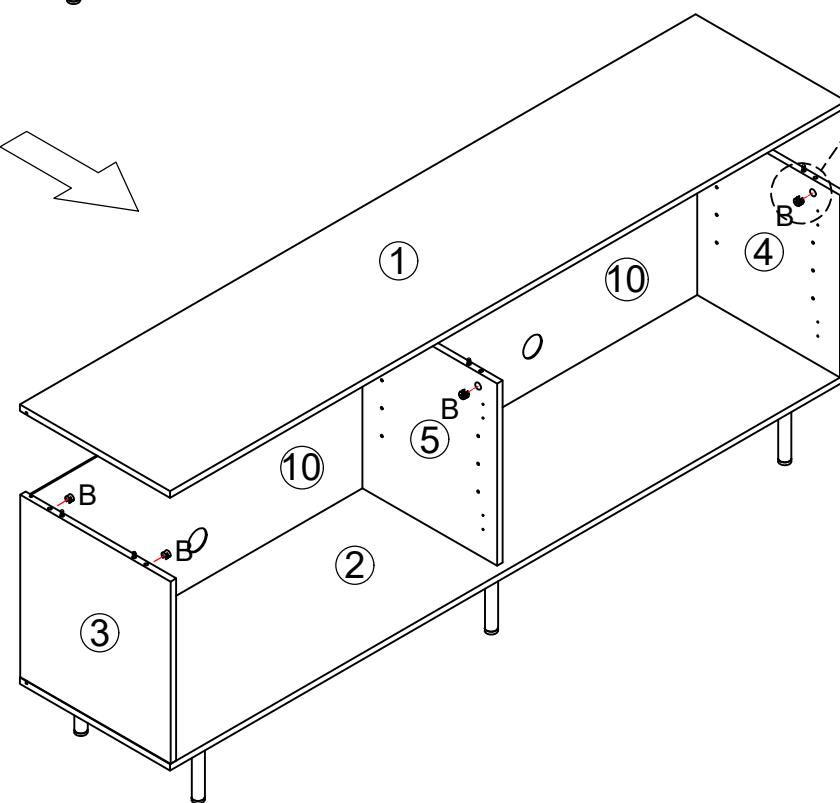

B*6


put B on board ③④⑤

4

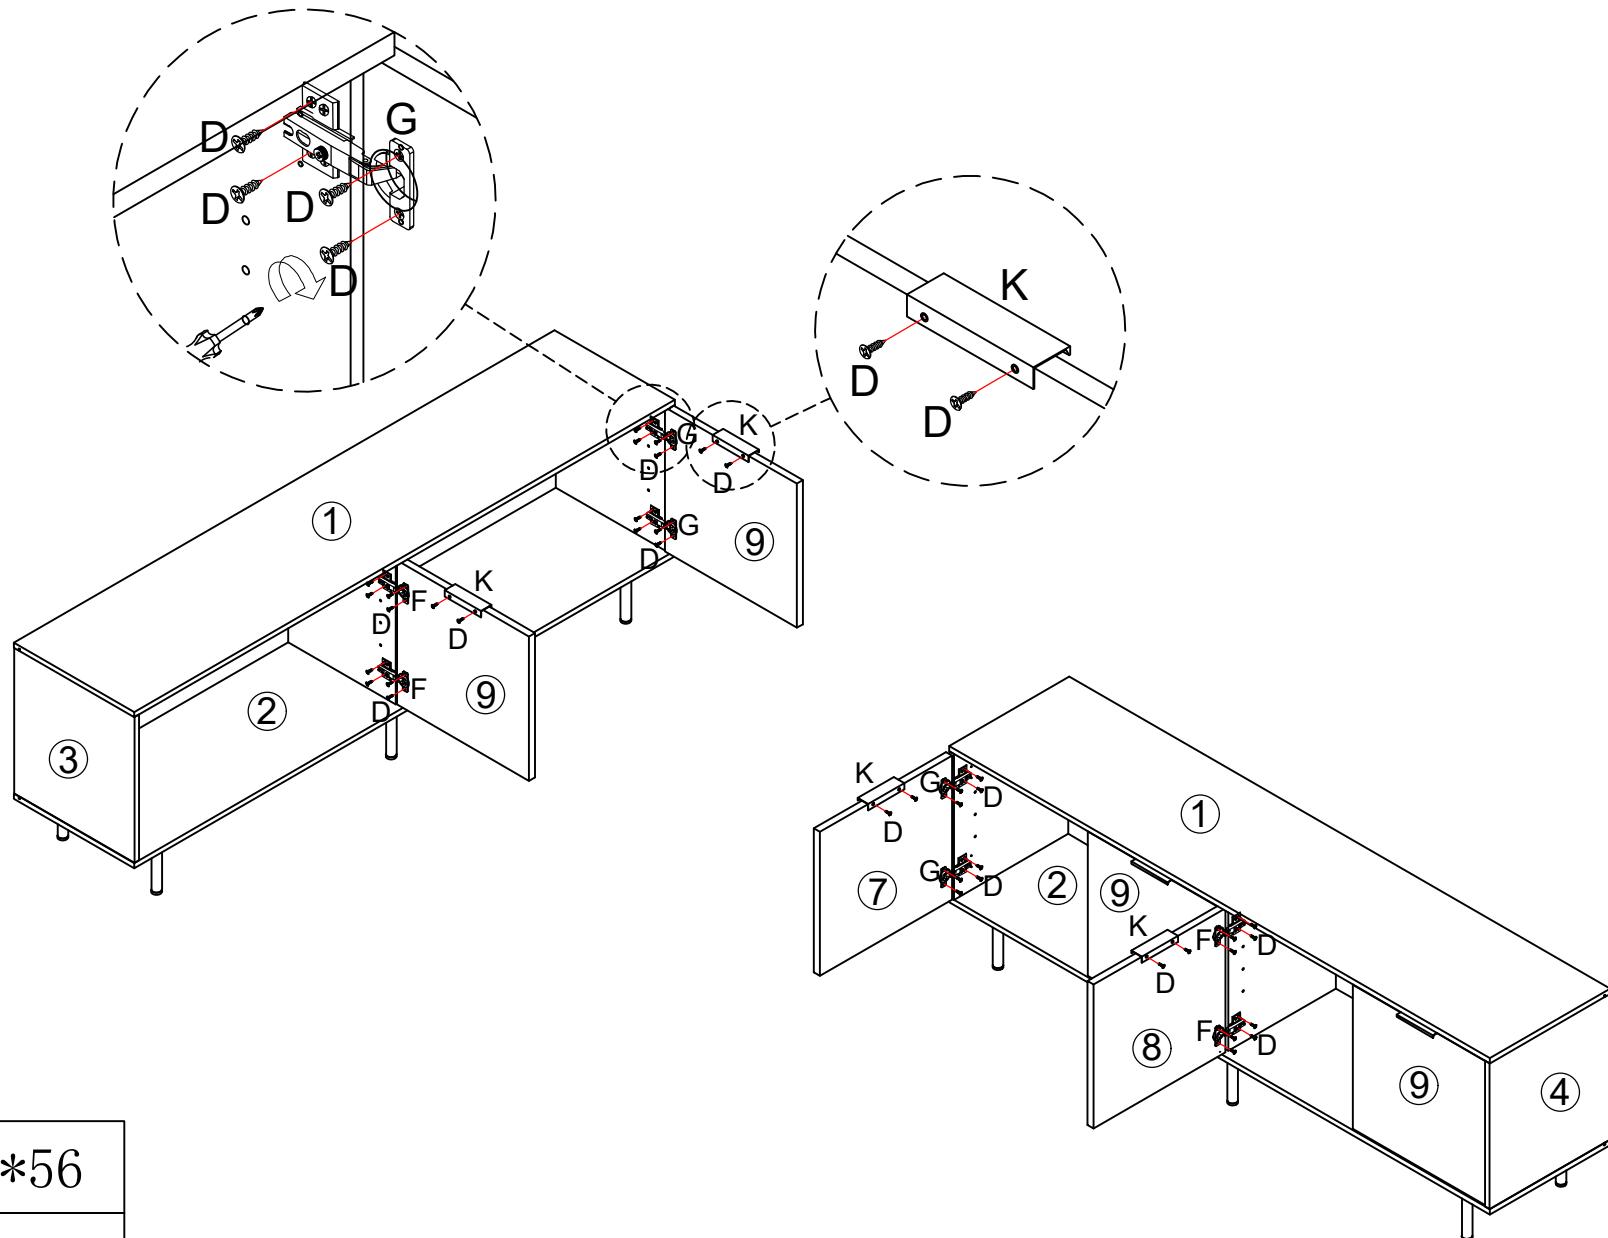


	D*56
	F*4
	G*4
	K*4

⑤

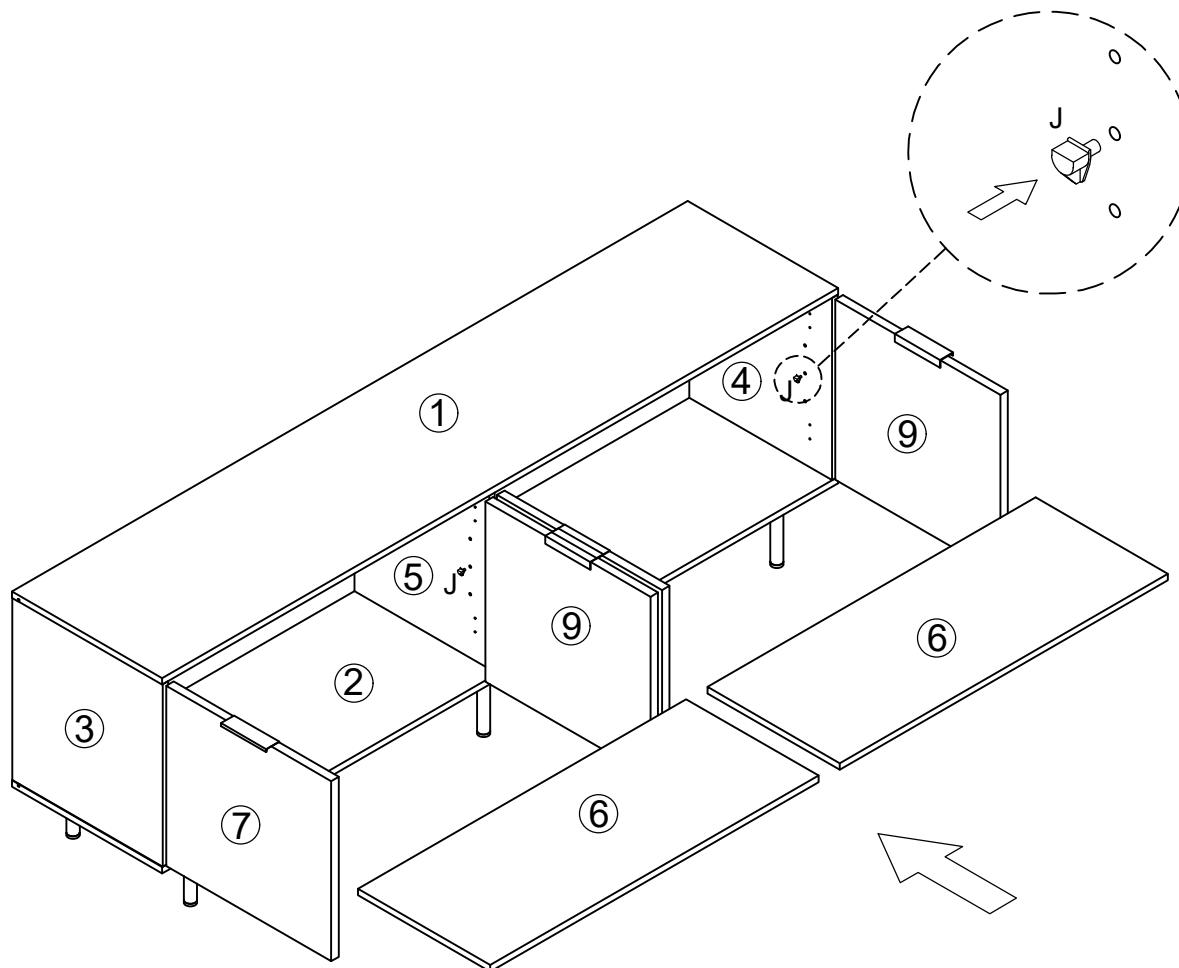

J*8

⑥





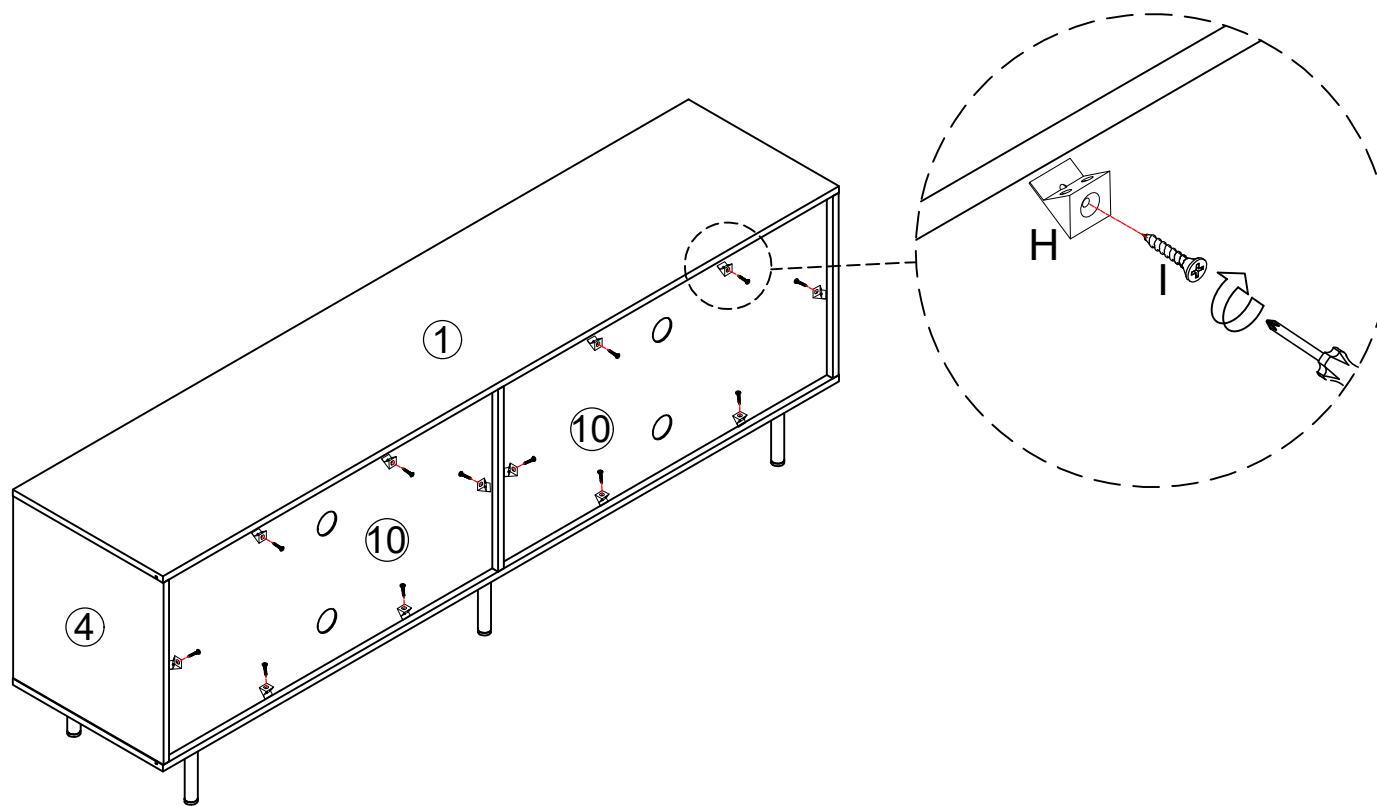


H*12




I*12

7

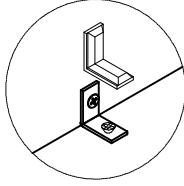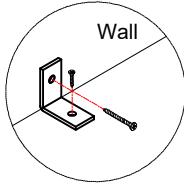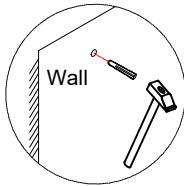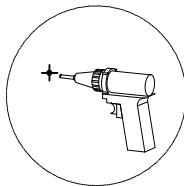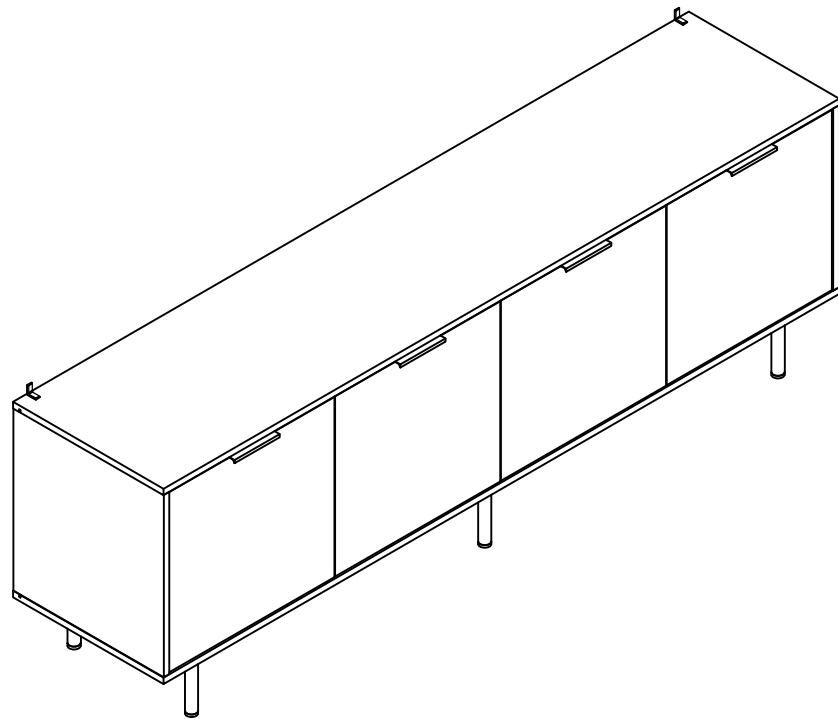

Please install tip-proof fitting.

 

N*2

⑧

