

Check Remarks before use

1. Place lamp under sunshine for 4-6h after you get goods and turn on, because it only reserve part energy in battery.
2. The less time to charge under sunshine, the less time to work at night, Working time depends on surrounding, geography latitude, seasons etc.
3. There is the difference of working time and brightness extent for different light, please note.
4. Please clean the panel and in case of poor charging effect if it happen to have obstacle in panel in using.

Product Manual



Set working time of 4h or 8h, then close

Open the light mandatorily.


“W”: cold white,
“Y”: warm white

Close the light mandatorily

“▲”: add lighting strength
extent, “▼” low lighting
strength extent



During the day, it is charged by the sun.

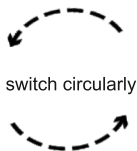

It turns into the light at night.


Packing Included

- 1 x Solar Column Lamp
- 1 x remote control
- 2 x No.7 battery
- 1 x Instruction Manual
- 4 x Plastic expansion tube
- 4 x screw

Installment step

1

Installation method 1: According to the holedistance of the base, punch holes in the installation position, insert the plastic pipe, and then tighten the screws to fix the lamp. Use the remote controller to turn on the lamp.

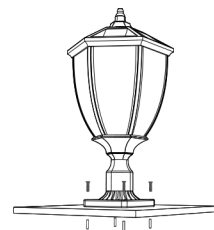

2

Installation method 2: Separate the lampbody and lamp base, install the lamp on the pole, and tighten the side screws. Use the remote controller to turn on the lamp.

