

# Guide Book

- R/C controls forward/backward and left/right, remote control priority
- Music
- Volume adjustment
- Power display
- Forward and backward
- High and low speed
- Wireless connection



## Parts List:(Name and Quantity)

Name	A	B	C	D	E	F	G	H	I	J		
Quantity	1	4	2	1	1	2	1	1	1	1		
Name	K	L	M	N	O	P	Q	R	S	T	U	V
Quantity	1	2	1	1	1	2	1	7	6	2	1	1



## Product Specifications:

Name	Specification
Battery	12V
Suitable age	36-96 months
Loading capacity	30kg
Product size	128*56*54cm
Speed	3-5 km/h
Charge/Use time	charge 8-12h, use 1-2h
Charger	Input: 100-240V Output: 12V 500mA
Remote control	AAA1.5V

The above parameters are selected by the customer, and the specific parameters shall be subject to the actual sample.

**WARNING:** The toy is to be assembled by an adult. In unassembled state contain potentially hazardous sharp points, sharp edges and small part,so please keep out of baby' s reach

**Warning:** Not to be used in traffic.

## Function




Button function	MP3 interface
① Horn	⑦ Music Panel
② External socket	⑧ Start button
③ Power display	⑨ Light button
④ high and low speed	⑩ Power pedal
⑤ Forward and backward	

## Remote control function and explanation

Do not swift forward/backward button when car is driving, or will damage the motor.

Remote control can be used normallywhen battery assembled. Remote control should be usedunder adults' supervision. Remote control is prior to man control.

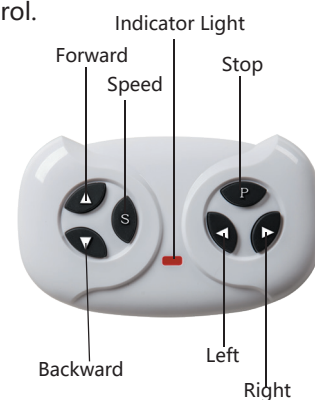

How to adjust R/C frequency:

Long press forward and backward button for 3 seconds, and the speed indicator flashes. Then turn on the power, the speed indicator goes to long bright, means the connection successfully. If the speed indicator no response, means the connection failed. Replace the batteries and retry.

## Remote control battery operation

Take off the battery cover. Put two AAA1.5V remote control battery in with right polarity. New and used batteries can not be used mixed. Do not insert batteries into wrong polarity, or will be short-circuited. Non-rechargeable batteries can not be recharged. Exhausted batteries should be replaced by adults. The exhausted battery must be handled and operated properly by adults only. Do not be played by children.