

Children's Battery Operated Ride-on Spin Crazy



Suitable for 6+ years

Maximum user weight: 32kgs/70.55lbs

Adult assembly required

Owner's user manual

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information

Before the first time use, charge the battery for at least 10-12 hours

Product information

Thank you for purchasing our products, we want your child to enjoy this product for years to come.

Before using this product, it is important to read and understand the user manual, because the user manual contains assembly step and can tell you how to operate this product, also can tell you the ways to avoid the damage for the product and hurt the rider due to improper use. Most important thing is that the manual can let you know safety precautions. Please read and understand this manual, let your kids know how to operate the product.

Table of contents

1. About your new “spin crazy”
2. Parts list
3. Assembly steps
4. How to operate your “spin crazy”
5. How to charge the “spin crazy”
6. Troubleshooting guide
7. Maintaining your “spin crazy”
8. Disposal of battery








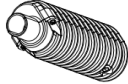


About your new “spin crazy”

Suitable age:	6+ years	Battery:	12v7ah
Maximum user weight:	32kgs/70.55lbs	Size of the product:	74.7*99.8*48.6cm 29.4*39.29*19.13inch
Speed:	7.5km/h 4.66m/h	Power way:	Charging type
Charger:	Input: 100-240v Output: DC 12V1000MA	Average battery life:	Approximately 300 times
Charge time:	10-12 hours	Fuse:	13A

FOR THE SAFTY OR YOUR CHILD, PLEASE READ ALL WARNINGS AND ASSEMBLY/USE INSTRUCTIONS. KEEP THIS GUIDE FOR FUTURE REFERENCE.

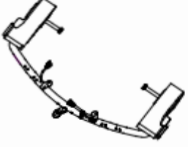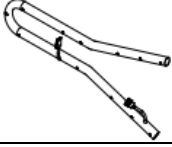

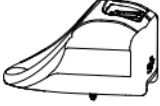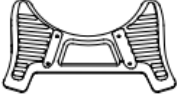



 

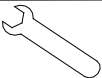
- ADULT ASSEMBLY REQUIRED. The product contains small parts, which are for adult assembly only. Keep small children away when assembling.
- Always remove protective material and poly bags and dispose of properly before assembly.

Parts list

Part NO.	PART NAME	PICTURE	Q' ty (pcs)	REMARKS	PAT NO.	PART NAME	PICTURE	Q' ty (pcs)	REMARKS
1	Main frame		1		2	Seat support		1	
3	Steering handlebar		2		4	Pedal plate		1	
5	Seat		1		6	Foot rest		1	
7	Driving wheel		2		8	CONNECTOR COVER		2	
9	Flag		1		10	charger		1	

Parts list


Spare parts bag


Part NO.	Part name	Picture	Quantity	Remarks	Part NO.	Part name	Picture	Quantity	Remarks
1	Wheel cover		2		2	M6 lock nuts		2	
3	M6*50 screws		2		4	M6*35 screws		2	
5	Ø6.5 washer		6		6	Spanner		1	
7	Battery cover		1		8	Spanner		1	
9	Spanner								

Assembly steps

- Your new vehicle requires adult assembly
- Children can be harmed by small parts, sharp edges and sharp points in the vehicle' s unassembled state. Care should be taken in unpacking and assembly of the vehicle. Children should not handle parts, or help in assembly of the vehicle.
- Please identify all parts before assembly and save all packaging material until assembly is complete to ensure that no parts are discarded.
- Assembly tools needed: screwdriver(not included), crescent wrench(not included) and spanner.


ASSEMBLE THE SEAT SUPPORT

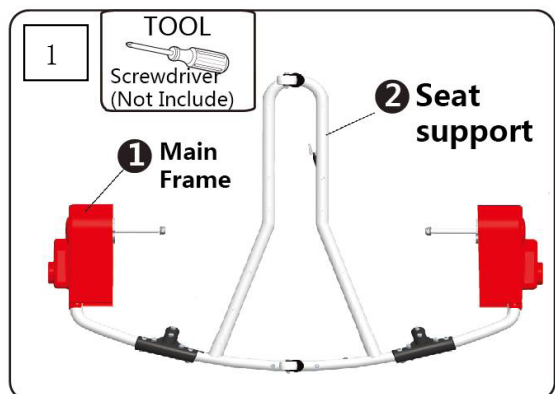

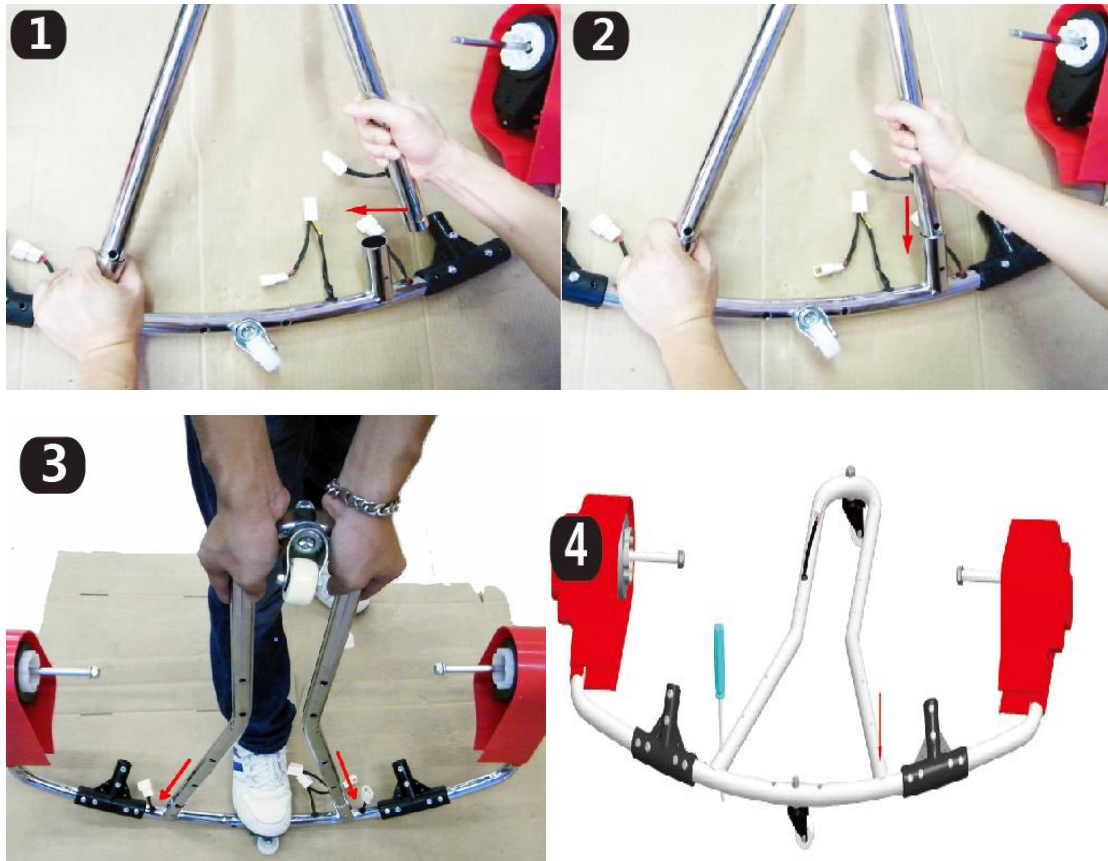


- Put something on the floor to protect the product from damage when assembling.
- Remove the M6X40 screws from the main frame
- Turn over the Main Frame, fit the seat support to the holes on the main frame, push it into the holes. DO NOT push too hard, the screw holes on the seat support should align at the screw holes on the main frame, so that the screws can go through all of the holes.
- Screws in the M6X40 screws.

ASSEMBLE THE PEDAL PLATE

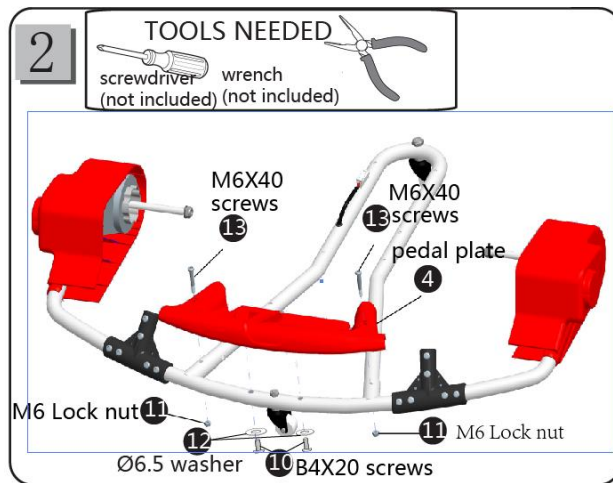

- Remove all the screws, washers and lock nuts on the pedal plate
- Fit the pedal plate on the main frame, screw in the M6X40 screws, put on the washers and lock nuts, then tighten them
- Turn over the main frame, put on the washers and screws in the B4X20 screws.


ASSEMBLE THE DRIVING WHEELS

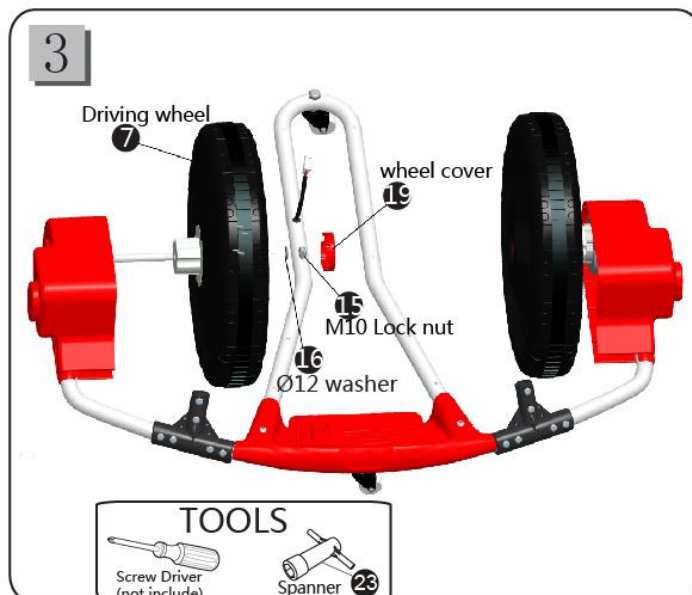

- Remove all the parts on the axle
- Fit the driving wheel onto the axle


- Fit a Ø12 washer onto the axle
- Fit a Ø10 lock nut to lock the driving wheel, DO NOT OVER TIGHTEN
- Fit a wheel cover onto the wheel, and press the wheel cover into the hole
- Repeat the same steps to assemble the other driving wheel.

ASSEMBLE THE FOOT REST

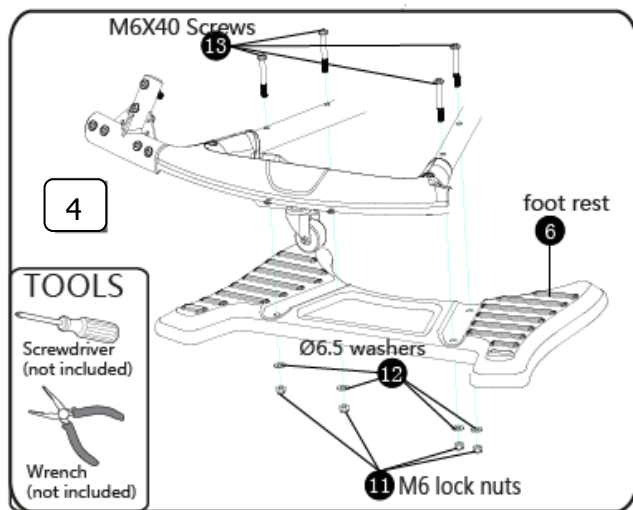

- Remove all the screws, lock nuts and washers from the foot rest
- Fit the screws to the holes on the seat support and the foot rest and make them go through those holes
- Fit the Ø6.5 washer and lock nut, then tighten them


ASSEMBLE THE SEAT

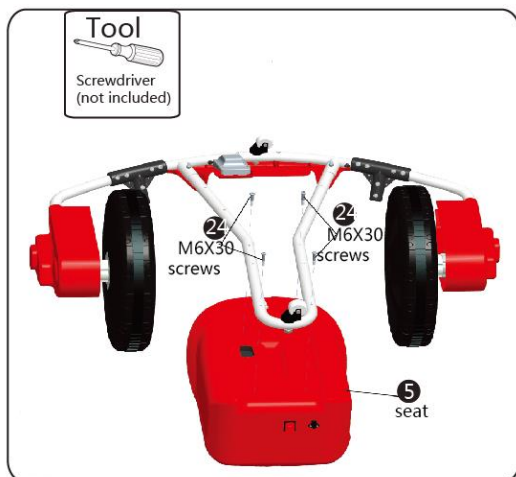




- Connect the power wires first, please reference the picture 1
- Find 4 pieces M6x30 screws in the spare parts bag, turn over the seat and put it on the floor
- Turn over the whole vehicle, and fit it on the seat, align the holes, then screw in the M6X30 screws.

ASSEMBLE THE HANDLEBAR

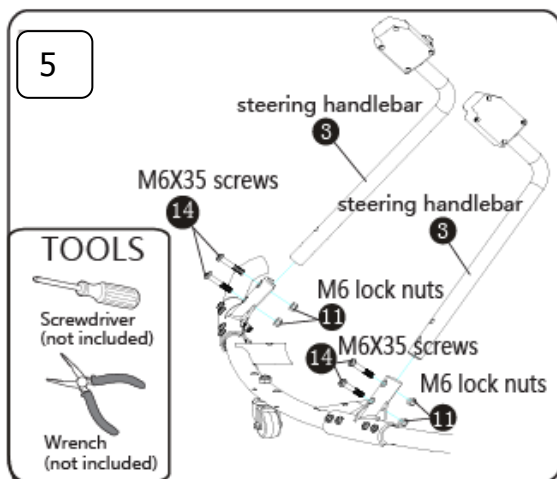

- Remove the M6x35 screws on the three direct links
- Fit the steering handlebar onto the three direct links, lock them with M6x35 and M6 lock nut
- Fix the M6 lock nut with crescent wrench, tighten the M6x35 screws with screwdriver.

CONNECT ALL THE WIRES

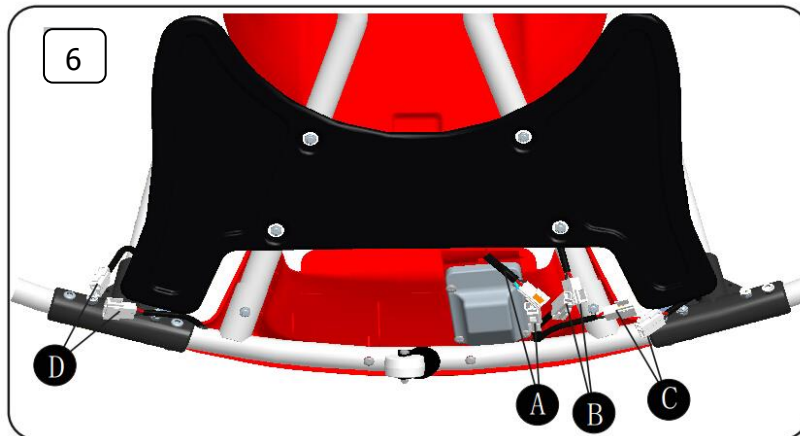

Turn over the vehicle body, you can see there are connectors on A, B, C and D

Connect the A connectors first, the male connector of A comes out from the main frame, the female connector comes out from the pedal switch.

The connectors of B are the main power wires, the male connector comes out from the main frame, the female connector comes out from seat support.

Connectors of C and D are the steering wires, connect them as the pictures show above.

Assembly the wire cover

- Please reference the pictures below, remove the screws from the bottom of the foot rest, hide the connectors into the hole and tighten the screws



A. CONNECT THE WIRES

B. FIT THE CONNECTOR COVERS WITH M6X40 AND B3.5X10 SCREWS

C. FIX THE WIRES WITH THE CABEL TIE

Battery Assembling




1. Remove the battery cover and all the screws.

2. Put the battery into the seat, connect the battery with wires, and assemble the the battery cover.
Remind: when connect the battery, the red wire should connect with the red terminal, the black wire should connect with the black terminal



ASSEMBLE THE BATTERY COVER AND FLAG

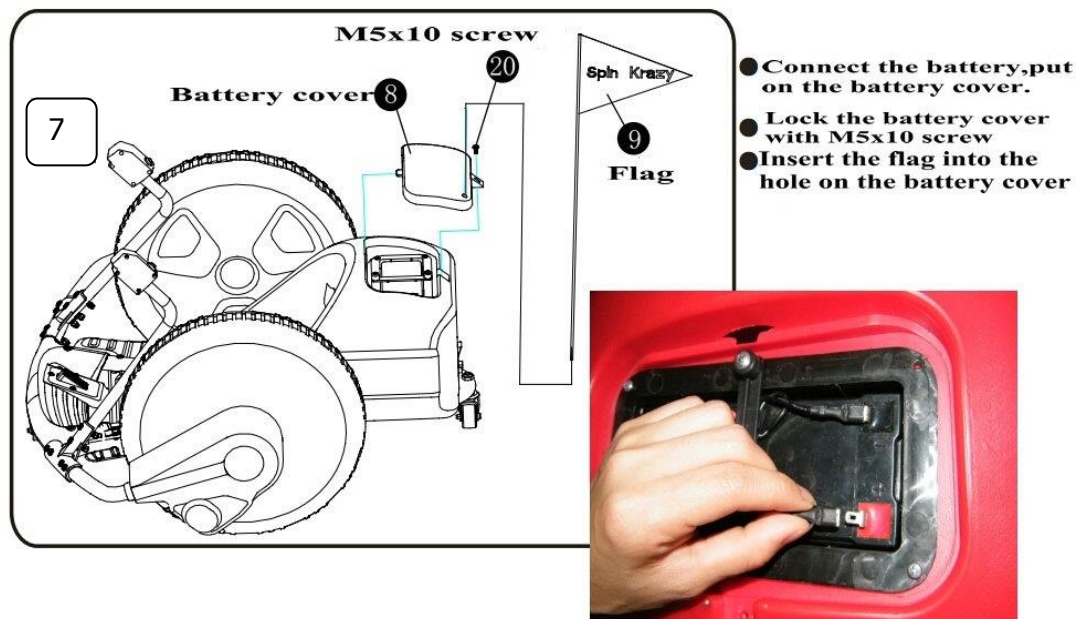

- Connect the battery, fit the battery cover to the seat
- Lock the battery cover with M5x10 screw
- Fit the flag to the hole on the battery cover and insert it.

Reminder: before assembling the battery cover, connect the battery first, please notice the red connector should be connected with the red terminal.

How to operate your “SPIN KRAZY”

WARNING!

● **NEVER LEAVE THE CHILD UNATTENDED. DIRECT ADULT SUPERVISION IS REQUIRED.** Always keep child in view when child is riding.

● Child must wear an approved helmet, never use in roadways, near cars, on or near steep inclines or steps, or near swimming pools or other bodies of water.

● Always wear a close-toed shoes.

● Always sit on the seat and use the seatbelt

● Suitable for age 6+ years, maximum user weight is 32kgs/ 70.55lbs

● Important! Before using the ride-on for the first time, the battery needs to be charged for 10 to 12 hours, but no more than 20 hours. Only an adult can charge or recharge the battery.

- Make sure each screw has been secured in its proper position and locked in place.

Rules for Safe Riding

READ THESE RULES ALOUD TO YOUR CHILD AND THEIR PLAYMATES AND MAKE SURE THEY UNDERSTAND THEM!


Always wear a helmet and close-toed shoes when riding.

- Only ride under direct adult supervision.
- Only Ride In a Safe Riding Areas:
 - Never ride on a road, on a lawn or dirt area, near motor vehicles, on or near steep inclines or steps, or near swimming pools or other bodies of water;
 - Only ride on flat surface. Such as inside a house or a playground.
 - Never ride in the dark. Only operate the vehicle in the daytime in a well-lit area.
 - Do not ride on wet surfaces or on slopes of greater than 15 degrees.
 - Do not ride outdoors when it is raining or snowing.
 - Do not touch the wheels or get close to them when the vehicle is moving

PARENTS--BEFORE ANY CHILDREN RIDE THIS VEHICLE

- Make sure the child is within the specified weight and age limits.
- Inspect the vehicle's wires and connections; do not change the wiring or add electric parts
- Inspect the vehicle to make sure it is in safe condition.

How to operation(ensure the power switch has been turn on)

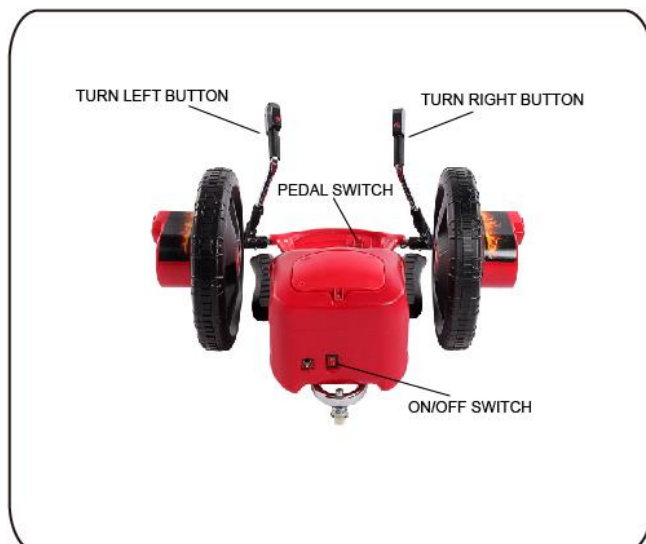

Forward: 1.turn on the ON/OFF switch

2.press the pedal switch, then the vehicle will move forward

Stop: release the pedal switch then the vehicle will stop

Slow down the speed: when the vehicle move forward, press the turn left buttons and turn right button on the steering handlebars at the same time, then the speed will slow down

Turn right and left:

1. When the vehicle move forward, press the turn left button on the left steering handlebar, then the vehicle will turn left
2. When the vehicle move forward, press the turn right button on the right steering handlebar, then the vehicle will turn right.

360 degree spin:

1. press the turn left button first, then press the pedal switch, then the vehicle will spin to the left
2. press the turn right button first, then press the pedal switch, then the vehicle will spin to the right

WARNING!

THE VEHICLE CAN BE DRIVEN AT A MAXIMUM OF 7.5KM/H 4.6MPH, MAKE SURE YOUR CHILD KNOWS HOW TO OPERATE, HOW TO START AND STOP THE VEHICLE AND KNOWS THE RULES FOR SAFE DRIVING.

BEFORE SPIN, PLEASE ENSURE THERE IS NOT ANY BARRIER. TO AVOID THE DAMAGE TO THE GEAR BOX, DO NOT ABUSE THE PEDAL SWITCH

Charging the battery

ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!

• PREVENT FIRE AND ELECTRIC SHOCK:

- Use the only the rechargeable battery and charger supplied with your ride-on. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product. Overheating, fire or explosion could occur.
- NEVER modify the electric system. Tampering with the electric system may cause a shock, fire or explosion or may permanently damage the system.
- Do not allow direct contact between battery terminals. Fire or explosion can occur.
- Do not allow any type of liquid on the battery or its components.
- Explosive gasses are created during charging. Do not charge near heat or flammable materials. Charge

the battery in a well-ventilated area ONLY.

- NEVER pick up the battery by the wires or charger. Damage can occur to the battery and may cause a fire. Pick up the battery by the case ONLY.

- Charge the battery in a dry area **ONLY**.
- Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.


Wash hands after handling.

- Do not open the battery. Battery contains lead acid and other materials that are toxic and corrosive.
- Do not open the charger. Exposed wiring and circuitry inside case may cause electric shock.

Only adults may handle or charge the battery. **NEVER** allow child to handle or charge the battery. Battery is heavy and contains lead acid (electrolyte).

- Do not drop the battery. Permanent damage to the battery could occur or cause serious injury.
- Before charging the battery, check for damage to the battery, charger, its supply cord and the connectors. **DO NOT** charge the battery if any damage has occurred.
- Do not allow the battery to drain completely. Recharge the battery after each use or once a month if not used regularly.
- Do not charge battery upside down.
- Always secure the battery with the bracket. Battery can fall out and injure a child.

- The charging input socket is **AT THE REAR OF THE VEHICLE**.
- Before the first use, you should charge the battery for 10-12 hours. Do not recharge the battery for more than 20 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use, or once a month minimum, recharge the battery 10 to 12 hours, less than 20 hours.

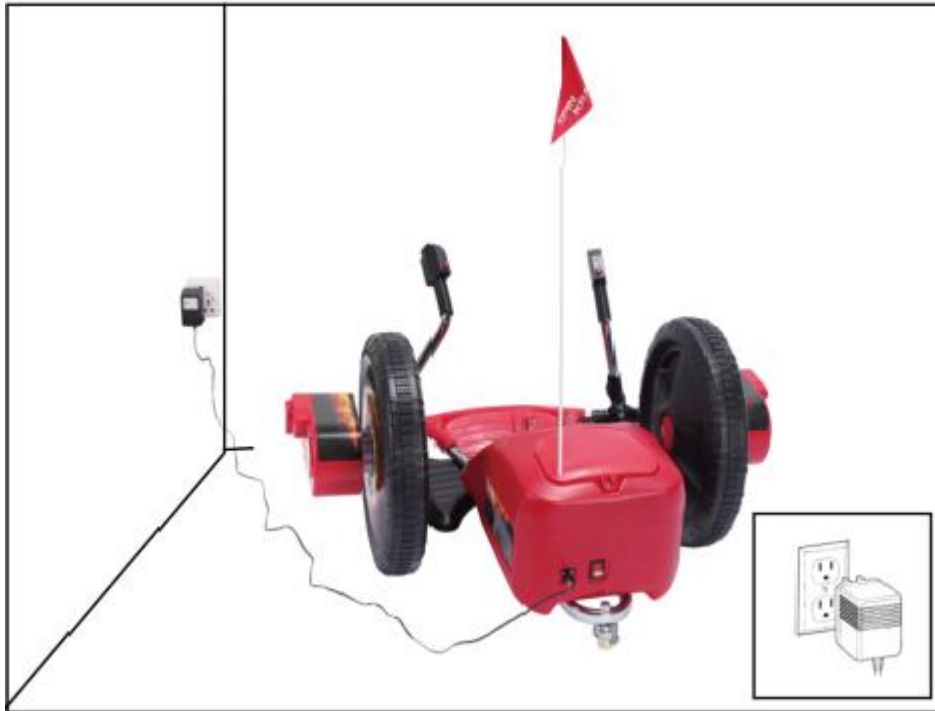

1. Plug the charger port into the socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

How to know the charger is working

There is no indicate light on the charger, when you feel warm, the charger is working, please remind recharge the battery 10 to 12 hours, less than 20 hours.


Trouble shooting guide

■**PROBLEM: The vehicle does not run**

PROBLEM CAUSE: The battery may be low on power.

After each use, or once a month minimum, charge the battery for a full 10 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Thermal fuse has tripped.

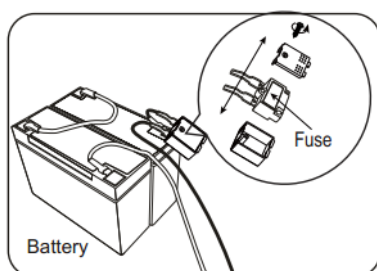

The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly; the self-resetting fuse will be cut off for 5-20seconds before becoming operational again. The self-resetting fuse is under the seat (Refer to the picture.)

To avoid the fuse cutting off the power, follow these guidelines:

DO NOT overload the vehicle, Maximum weight allowed :32kgs

DO NOT tow anything behind the vehicle.

DO NOT drive up steep slopes.

DO NOT drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.

DO NOT drive in very hot weather, components may overheat.

DO NOT tamper with the electric system. Doing so may create a short circuit, causing the fuse to trip.

POSSIBLE CAUSE: Wheel nuts are loose.

If the nuts are not tight, the wheels will not engage the forward gears. Tighten the nut with the nut wrench.

POSSIBLE CAUSE: Battery connector or wires are loose.

Make sure the battery connectors are firmly plugged into each other.

POSSIBLE CAUSE: Battery is dead.

Have you properly maintained the battery according to the directions? Is the battery old? Your battery may need to be replaced.

POSSIBLE CAUSE: Electric system is damaged.

Water may have corroded the system, or loose dirt, gravel or stones might have jammed the switch.

POSSIBLE CAUSE: Motor is damaged.

The motor needs professional repair.

■PROBLEM: The battery will not recharge.

POSSIBLE CAUSE: Battery connector or adapter connector is loose.

Make sure the battery connector and adapter connector are firmly plugged together.

POSSIBLE CAUSE: Charger is not plugged in.

Make sure the charger is plugged into the wall outlet and the power flow to the outlet is on.

POSSIBLE CAUSE: Charger is not working.

Is the charger warm while charging? If not, the charger may be damaged.

■PROBLEM: The ride on does not run very long.

POSSIBLE CAUSE: Battery may be undercharged.

You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 10 to 12 hours. Do not leave the battery on the charger for more than 20 hours.

POSSIBLE CAUSE: Battery is old.

The battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Replace the battery with a new one.

PROBLEM: Battery buzzes or gurgles when charging.

This is normal and not a cause for concern. It may also be silent when charging, which is also normal.

PROBLEM: Charger feels warm when recharging battery.

This is normal and not a cause for concern.

Maintaining Your Ride-on

•It is parent's responsibility to check main parts of the toy prior to usage. Parents must examine ride-on regularly for potential hazards, specifically the battery charge cable/cord, plug and screws that fasten certain parts of the ride-on.

In the event of any damage, the toy must not be used until that damage has been properly repaired.

- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the ride-on indoors or cover it with a tarp to protect it from sun and wet weather.
- Keep the ride-on away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the ride-on is not being used.
- Do not wash the ride-on with a hose. Do not wash the ride-on with soap and water. Do not drive the ride-on in rainy or snowy weather. Water will damage the motor, electric system and battery.

- Clean the ride-on with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the ride-on in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not in use, turn off the power switch and disconnect the battery connection.

Disposal Of Battery

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead - acid battery in a fire . The battery may explode .
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration , land filling or mixing of sealed lead - acid batteries with household trash is prohibited by law.
- Return an exhausted battery to your local approved lead - acid battery recycle, such as a local seller of automotive batteries .
- Contact your local waste management officials for other information regarding the environmentally sound recycling and disposal of lead - acid batteries.