

Baby Swing Set



ATTENTION

This unit is designed for a maximum of one (1) children between the ages of zero (0) and three (3) years of age
WARNING! Adult assembly is required

1 Swing Set Safety Instructions

WARNING!

YOUR CHILD'S SAFETY DEPENDS ON YOU!

Observing the following statements and warnings reduces the likelihood of serious injury.

1. Provide on-site adult supervision for children of all ages at all times
2. It is recommended that the playground equipment be placed in concrete. Be certain that all anchoring devices (including concrete) are placed below
3. Teach children to sit in the centre of the swing play items, with their full weight in the centre of the seats. **NEVER** allow children to stand on the seats. **DO NOT** allow children to lean to the side when riding on other rides, structural members or collide with other playmates
4. Dress children appropriately while on and around this equipment. **DO NOT** allow children to wear ponchos, scarves jewelry, loose shoes, jackets or clothing with loose strings and/or clothing that might be potentially hazardous whilst using this equipment
5. **DO NOT** let children use this equipment in any manner other than intended
6. **DO NOT** anchor all play equipment. **DO NOT** install over concrete, asphalt, gravel or any other hard surface which may cause injury should a fall occur
7. **DO NOT** let children use this equipment until it has been properly assembled and anchored. Place equipment on level ground not less than six (6) feet (1.8m) from any structures or obstacles such as fences, overhanging branches, laundry or electrical lines, garages, sheds or houses
8. Instruct children to avoid swinging empty play items. They may strike other children, or the play equipment may come back and strike you
9. Instruct children not to walk closely in front of, behind or in between moving play equipment. Instruct children to keep a safe distance away to avoid being struck by the items in use

10. Instruct children not to twist chains or ropes, or loop them over the support bar. This adds stress, reduces strength and may result in failure
11. Instruct children not to get off play equipment whilst in motion. **DO NOT** allow children to jump from moving play equipment
12. **DO NOT** allow children to climb or play on the equipment whilst wet (slips or falls may occur)
13. Instruct children not to go down the slide head first
14. Check slide bed for extreme heat before letting children use the slide (when exposed to direct sunlight)
15. **DO NOT** allow children to climb on or swing from structural members (eg legs, top bar and chin bars). These are structural components **ONLY** and **NOT** play features
16. **DO NOT** allow children to swing play equipment more than 60 degrees
17. **DO NOT** leave hex nuts-tightened after completing assembly. **DO NOT** leave bolt threads uncovered **TIGHTEN** all hex nuts securely
18. **DO NOT** attach items to the playground equipment that are not specifically designed for use with this equipment, such as, but not limited to, jump ropes, clotheslines, pet leashes, cables and chains as they may cause strangulation hazards
19. **WARNING:** lawn swings are designed for children over three (3) years of age
20. At the end of each play session, remove all plastic parts and take indoors. **DO NOT** allow the use of plastic items when the temperature drops below 0 degrees
21. Dispose of all packaging properly after the unit has been assembled
22. Please retain the assembly manual for future reference and review each season
23. This product is intended for use by children from three (3) to eight (8) years of age
24. This equipment is for family domestic use and is intended for outdoor use only.



B1		BOLT M8*45	13
B2		BOLT M6*30	2
B3		PLASTIC CAP M8	17
B4		WASHER F6	4
B5		ARC WASHER F8	22
B6		WASHER F8	4
B7		NYLON NUT M8	17
B8		PLASTIC CAP M6	2
J1			2
J2		ARC WASHER F8	4
J3		NYLON NUT M8	4

A1			1
A2			1
A3			4
A4			4
A5			2
A6			2
A7			6
J4			2
J5			2
J6			1

