


 
ASSEMBLY INSTRUCTION WF298296AAA

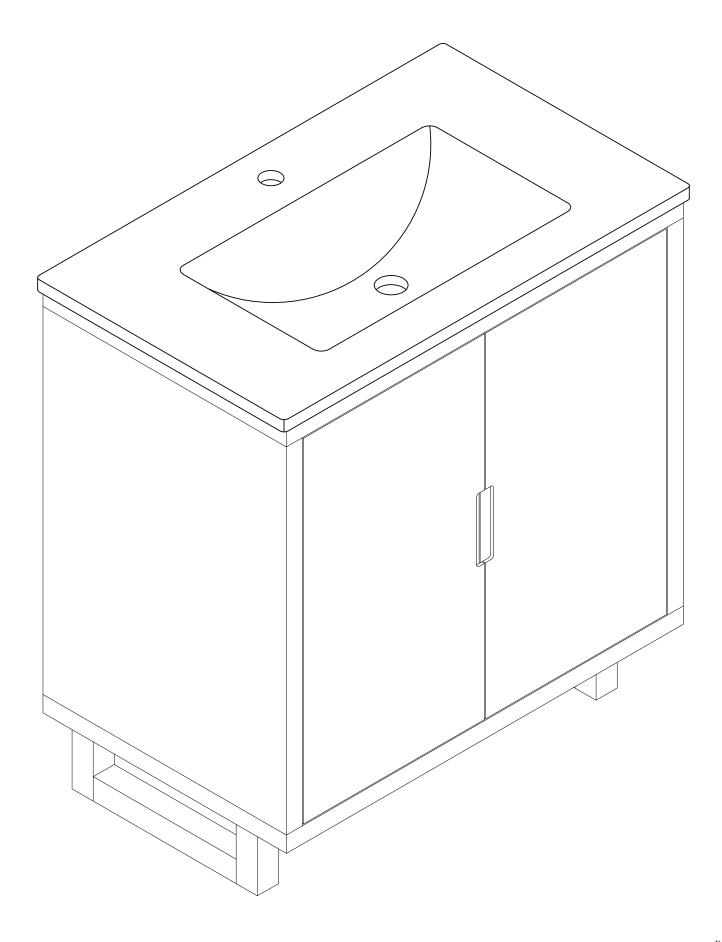


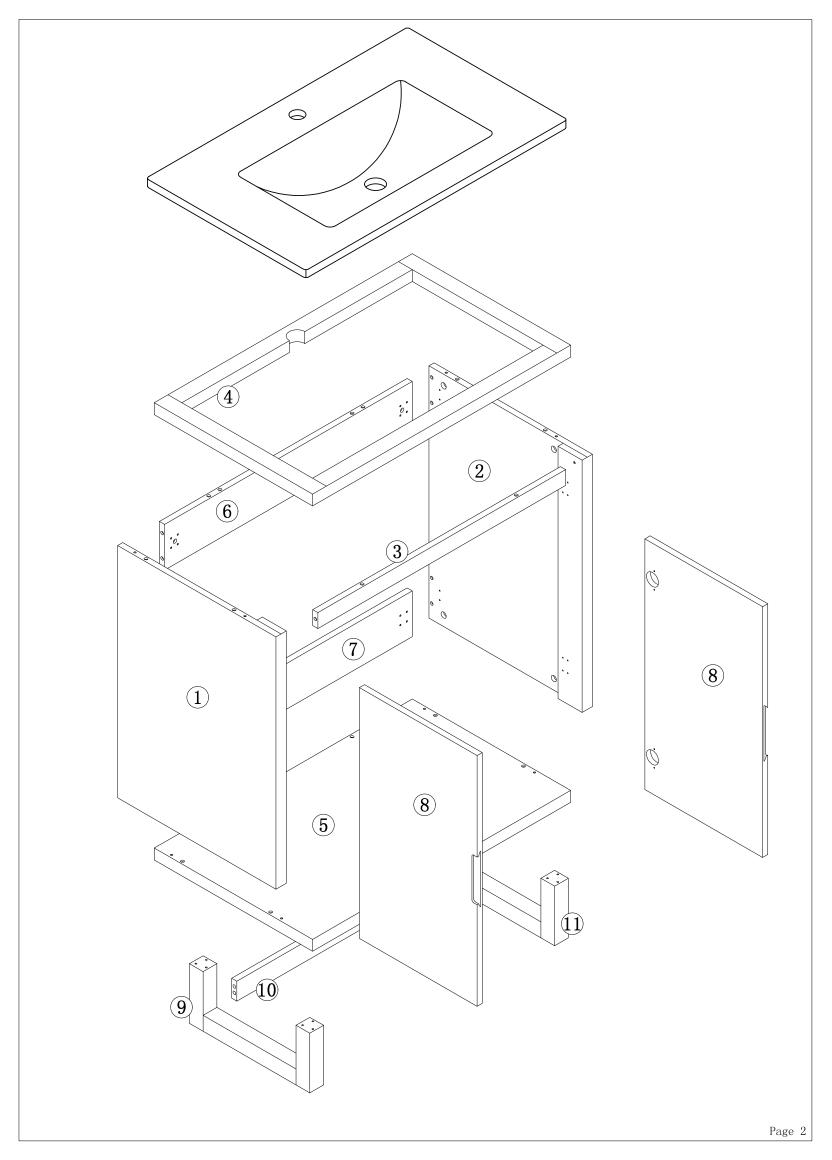


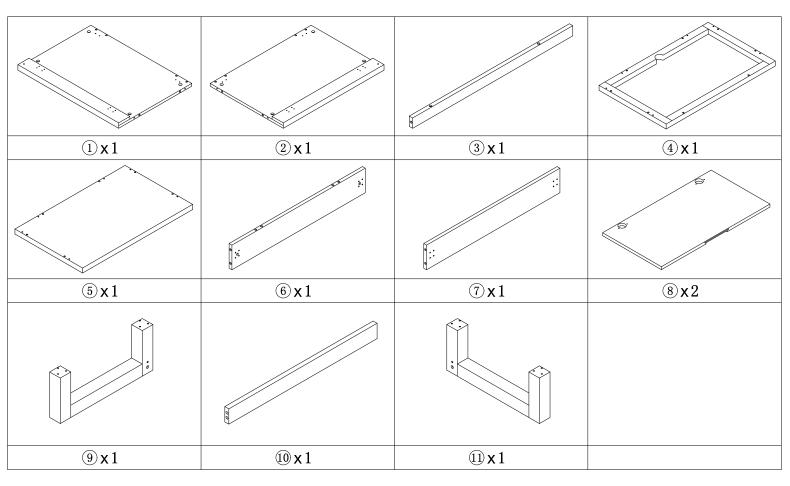






A * 16	B * 16	C * 24	D * 40	E * 24
M6 X 35mm	Ø 15 x 12mm	Ø 8 x 30mm	M4 x 14mm	M4 x 14mm
F * 4	G * 4	H * 2	I * 2	J * 2
	Ø35	G (2) 40	Ø200	ACCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC
T7 . 4		Ø8 x 40mm	Ø 20	M6 x 60mm
K * 4	L * 12	M * 4		
	WCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC			
	M4 x 35mm	Ø 5 x 15mm		

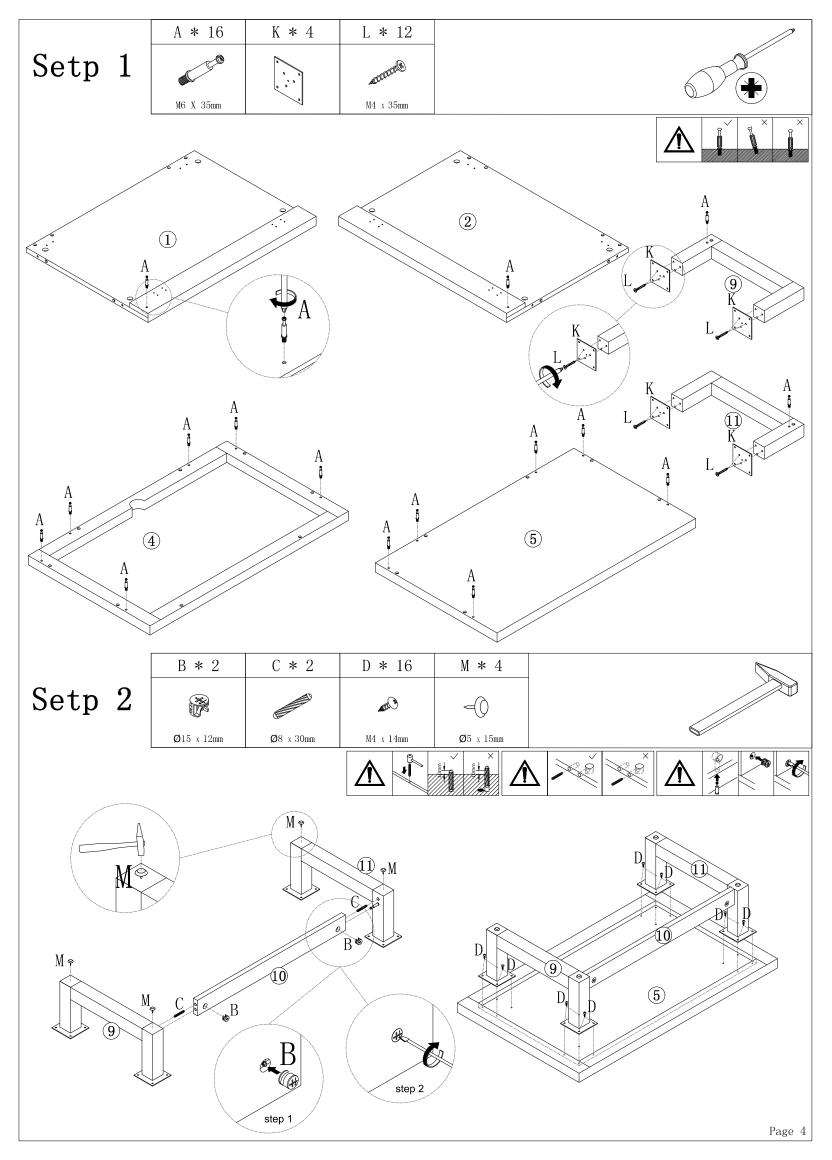


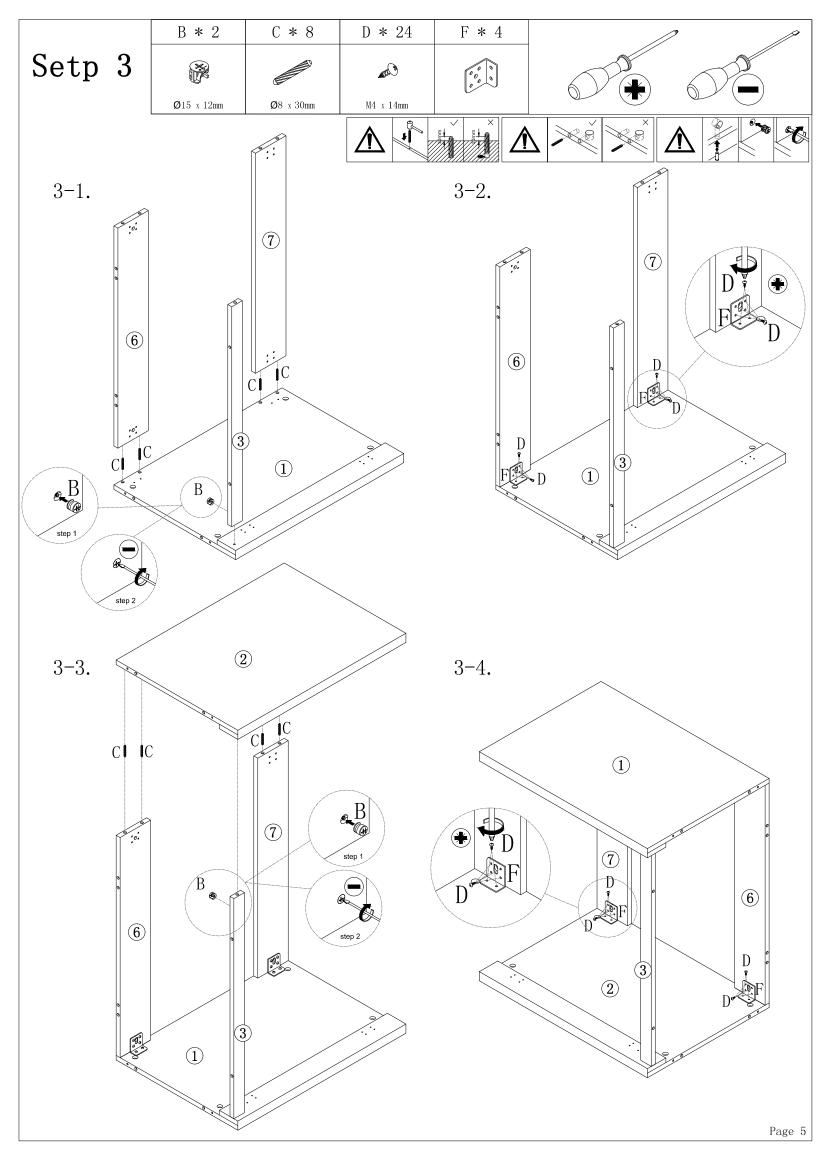


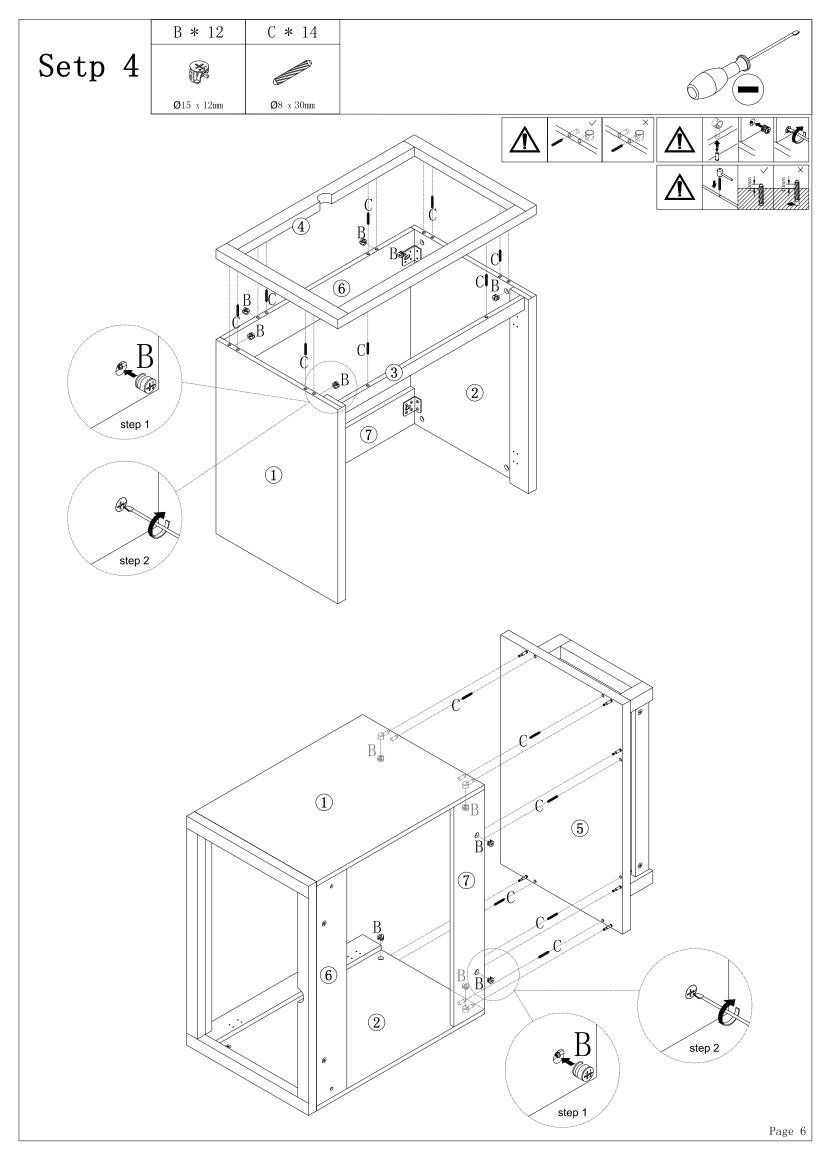


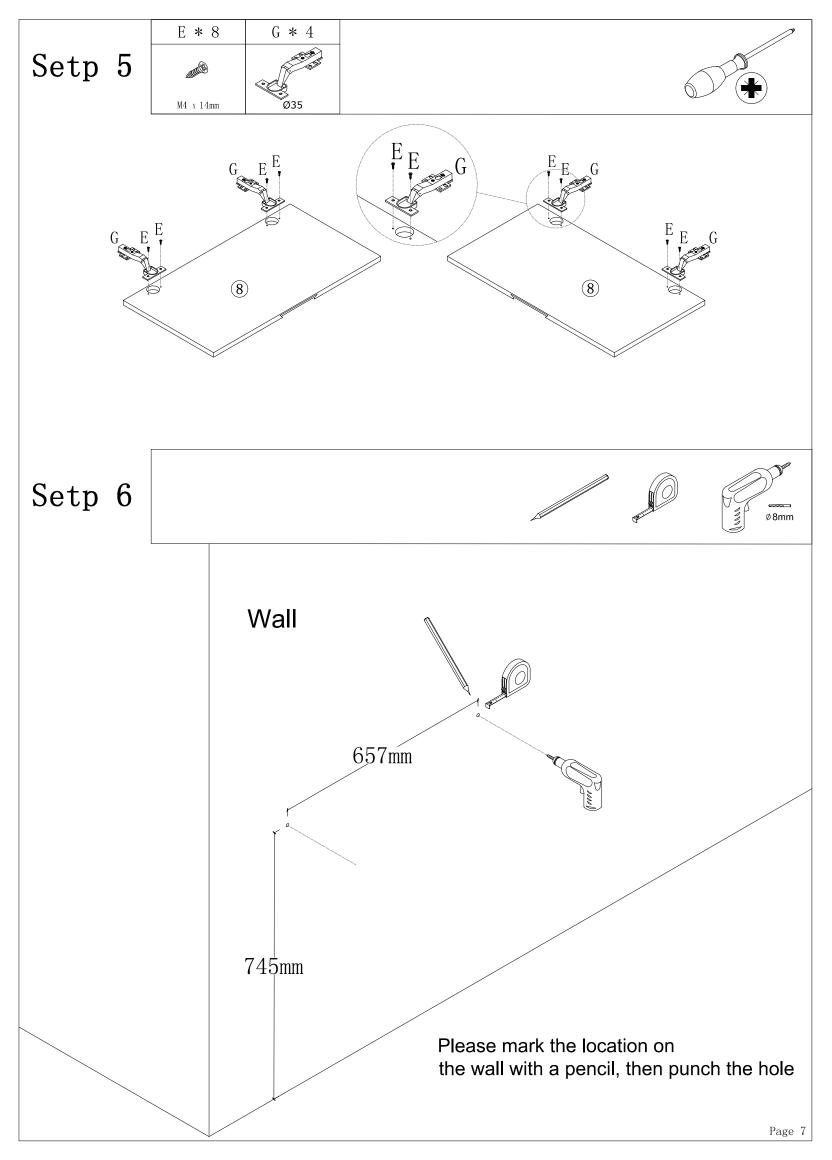

 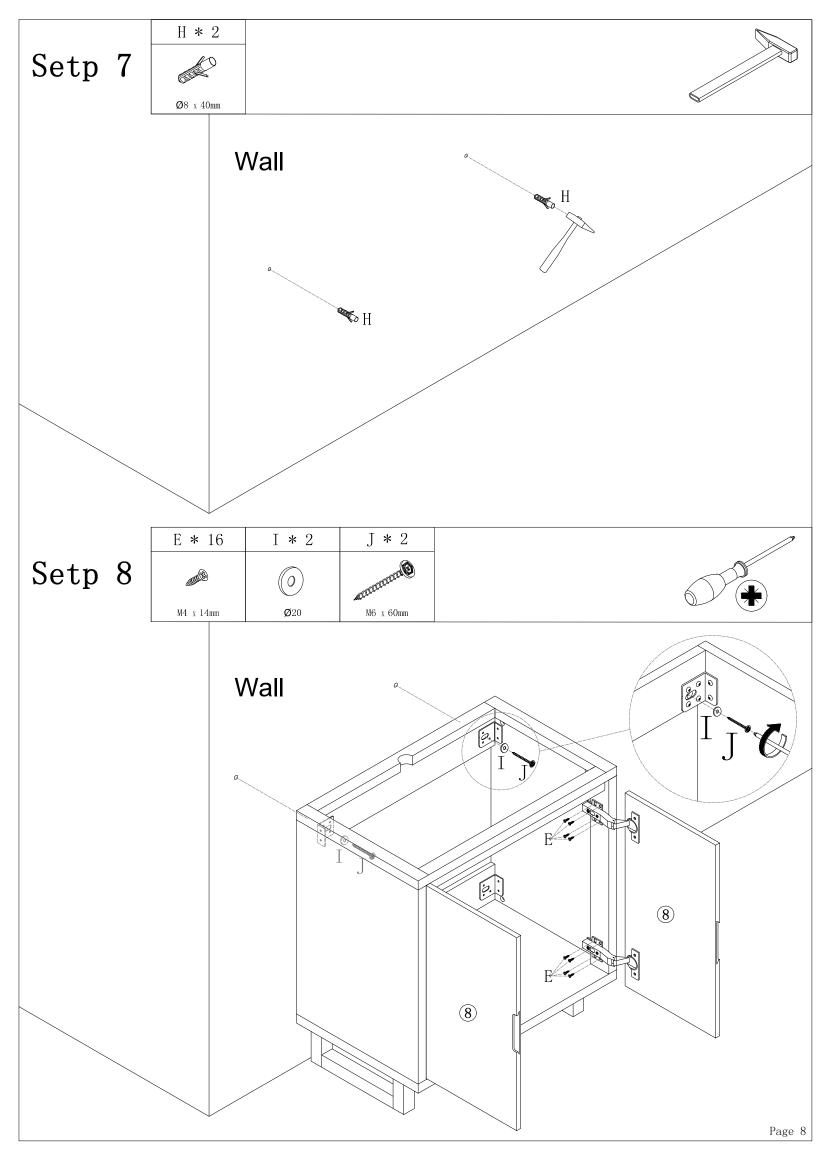

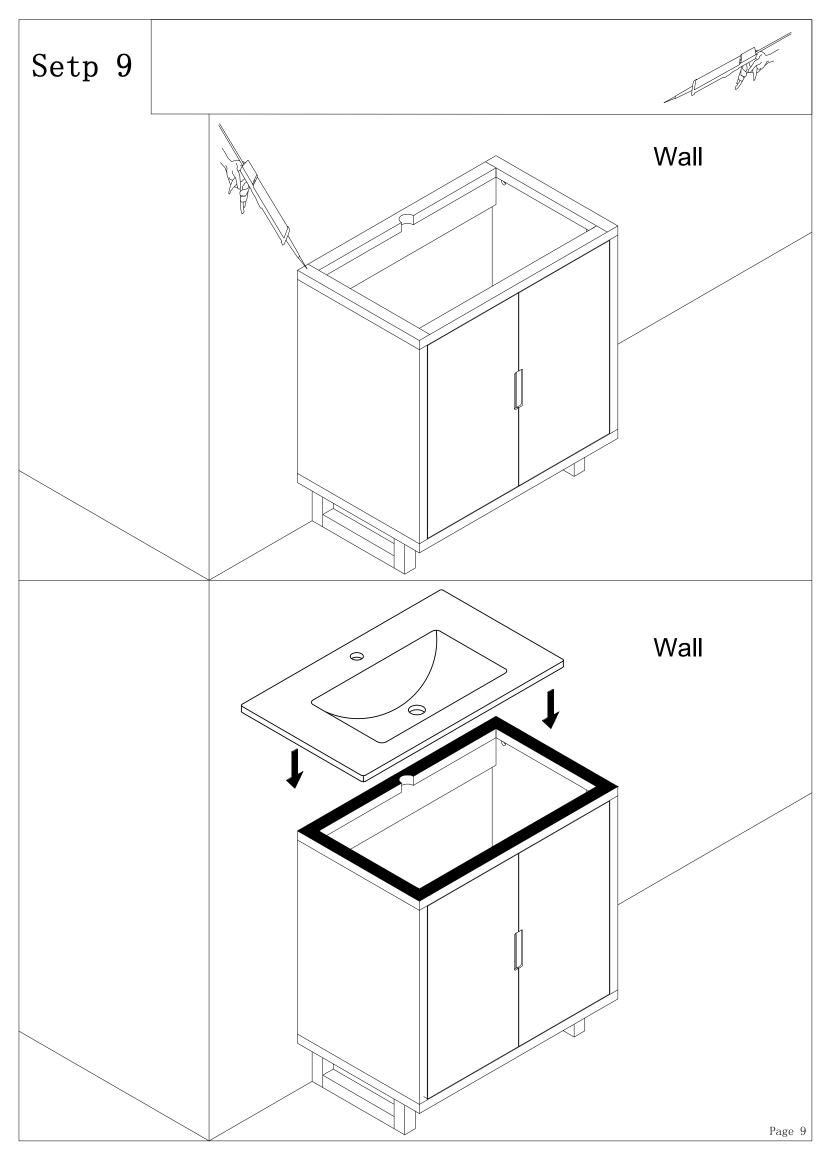



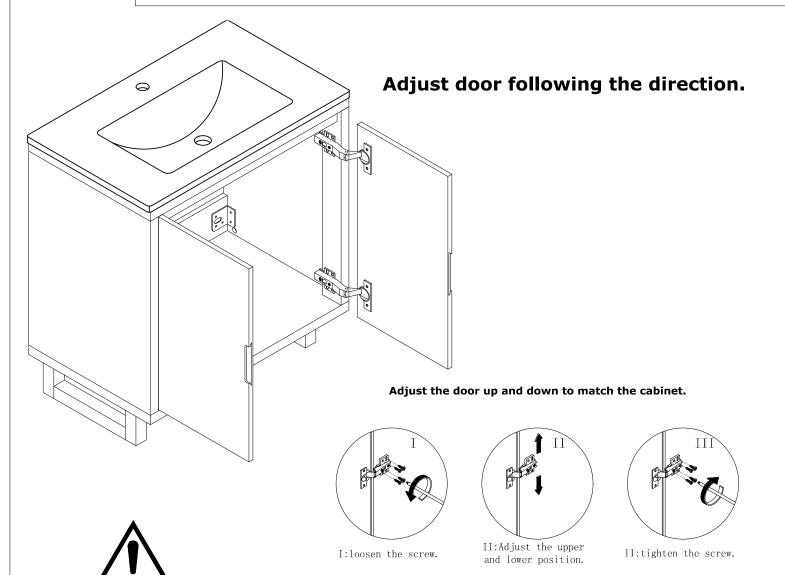

When the door position is not standard, please adjust the door according to the right picture.




Please place the cabinet on the flat floor before adjustment.

Adjust the door left and right to match the cabinet for suitable crack of the door




I:loosen the screw to keep hinge apply force toward the direction of arrow.

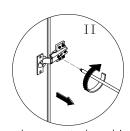

II: tighten the screw to keep hinge apply force toward the direction of arrow.

Adjust the door backwards and forwards to match the cabinet.

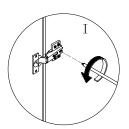

I:loosen the screw.



II:Adjust the distance between front and back.

Setp 11