
 
ASSEMBLY INSTRUCTIONS 36 INCH BATH VANITY-CABINET

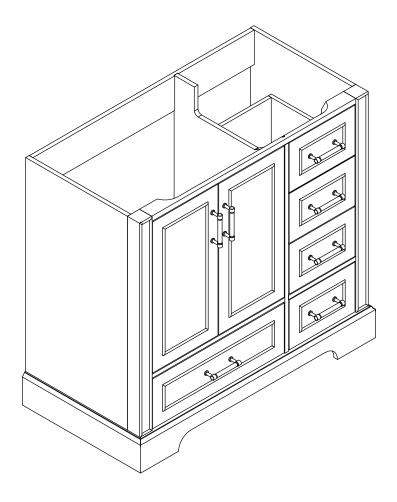

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation


Important - Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Cam Lock Assembly Instructions

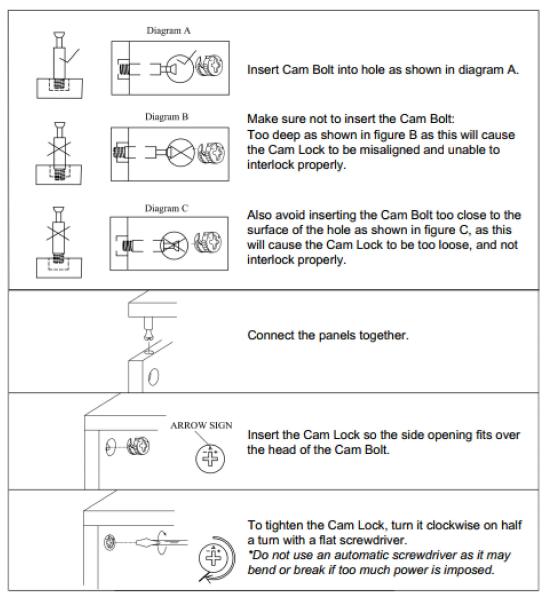

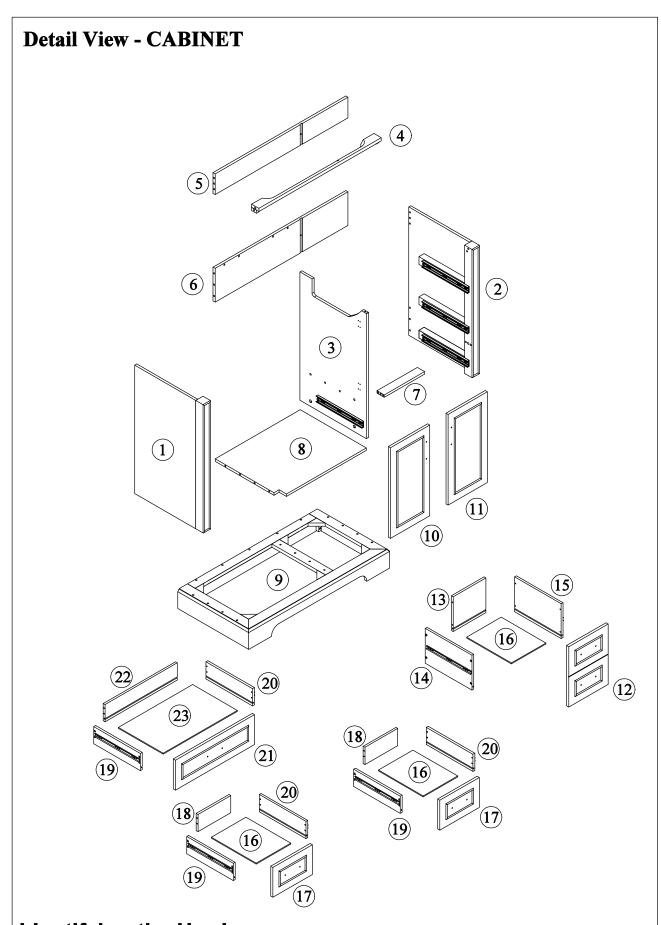


Part List - WF530913 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Top Bar Front- 1pc Mid Panel (A) - 1pc 5 Top Panel Rear - 1pc Bottom Panel Rear - 1pc 7 8 Mid Bar Front- 1pc Mid Panel (B) - 1pc 9 10 Cabinet Door (L) - 1pc Bottom Frame - 1pc 11 12 Cabinet Door (R) - 1pc Top Drawer Face - 1pc 13 14 Top Drawer Back Panel - 1pc Top Drawer Side Panel (L) - 1pc


Part List - WF530913

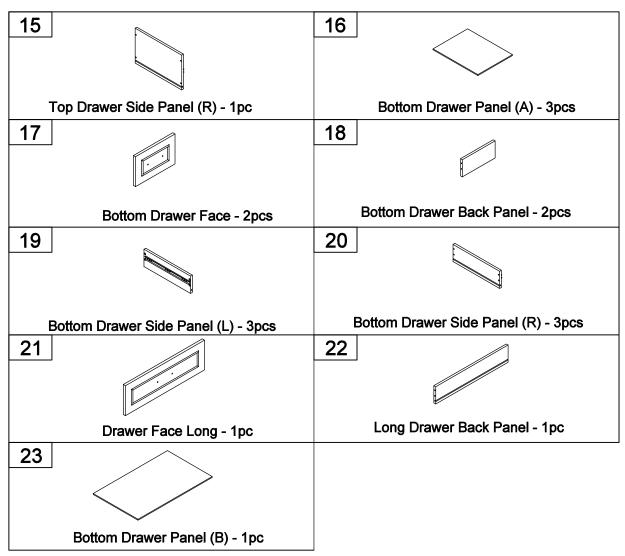



Hardware List - WF530913


Α	В	С
ø13x1/4"x28mm	ø1/4"x16x1mm	ø6x35mm
Hex-Head bolts(2pcs)	Washer(2pcs)	Three in one bolts(25pcs)
D	E	F
		€) mmm>
ø14.5x12mm	ø8xø4x25mm	ø8xø4x32mm
Three in one lock(25pcs)	Round head screw(3pcs)	Round head screw(32pcs)
G	H	I
<u> </u>	ø5/32"x15mm	ø5/32"x28mm
Handle (7pcs)	Handle screw (6pcs)	Handle screw (8pcs)
J	K	L
To co	(<u> </u>
	ø7xø3.5x15mm	ø8x30mm
Damping hinge (4pcs)	Flat head screw(24pcs)	Wood dowel(24pcs)
M	N	
4mm	66	
Allen key(1pc)	Anti fall hardware(1set)	

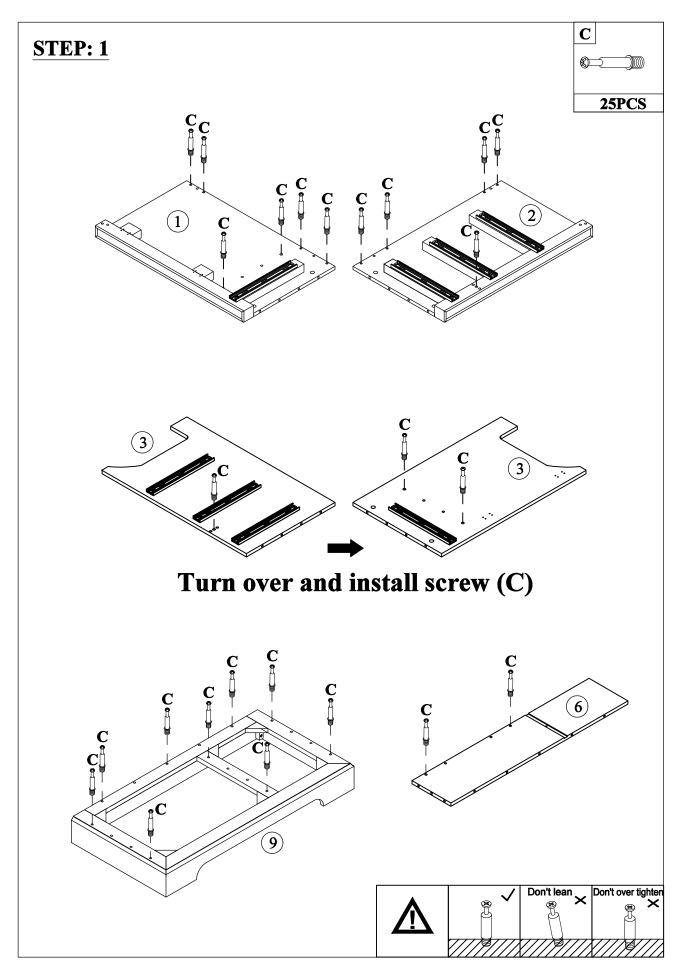


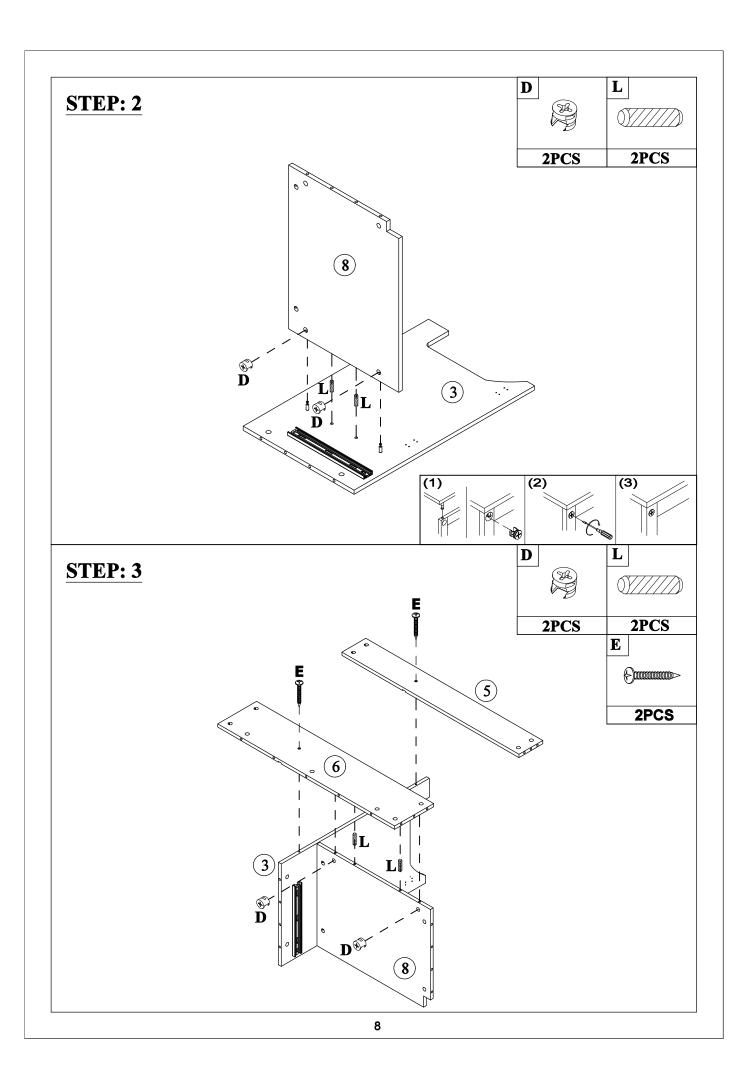


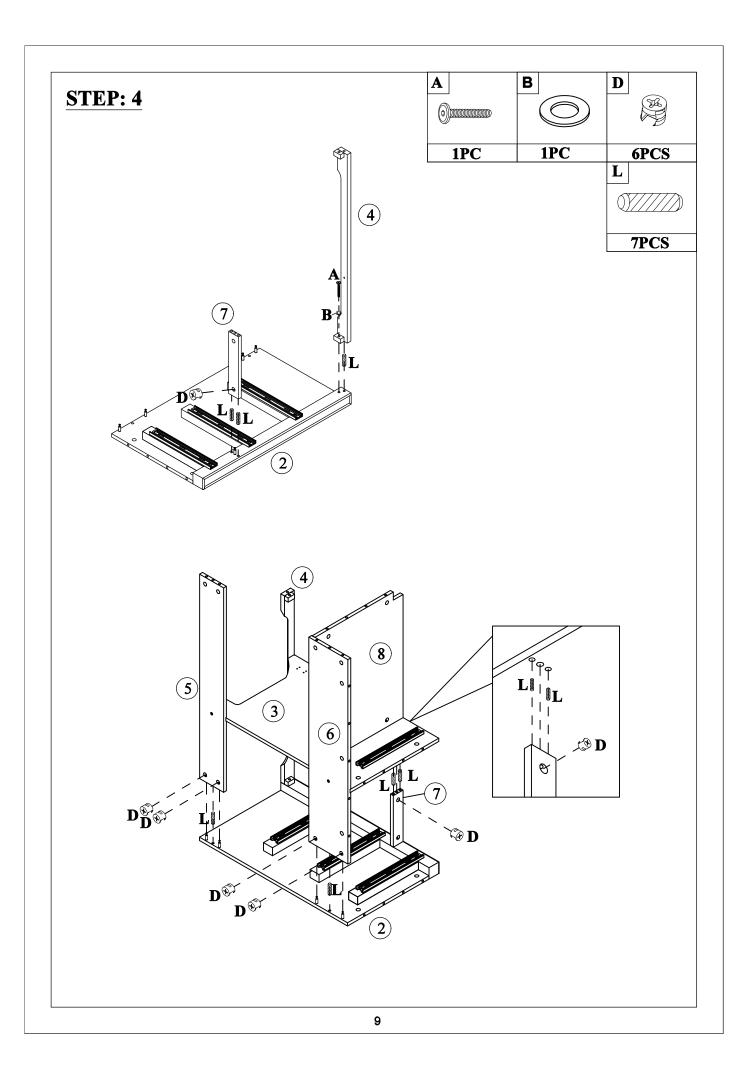


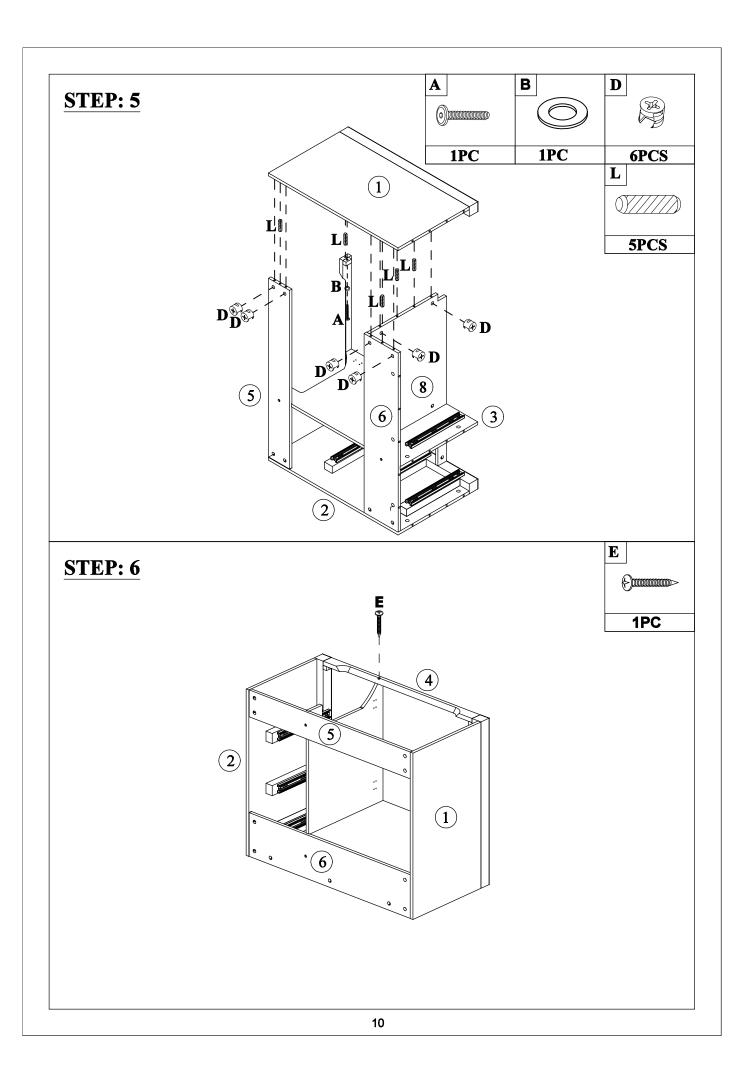

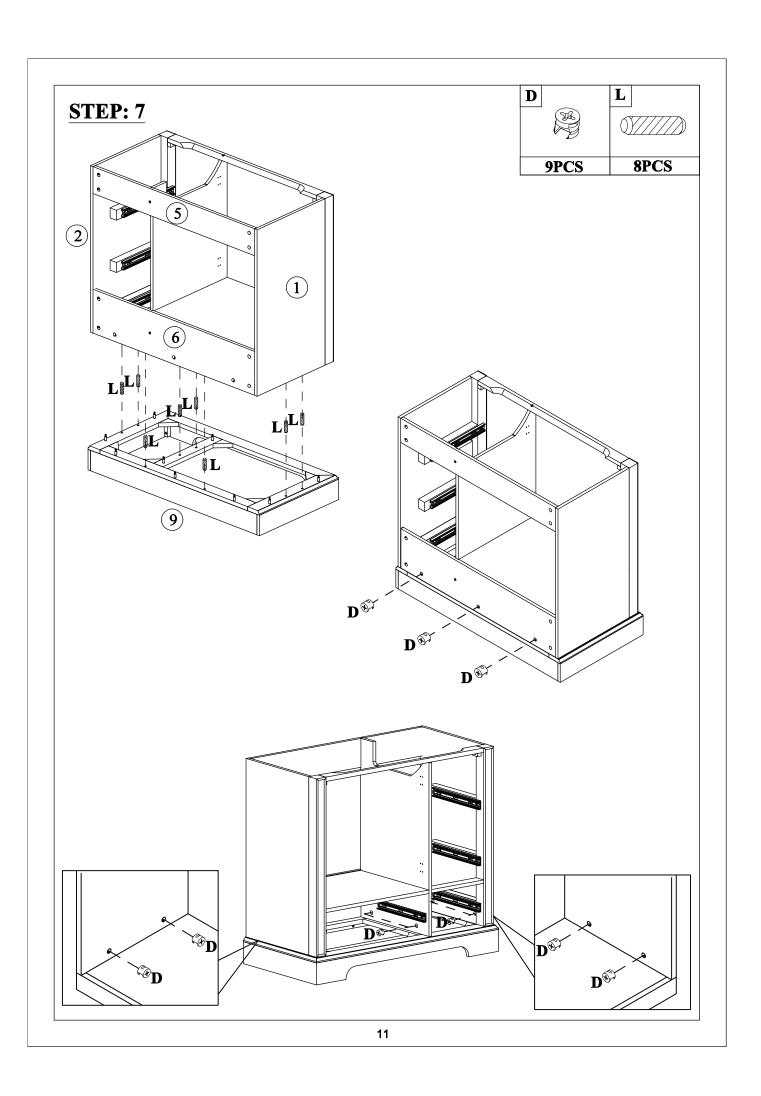

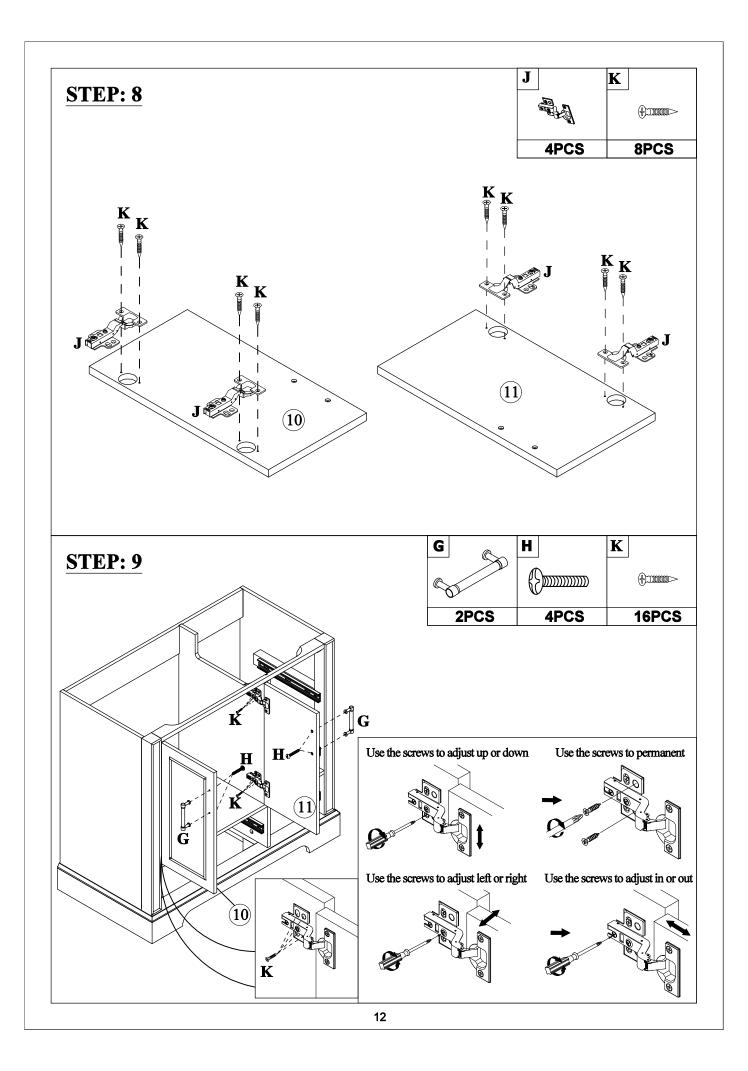


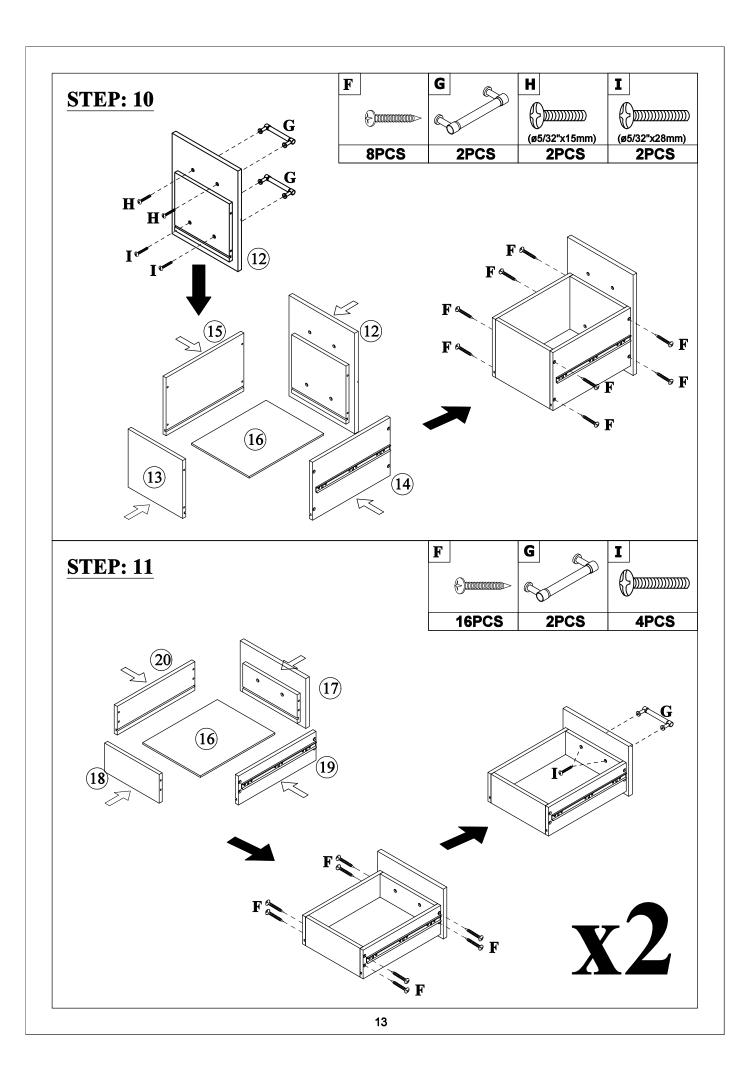

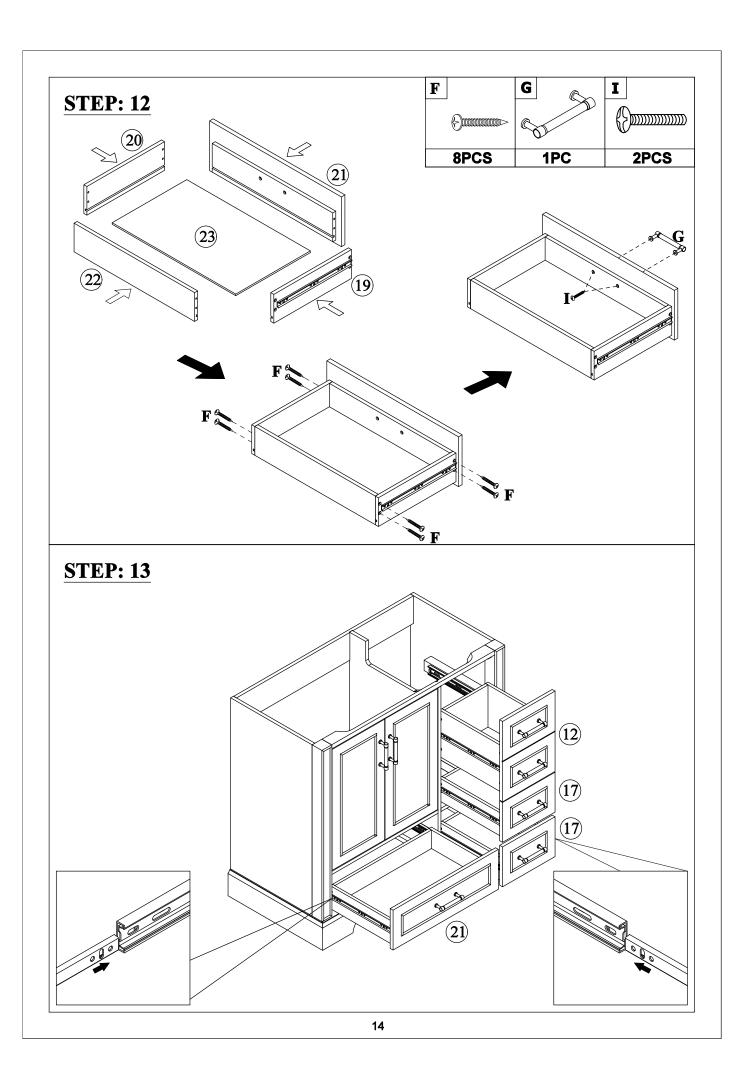







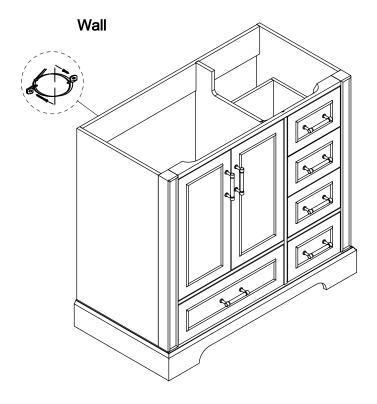

STEP: 15

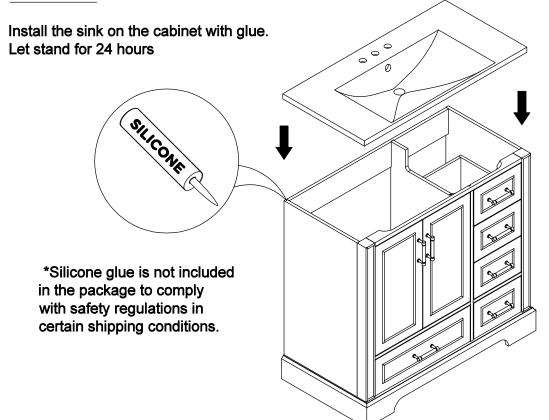


STEP: 16

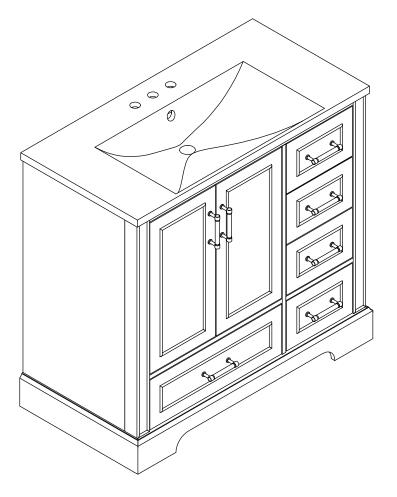




HINGE ADJUSTMENTS

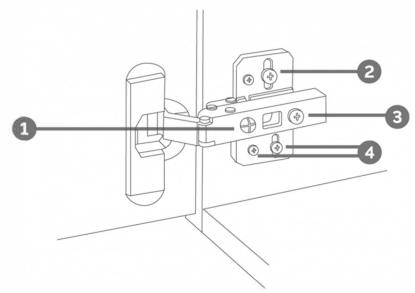

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

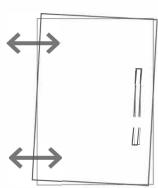

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

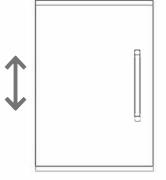

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

