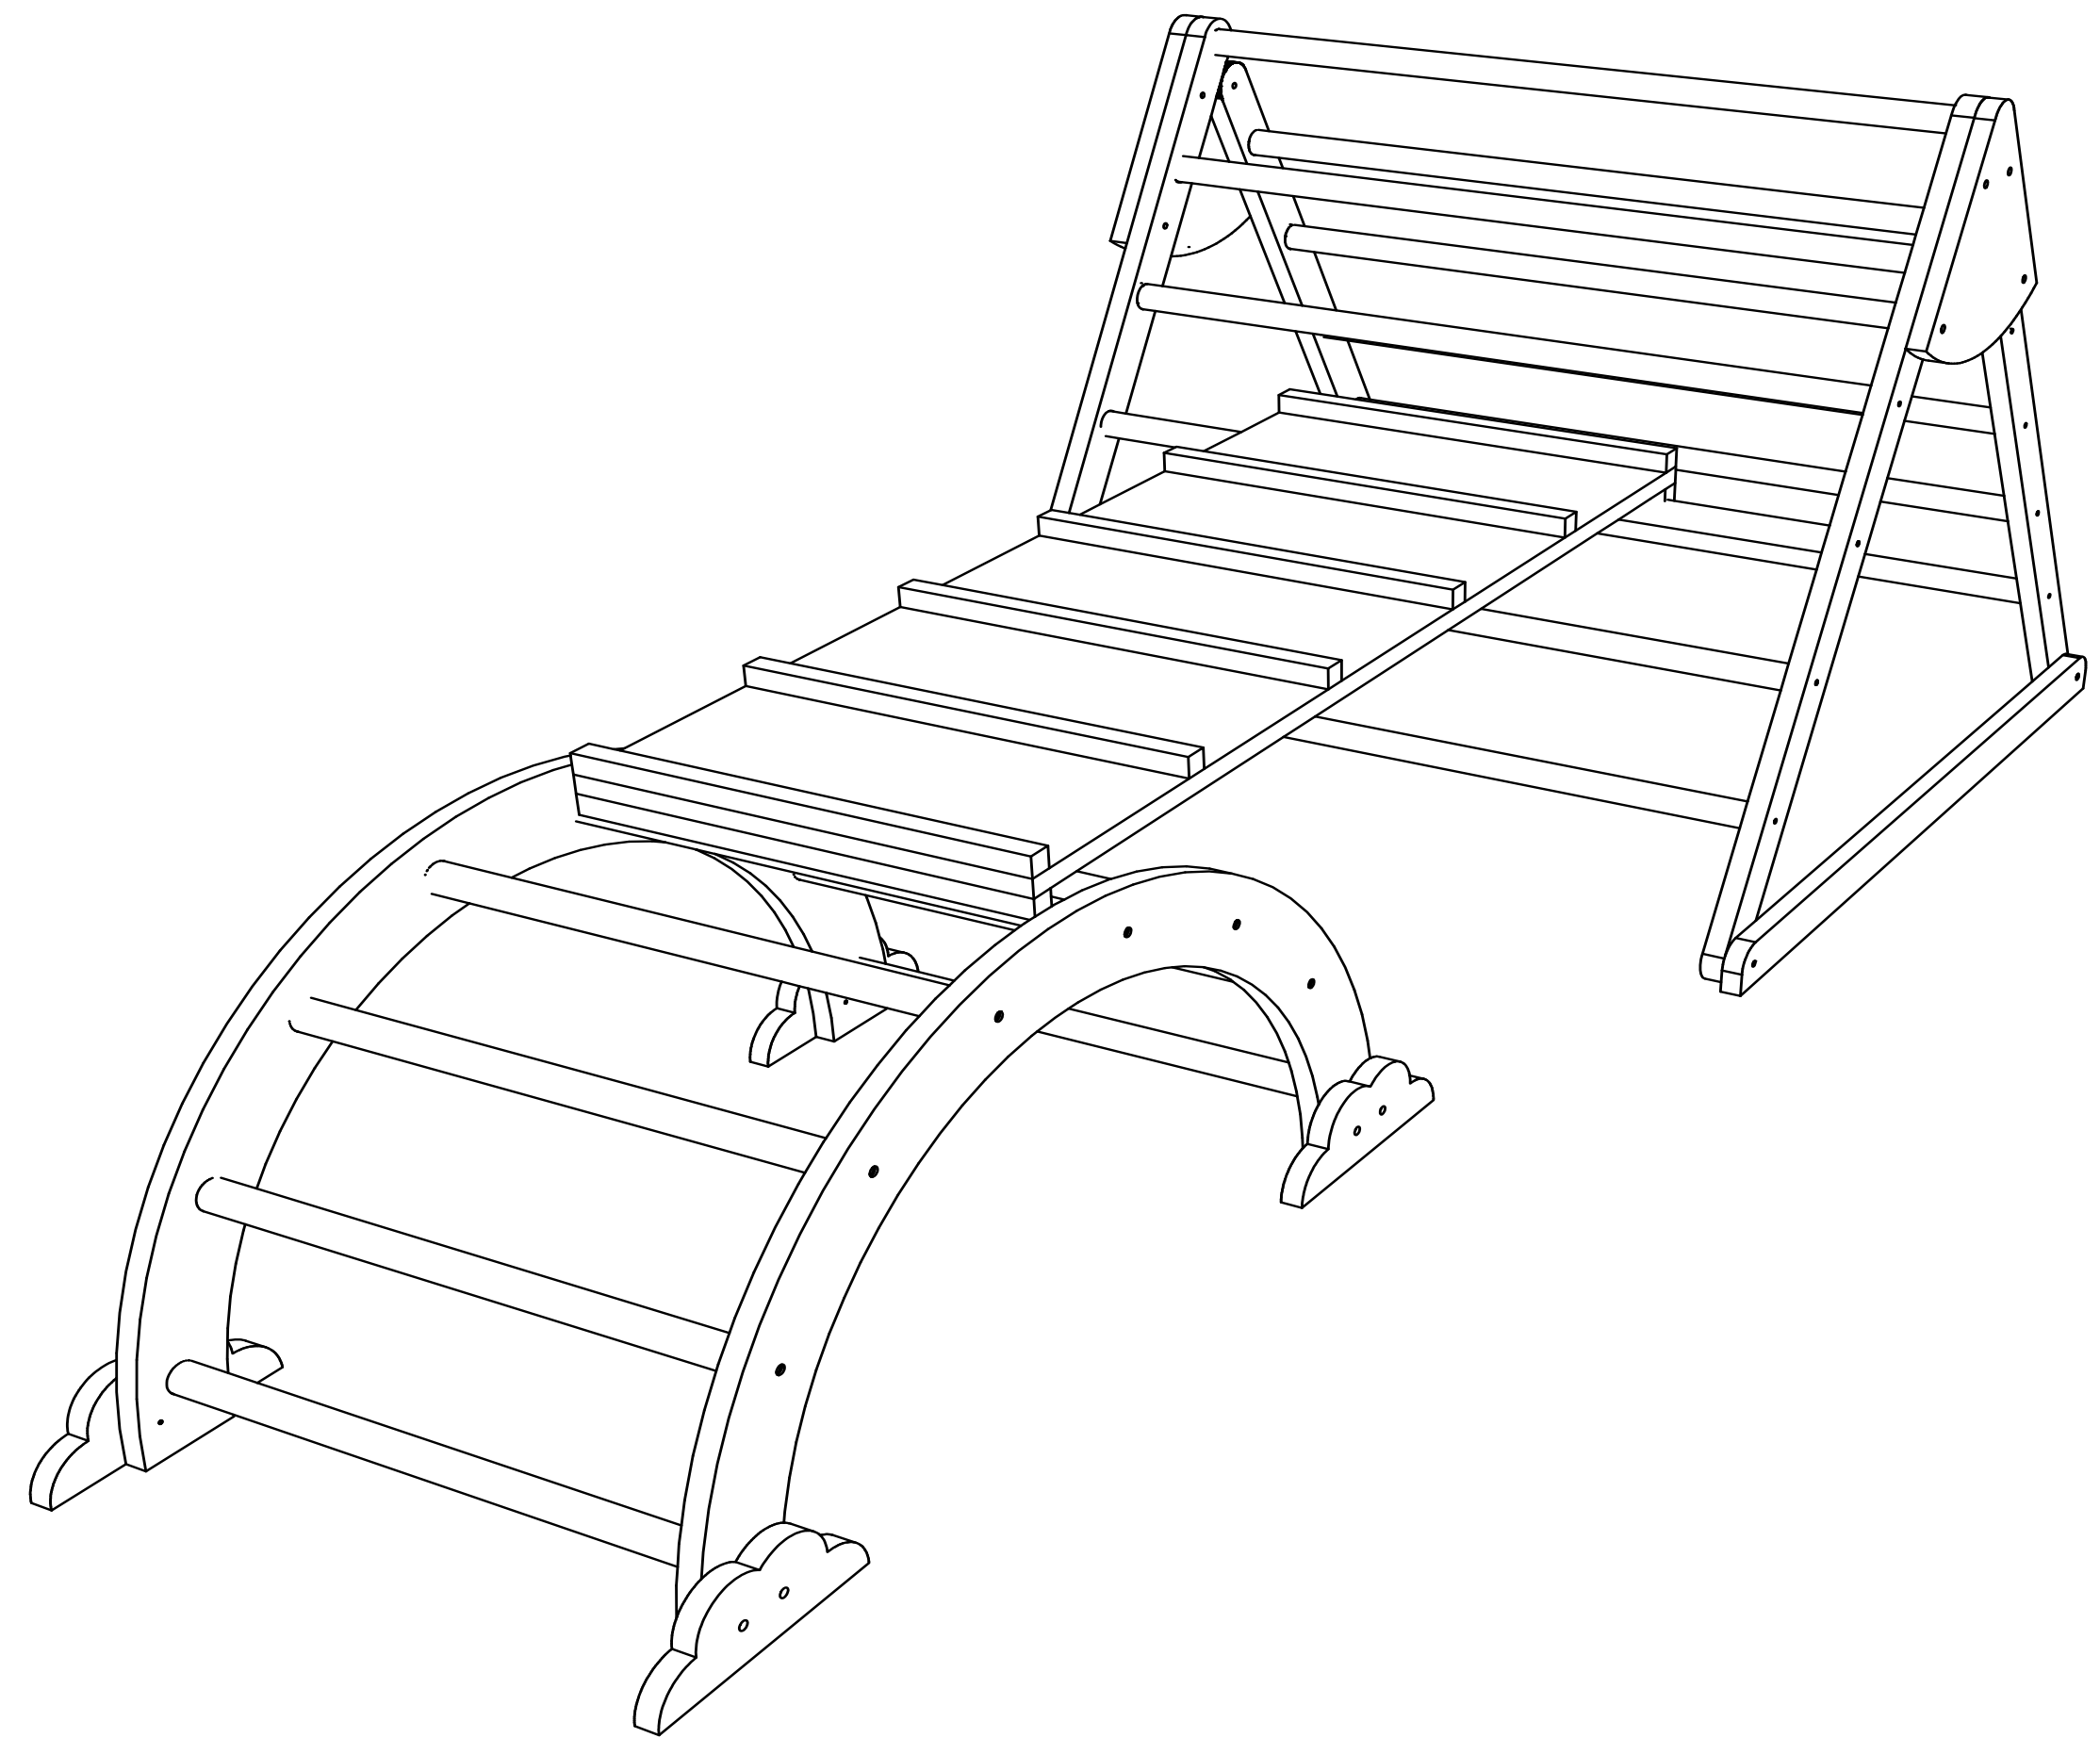


# Wooden Climbing Playset

## USER MANUAL



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

---

## SAFETY & CARE

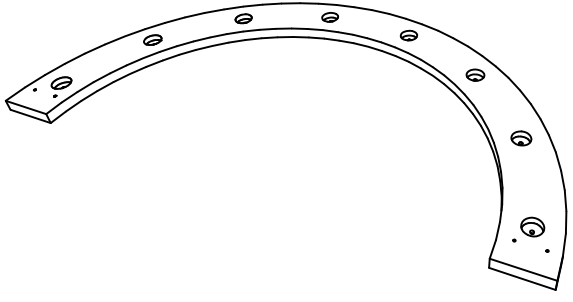
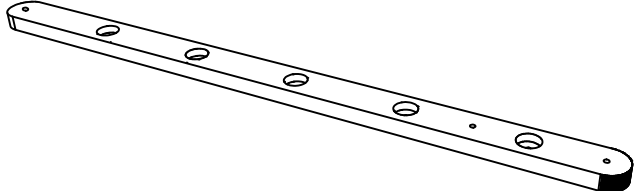
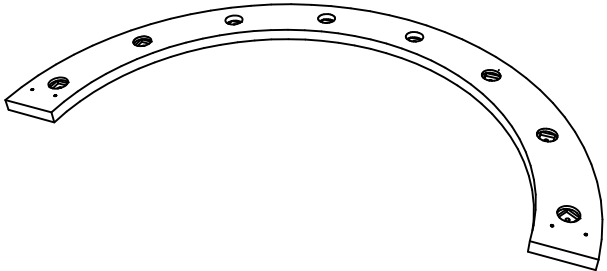
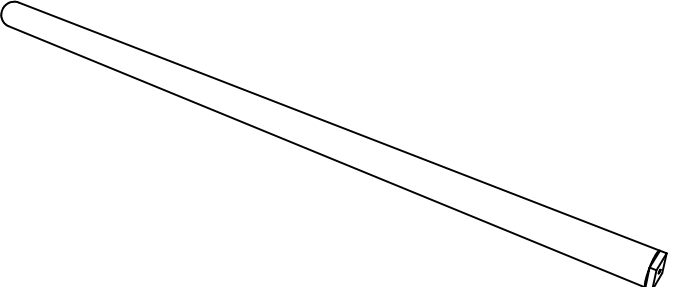
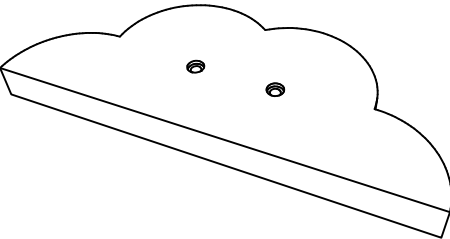
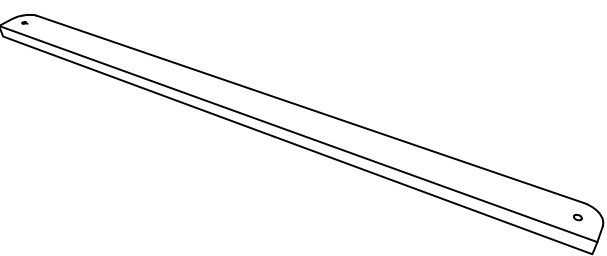
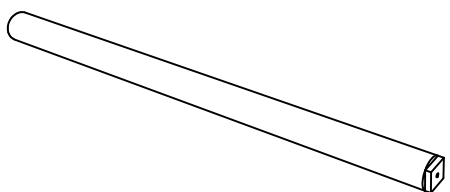
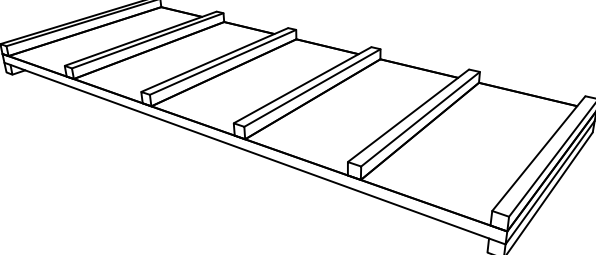
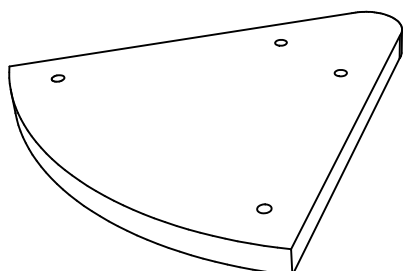
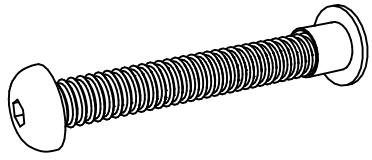
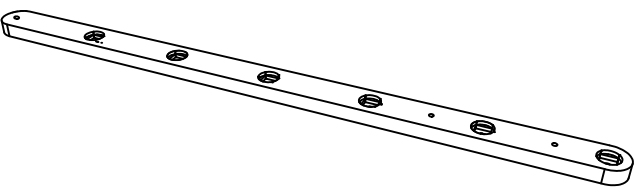

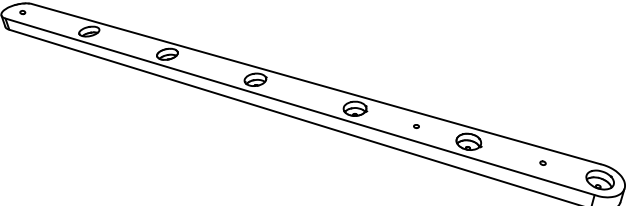
 
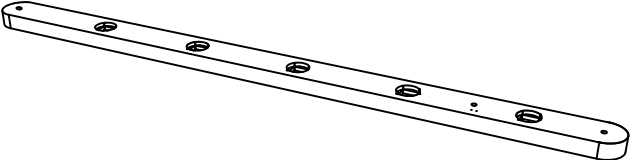
 
- ADULT assembly required!
- Never place product on an elevated surface.
- Children must not use this product until assembly is completed.
- Always place product on a flat, level surface. NEVER place near stairs.
- This product should only be used under adult supervision.
- This product is intended for indoor, domestic use only. It is not suitable for commercial or medical use.
- DISPOSAL OF PACKAGING: Make sure to throw away all packaging materials. They are not to be used as toys.
- NEVER use this product if there are any loose or missing fasteners, loose joints or broken parts. Check after assembly.
- Adults should check all screws weekly or if the product gets loose and or wobbly, then tighten. If product continues to be not sturdy, then stop and do not use.
- Cleaning - using a damp cloth, use mild liquid dish soap to wipe clean product. You may want to clean the under side first to make sure you are not damaging the finish.

**PLEASE DO NOT RETURN TO STORE**



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

A		1PCS	H		1PCS
A1		1PCS	I		11PCS
B		4PCS	J		2PCS
C		8PCS	K		1PCS
D		2PCS	a	M6*30 	12PCS
E		1PCS			2PCS
F		1PCS	b	M5*30 	46PCS
G		1PCS			1PC

