


INSTRUCTION MANUAL
MODEL:1194-2LM

Edition:20230853656Z


Assembly Instruction

PART LIST (Box of 1194-1)


Ax1

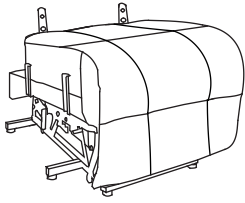


Gx1

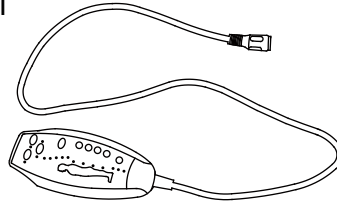


Bx1

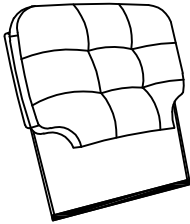

Ix1

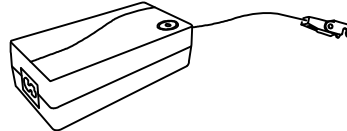


Xx1

 


PART LIST (Box of 1194-2)


F(L)x1

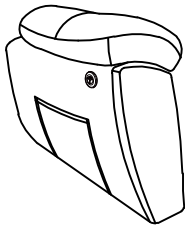


F(R)x1

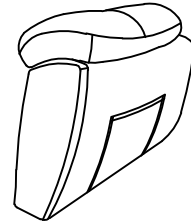


JX2

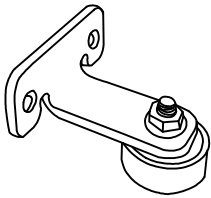


KX4

 


LX4

 


Step 1

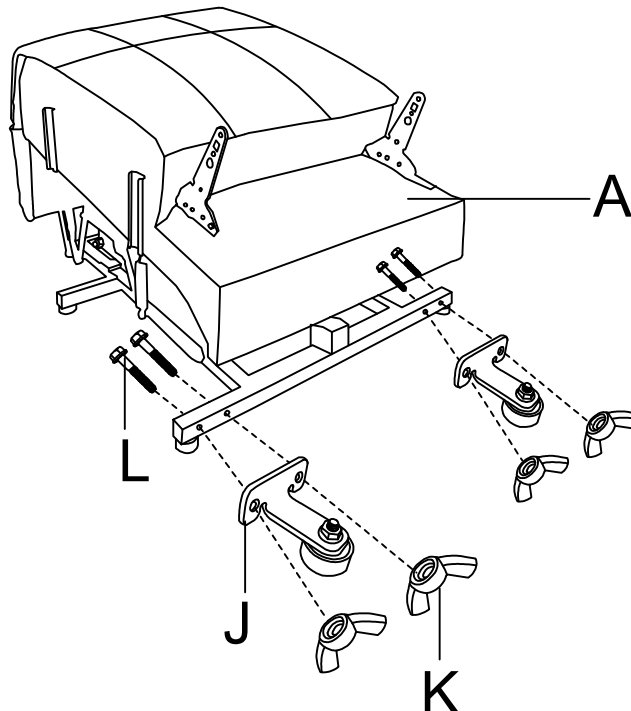


Step 2

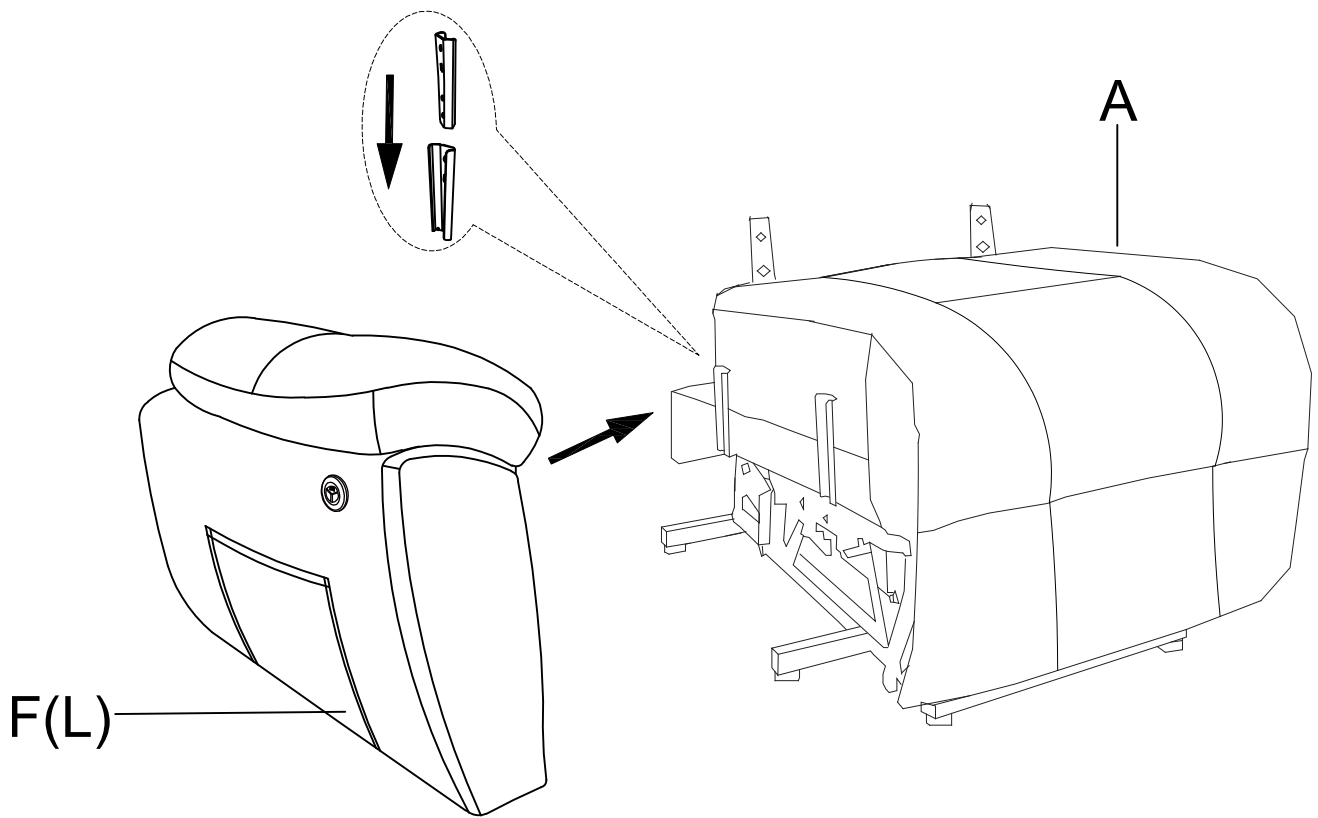


Step 3

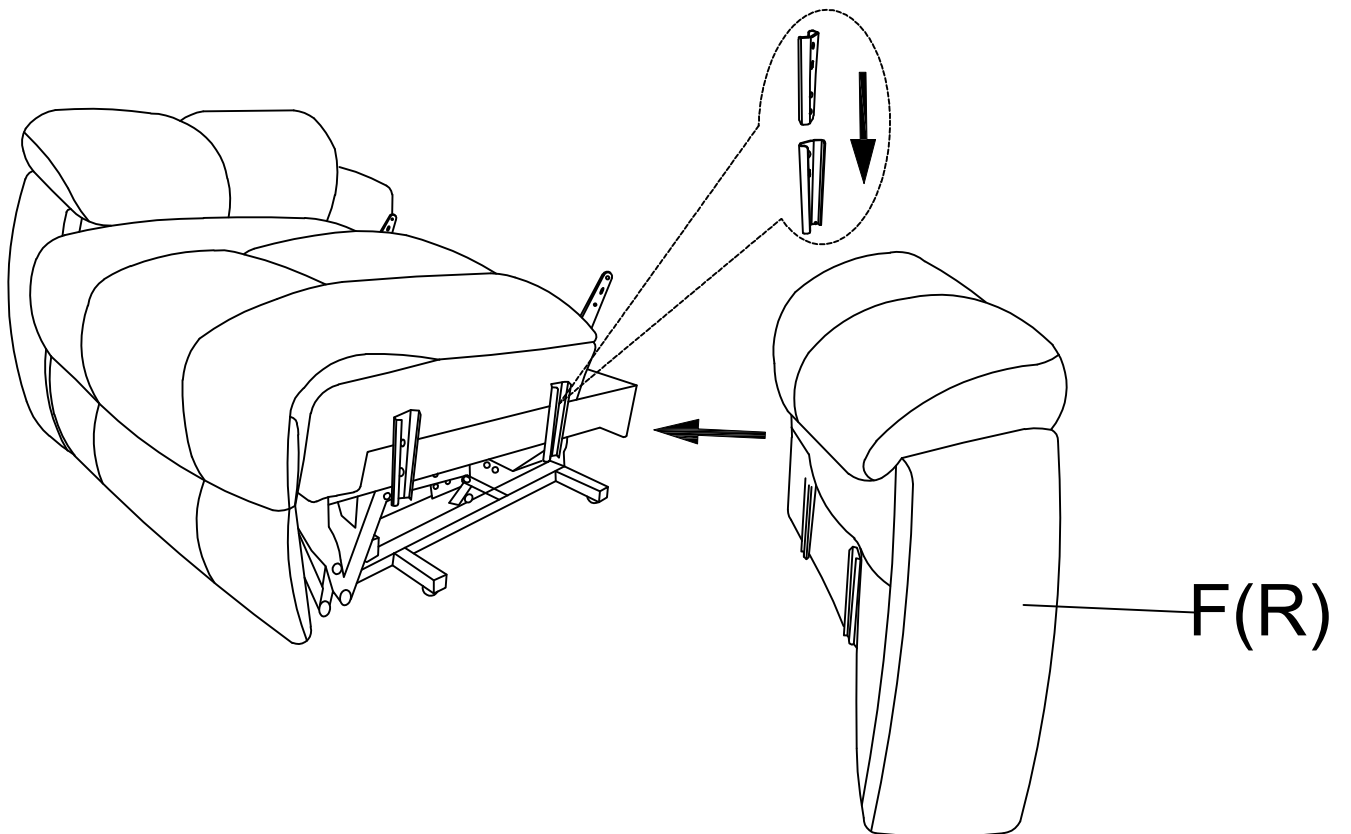


Step 4

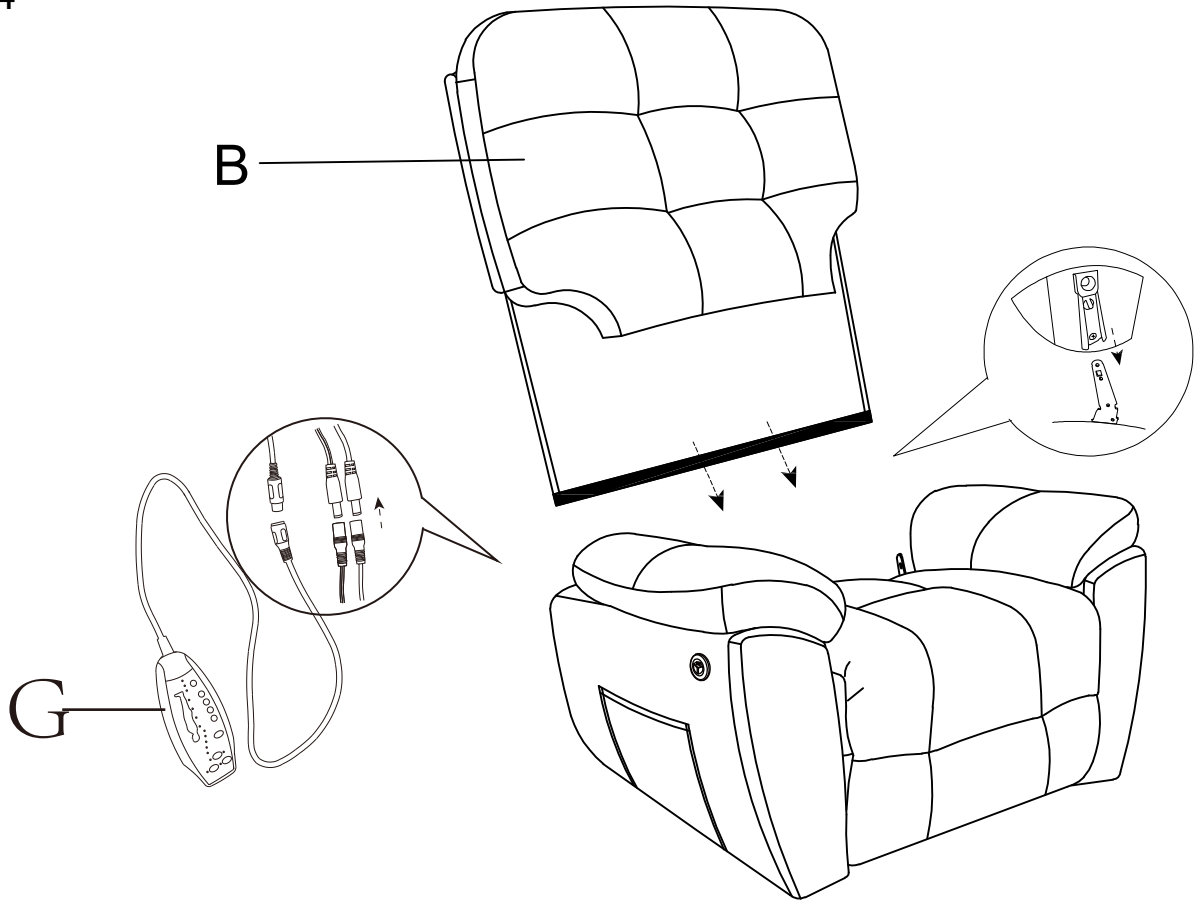


Step 5

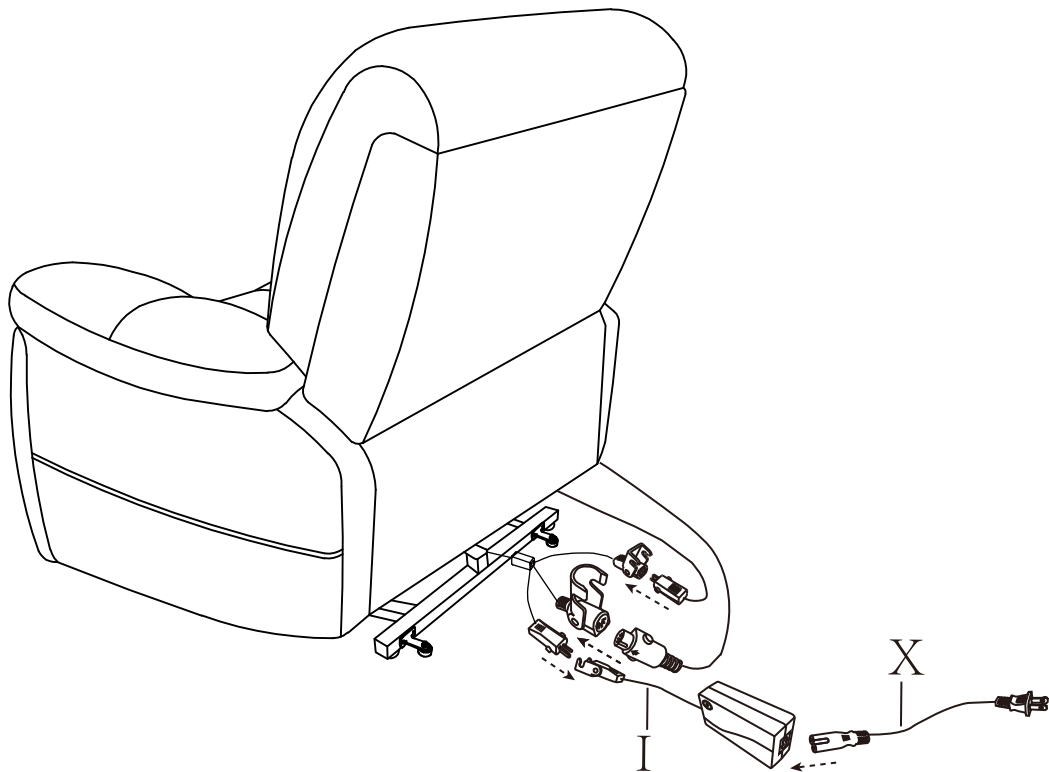


Step 6

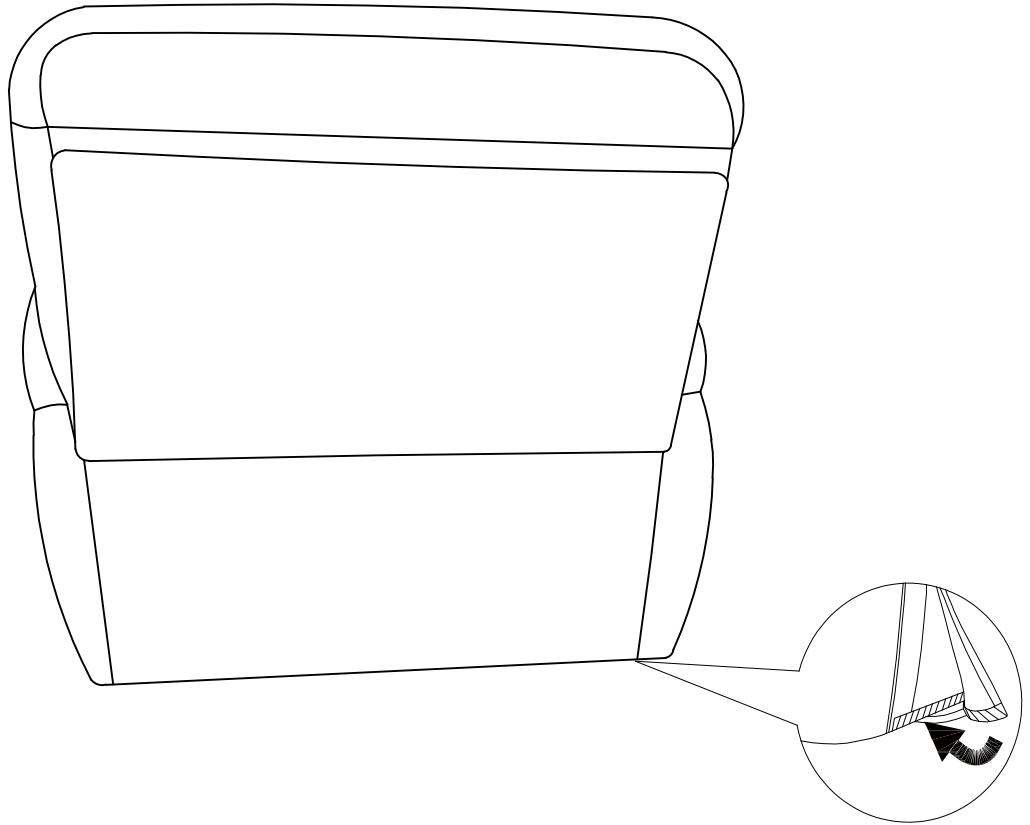


Step 7

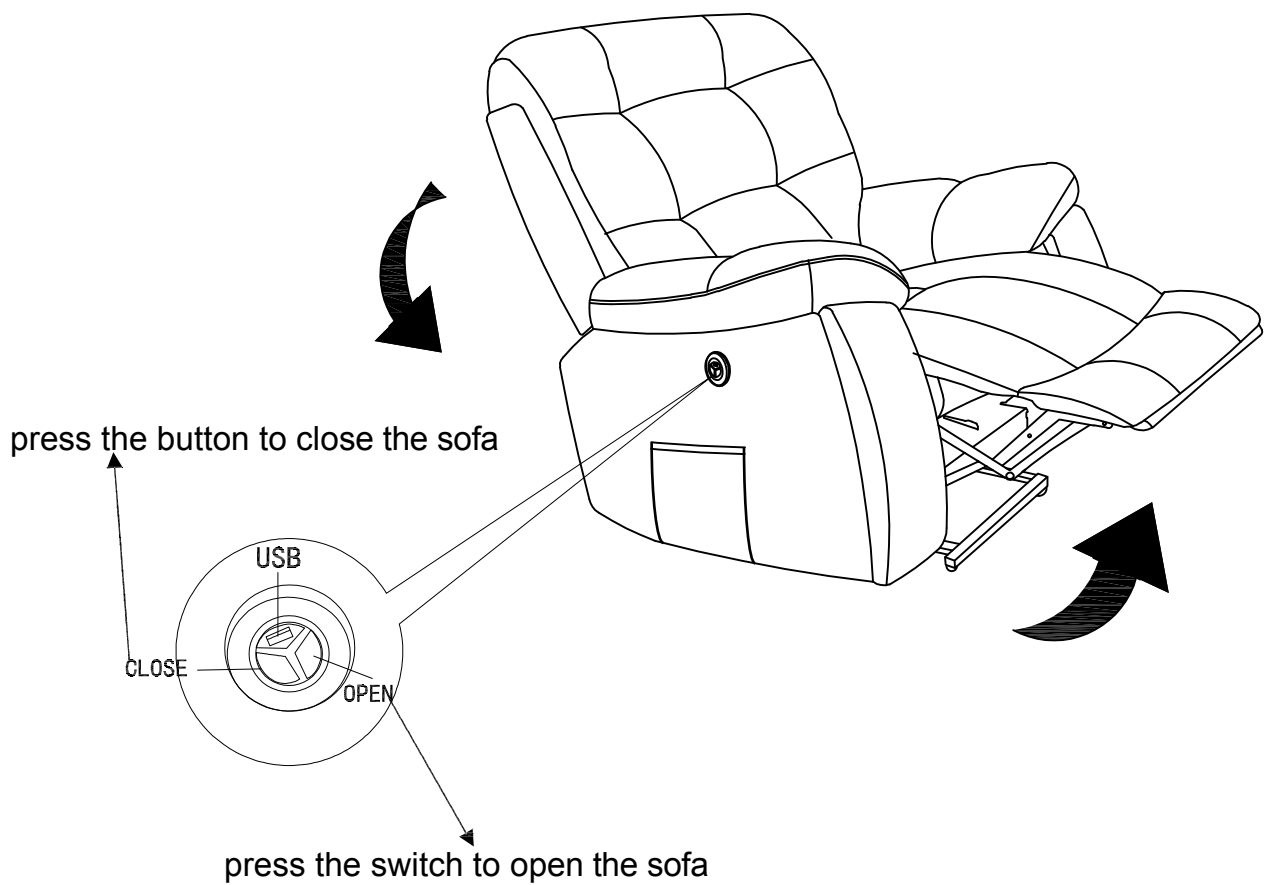


Step 8

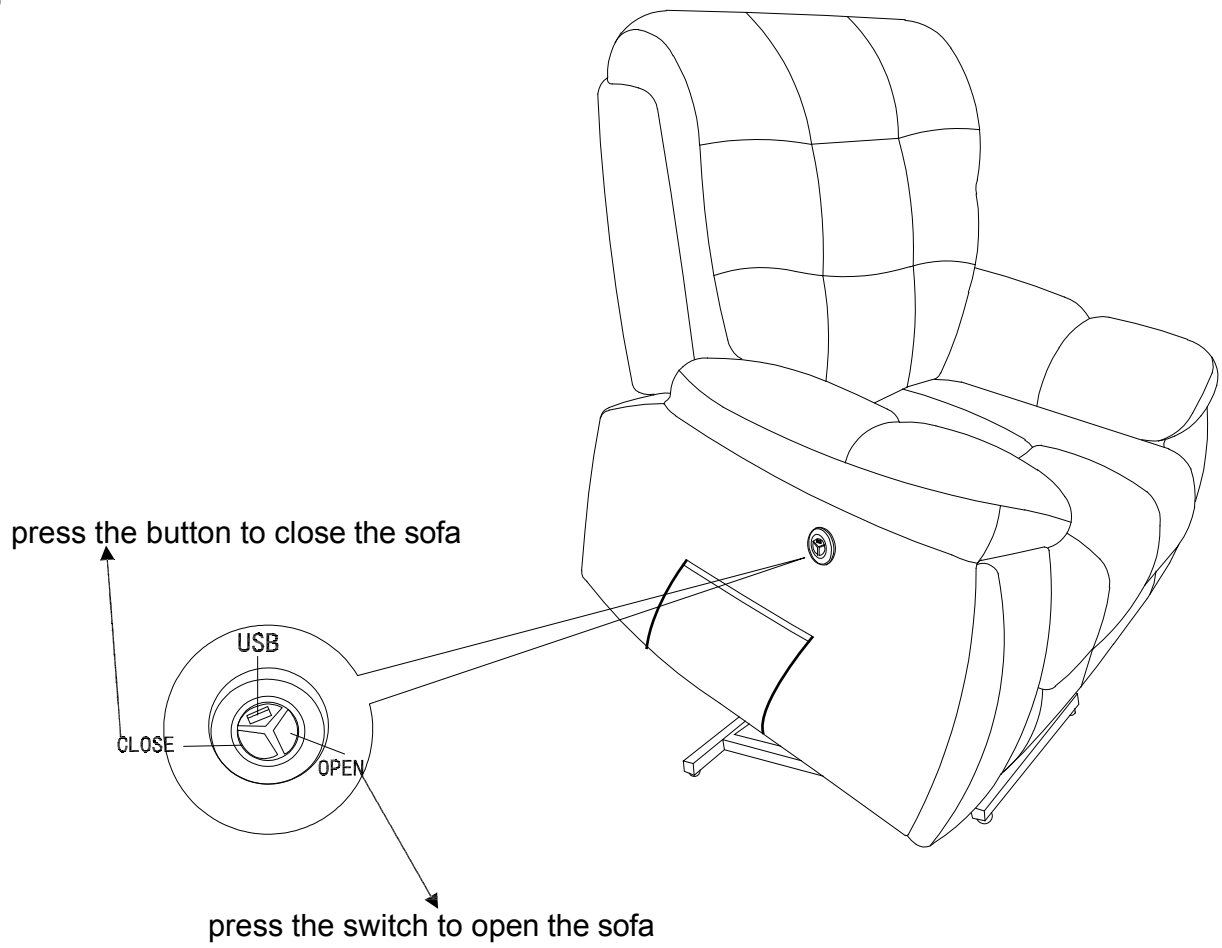


Step 9

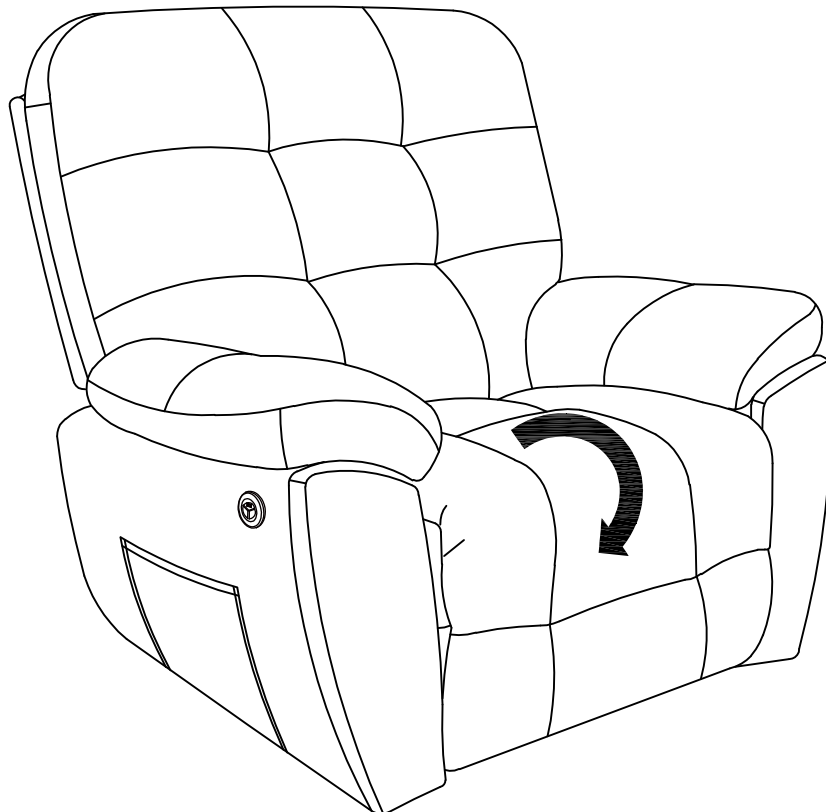

Step 10

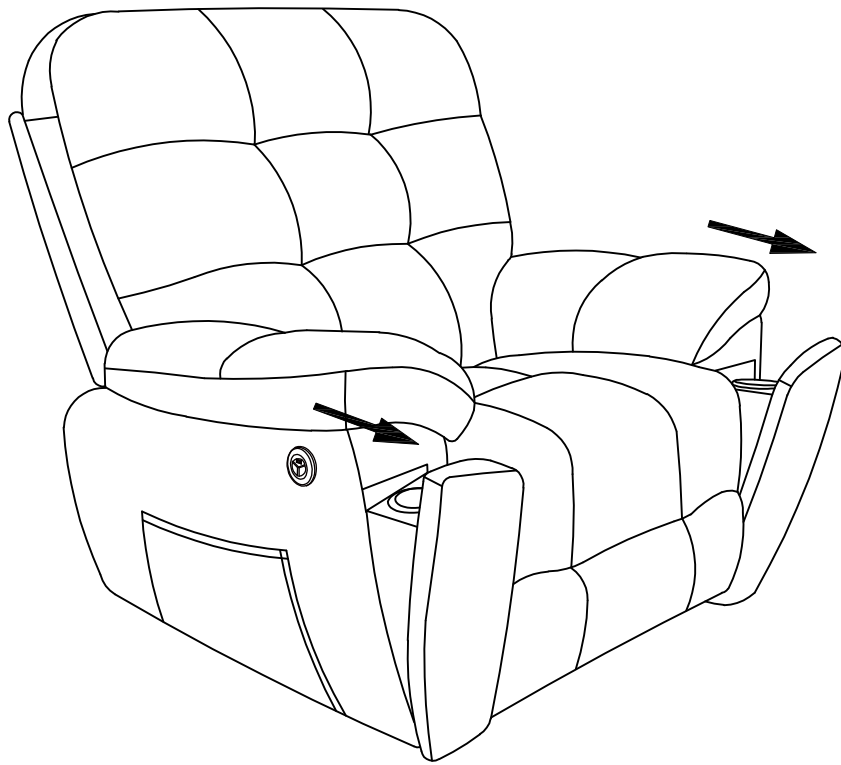


Step 11

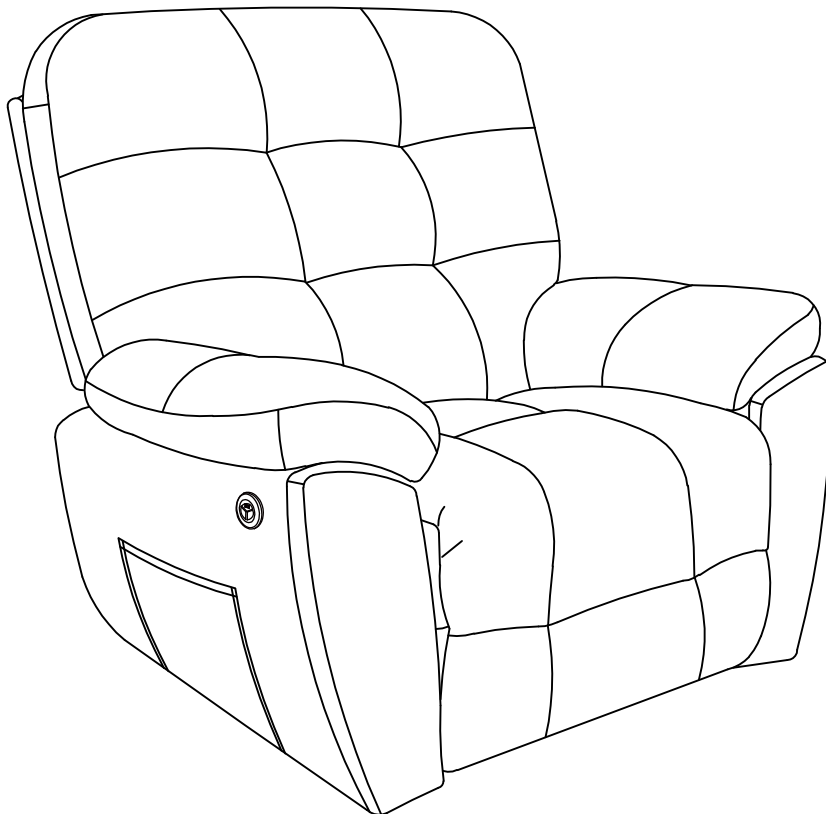

MASSAGE CHAIR

READ ALL INSTRUCTIONS
BEFORE USING THE ITEM

REMOTE CONTROL Function of remote

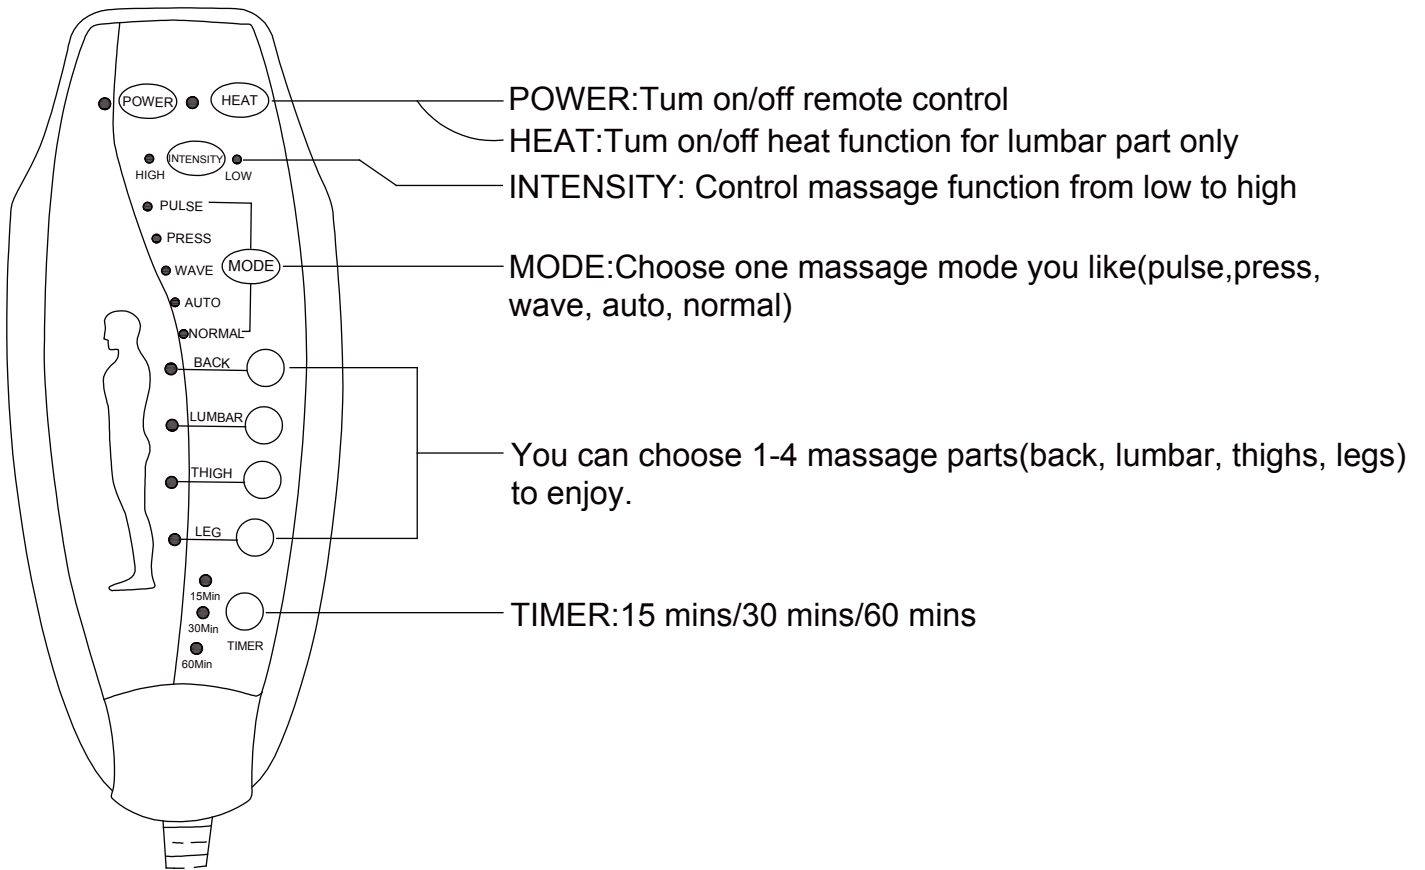

I 、 Specifications of the Power Adapter

The power is on in the standby state . The user can activate the function via the hand controller.

Input : AC 100-240V , 50HZ / 60HZ ; Output:DC12VIA.

II 、 Product features

- 1、 Four-way vibration motor
- 2、 Five vibration modes
- 3、 Two levels of vibration intensity
- 4、 Three preset durations for timed shutdown
- 5、 One-way switch for independent heating plate operation

III、 Function details

- 1、 Click to cycle through the switch options
- 2、 Adjust the vibration intensity switch (strong/weak)
- 3、 Click to cycle through the heating switch options
- 4、 Tap to switch between the five vibration modes (Pulse / Press/ Wave / Auto / Normal)
- 5、 Back massage switch
- 6、 Lumbar massage switch
- 7、 Thigh massage switch
- 8、 Leg massage switch
- 9、 Cycle through massage times by positioning (15 /30 / 60 min)