ASSEMBLY INSTRUCTION

W00043AAA / W00043AAE/ W00043AAK


TIPS


1. This bed fit standard twin mattress 75" L x 39" W.


2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.

3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.


4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

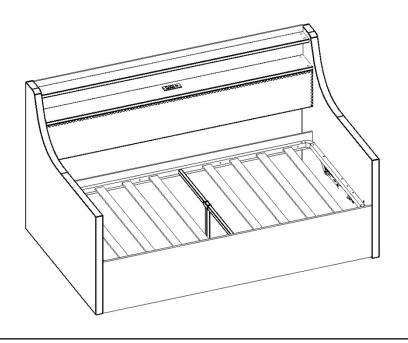


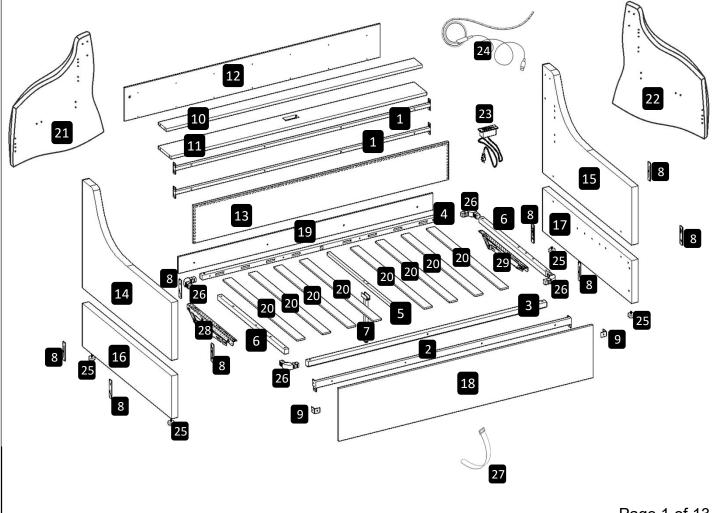

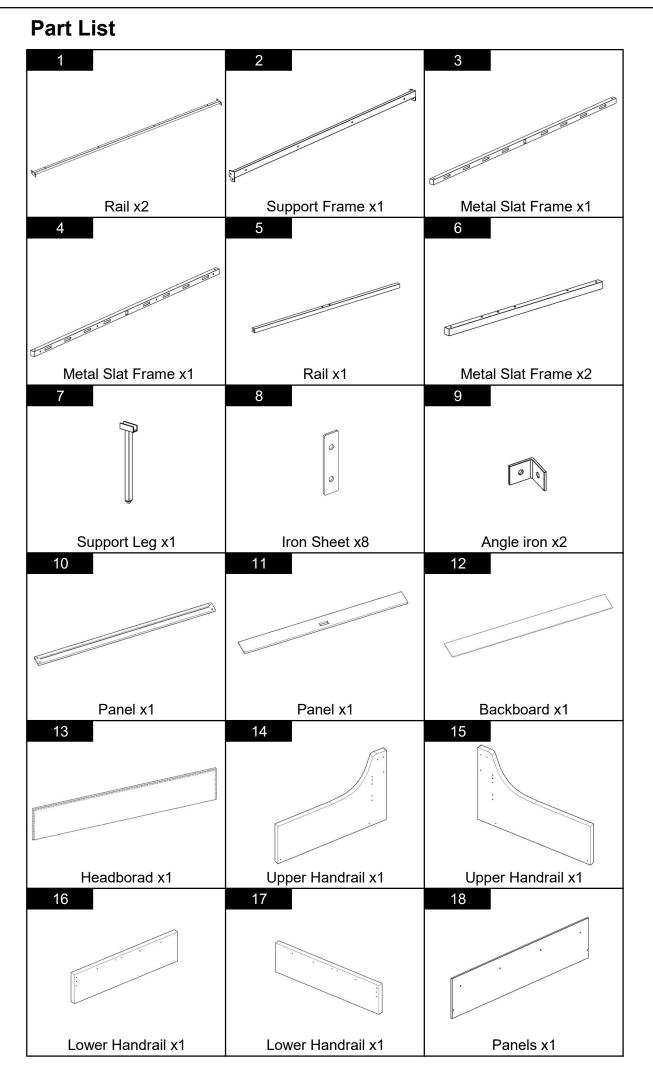

Page 2 of 13

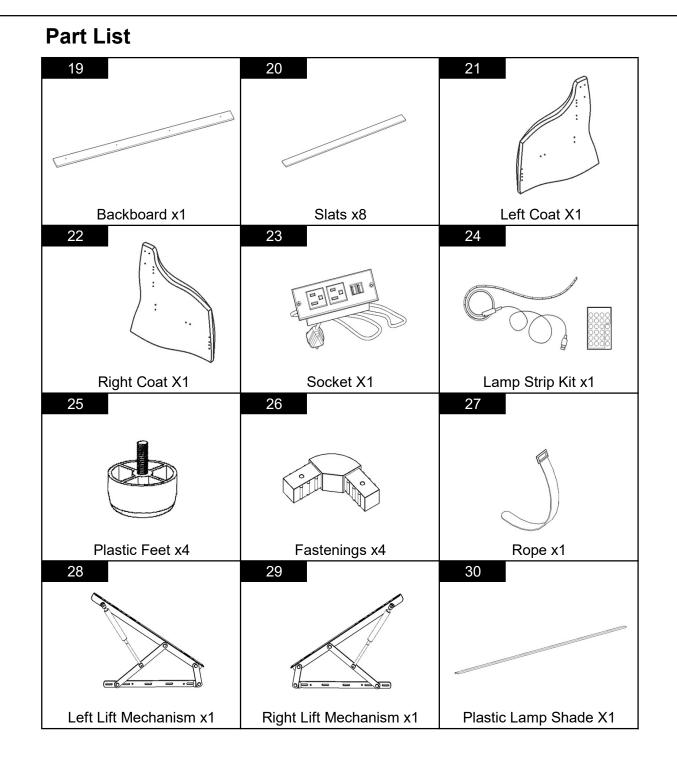

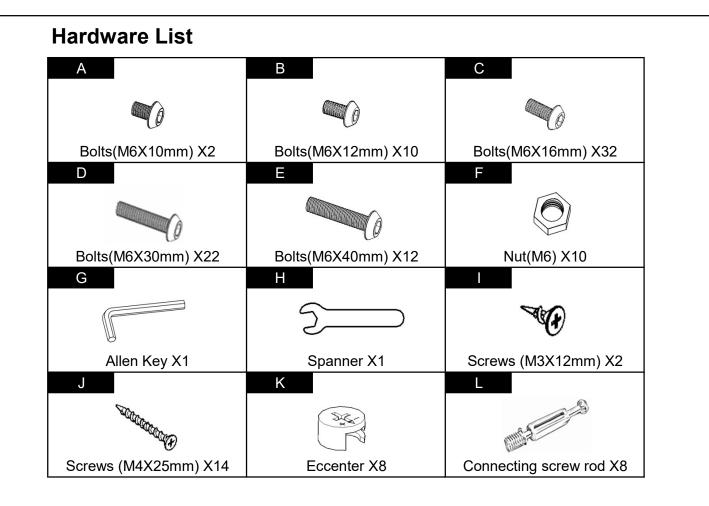

IMPORTANT NOTICE

Once your bed frame is completely assembled, the slat unit will not operate correctly unless a mattress is placed on the slat frame. Position the mattress on the slat frame whilst it is in the closed position. **PLEASE NOTE -** It takes a lot of force to make the initial movement of the ottoman. This is a design feature of the product so that it does not fall shut - the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is al most shut, it will close completely under its own weight. When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the side rails. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the foot end of the bed slightly to the left or right whilst leaving the head end stationary.

PISTONS

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when taken off the ottoman. All pistons are tested for correct pressure and operation before being attached to the slat unit. Initially it might appear that the pistons are very stiff when opening and closing the ottoman.

THIS IS PERFECTLY NORMAL

When fully assembled and the mattress is in position, please raise and lower the ottoman 4/5 times to ensure the gas piston are fully lubricated.

