

52-INCH DEROCATE CEILING FAN USE AND CARE GUIDE


Installation of the hanging bracket

52

C

 \triangleright

C

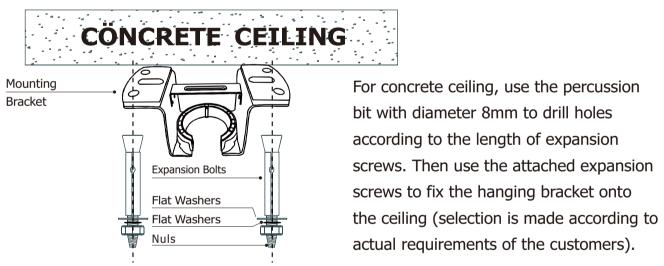


STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX. 1)Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.

2)Remove the Mounting Bracket , drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts .

IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

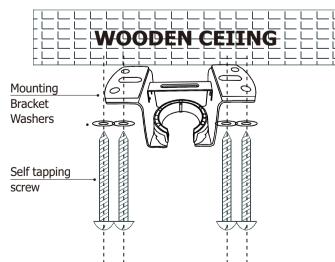

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.

2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4Self Tapping Screws & Washers

Install downrod assembly

င္မ္ဆာ FF

imes1

blade arm screw

and lock washer

NOTE

BB


GG


 $\times 2$


Balance sheet

 $\times 2$

Expansion bolts

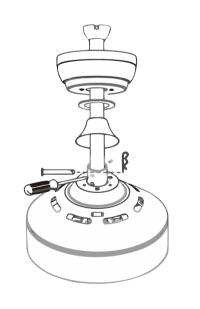


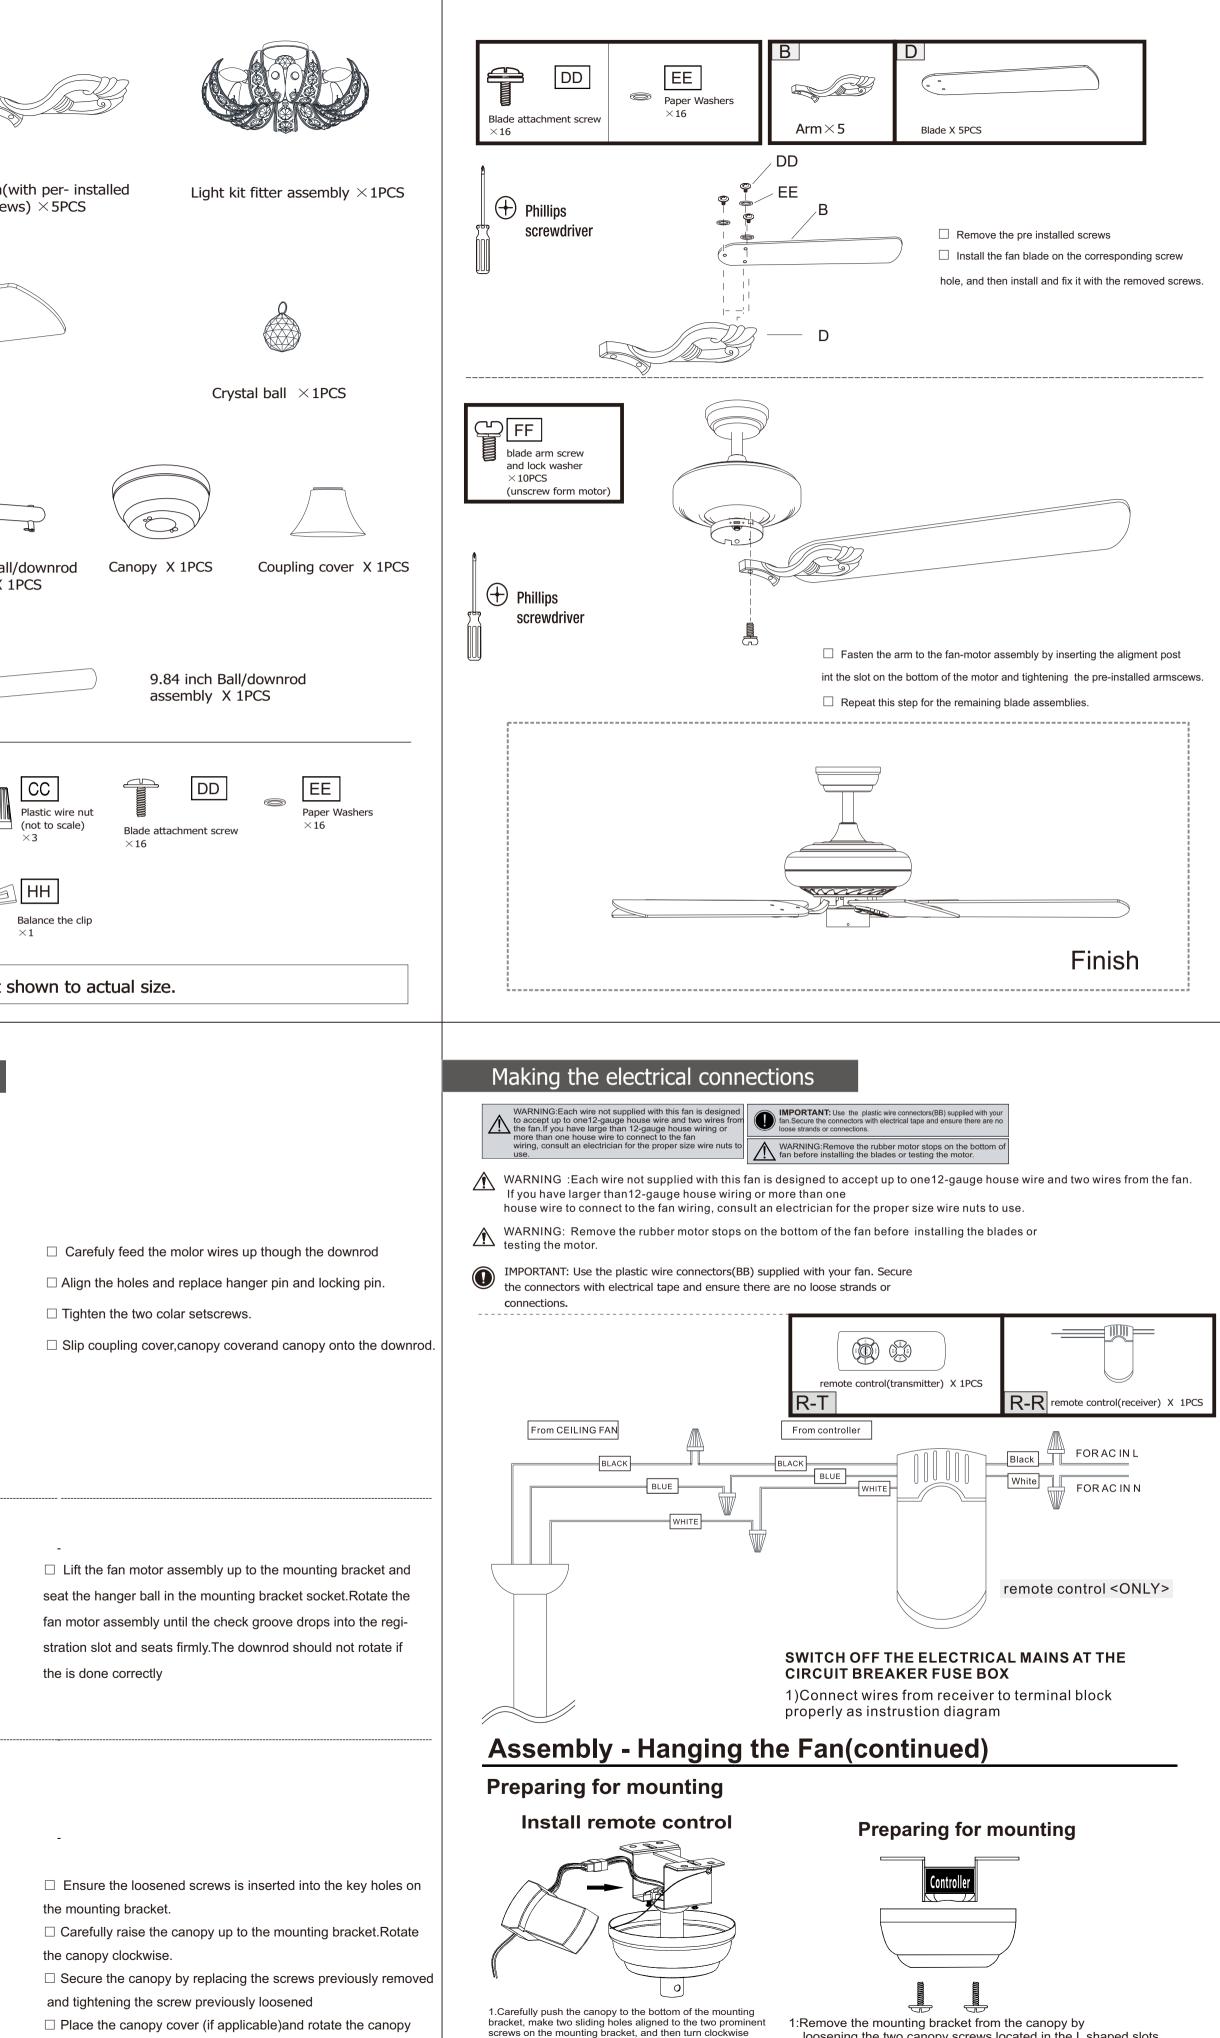

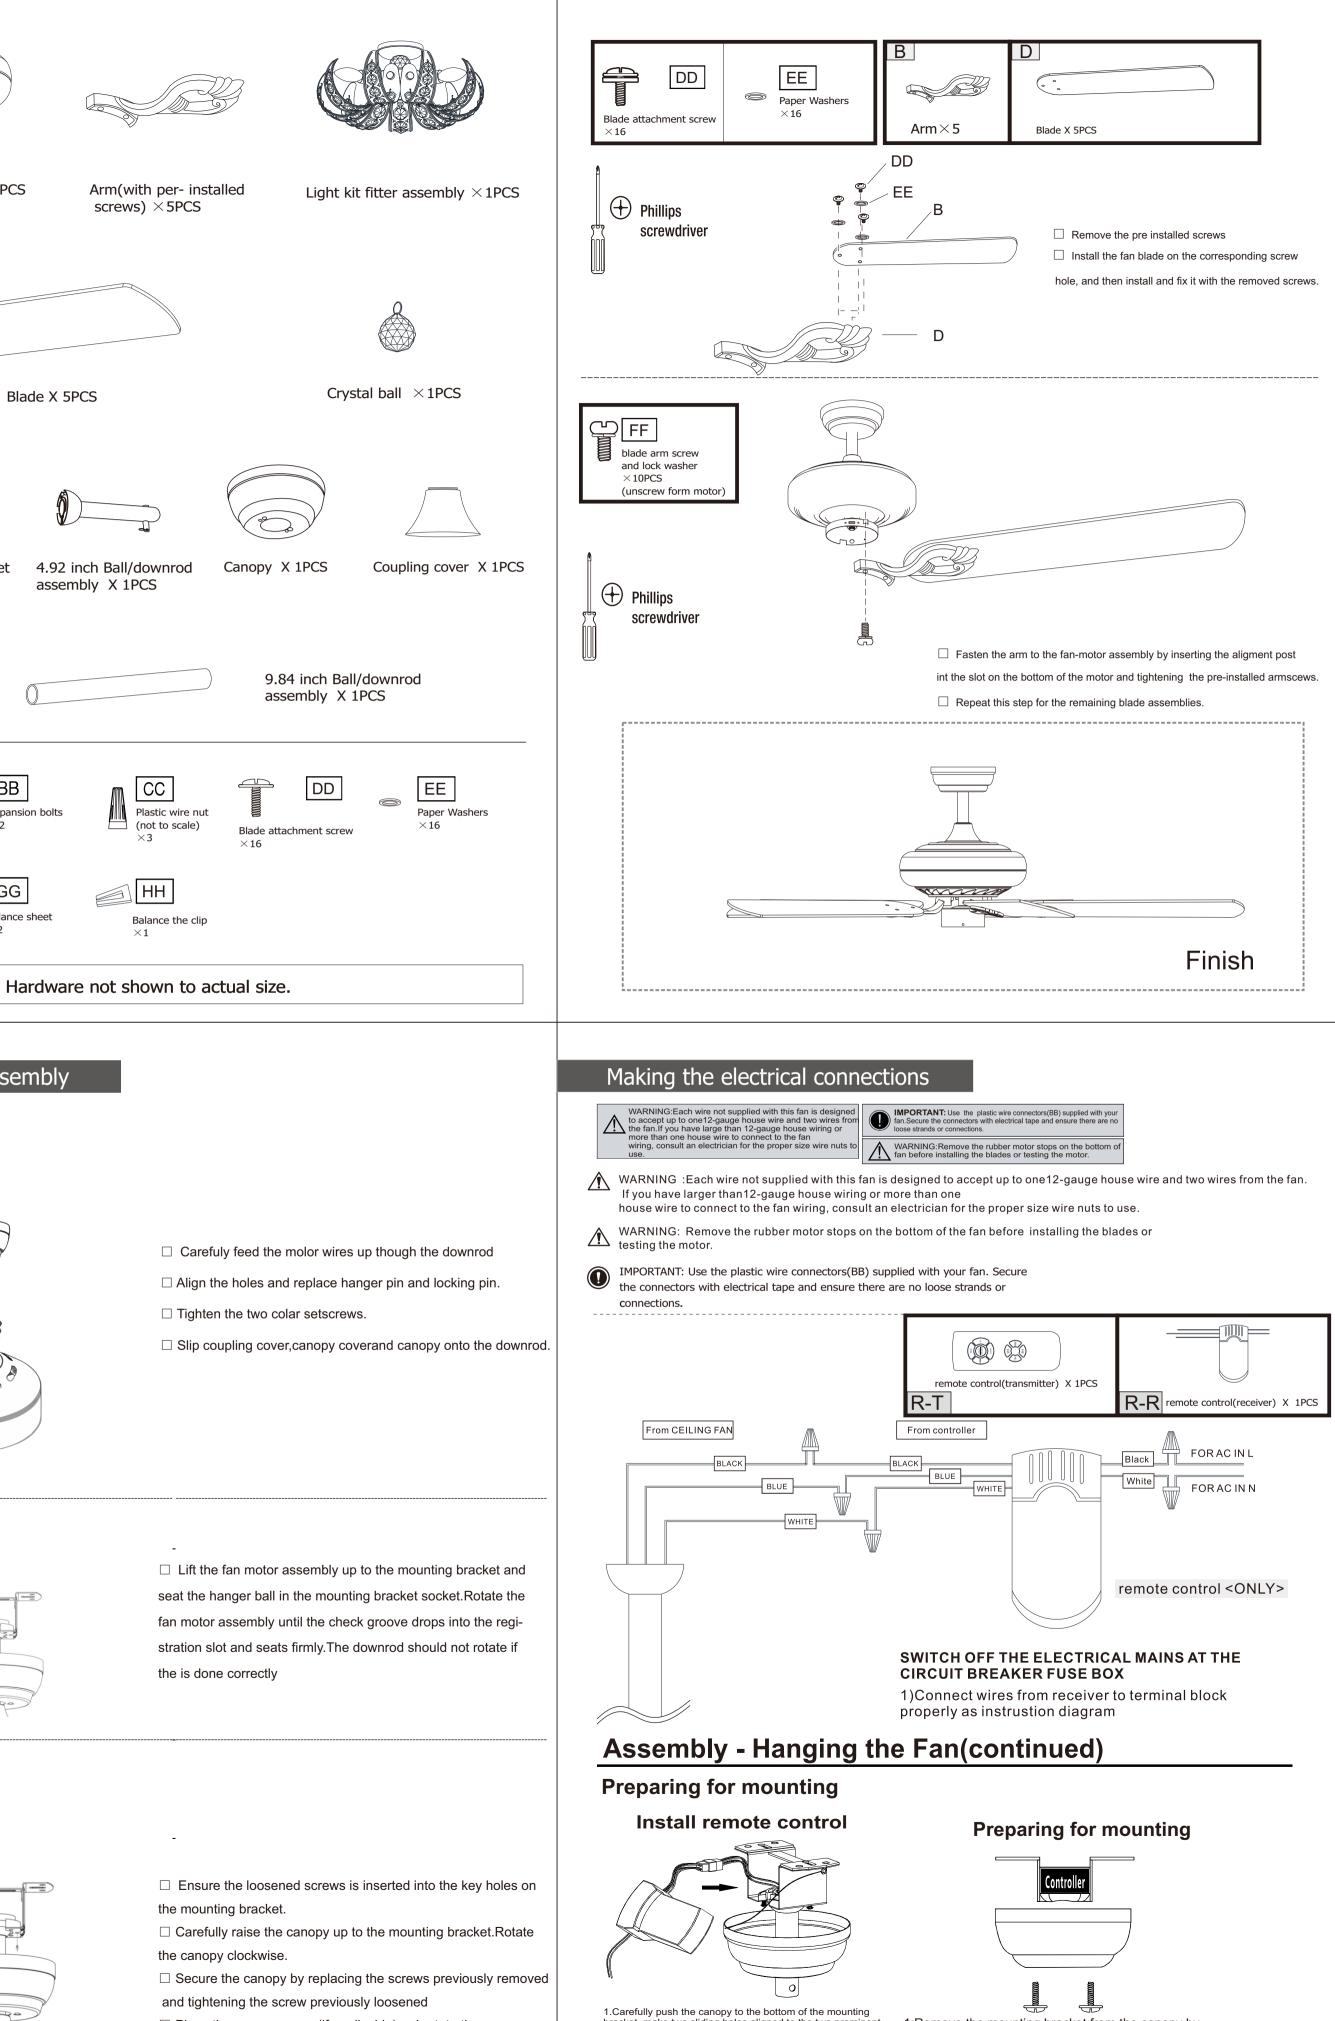

Install canopy

Hang the fan

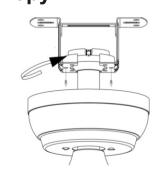

-B

Fastening the blade arms to the motor

- \Box Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.

2.Push the canopy ring to the bottom of he canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

until tight.

loosening the two canopy screws located in the L shaped slots

2:Remove and save the two canopy screws in the round holes.

This will enable you to remove the mounting bracket

