


Creative design

Multi-Scenario

Ceiling

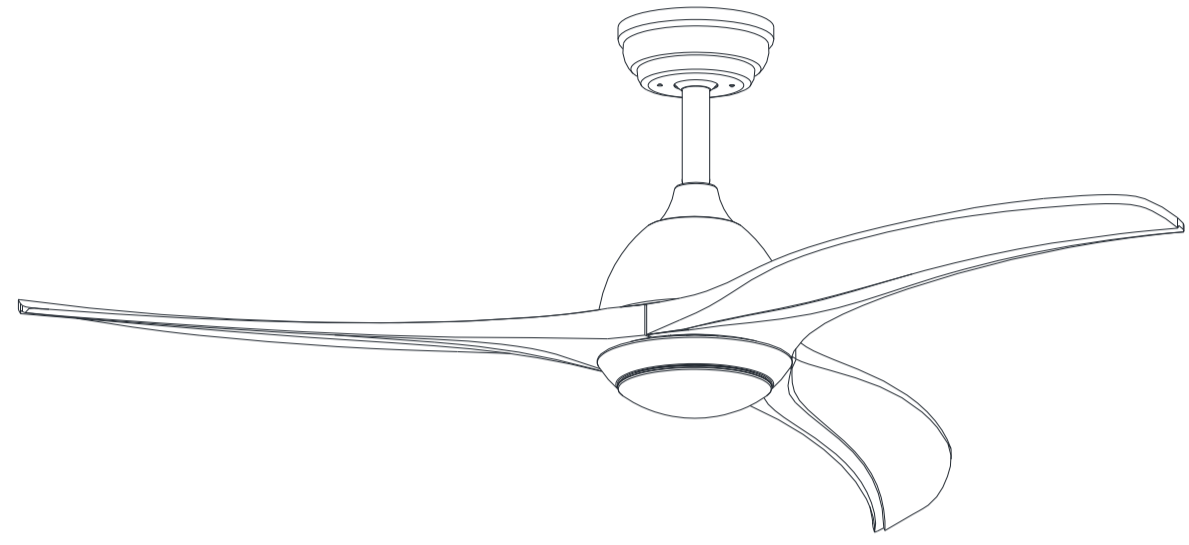

DEROCATE CEILING FAN

User Manual

Pre-Installation

Light kit fitter assembly

Fan-Motor assembly × 1PCS Light kit fitter assembly × 1PCS LED × 1PCS

Blade X 3PCS

Slide - on mounting bracket (inside canopy) X 1PCS 4.92 inch Ball/downrod assembly X 1PCS Canopy X 1PCS Coupling cover X 1PCS

9.84 inch Ball/downrod assembly X 1PCS

lamp shade × 1PCS

Parts Kit

AA Mounting screws × 4 BB Expansion bolts × 2 CC Plastic wire nut (not to scale) × 3 DD Blade attachment screw × 7 EE Iron Washers × 7

NOTE Hardware not shown to actual size.

Install downrod assembly

1. Attach the motor to the downrod using the provided hardware.

2. Use a Phillips screwdriver to secure the assembly.

3. Attach the canopy to the downrod.

4. Use a Phillips screwdriver to secure the canopy.

5. Check the alignment and ensure the assembly is secure.

6. Use a Phillips screwdriver to secure the final components.

7. Final check and adjustment.

Fastening the blade arms to the motor

1. Remove the pre-installed screws.

2. Install the fan blade on the corresponding screw hole, and then install and fix it with the removed screws.

3. Fasten the arm to the fan-motor assembly by inserting the alignment post into the slot on the bottom of the motor and tightening the pre-installed armscrews.

4. Repeat this step for the remaining blade assemblies.

5. Remove the pre-installed screws and install the lamp at the specified position.

6. Put the LED light source into the disc (the LED light source has a magnet, which can be directly magnetized on the disc).

7. Pass the LED lead of the motor through the hole in the middle of the LED light source.

8. Then plug the male terminal of LED lead into the female terminal of LED light source (as shown in figure).

9. Screw the glass lampshade into the lamp in a counterclockwise direction. Make sure the glass lampshade is locked.

Installation of the hanging bracket

CONCRETE CEILING

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.
- 2) Remove the Mounting Bracket, drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.

IMPORTANT : SCREWS & NUTS MUST BE TIGHTENED TILL SNUG

WOODEN CEILING

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)

STEP 2 A-WOODEN CEILING

SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

- 1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.
- 2) Remove the Mounting Bracket, drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceiling with the 4 Self Tapping Screws & Washers

Install downrod assembly

1. Hang the fan from the mounting bracket.

2. Install the canopy onto the downrod.

3. Ensure the loosened screws are inserted into the key holes on the mounting bracket.

4. Carefully raise the canopy up to the mounting bracket. Rotate the canopy clockwise.

5. Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened.

6. Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.

Install canopy

1. Ensure the loosened screws are inserted into the key holes on the mounting bracket.

2. Carefully raise the canopy up to the mounting bracket. Rotate the canopy clockwise.

3. Secure the canopy by replacing the screws previously removed and tightening the screw previously loosened.

4. Place the canopy cover (if applicable) and rotate the canopy cover clockwise until it locks into position.

Making the electrical connections

WARNING: Each wire not supplied with this fan is designed to accept up to one 12-gauge house wire and two wires from the fan. If you have larger than 12-gauge house wiring or more than one house wire to connect to the fan wiring, consult an electrician for the proper size wire nuts to use.

IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

WARNING: Remove the rubber motor stops on the bottom of fan before installing the blades or testing the motor.

IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure the connectors with electrical tape and ensure there are no loose strands or connections.

WARNING: Remove the rubber motor stops on the bottom of fan before installing the blades or testing the motor.

1. Raise the fan and place the hanger ball onto mounting bracket.

2. Rotate the fan until the notch on hanger ball snapped into the slot on mounting bracket and sits firmly.

NOTE: THE DOWNROD AND HANGER BALL SHOULD NOT ROTATE IF THIS STEP IS DONE CORRECTLY.

3. Loose the safety wire clamp.

4. Route the safety wire through the side Fan hole on mounting bracket, and retighten the safety wire with safety wire clamp.

5. Connect the wire connector plugs correctly. The wire connector plugs design with fool proof device, please don't force to plug. Otherwise it may affect the normal use of the light fan or burn the fan motor.

Install remote control

1. Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise until tight.

2. Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws on the mounting bracket again, and turn the canopy ring clockwise until tight.

Preparing for mounting

1. Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots.

2. Remove and save the two canopy screws in the round holes. This will enable you to remove the mounting bracket.

LIGHT MUST BE KEPT AT THE ON POSITION
FAN MUST BE KEPT AT THE HIGH SPEED

Use of remote control

REMOTE CONTROL MANUAL

FUNCTION INSTRUCTIONS:

- ① Fan Rotating Direction
- ② Natural wind
- ③ Fan speed control/ Fan on
- ④ Fan off
- ⑤ Light on
- ⑥ Mute
- ⑦ Light off
- ⑧ Timer

Note:

Remote control pairing: Turn off main power for one minute; Turn on power, within 10 seconds, press "Fan off" button(④) until hearing "beeb" sound, pairing successful!

If the remote control is not working:

1. Please check if the batteries installed correctly.
2. Exclude using same kind of remote controls nearby.
3. Please check if the main power within the rated power.