 
 
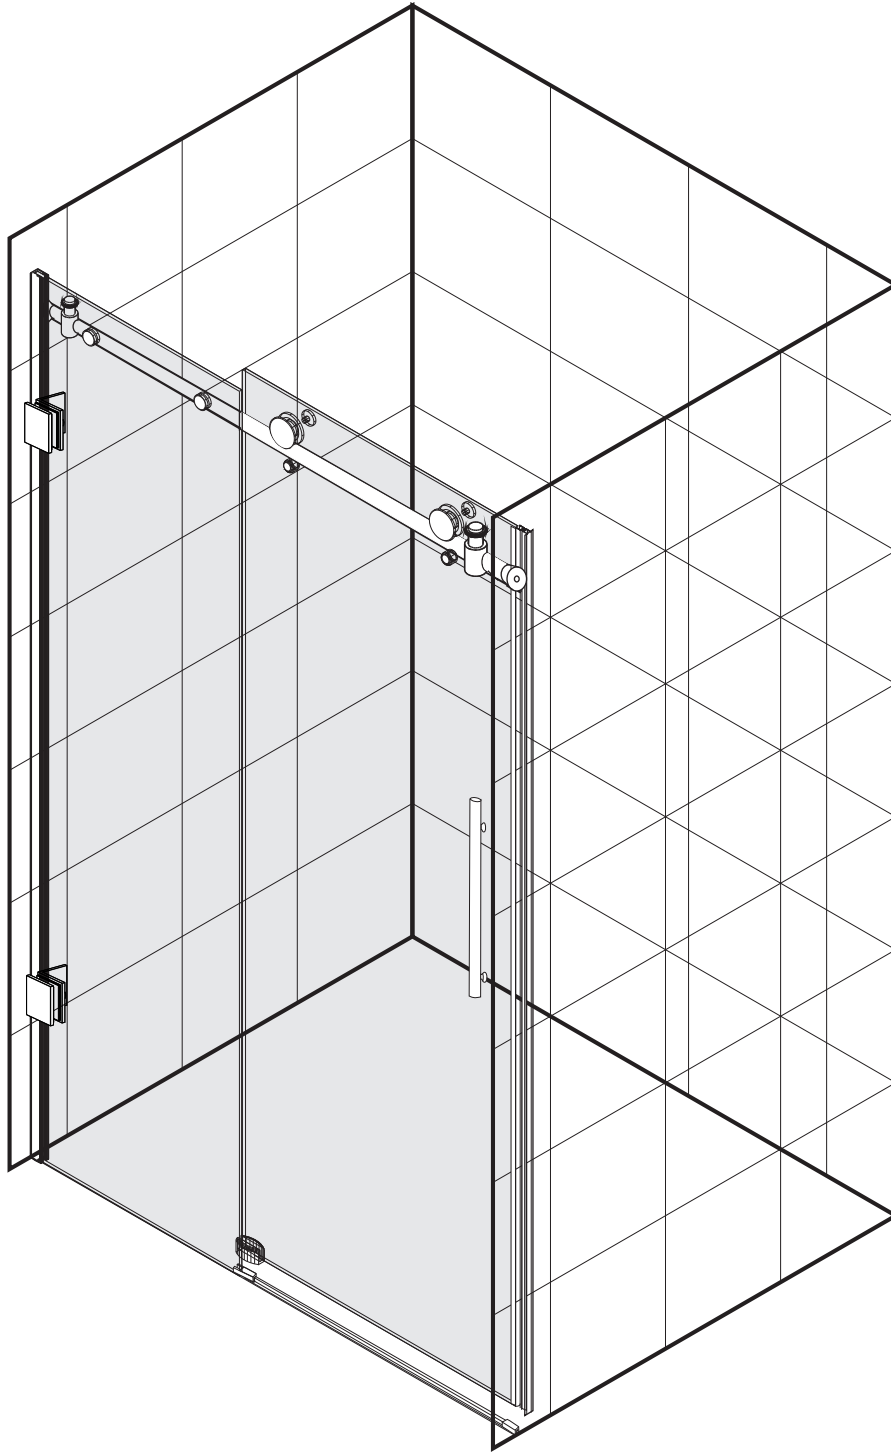 
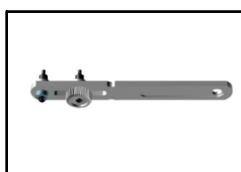 
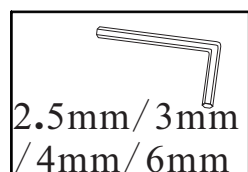 
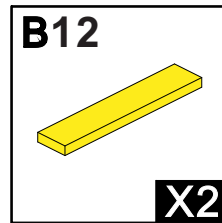 
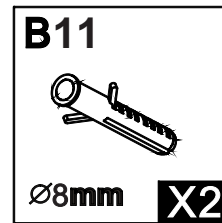 
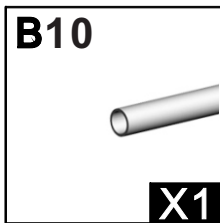 
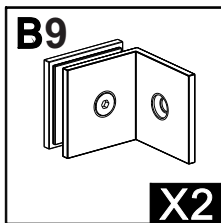 
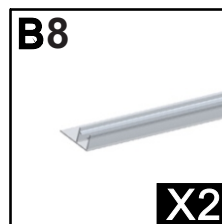 
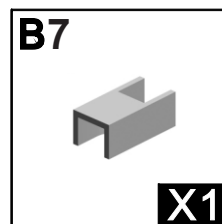 
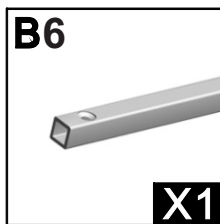 
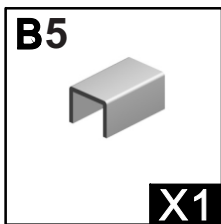 
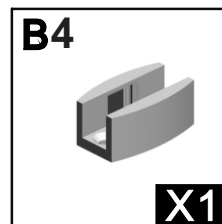 
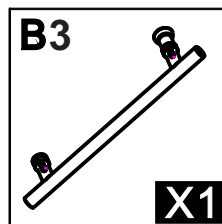 
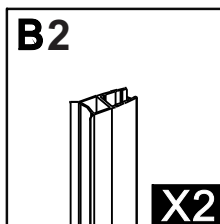 
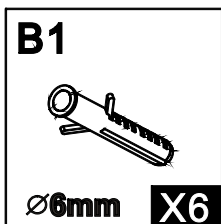 
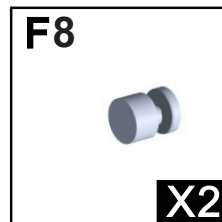 
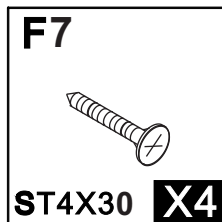 
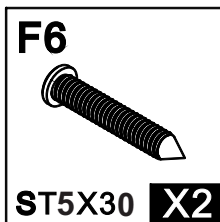 
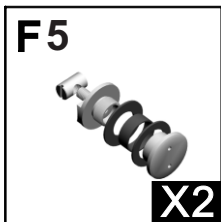 
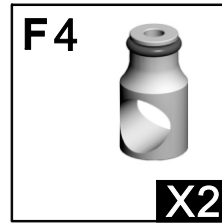 
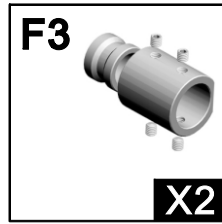 
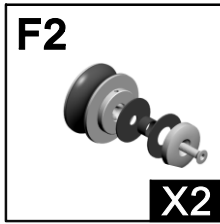 




INSTALLATION MANUAL






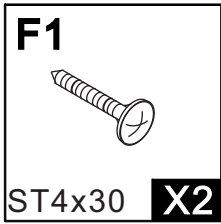


PF-75

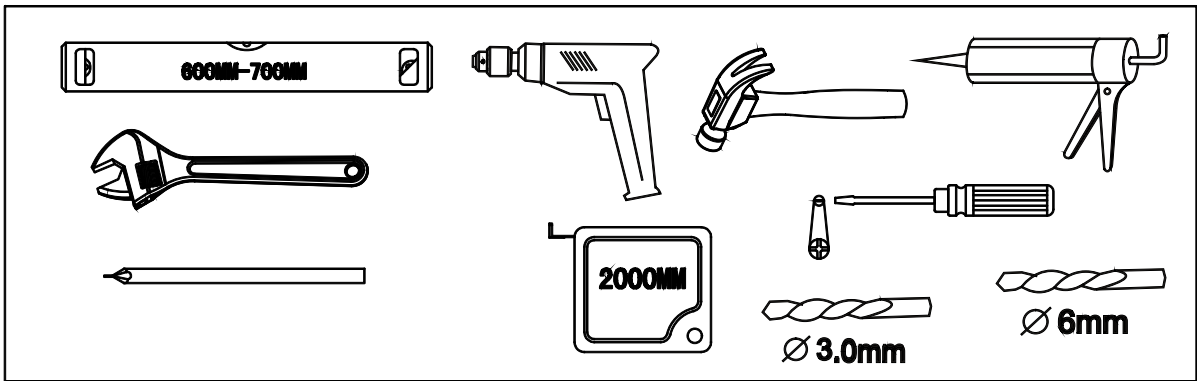

        Installation step:

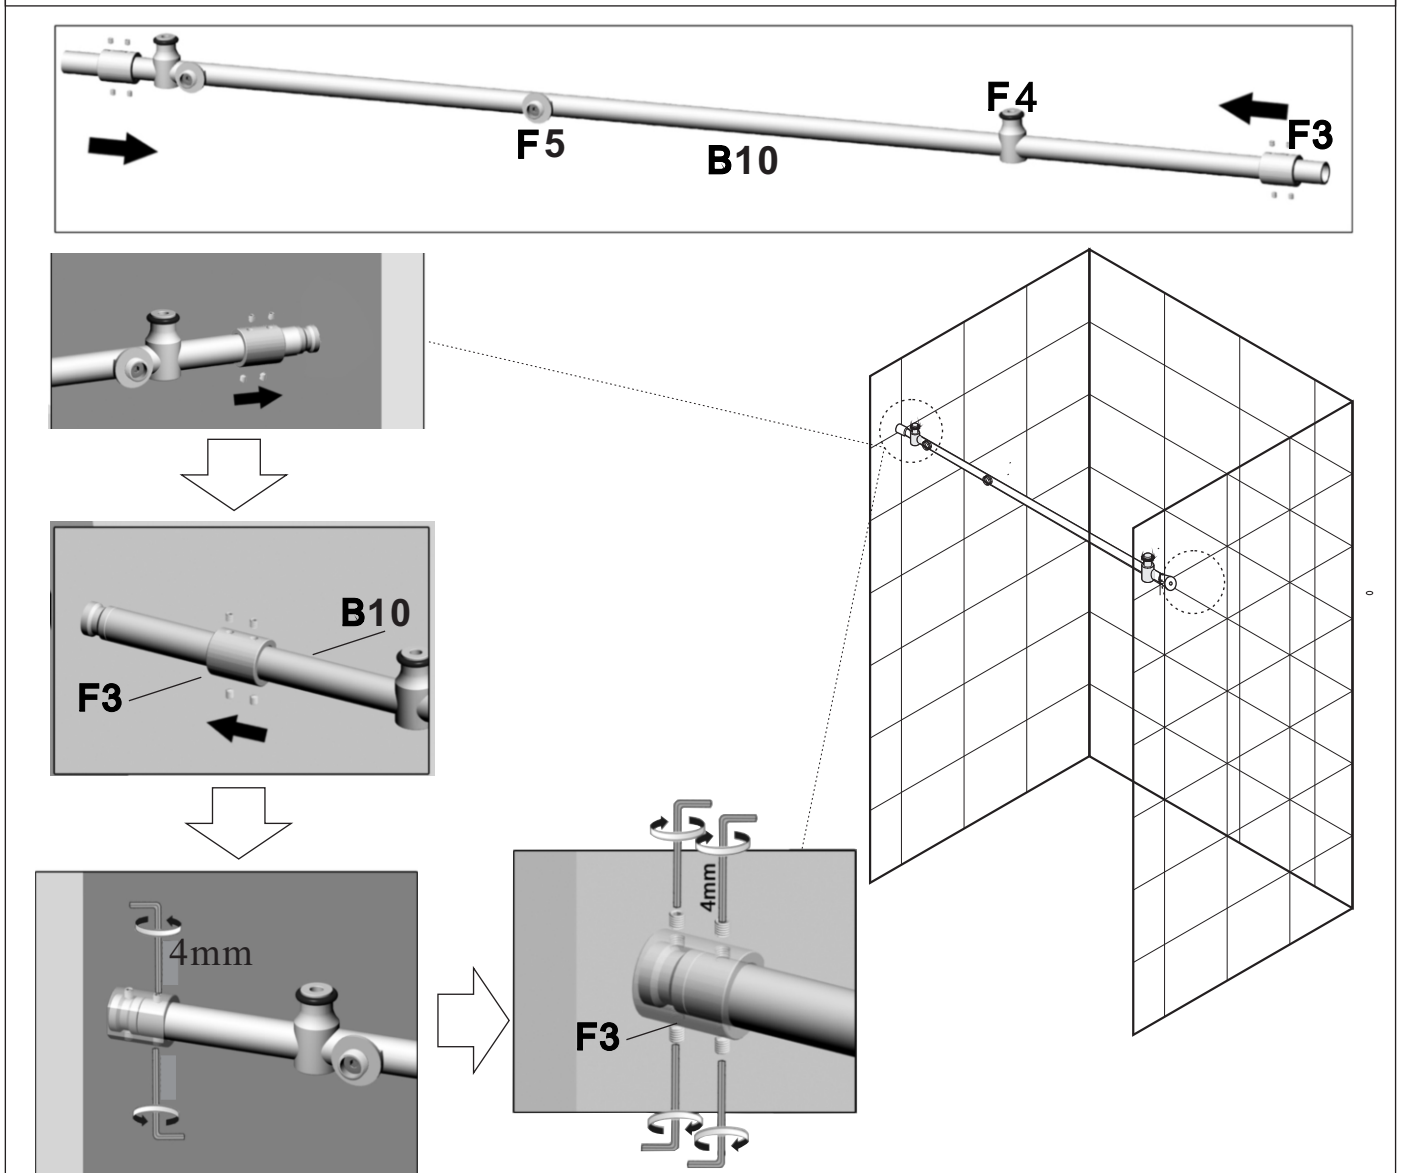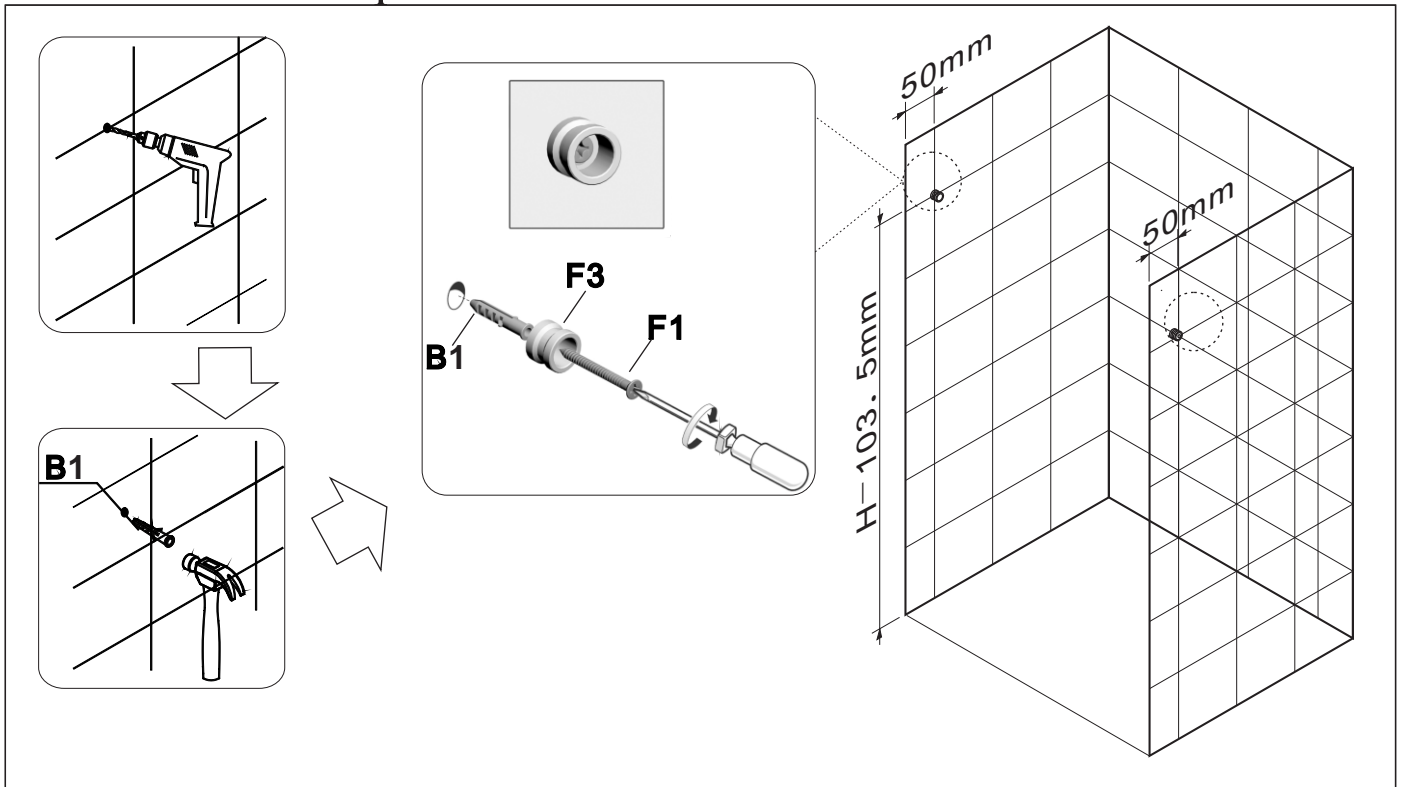

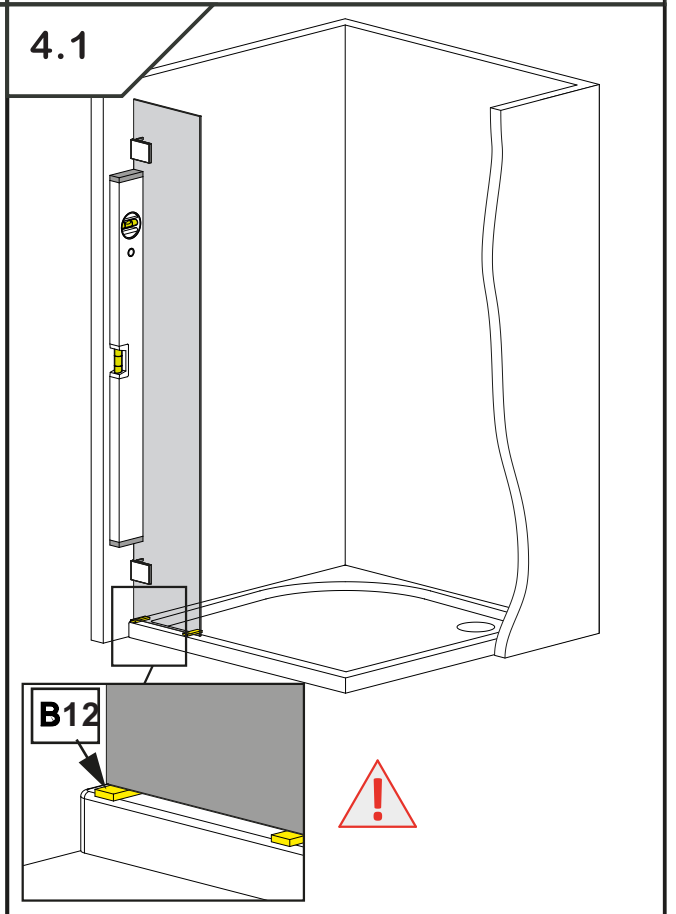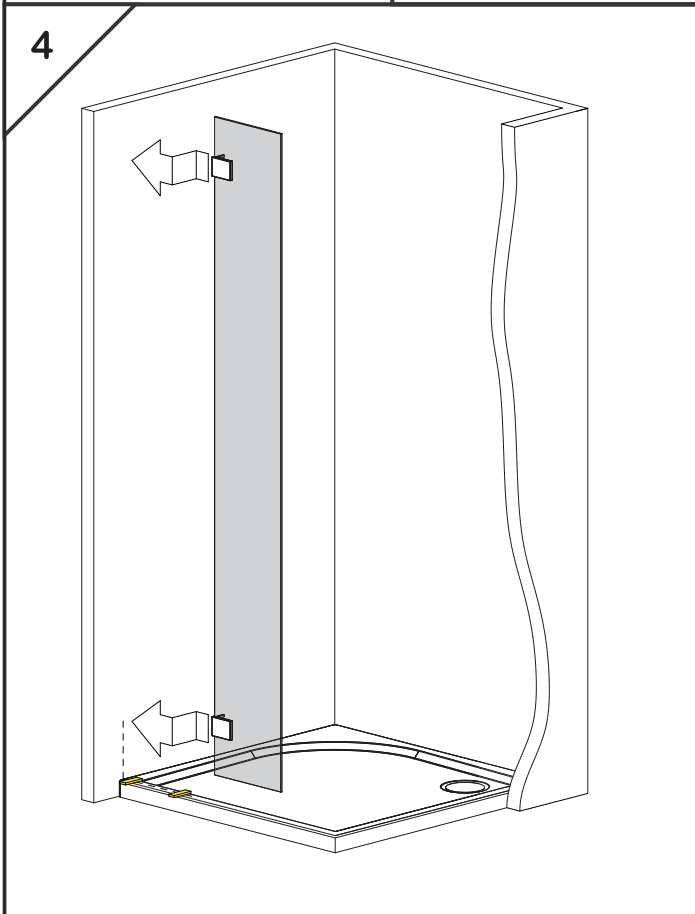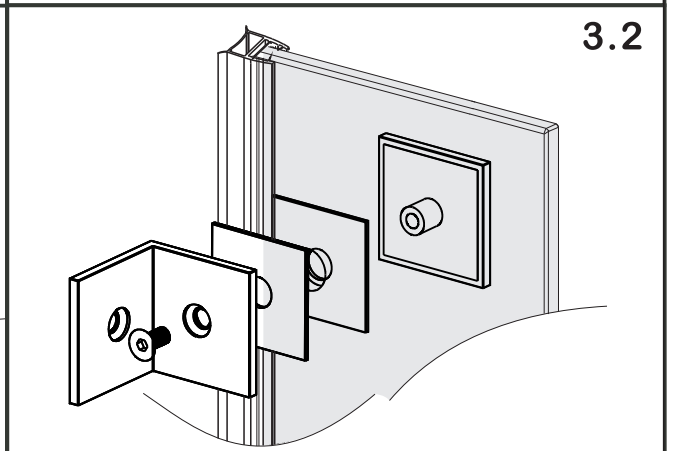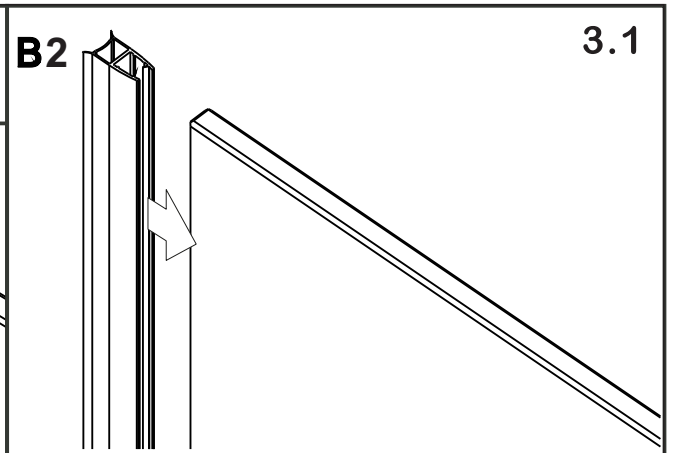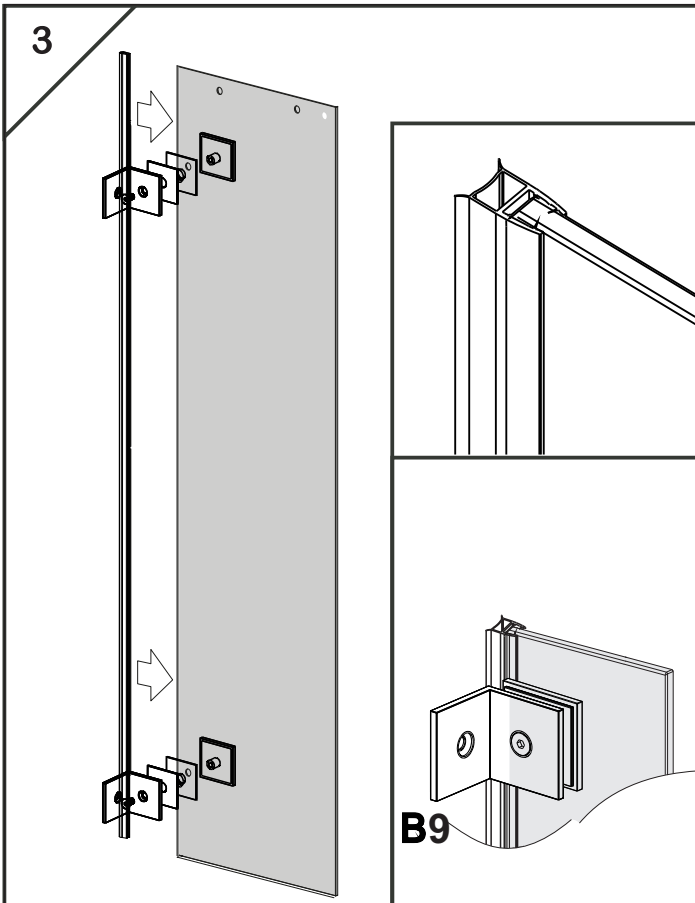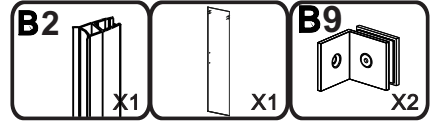

1

