





Estimated time for assembly: **100 mins**



Weight limitations are as follows:

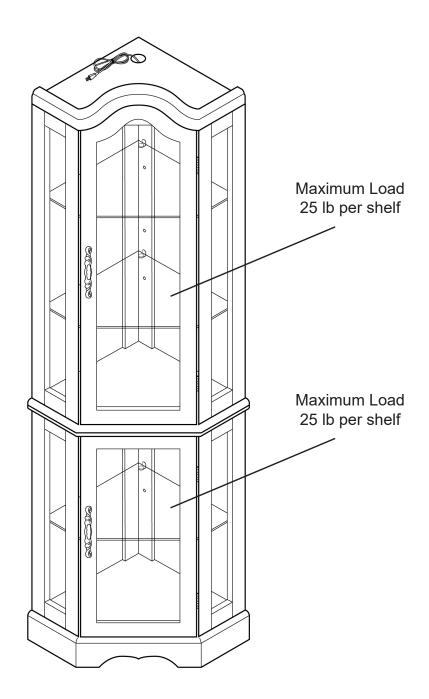


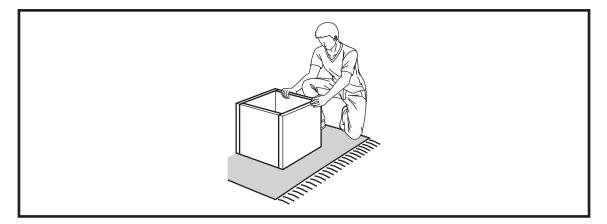

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

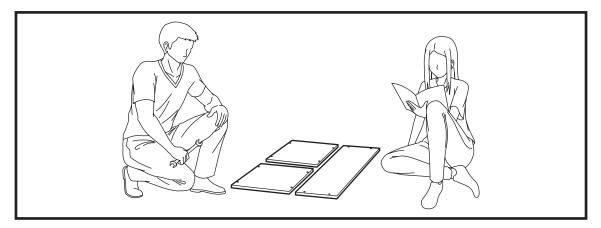

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.


Hand tight all hardwares and careful not to over tighten to avoid damaging the product.

CAUTION

There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation.


PACKAGE CONTENTS

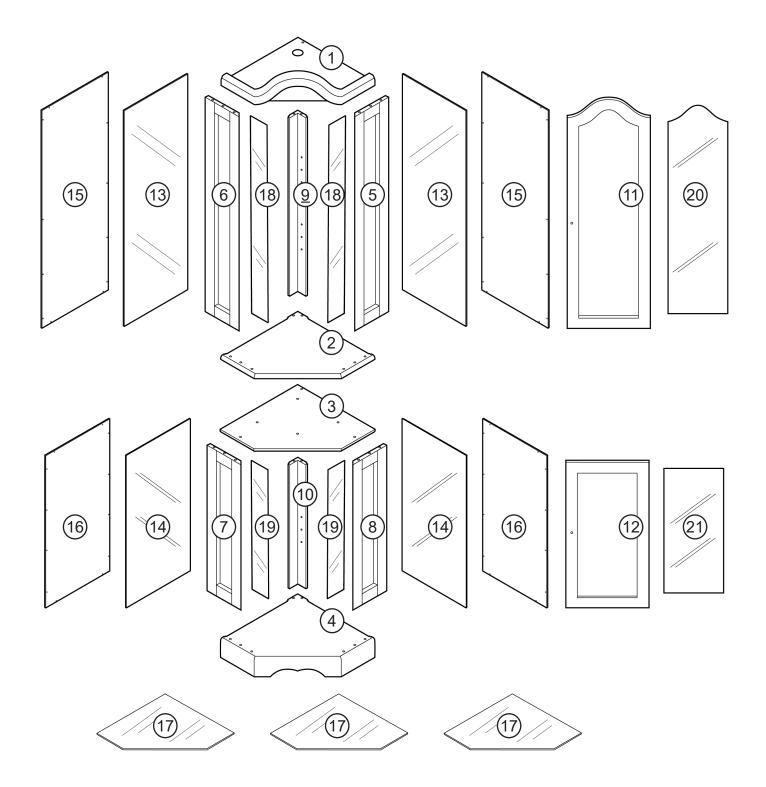


PACKAGE CONTENTS

CODE	DESCRIPTION	QTY
1	Upper Shelf Top Panel	1
2	Upper Shelf Bottom Panel	1
3	Bottom Shelf Top Panel	1
4	Base	1
5	Upper Shelf Right Panel	1
6	Upper Shelf Left Panel	1
7	Bottom Shelf Left Panel	1
8	Bottom Shelf Right Panel	1
9	Upper Shelf Support Bar	1
10	Bottom Shelf Support Bar	1
11	Upper Shelf Cabinet Door	1
12	Bottom Shelf Cabinet Door	1
13	Upper Shelf Mirror Panel	2
14	Bottom Shelf Mirror Panel	2
15	Upper Shelf Back Panel	2
16	Bottom Shelf Back Panel	2
17	Glass Storage Shelf Panel	3
18	Upper Shelf Glass Panel	2
19	Bottom Shelf Glass Panel	2
20	Upper Shelf Cabinet Door Glass	1
21	Bottom Shelf Cabinet Door Glass	1

 
PACKAGE CONTENTS




12x + 1x

 


© Ø8 x 20mm 2x

 

1x

 

2x

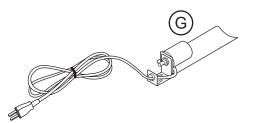


1x

(1) Ø3 x 15mm 4 X




  (J)











Z Ø2.8 x 10mm 38x + 3x



  52x + 4x











(T) (D) 2x

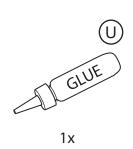


4x


Required tools for assembly (Not included)

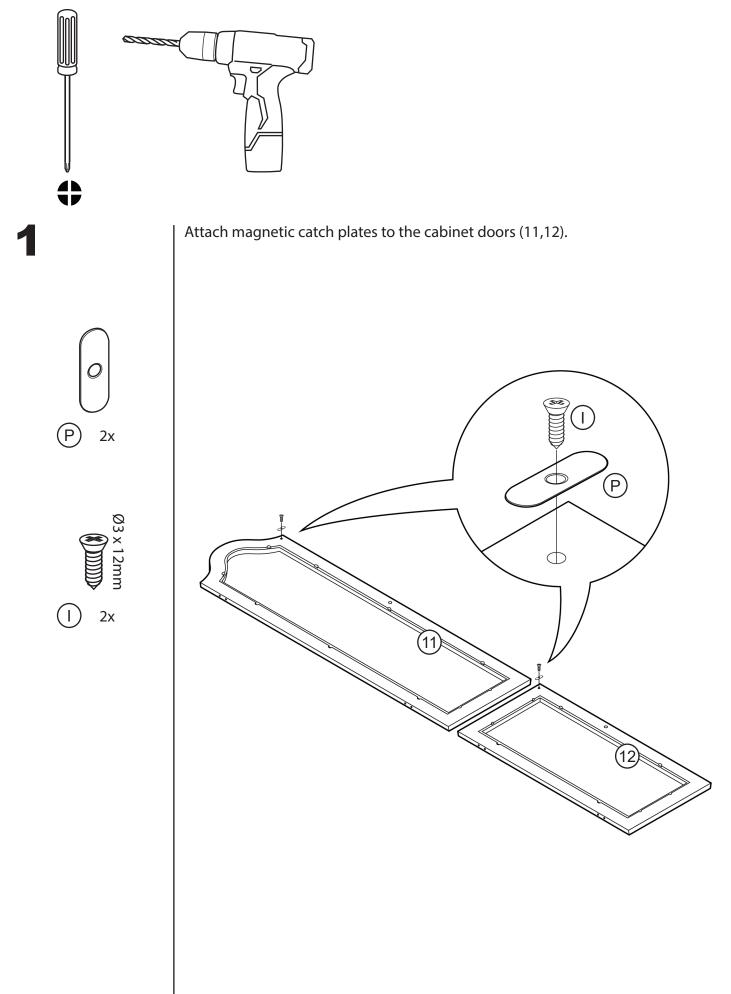


Place the cabinet door glass panels (20,21) to the slot on the cabinet doors (11,12).

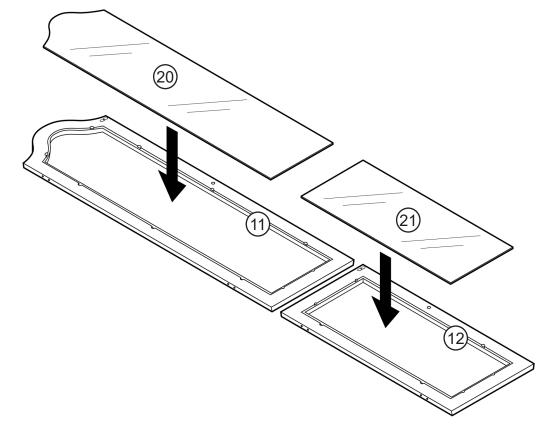

Secure the cabinet door glass panels in place.

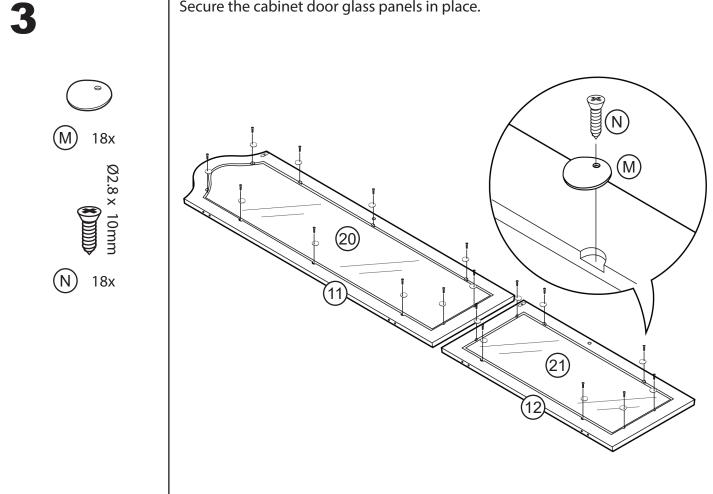


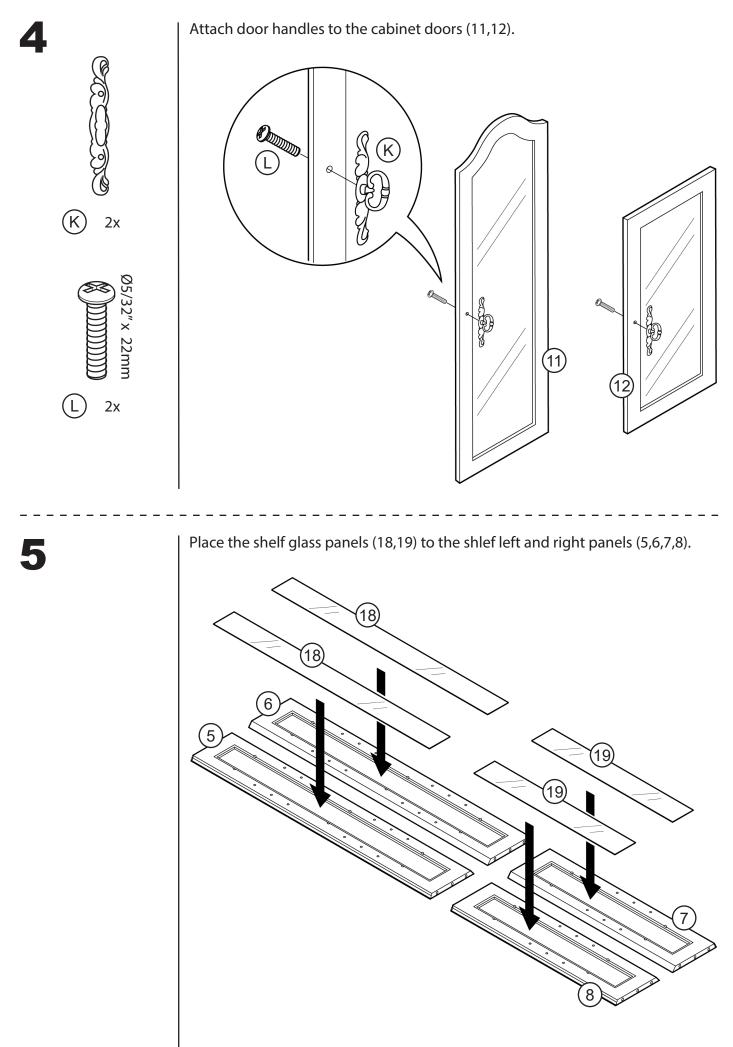


Secure the glass panels in place.




6

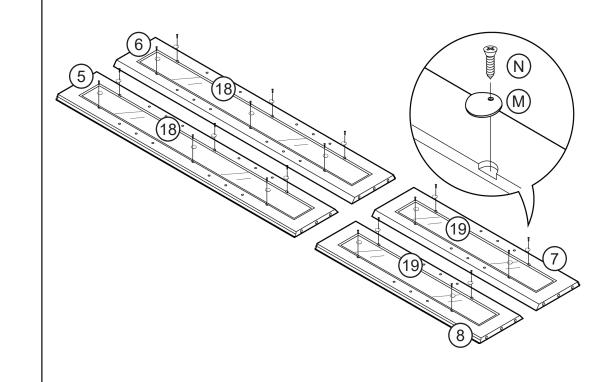


Attach the magnetic catch to the underside of the upper shelf top panel (1).

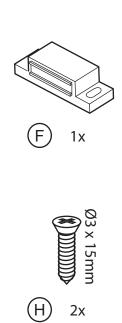


7

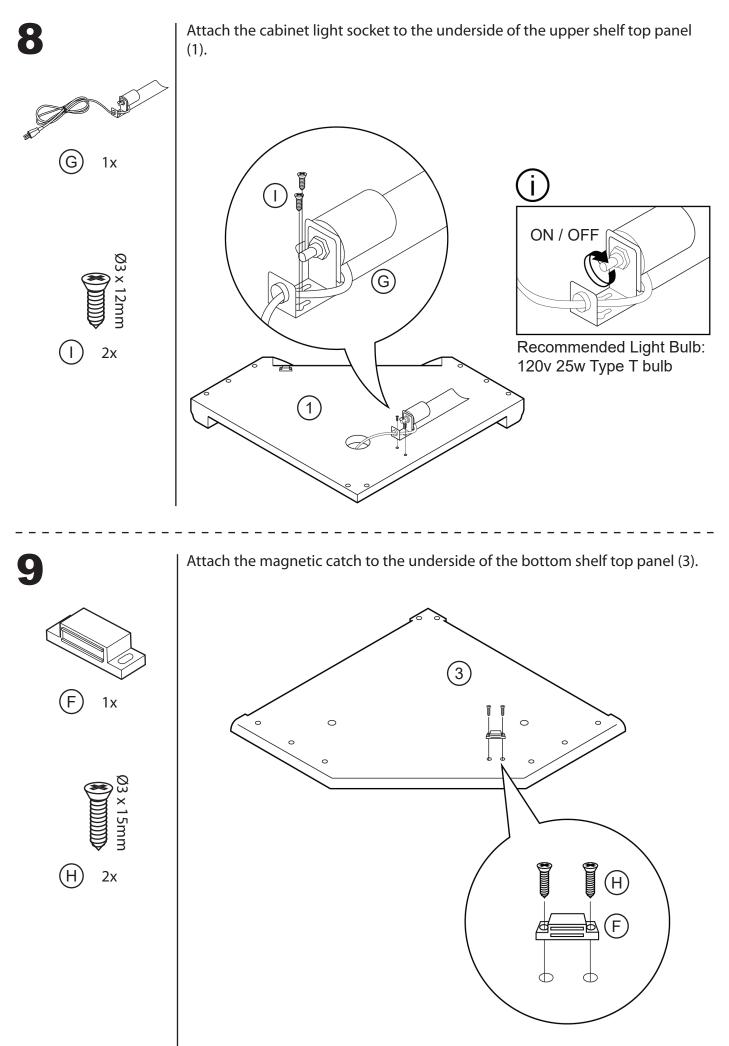


 




Attach the upper shelf left and right panels (5,6) and the upper shelf support bar (9) to the upper shelf bottom panel (2).

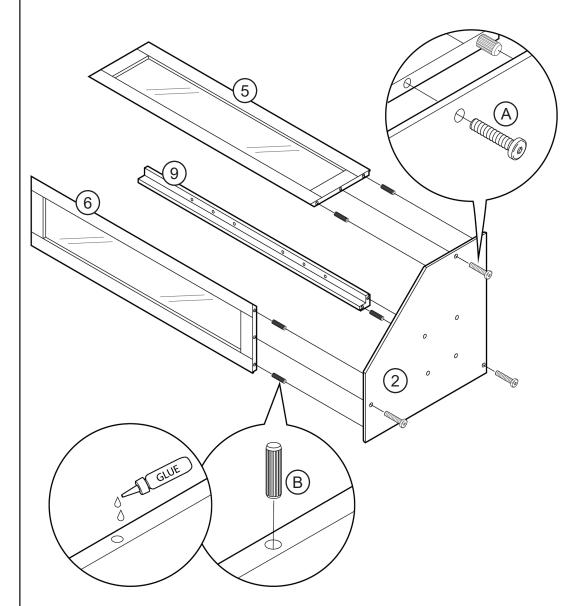


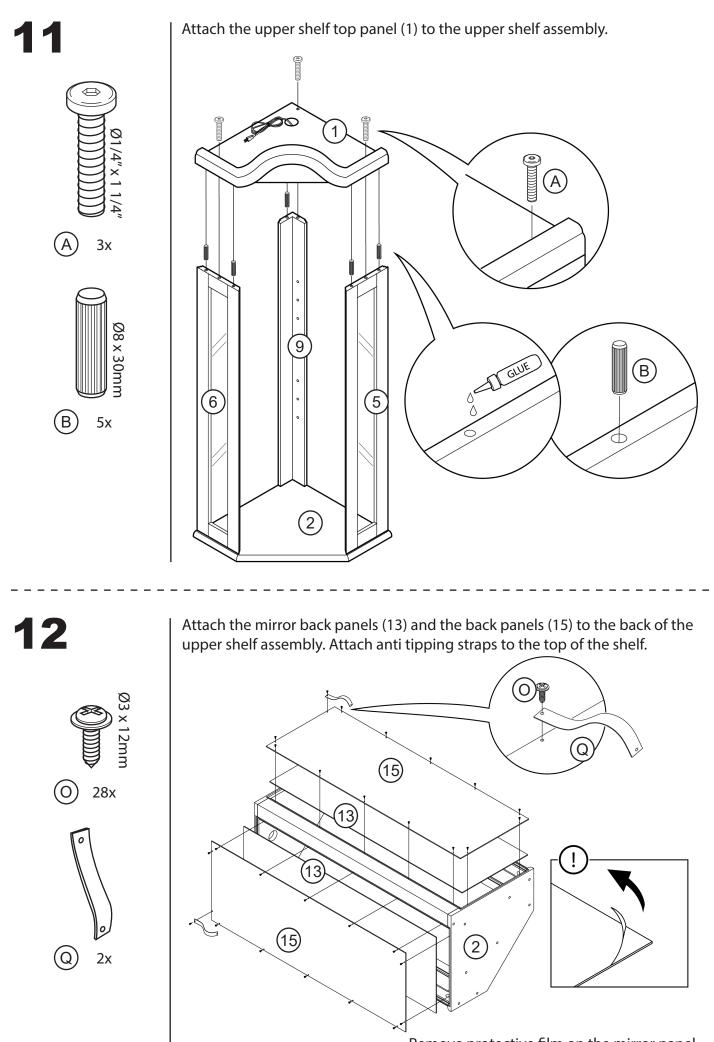



Remove protective film on the mirror panel.

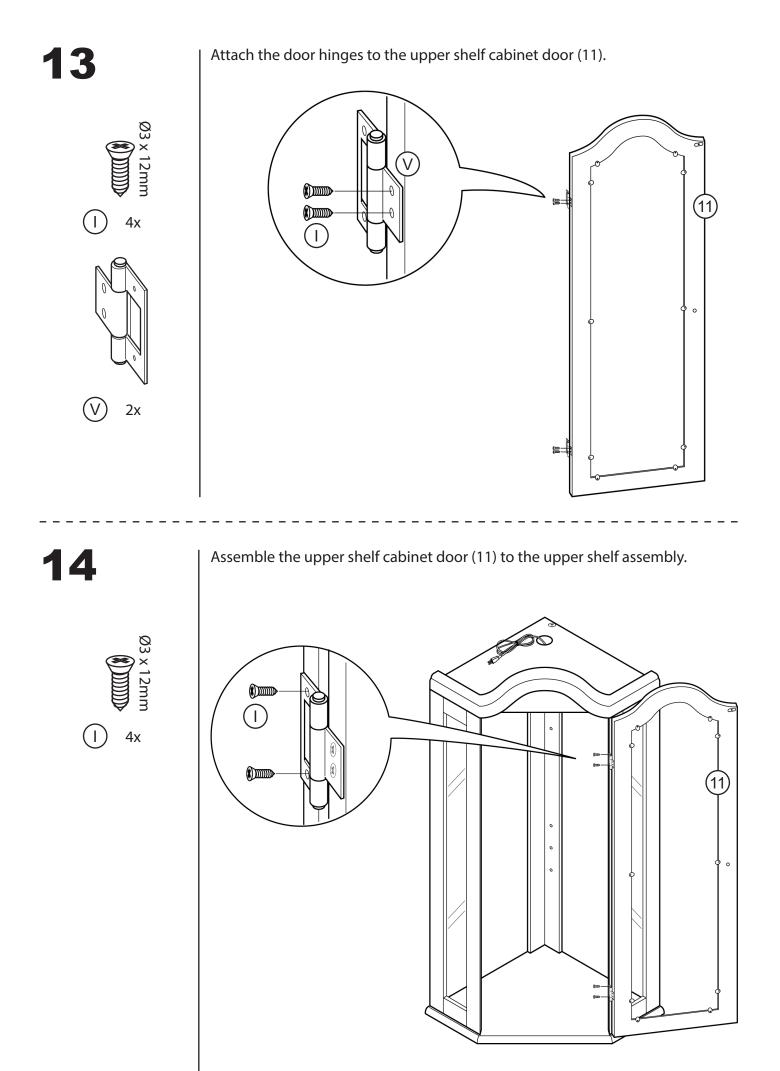


 Attach the bottom shelf left and right panel (7,8) and the bottom shelf support bar (10) to the base (4).



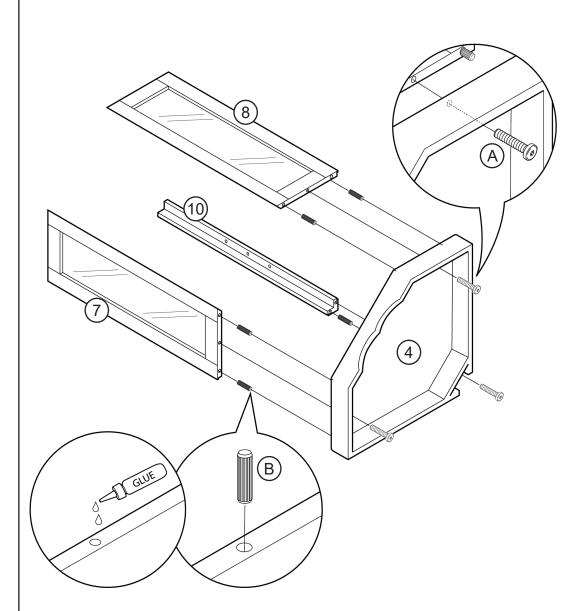


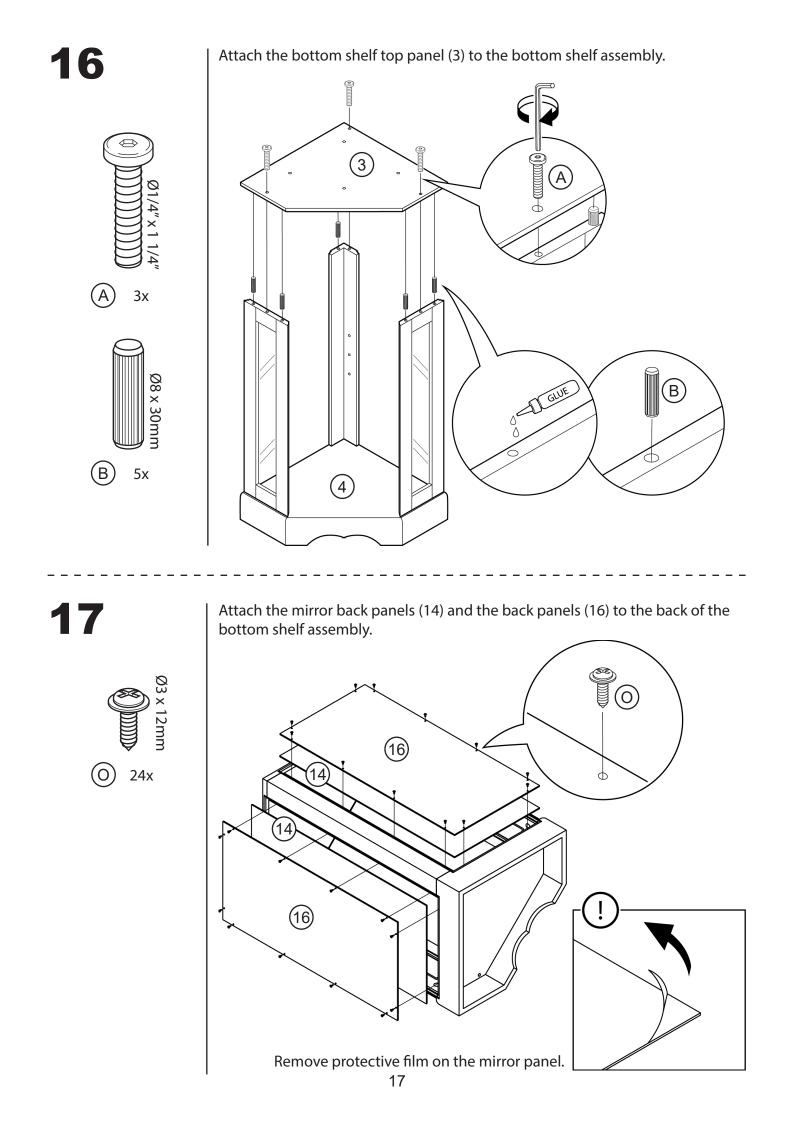

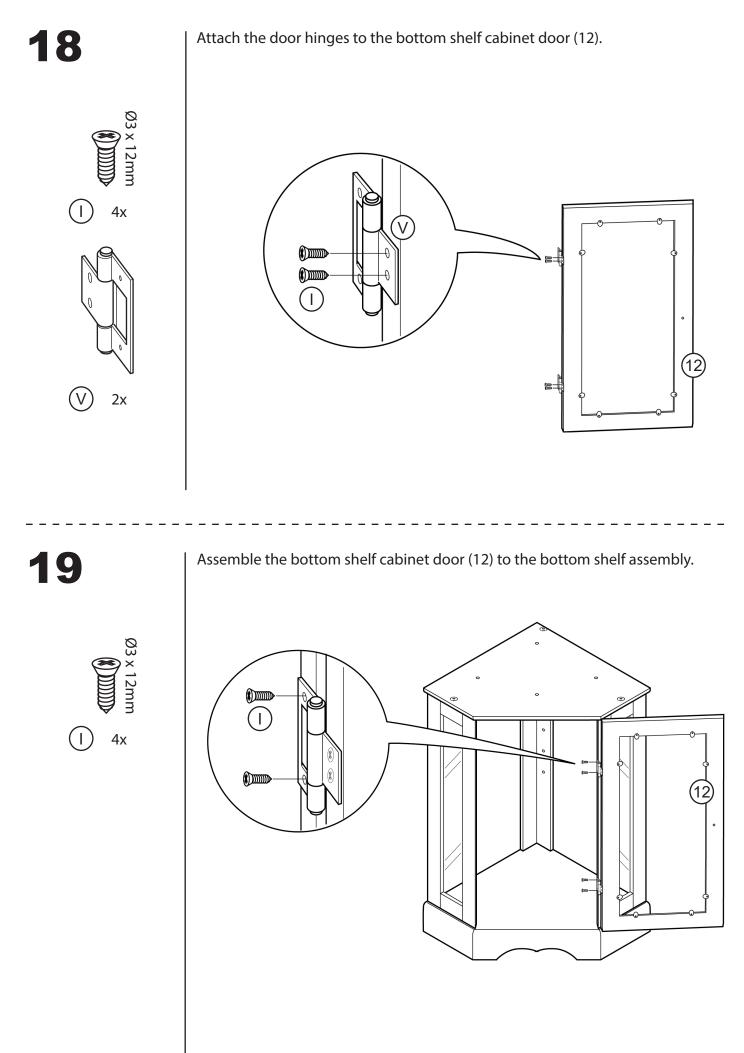


Assemble the upper shelf assembly on top of the bottom shelf assembly.



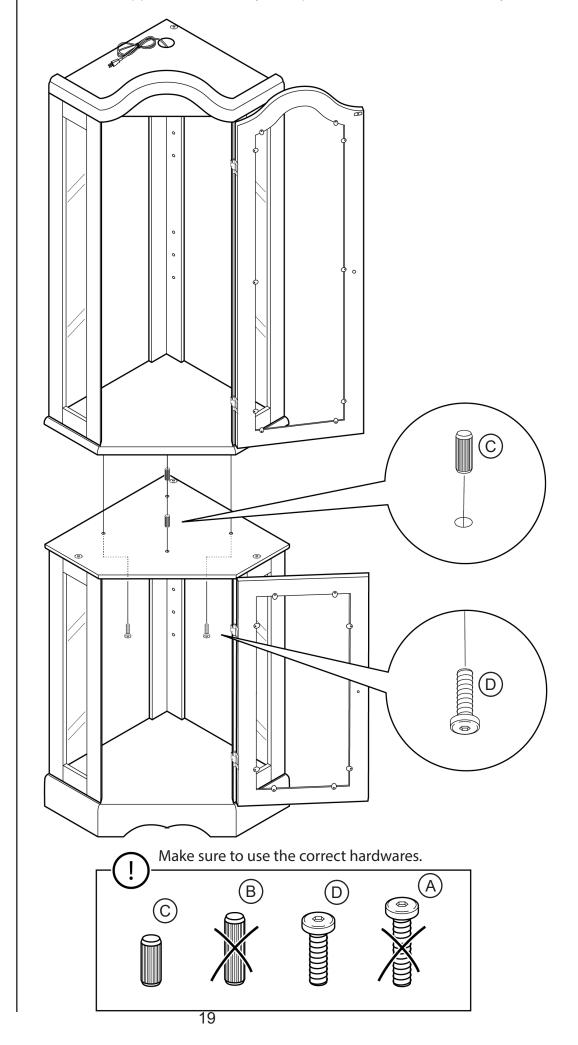


Insert shelf pegs into the cabinet.



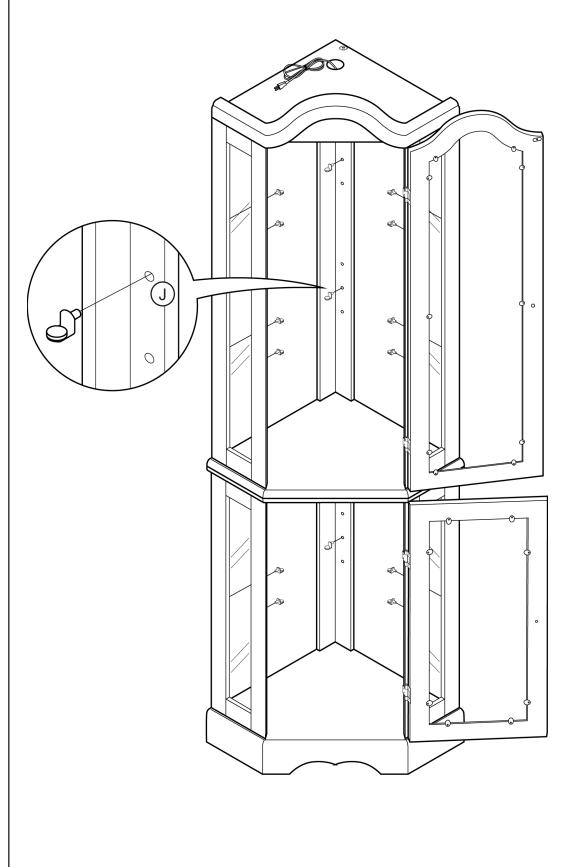

Put glass shelf panels (17) insdie the cabinet.

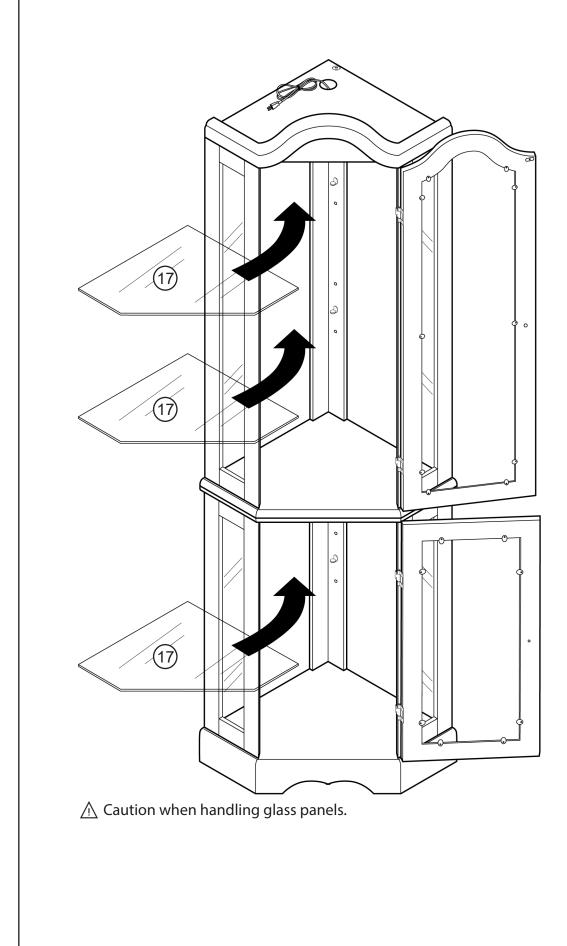

(R)

S

(T)


2x

Ø4 x 38mm

2x

2x


Affix the cabinet to the wall.

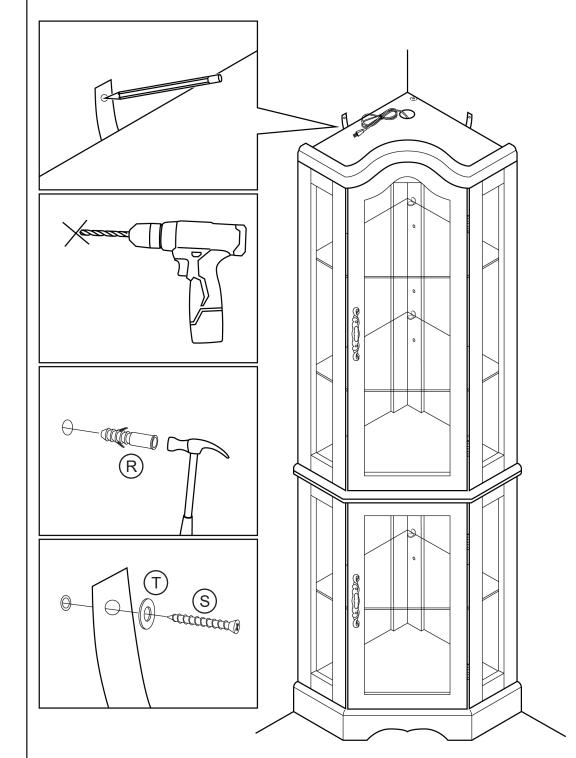

Furniture must permanently fixed to the wall stud with included anti-tipping device to prevent the furniture from tipping over.

- Mark the drill position on the wall with a pencil.
- Drill a small hole on the marked position.
- Insert a wall anchor into the drilled hole.
- Fixed the anti-tipping strap to the wall with provided screws.

YOU'RE FINISHED!

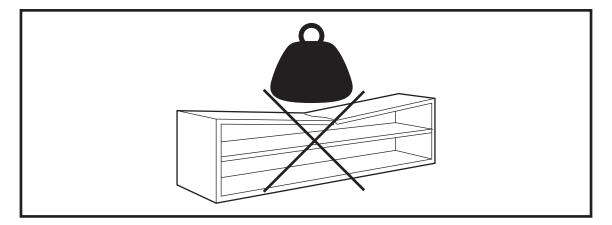


Warning

Only place items on top of the product if they meet the recommended size and weight limits.

Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and/or injuries.

Items placed onto this product must be resting on a support surface without hanging over the edges.

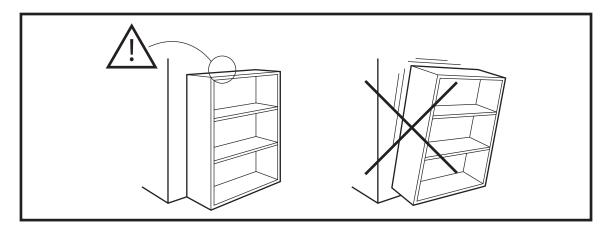

Warning

Serious or fatal crushing injuries may occur if the furniture tip-over. Furniture must permanently affixed to the wall with included anti-tipping device in order to prevent the furniture from tipping over.

Different wall materials requires different types of wall anchors or screws. Use a suitable wall anchors or screws for your specific wall in order to secure the stability and load bearing capacity of the furniture. If you are uncertain about which type of device to use, please contact us or your local hardware store.