

## Assembly Instructions

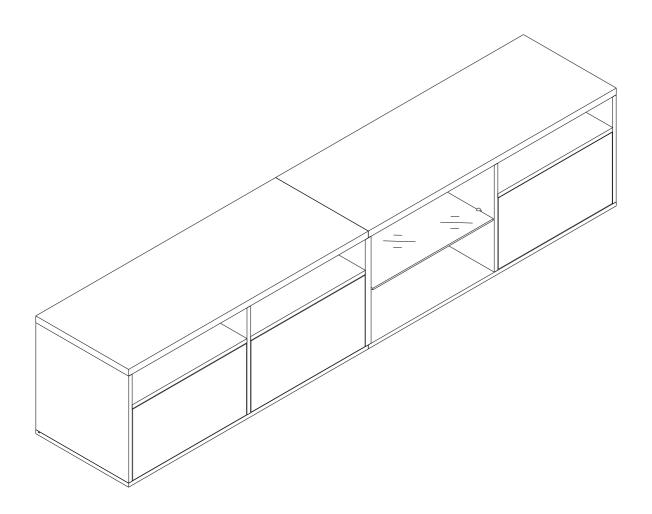


C240144G

## **Parts & Hardware List**

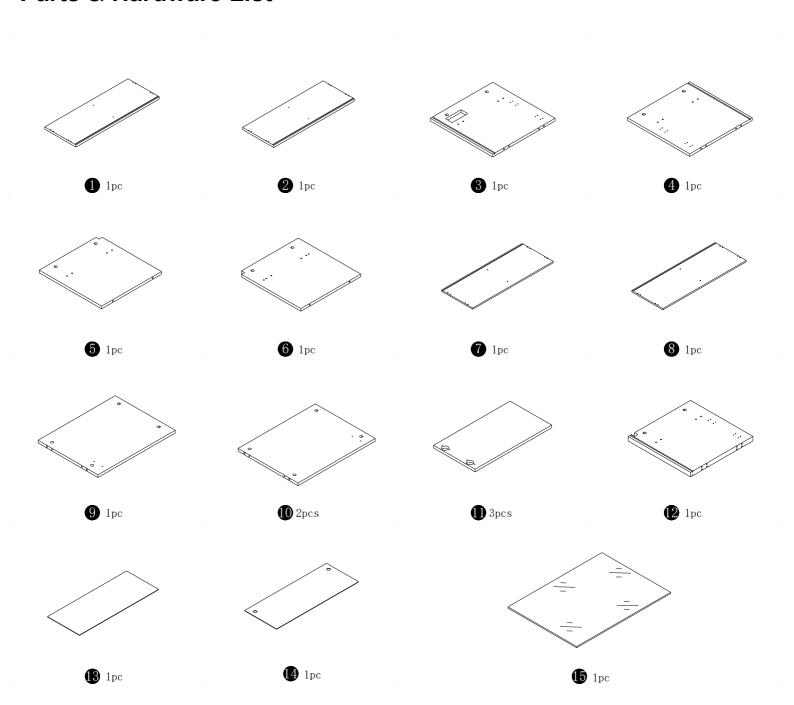


## **Parts & Hardware List**

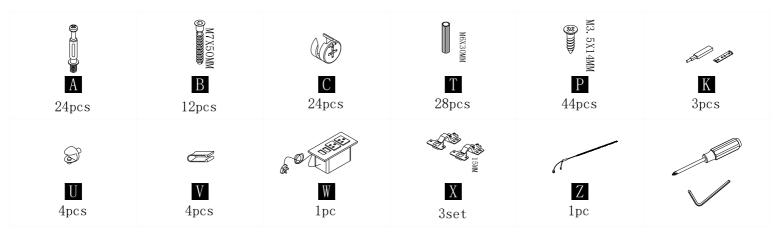



## **Installation of Cams and Pins**

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

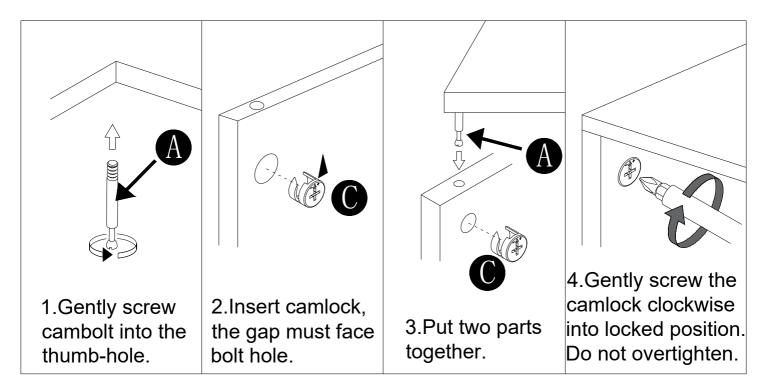

Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

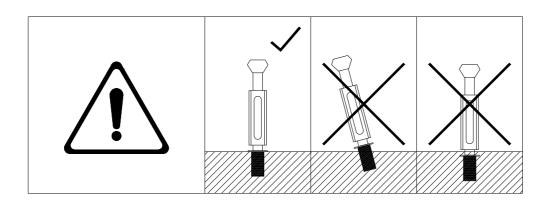

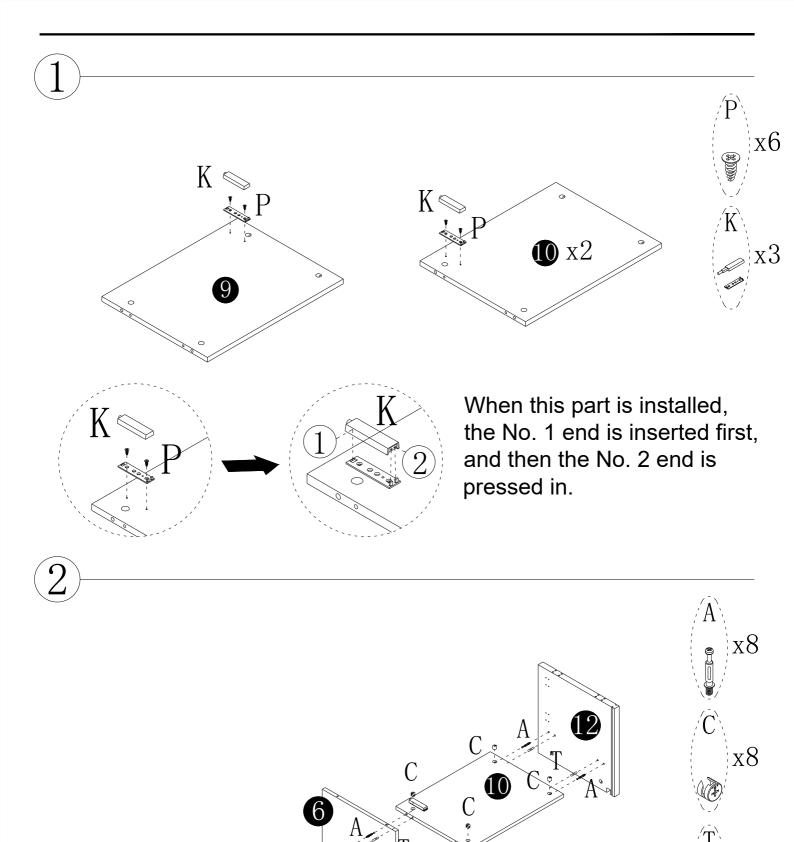



C

9


x8



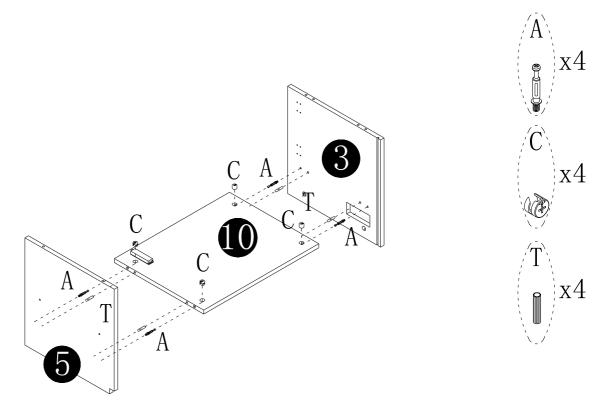


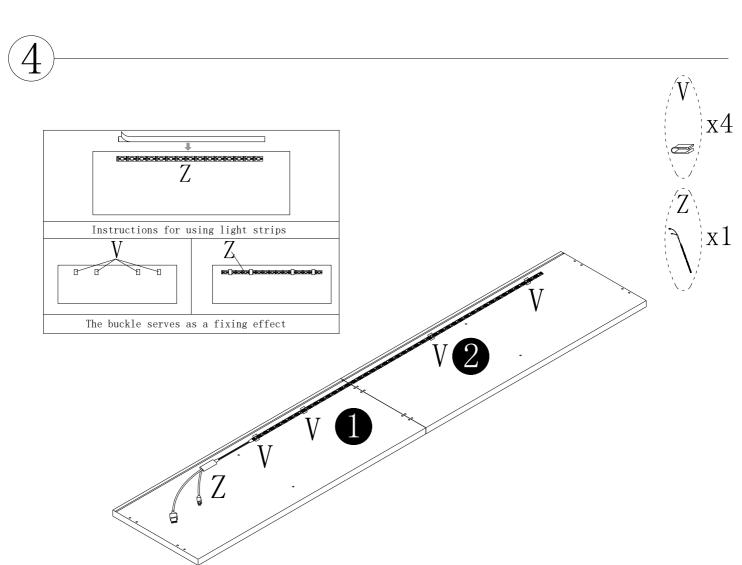





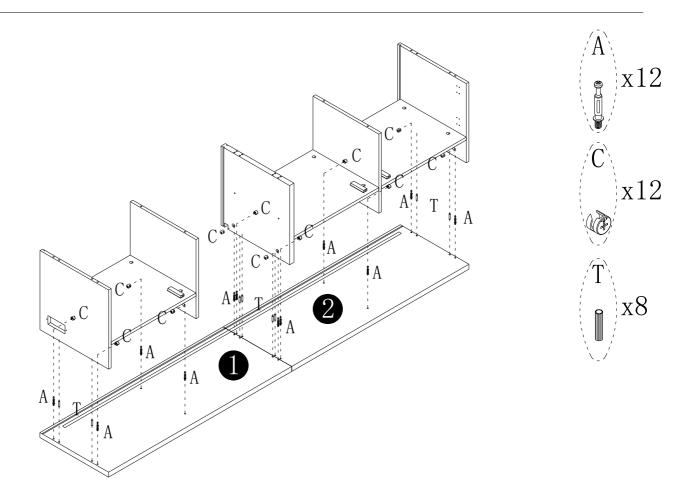




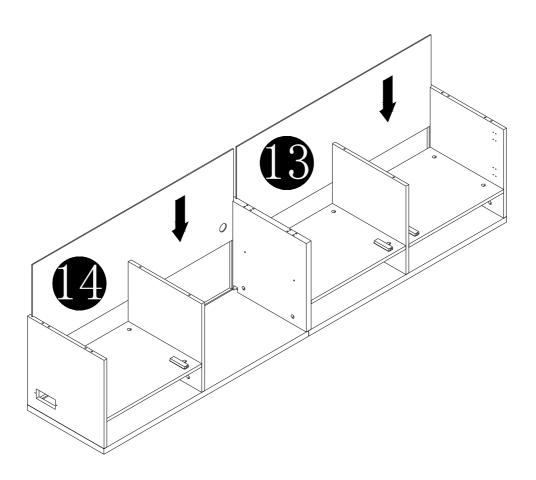

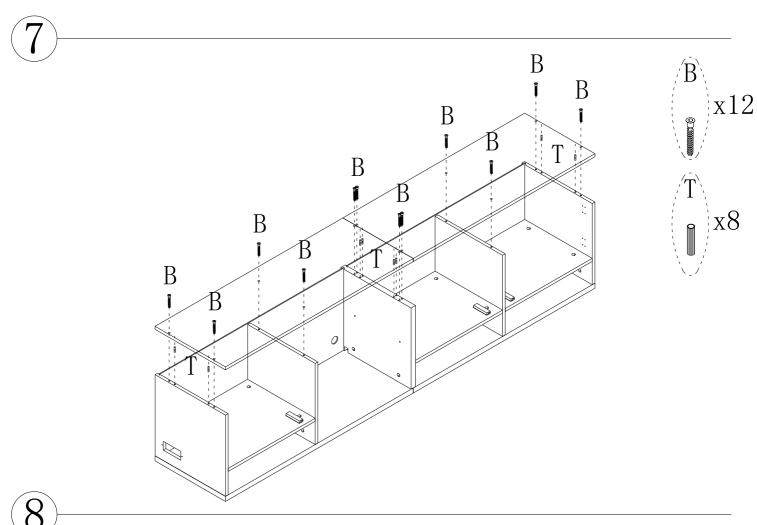


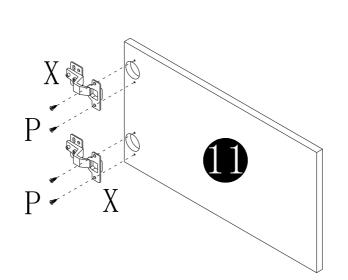


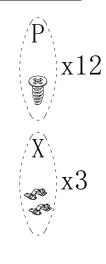

x3



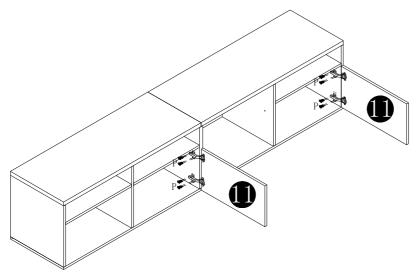

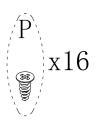



If the door panel is not sitting at a right position or angle, follow the steps below to improve.


- (I) Loosen the hinge, adjust the door panel position (up and down), then fasten the screws to secure the hinge (Step a).
- (2) Loosen the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to secure the hinge (Step b)
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of


the door panel (left or right) to make the door panel to be vertical(Step c).

(4)After adjusting the position of the door panel, install Q self tapping to fix it(Step d).

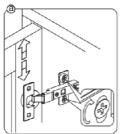


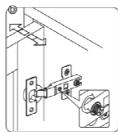

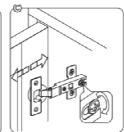

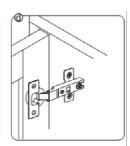




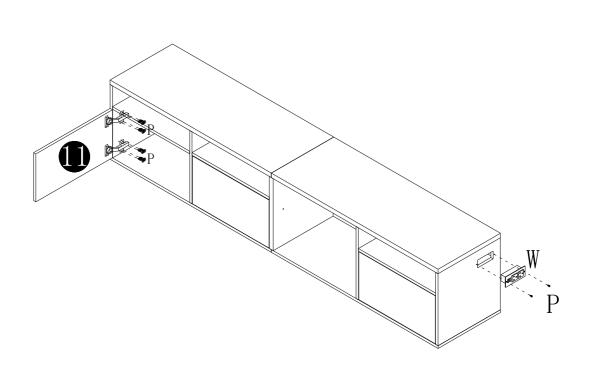

x10

x1

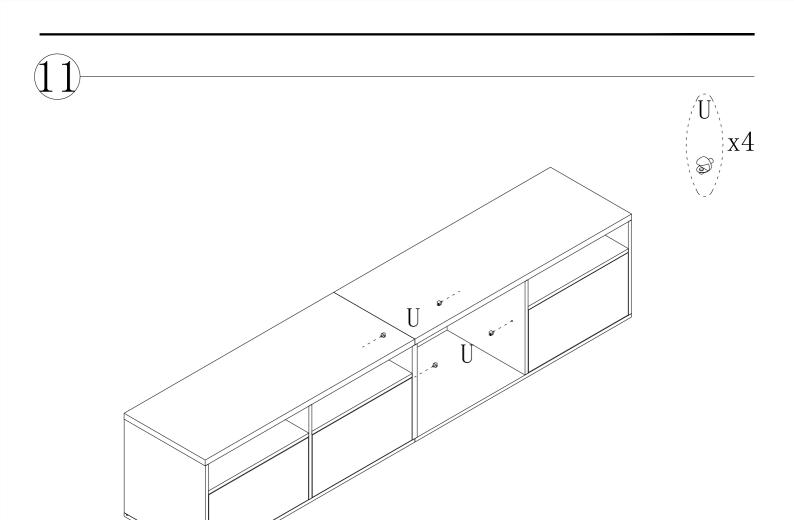

12

