

360 QUAD SWIVEL KIDS SEESAW

FOR AGES:

3-10

WEIGHT LIMIT:

400 Lbs
100 Lbs per seat

TO BUILD:



TOOLS NEEDED:

N/A



WARNING. ONLY FOR DOMESTIC USE

To guarantee safety. Please give special attention to the assembly, safety, and care instructions detailed in this document.

Importé par, Importado por, Importato da, Importer, uvoznik:
SIPLEC 26 QUAI MARCEL BOYER CS 10020 94859 IVRY SUR SEINE CEDEX

 
NAME AND ADDRESSES OF THE PLACE OF MANUFACTURE AND STORAGE: NINGBO SAFEWELL SAFES CO., LTD.
No.26 Pushun Road, Xiaogang Equipment Industrial Zone, Beilun, Ningbo, Zhejiang Province, China

STYLE NR# XSS004


Production Time: 2022/7

PARTS LIST


1- Main Center Pole




2- Main Side Bar

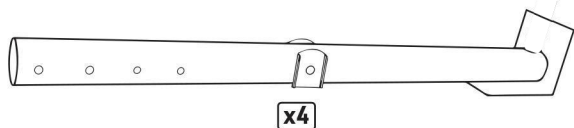 


3- Curved Main Bar

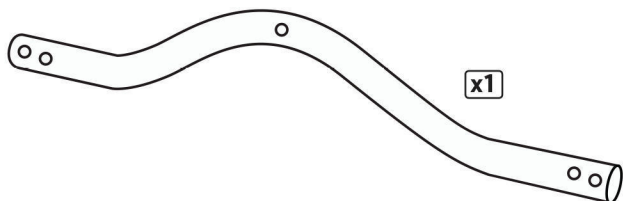 


4- Leg with Upper Openings

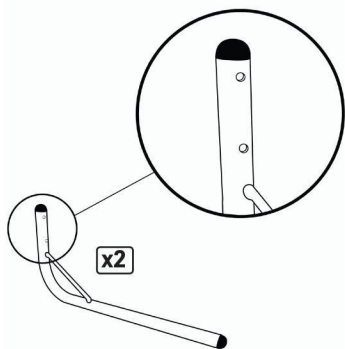 


5- Leg with Lower Openings

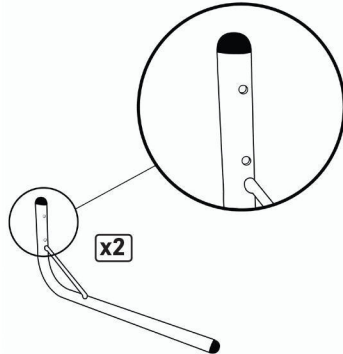 


6- Handle Bar with Foam

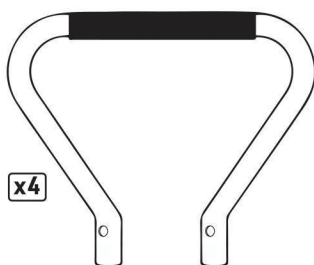 


7- Seat

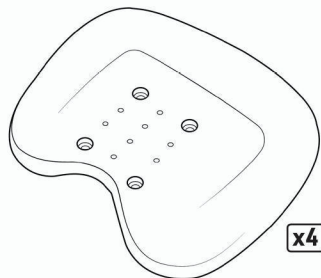 

8- Upper Support Tube

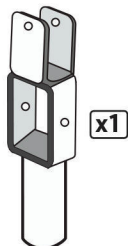 

9- Lower Support Tube

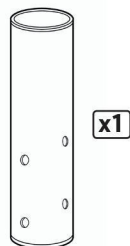 

10 - M6 Bolt 20mm



11 - M8 Bolt 65mm



 
12 - M8 Bolt 70mm




13 - M8 Bolt 95mm




14 - M8 Bolt 110mm




23- Allen Wrench

 

24- Wrench

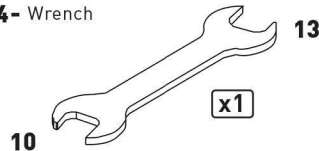 

15- M8 Large Curved Washer

 

16- M8 Small Curved Washer



17- M8 Flat Washer



18- M6 Flat Washer



19- M8 Spring Washer



20- M6 Spring Washer



21- M8 Nut



 
22- M6 Nut



ASSEMBLY INSTRUCTIONS

STEP 1

14 - M8 Bolt 110mm





16- M8 Small Curved Washer



19- M8 Spring Washer




  21- M8 Nut

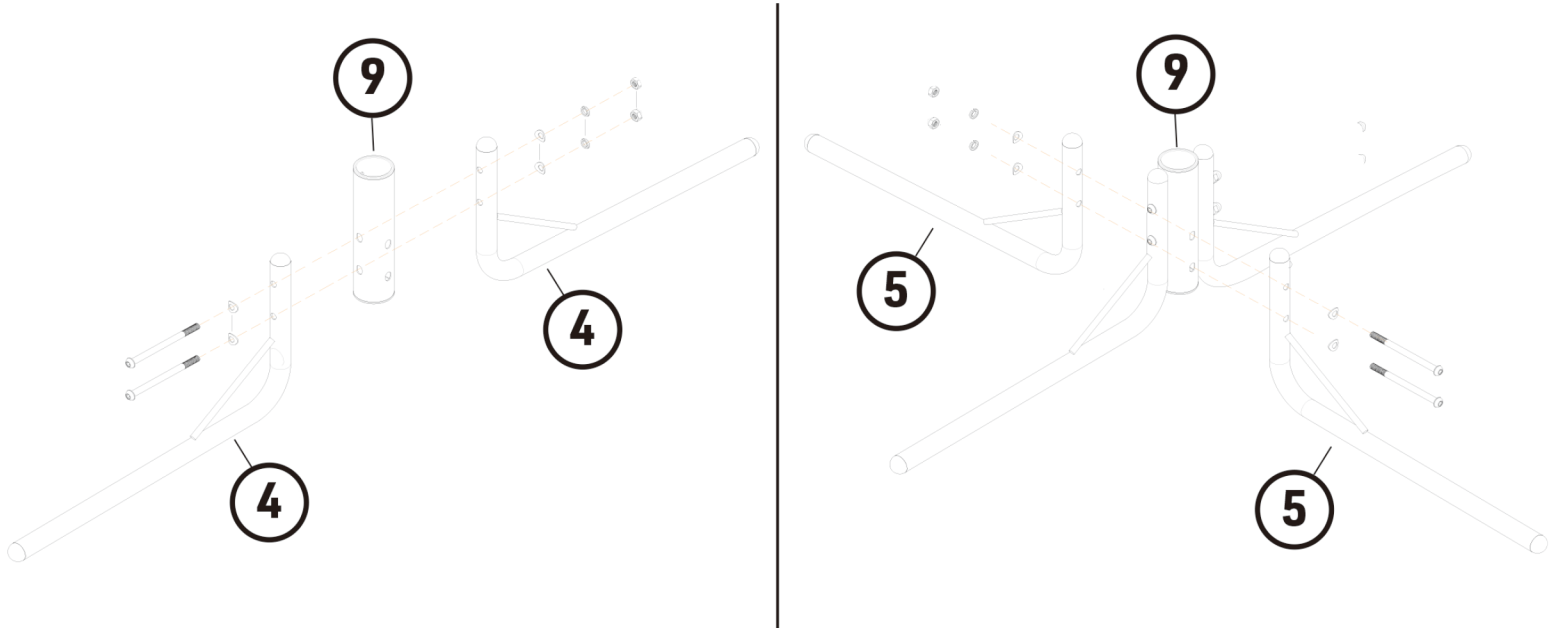


STEP 2

 
12 - M8 Bolt 70mm




17- M8 Flat Washer

 

19- M8 Spring Washer

 


21- M8 Nut

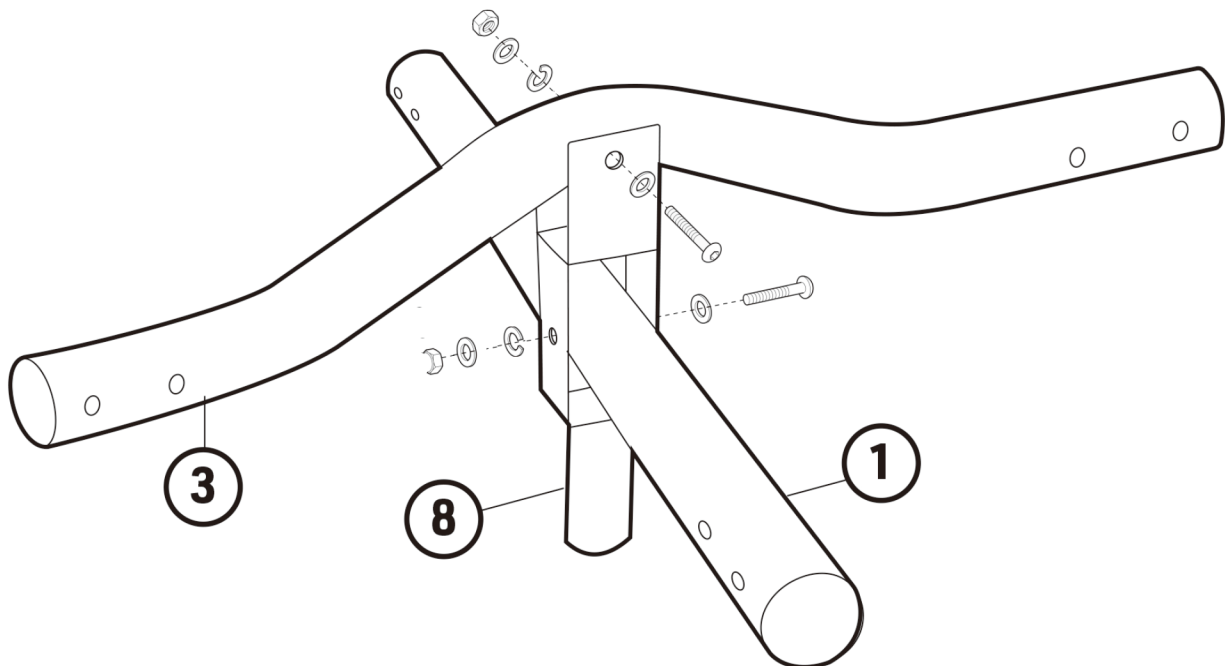 

ASSEMBLY INSTRUCTIONS

STEP 3

 10 - M6 Bolt 20mm




18 - M6 Flat Washer



20 - M6 Spring Washer




 22 - M6 Nut

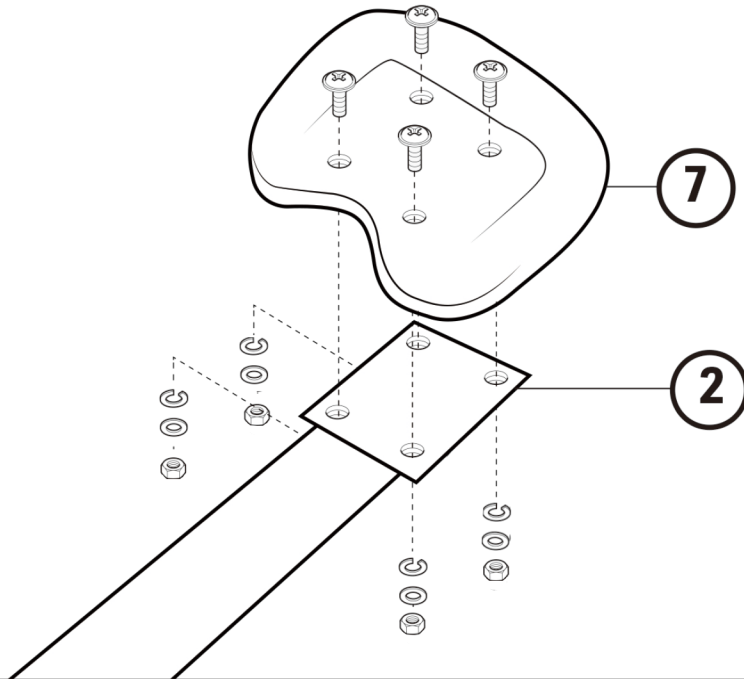

STEP 4

 13 - M8 Bolt 95mm




16 - M8 Small Curved Washer



19 - M8 Spring Washer



 21 - M8 Nut

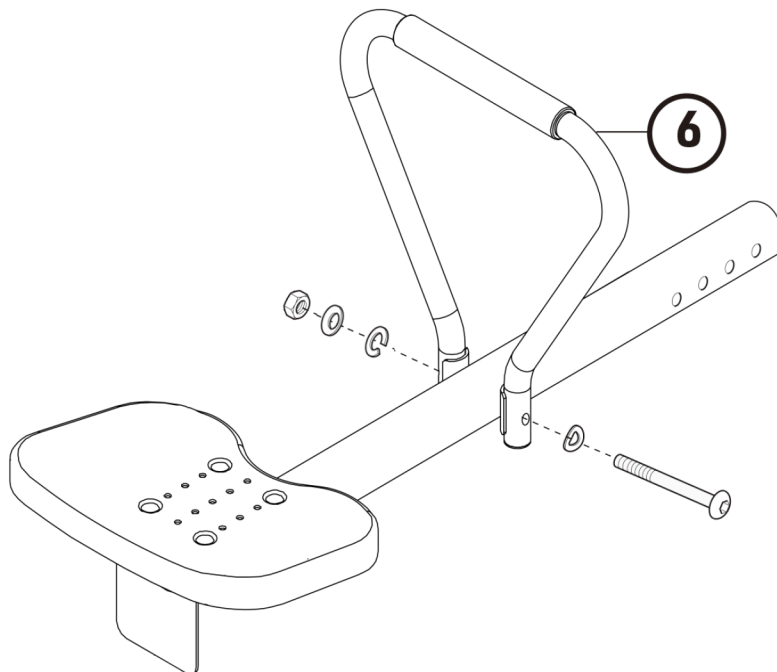

ASSEMBLY INSTRUCTIONS

STEP 5

 
11 - M8 Bolt 65mm




15- M8 Large Curved Washer




19- M8 Spring Washer



21- M8 Nut

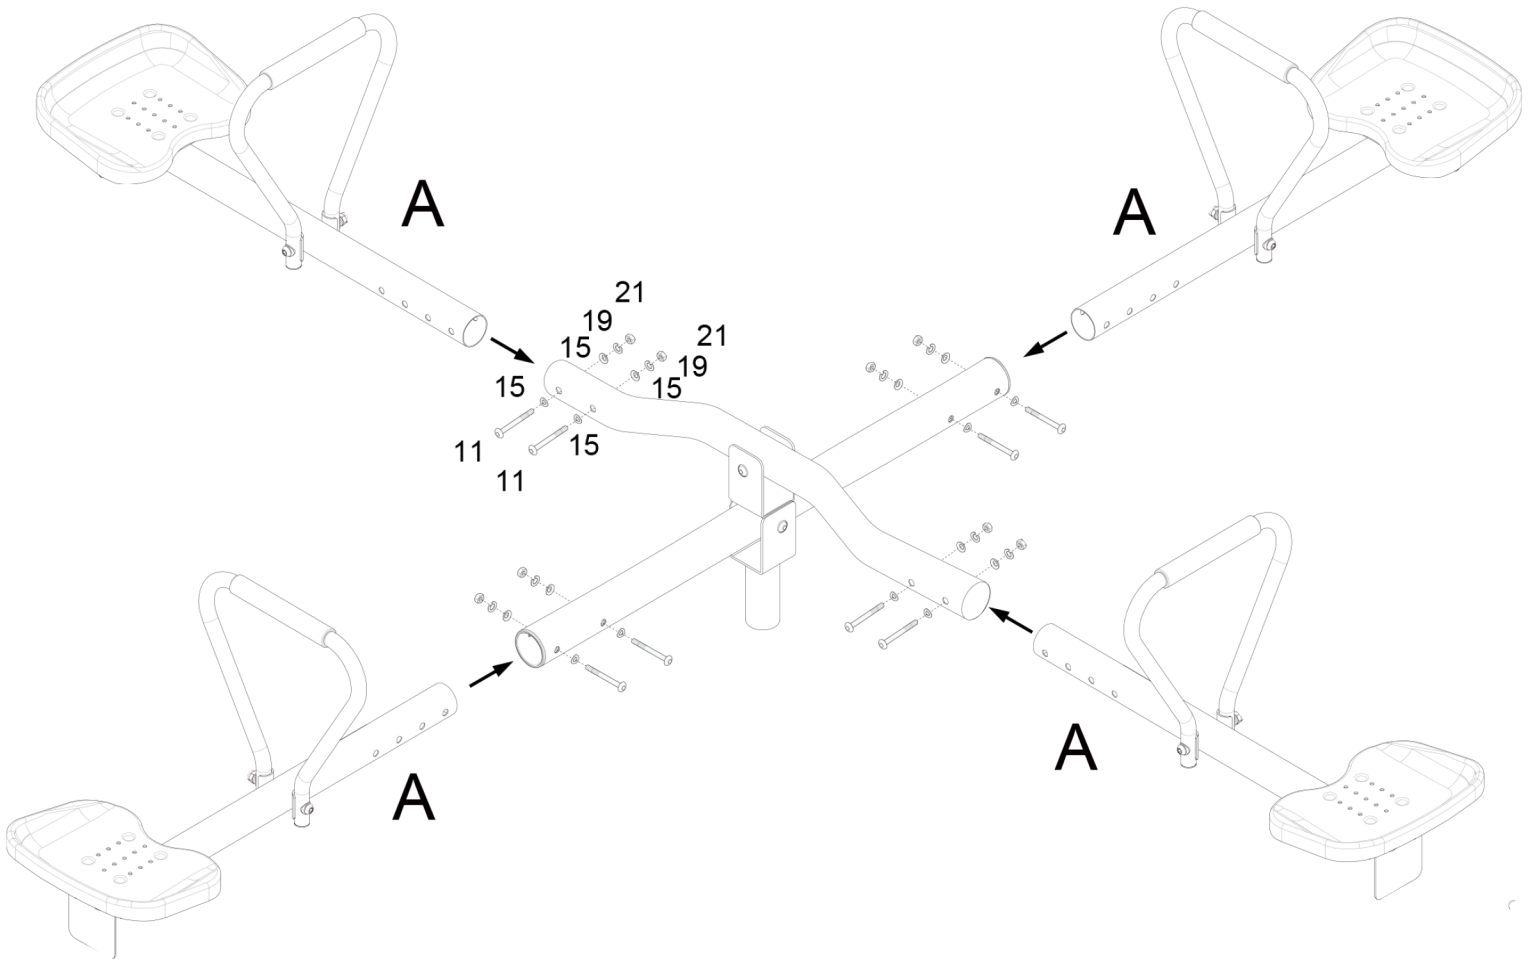 


 When the seesaw is adjusted to the longest position, the remaining four sets of screws are used at A

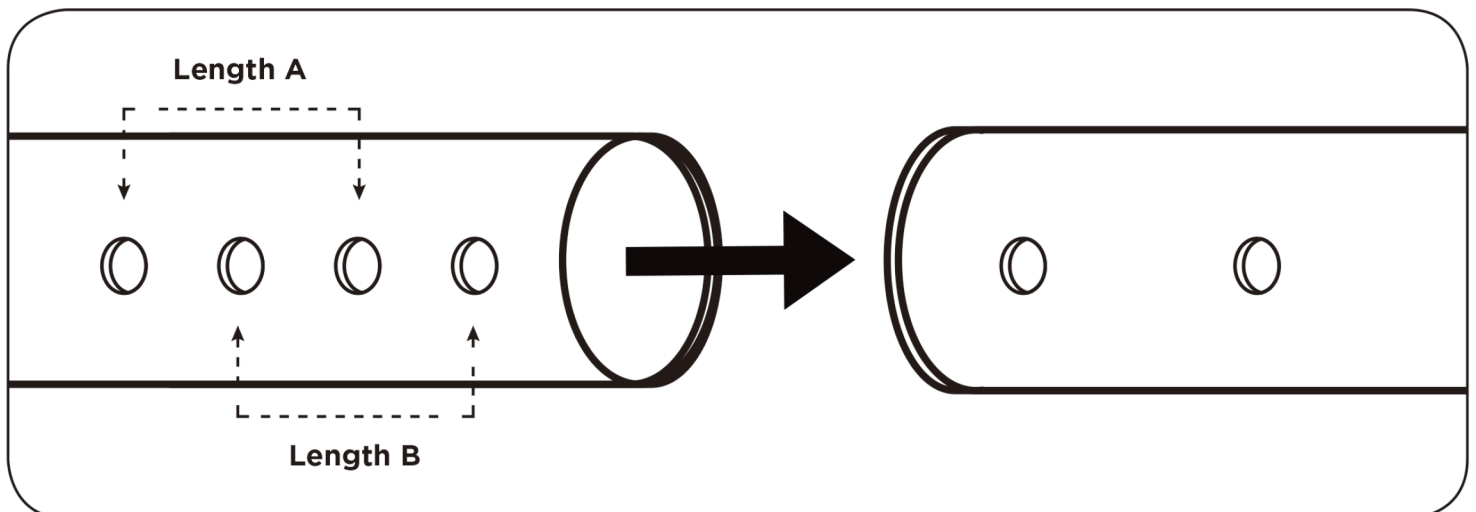

ASSEMBLY INSTRUCTIONS

 STEP 7

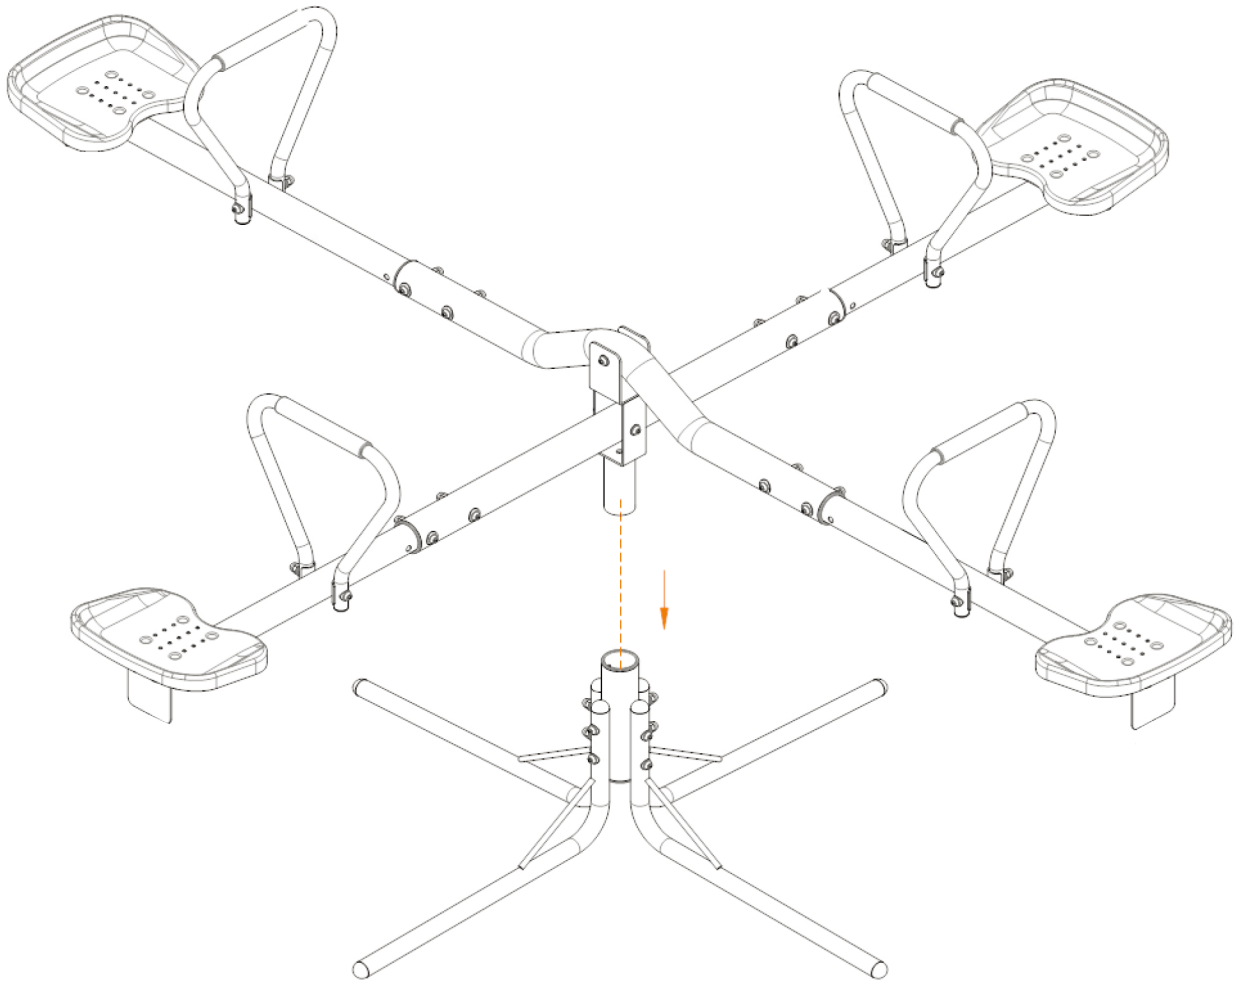

WARNINGS



ADULT ASSEMBLY REQUIRED **CHOKING HAZARD - Small Parts** **NOT** for children under 3 years of age.

Please read these warnings and the information in this manual in its entirety.

Failure to comply with the following instructions may increase the risk of serious injury and/or death:

-
- This unit must be assembled and disassembled by **ADULTS ONLY**.
 - This See Saw is suitable for use by most children 3 to 10 YEARS OF AGE.
 - Never use this product in any manner other than its intended use.
 - DO NOT exceed the **MAXIMUM WEIGHT** limit of 400lbs (100 Lbs per seat) regardless of age. Only 4 children may safely use the equipment simultaneously.
 - This unit has a **MAXIMUM FALL HEIGHT** of 40"
 - DO NOT install this equipment over concrete, asphalt, or any other hard or rough surface. The See Saw should always be installed over an appropriate, stable surface (rubber mat, grass, etc).
 - ALWAYS locate this equipment on a stable, level surface **AT LEAST 7 feet** away from any structure, obstruction, or possible hazard(s) such as walls, pools, power lines, overhangs, other playground equipment, driveways, hard surfaces and/or roadways.
 - Children must be supervised at all times when using this equipment. DO NOT leave children unattended at any time.
 - DO NOT attach items not specifically designed for this purpose. Especially in the case of jump ropes, chains, clotheslines, pet leashes and cables. These may cause a strangulation or physical hazard.
 - This See Saw is NOT for adult or adolescent use.
 - DO NOT allow children to stand on the seesaw.
 - This See Saw is only designed for family residential use. It is NOT intended for commercial applications and/or use in public areas such as schools, parks, nurseries, day schools, day cares, etc.
 - DO NOT allow more than one child on each See Saw seat at a time.
 - Instruct children to always be sure that the area under and around the seesaw is clear of any persons, pets or obstructions before using.
 - DO NOT allow children to wear glasses or helmets when using the See Saw, including bike or other sports helmets.
 - DO NOT allow children to wear loose fitting clothing, clothing with straps/loops, backpacks or wear and/or hold accessories with straps or loops, or any article of clothing or accessory with sharp edges which may present a hazard or become snagged or caught on the See Saw during use. Serious injury and/or accidental strangulation may occur.
 - DO NOT place objects on or under the see saw, or allow people and pets to stand or sit on, near or under the See Saw when in use.
 - DO NOT allow children to stand on the frame, or hang from the steel tubing – this can cause serious injury.
 - Children must ALWAYS remain securely seated, in the forward facing position when using.
 - DO NOT use in adverse weather conditions, while the seats are wet, or in poorly lit conditions.
 - ALWAYS secure the See Saw against unsupervised use.
 - ALWAYS wear the appropriate footwear (i.e. closed toe shoes) when using the See Saw.
 - Before each use of this product and twice per month, inspect and replace any worn, loose, defective or missing parts and tighten all hardware. All moving parts should be lubricated with a household lubricant.
 - It is important to check the entire See Saw to ensure the Frame Tubing, Protective Coverings, and Seats are steady and all parts and tubing caps are attached in good condition. If any loose, cracked, missing, or otherwise damaged components are found, cease use of this item immediately.
 - Check metal parts for rust. If rust is found, sand and repaint using a non-lead based paint. If removed for winter storage, reinstall any plastic parts before allowing use.
 - Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary.
 - At the end of the play season or when the temperature drops below 40 degrees Fahrenheit, this unit must be disassembled and stored inside.
 - Owners shall be responsible for maintaining the legibility of the warning labels.
 - Please read and refer to other warnings and use information in the See Saw instructions before use.
 - Dispose of all packaging materials safely and per local ordinance.
 - A recommendation on the orientation of the activity toy in relation to its exposure to the Sun.
 - Information to keep the assembly and installation instructions for further reference.
 - Do not modify the seesaw.
 - To replace defective parts in accordance with the manufacturer's instructions.
 - The use zone for each play structure that the minimum use zone for play equipment shall extend no less than 72" from all sides of the play structure.
 - Warn that children must not use the equipment until properly installed.
-

At the beginning of each play season:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary

Twice a month during play season:

- Tighten all hardware
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary

Once a month during play season:

- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- At the end of each play season or when the temperature drops below 32°F (temperature to be selected by the manufacturer): Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.
- Owners shall be responsible for maintaining the legibility of the warning labels.

Disposal Instructions

Advise the owner to disassemble and dispose of the playground equipment in such a way that no unreasonable hazards will exist at the time the playground equipment is discarded

Operating Instructions

- Observing the following statements and warnings reduces the likelihood of serious or fatal injury.
- Recommending on-site adult supervision for children of all ages
- Warning the owner to instruct children not to walk close to, in front of, behind, or between moving items
- Warning the owner to instruct children not to twist swing chains or ropes or loop them over the top support bar since this may reduce the strength of the chain or rope
- Warning the owner to instruct children not to use the equipment in a manner other than intended,
- Warning the owner to instruct children not to get off equipment while it is in motion,
- Warning the owner not to allow children to wear inappropriate items, such as but not limited to, loose fitting clothing, hood and neck drawstrings, scarves, cord-connected items, capes and ponchos. These items can cause death by strangulation.
- Warning the owner to instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
- Warning the owner to instruct children to remove their bike or other sports helmet before playing on the playground equipment.
- Warning the owner to dress children with well-fitting and full foot enclosing footwear. Examples of inappropriate footwear are clogs, flip flops, and sandals.

If you have an issue with your item, please contact the customer service hotline +33(0)3 80 70 83 44

**** THE MAXIMUM FALL HEIGHT FOR THIS PRODUCT IS 40 IN (100 CM).
WE RECOMMEND USING 6 IN (15 CM) OF DOUBLE SHREDDED BARK MULCH. ****

TABLE — DEPTH OF SURFACING MATERIAL REQUIRED BASED ON FALL HEIGHTS							
Material / Fall Height	5 FT (152 cm)	6 FT (183 cm)	7 FT (213 cm)	9 FT (274 cm)	10 FT (305 cm)	11 FT (335 cm)	12 FT (366 cm)
Double Shredded Bark Mulch	---	6 IN (15 cm)	---	---	9 IN (23 cm)	12 IN (30 cm)	---
Wood Chips	---	6 IN (15 cm)	9 IN (23 cm)	---	---	---	12 IN (30 cm)
Fine Sand	6 IN (15 cm)	---	9 IN (23 cm)	12 IN (30 cm)	---	---	---
Fine Gravel	---	6 IN (15 cm)	9 IN (23 cm)	---	12 IN (30 cm)	---	---
Shredded Tires***	---	---	---	---	6 IN (15 cm)	---	---

X2. SECTION 4 OF THE CONSUMER PRODUCT SAFETY COMMISSION'S OUTDOOR HOME PLAYGROUND SAFETY HANDBOOK⁷

X2.1 *Select Protective Surfacing*—One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM Specification F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

X2.1.1 *Loose-Fill Materials:*

X2.1.1.1 Maintain a minimum depth of 9 in. (229 mm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 96 in. (2438 mm) high; and 9 in. (229 mm) of sand or pea gravel for equipment up to 60 in. (1524 mm) high. NOTE: An initial fill level of 12 in. (305 mm) will compress to about a 9 in. (229 mm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9 in. (229 mm) depth.

X2.1.2 Use a minimum of 6 in. (152 mm) of protective surfacing for play equipment less than 48 in. (1219 mm) in height. If maintained properly, this should be adequate. (At depths less than 6 in. (152 mm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing. Ground level equipment – such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface – does not need any protective surfacing.

X2.1.3 Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.

⁷ This information has been extracted from the CPSC publications "Playground Surfacing—Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to the: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.

X2.1.3.1 Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.

X2.1.3.2 **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.

X2.1.4 *Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles*—You may be interested in using surfacing other than loose-fill materials – like rubber tiles or poured-in-place surfaces.

X2.1.4.1 Installations of these surfaces generally require a professional and are not "do-it-yourself" projects.

X2.1.4.2 Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacture for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height – vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below – of your play equipment.

X2.1.4.3 Check the protective surfacing frequently for wear.

X2.1.5 *Placement*—Proper placement and maintenance of protective surfacing is essential. Be sure to:

X2.1.5.1 Extend surfacing at least 72 in. (1829 mm) from the equipment in all directions.

X2.1.5.2 For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

X2.1.5.3 For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 ft in all directions.