



Assembly Instruction

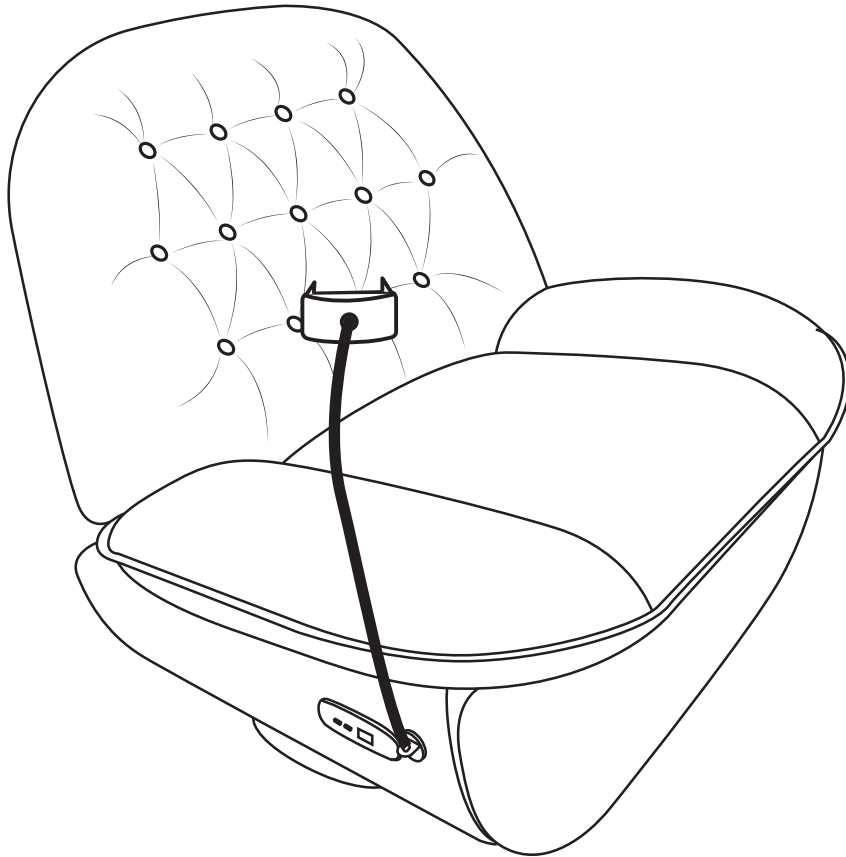

WF309581


PARTS LIST

(A)

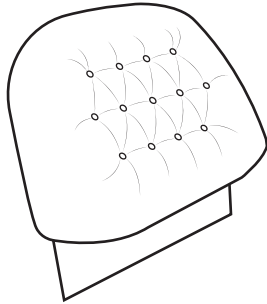


Backrest×1

(B)

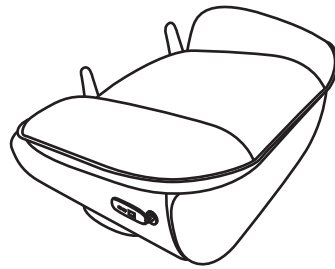

Seat cushion×1

(C)

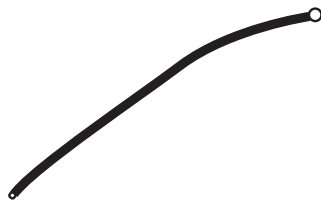

Support bar×1

(D)



Phone holder×1

(E)



Transformer×1

(F)




Power cord×1

(G)




wrench×1


Step 1: Align the backrest (A) and seat cushion (B) inserts and combine them.

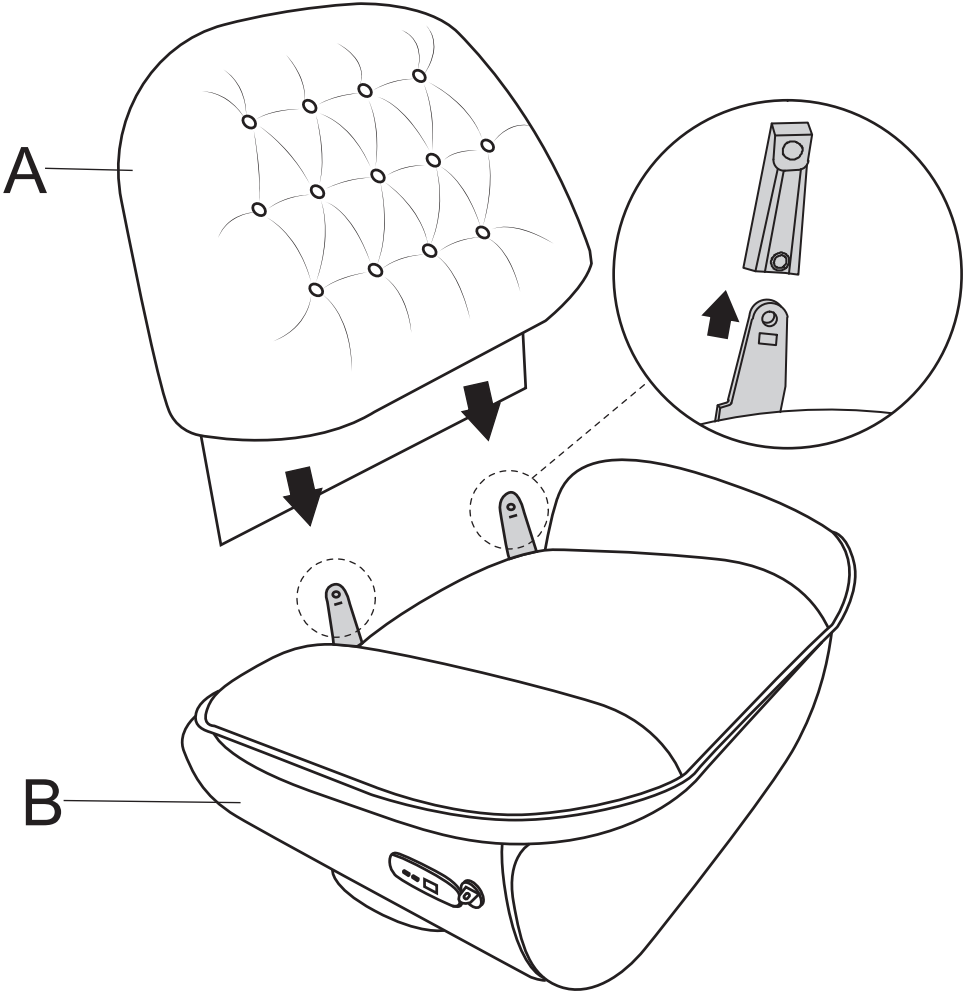



Step 2: Connect the transformer (E) and power cord (F) to the cord on the couch.

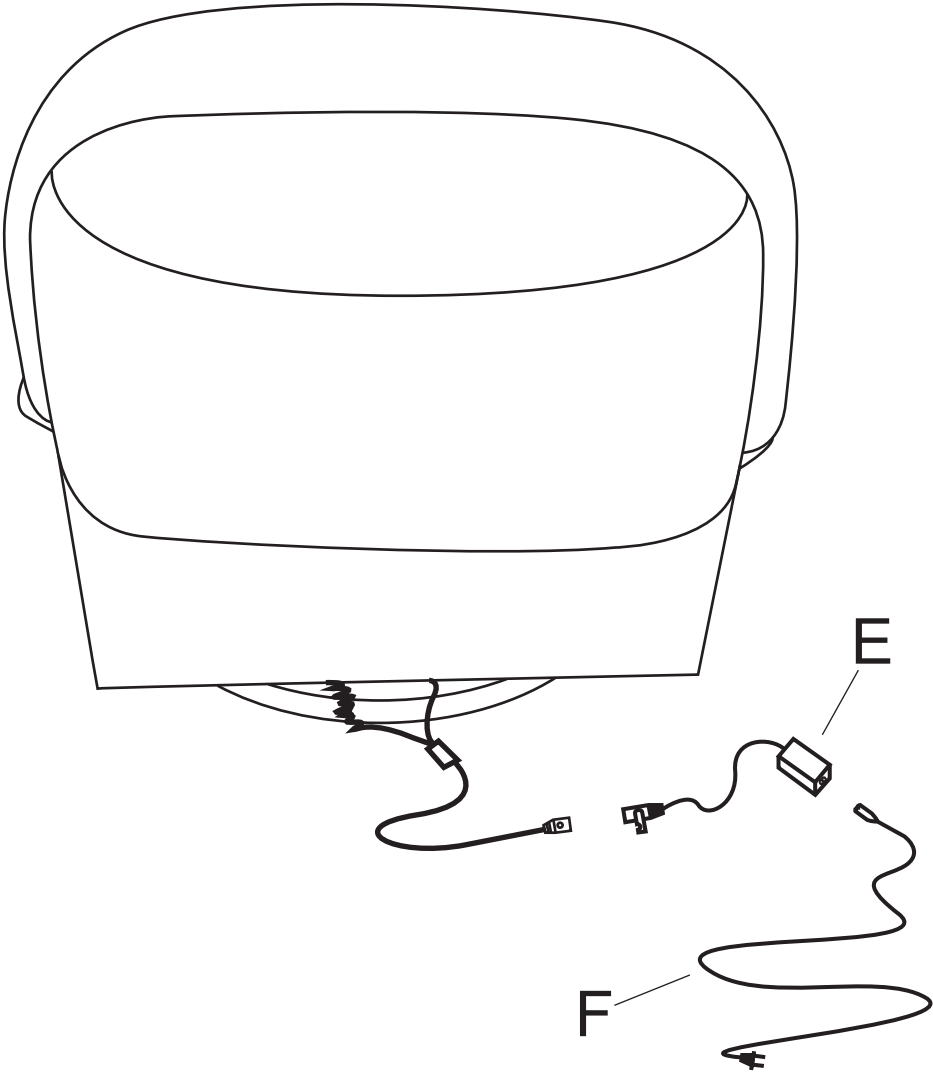

Step 3: Attach the support bar (C) to the sofa.

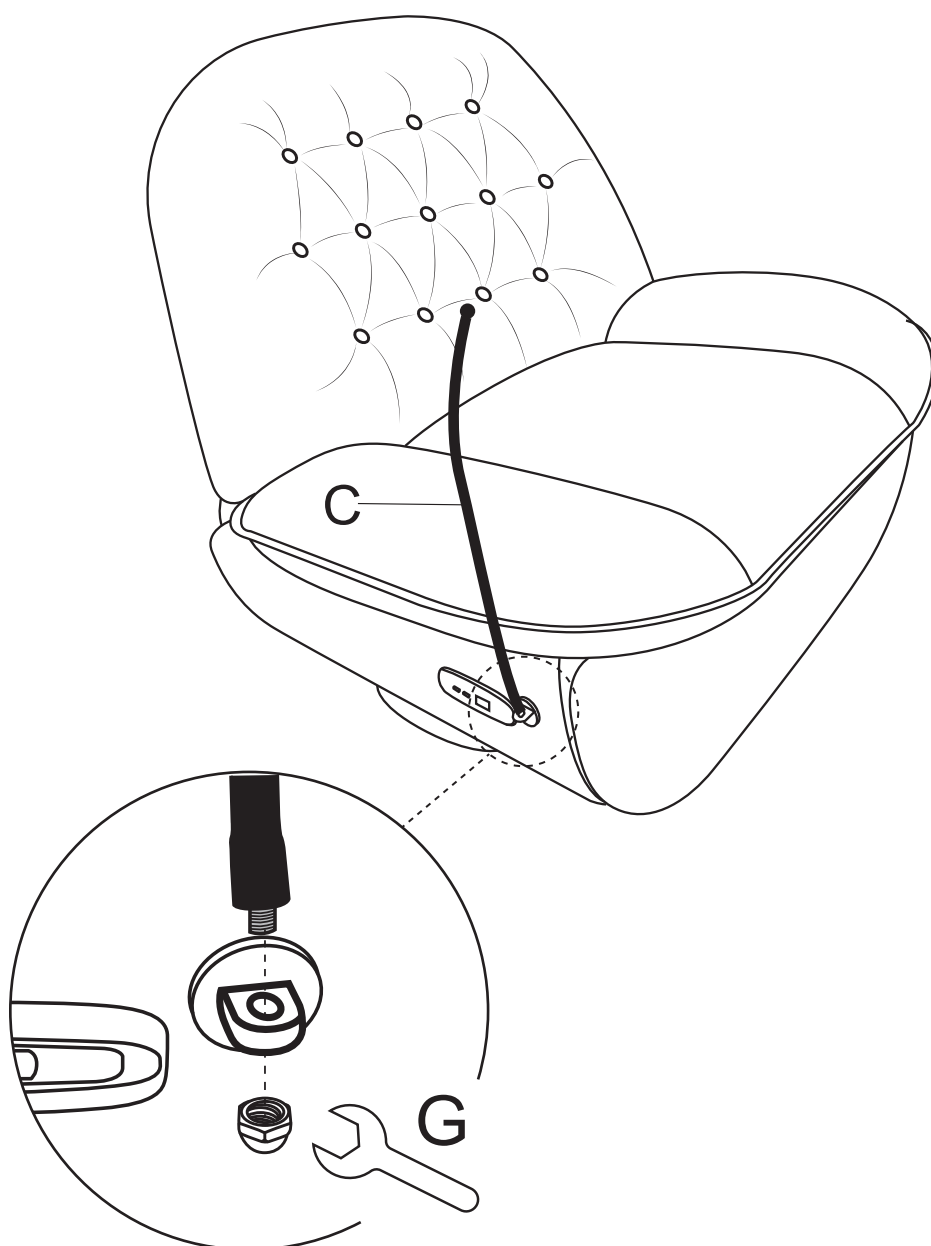


Step 4: Attach the cell phone holder (D) to the support bar (C).

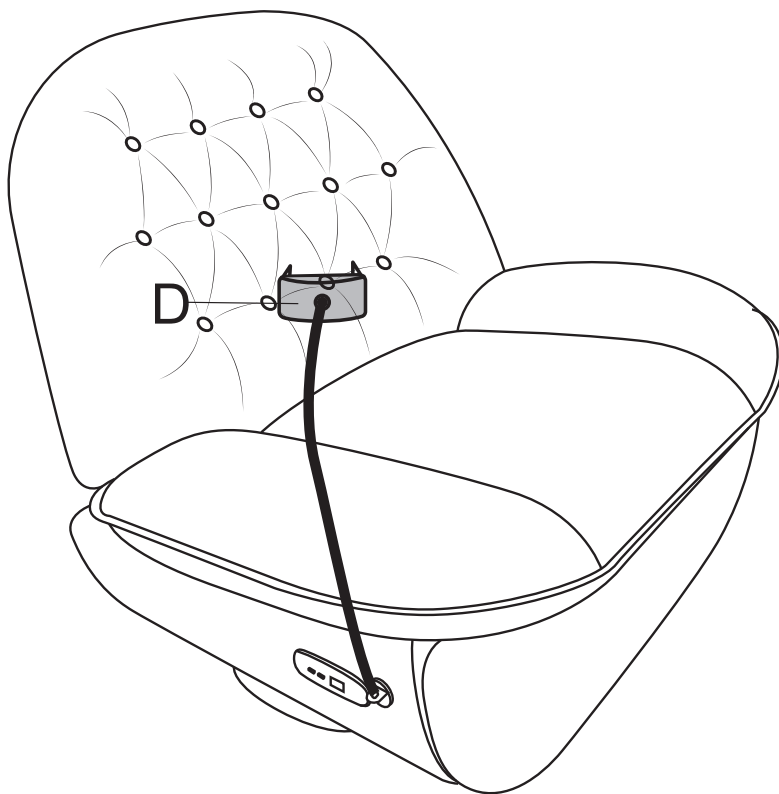
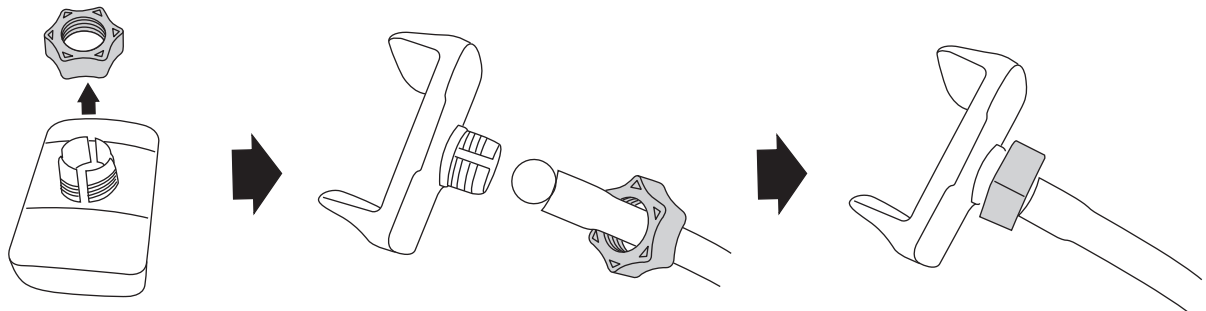



Step 5: Complete installation.

There is a storage compartment on either side of the seat cushion.

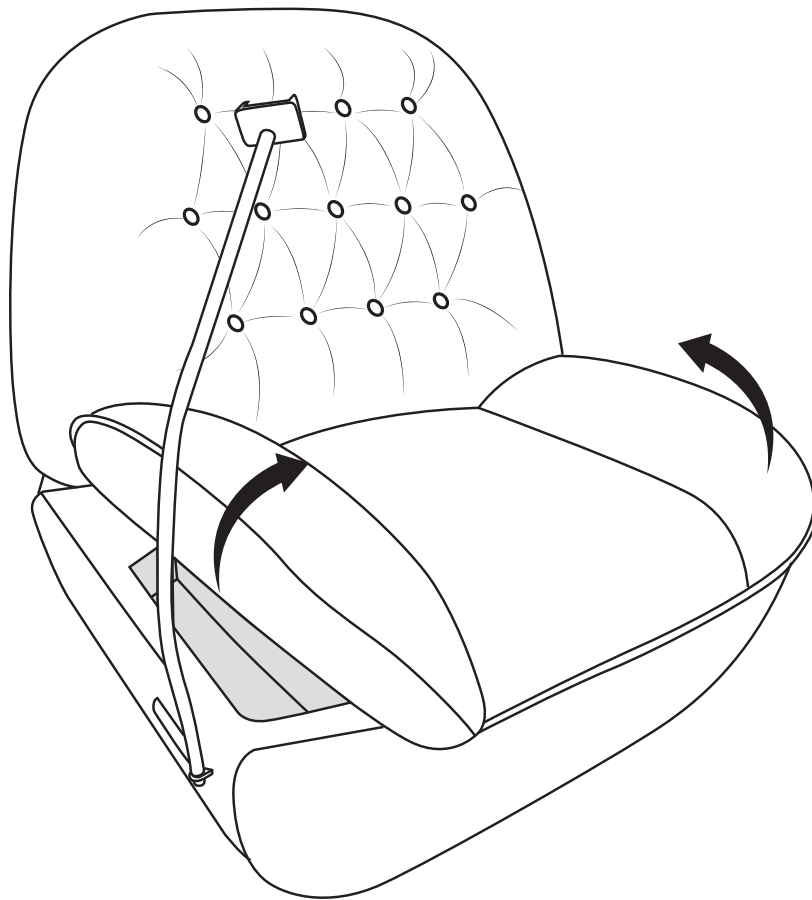

Step 6: How to use the sofa in sit-stand and recline mode.

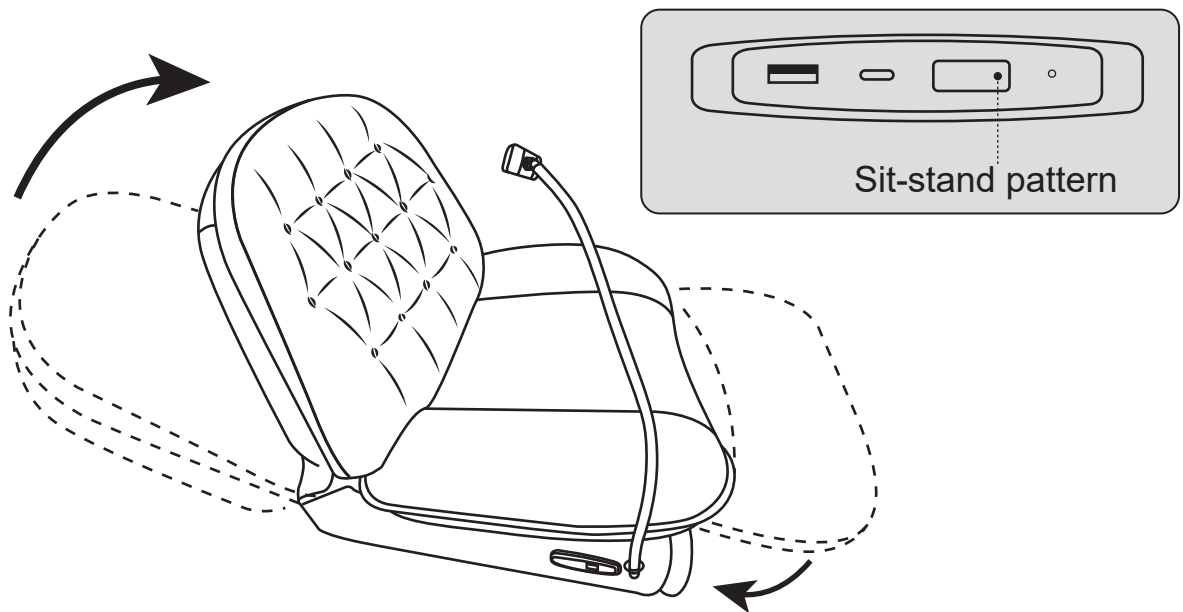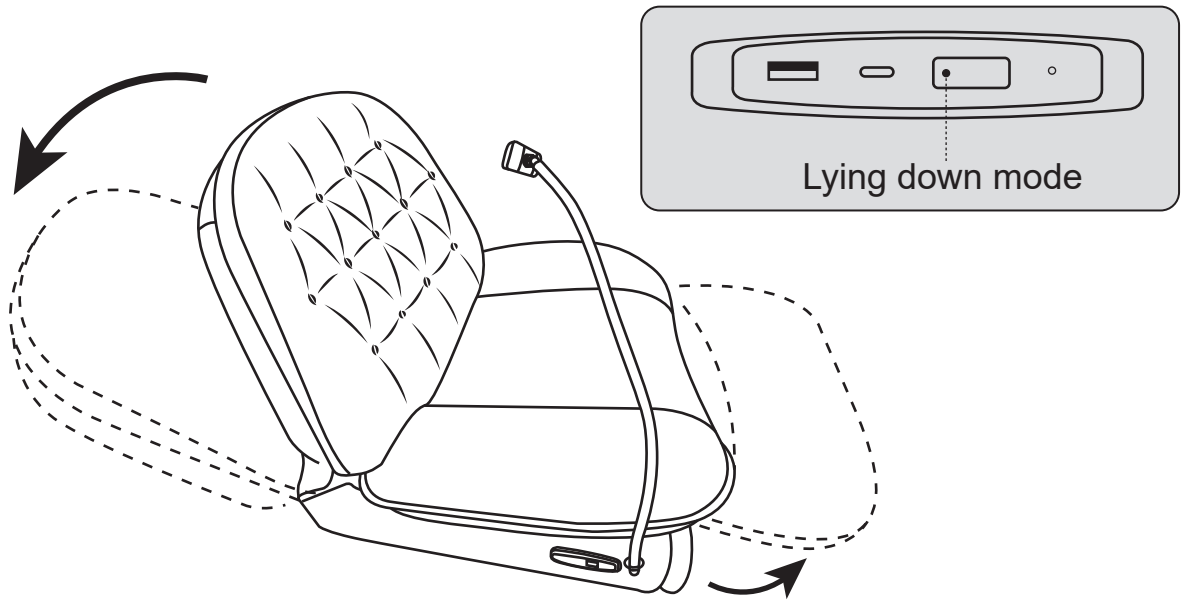

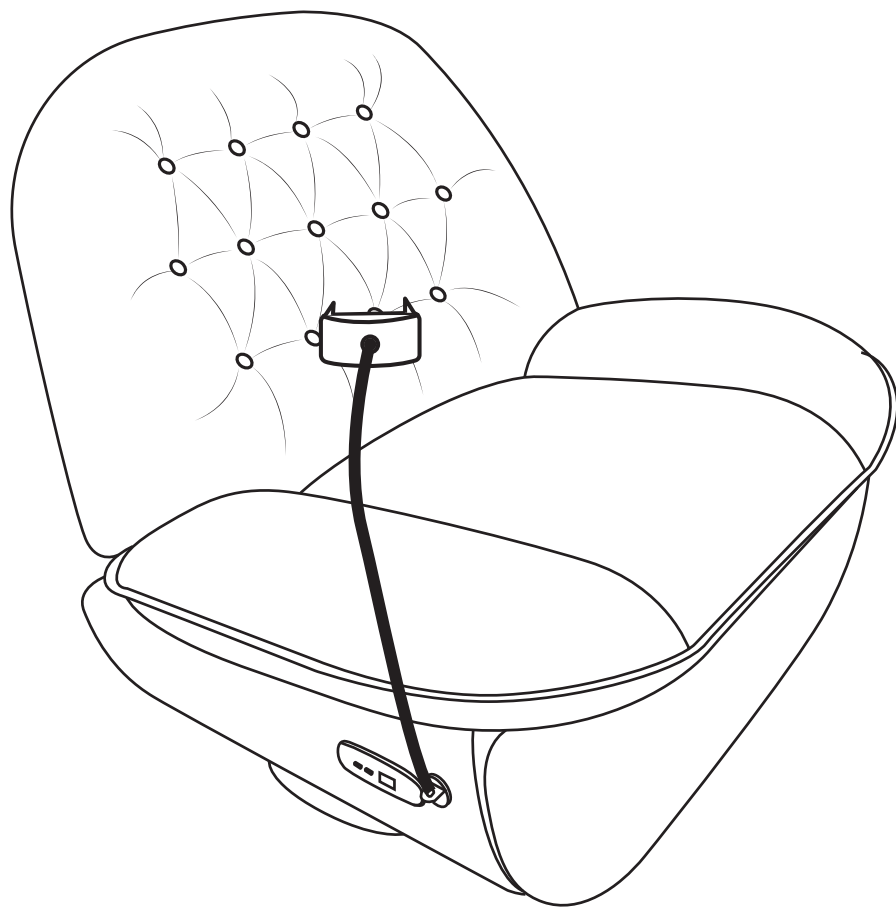

Voice (Cora - wake word) multi-function command and control

Welcome to use the voice assistant, pls call me Cora

Voice Command	voice response
Hi Cora	Cora is on line
Open the sofa	Sofa is Opened
Close the sofa	Sofa is Closed
Pause the sofa	Sofa is paused
Volume Up	Volume is UP
Volume down	Volume is Down
Working Model	Switched to Working mode
Sleep Model	Switched to Sleep model
Game Model	Switched to Game mode
Leisure Model	Switched to Leisure Model
Open the light	Sofa light is opened
Close the light	Sofa light is closed
Play Music	Music is played
Music Pause	Music is paused
(when keep 20S)	At your service at any time thanks