 
 


ASSEMBLY INSTRUCTION

 
ITEM NO: WF311569-WF311570-WF311571-WF311572-WF311573

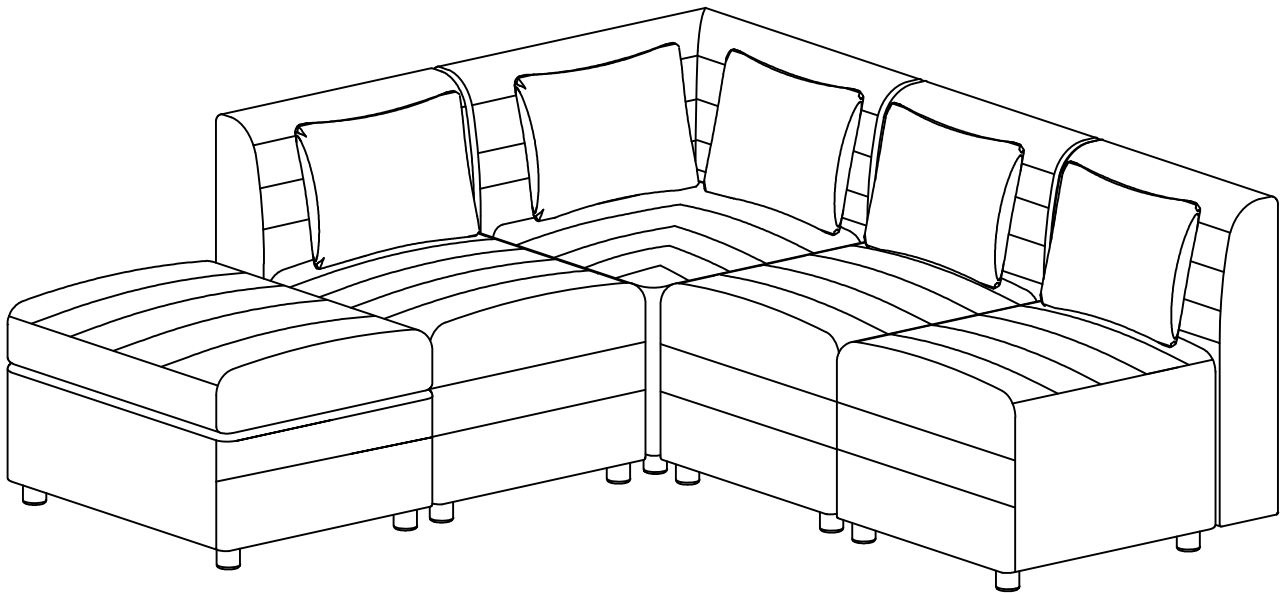

PARTS LIST

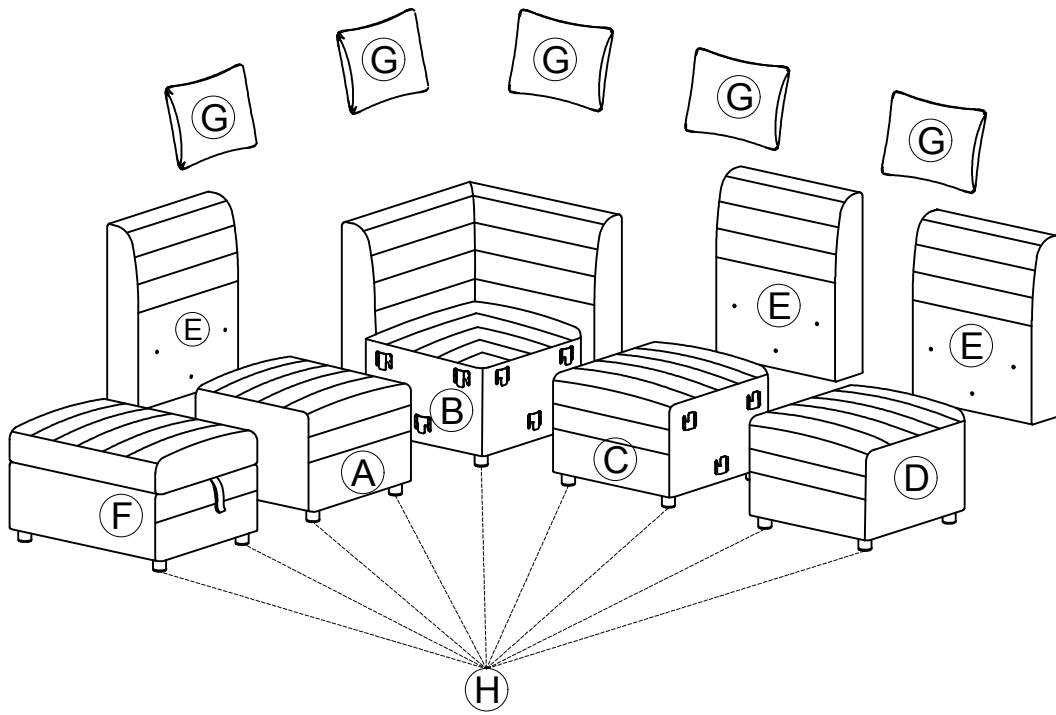


(A)

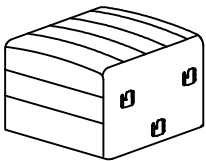


Left Chair
X 1PC

 (B)

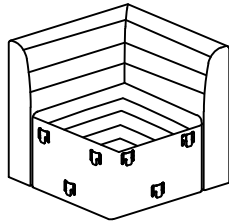


Corner Chair
X 1PC

 (C)

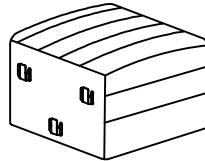


Middle Chair
X 1PC

 (D)

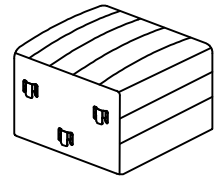


Right Chair
X 1PC

 (E)

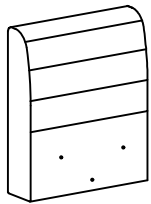


Backrest X 3PCS

 (F)

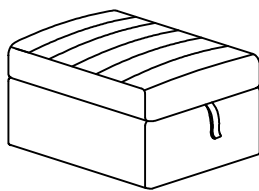


Ottoman X 1PC

 (G)

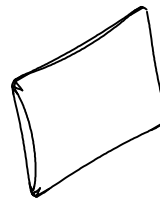

Pillow X 5PCS

 (H)



Round Legs
X 20PCS

 
HARDWARE LIST

(1)



Allen key M4
X1PC

(2)



Allen bolt
5/16" X 2" X9PCS

(3)



Spring washer 5/16"
X9PCS

(4)




Lock washer 5/16"
X9PCS

STEP 1:

1.1 Attach Ex1 to Ax1 with 2,3,4.


1.2 Attach Ex1 to Cx1 with 2,3,4.

 1.3 Attach Ex1 to Dx1 with 2,3,4.

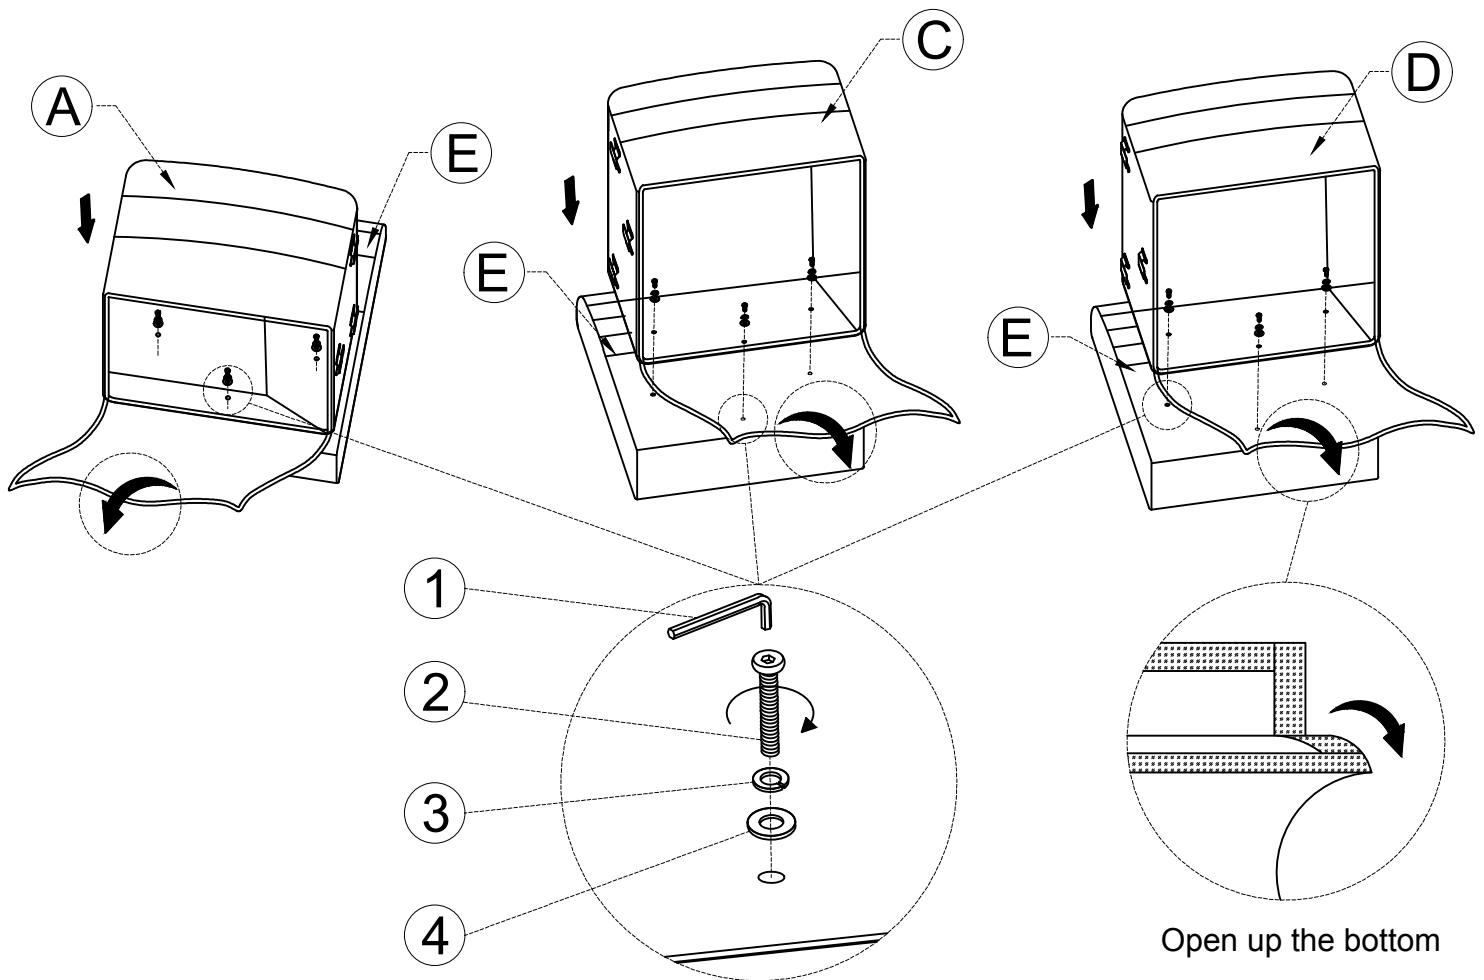


STEP 2:

 2.1 Close the bottom A,C,D.

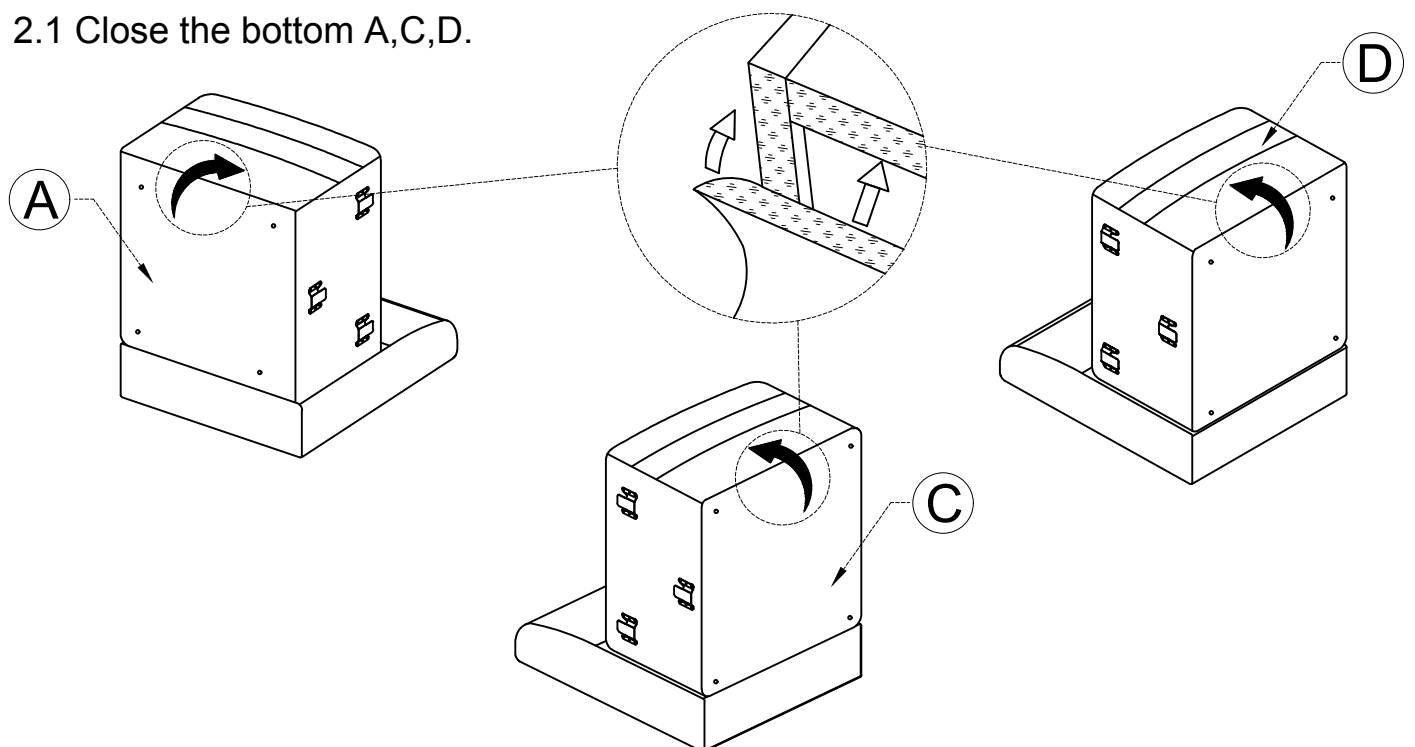


STEP 3:

 - 3.1 Attach Hx4 to Ax1.
- 3.2 Attach Hx4 to Bx1.
- 3.3 Attach Hx4 to Cx1.
- 3.4 Attach Hx4 to Dx1.
- 3.5 Attach Hx4 to Fx1.

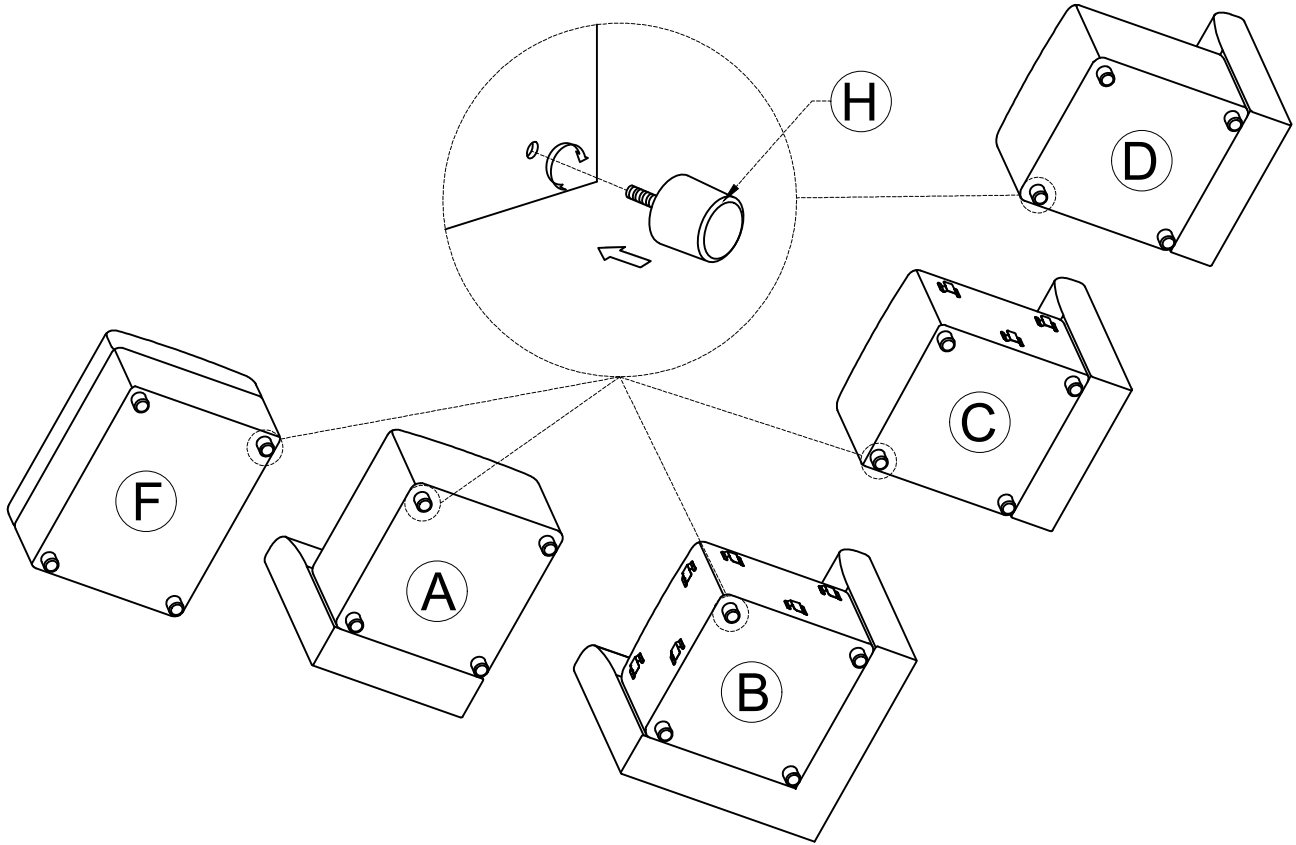

STEP 4:

 
- 4.1 Attach Bx1 to Ax1 with Cx1.
- 4.2 Attach Dx1 to Cx1.

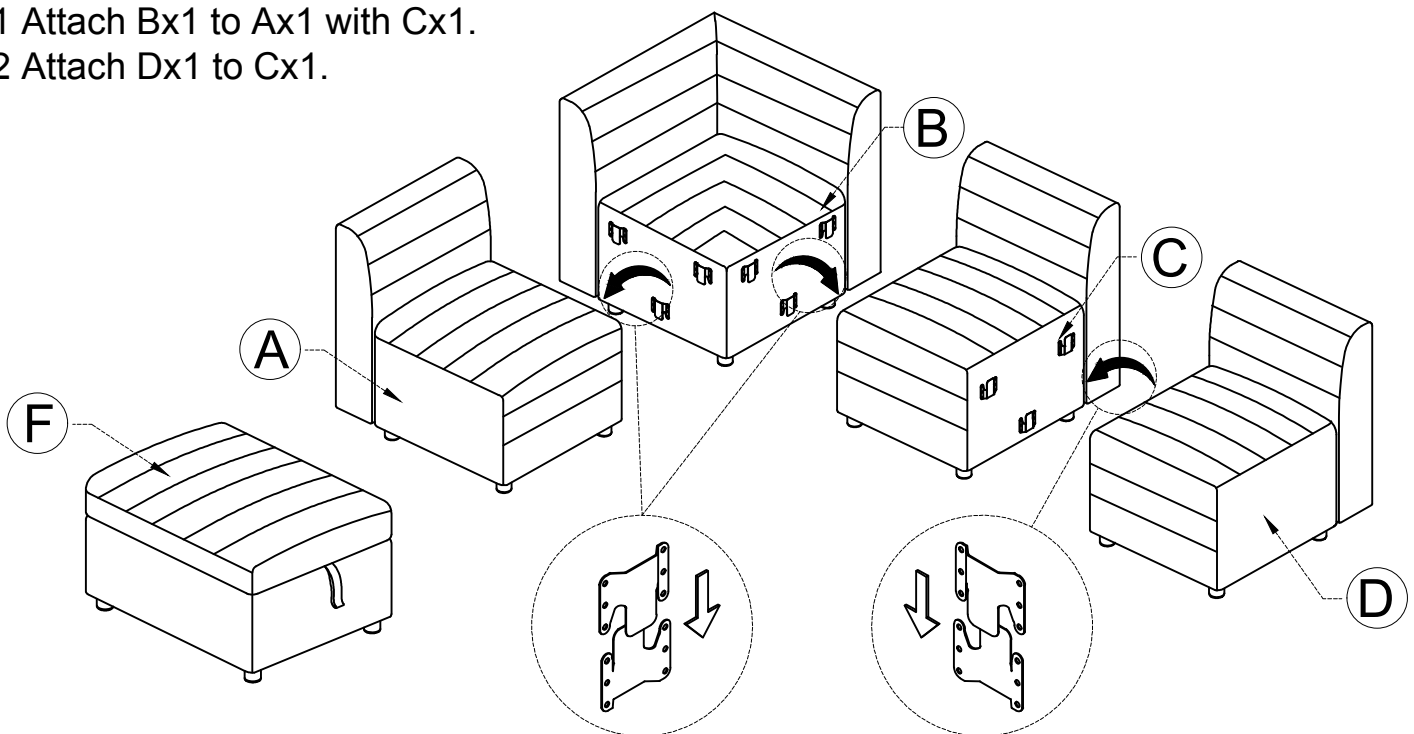

STEP 5:

Helpful Hints

 - Move your new furniture carefully, with two people lifting and carrying the unit to its new location.
- Your furniture can be disassembled and reassembled to move.
- Clean the product with a soft damp cloth. DO NOT use harsh chemicals or abrasive cleaners.


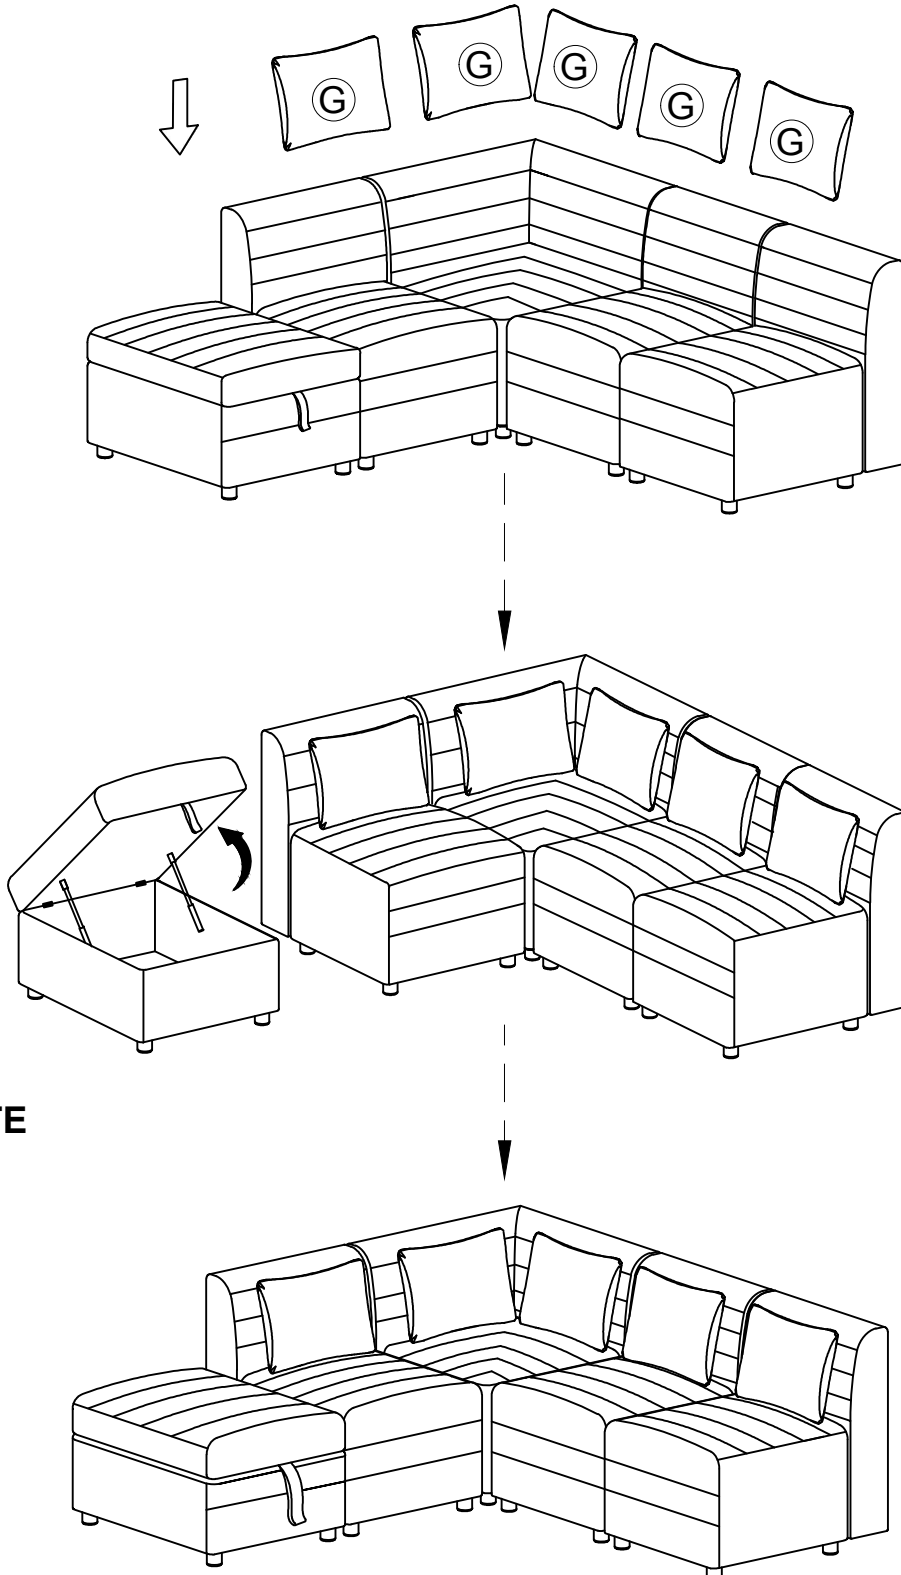



COMPLETE





WF311569-COMPONENT LIST

NO.	DRAWING	QTY	DESCRIPTION
B		1	CORNER CHAIR
G		2	PILLOW
H		4	ROUND LEGS




  

WF311570-COMPONENT LIST

   NO.	DRAWING	QTY	DESCRIPTION
A		1	LEFT CHAIR
G		1	PILLOW
H		4	ROUND LEGS

 

WF311571-COMPONENT LIST

NO.	DRAWING	QTY	DESCRIPTION
C		1	MIDDLE CHAIR
D		1	RIGHT CHAIR
G		2	PILLOW
H		8	ROUND LEGS

WF311572-COMPONENT LIST

NO.	DRAWING	QTY	DESCRIPTION
E		3	BACKREST
1		1	ALLEN KEY M4
2		9	ALLEN BOLT 5/16" X 2"
3		9	SPRING WASHER 5/16"
4		9	LOCK WASHER 5/16"

 WF311573-COMPONENT LIST

NO.	DRAWING	QTY	DESCRIPTION
F		1	OTTOMAN
H		4	ROUND LEGS