 
 


# Instruction Manual

 
Suitable for K3 series

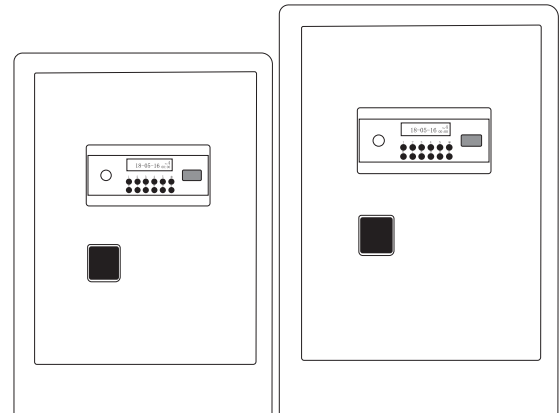

## BOX CONTENTS

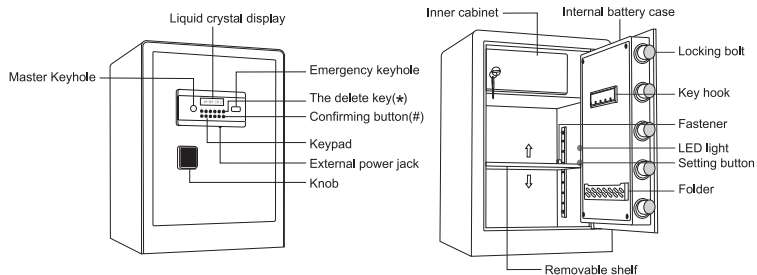

▲ NOTICE: Different size have different numbers of shelf.

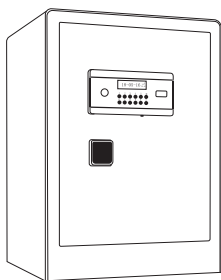

Safe box \*1



Instruction Manual\*1



Emergency battery box\*1



Emergency key\*2



Foot mat \*4



Expansion screws\*6



Master key\*2



Inner cabinet key\*2

## POWER AND VOLTAGE INDICATION

- 1.Power supply: use four 1.5V batteries. When the voltage is full, the solid battery symbol is displayed. When the voltage is undervoltage, it displays a hollow battery symbol. The screen displays "LO-BATT" . It reminds user to replace the battery.
- 2.Undervoltage reminder: 4.5±0.3V quiescent current: <20uA Maximum current: <350mA
- 3.If you forget the password, remove the insert and use the emergency key to open the door, you can press the red or green button on the inside of the door to reset to the factory unified password, personal password "1234" and administrator password "123456".



## TROUBLESHOOTING AND FACTORY RESET

Malfunction	Cause	Solution
The installed batteries doesn't work	Battery drained	Replace with new battery
	Electrode reversed	Put the battery in the correct position
Scratches on the panel and handle	The protective film is scratched and not torn off	Tear off the protective film
Can't open with password	The master key is not pulled out horizontally	Reinsert the key and pull it out horizontally
	Wrong password	Please reset your password
Door won't close	There is an obstacle in the middle of the latch or behind the door	Close the door after clearing the obstacle
Unlocked but the door won't open	The key is not turned to the specified position	After turning the key to the specified position, turn the knob to open
	The knob is not be turned within 5 seconds after entering the password	Open the door within 5 seconds after entering the password
Cannot be locked	The key was not pulled out	Lock the door after removing the key
LED won't light up	Use the key to open the safe	Use the password to open the safe

### Maintenance

1. If you do not use the safe for a long time, please take out the battery in the safe to prevent the battery fluid from leaking and damaging the safe.
2. Keep your keys and emergency battery box safe, which can be opened when the safe is out of power or if you forget your password.
- 3.Store the safe in a cool, backlit place.
- 4.Do not wipe the safe with corrosive chemical solvents, use a clean rag to wipe with a little cleaning agent.

## FACTORY RESET

Keep pressing the setting button for 5 seconds until you hear a beep. The right indicator will flash once, indicating that the reset has been successful. At this point, all passwords will be invalid and need to be reset.

▲ Note: The default password is **1234** or **123456**.



## SETTING UP THE PASSWORD

### SET THE ADMINISTRATOR PASSWORD

 
 
 
1. Enter "#", it will display "--", enter "0" twice, and then press the setting button, which means that the user password can be set.
2. After inputting any 1-8 digit password, enter "#" to confirm, and the screen will display "IN", meaning the administrator password is entered successfully.

▲ Test the password before you close the door.

### DOOR OPENING INSTRUCTION

1. After setting the password, enter the "#" key once, then enter the correct user password or administrator password, and "OPEN" will be displayed on the screen, you can open the door within 7 seconds.
2. If the password is incorrect, it will display "Error" and switch to the waiting state again. If the password is entered incorrectly three times, it will alarm for 1 minute, enter the correct password to cancel the alarm, otherwise the alarm will automatically stop after one minute.
3. The "\*" key is the clear key, which can be entered to clear an incorrect number.
4. Press "#" once, and then press "\*" again, the entered password will be replaced by "0" instead of numbers. It will automatically recover after opening the door.

### THREE WAYS TO OPEN THE DOOR
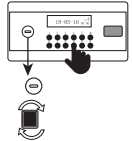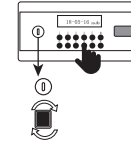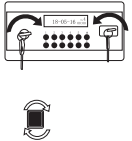
<p>➤ <b>Method 1</b> Password opening</p>  <p>when you pull out the master key at horizontal angle, password only can open the door.</p>	<p>➤ <b>Method 2</b> Master key + password opening</p>  <p>when you pull out the master key at vertical angle, you can open with master key + password.</p>	<p>➤ <b>Method 3</b> Emergency opening</p>  <p>Master key+emergency key can open the door.</p>
---	--	---

## DATE SETTING AND ALARM FUNCTION

### DATE SETTING

Press the "\*" key once in the off-screen state to start adjusting the year, month, date, time. When you adjust the date and time, you should complete the whole process from year to time, then a battery icon will be displayed, which means successful adjustment. Or it will not be saved.

### ALARM FUNCTION

 
1. After 3 consecutive times of wrong password, your safe will activate the alarm system, the alarm will sound, then enter the correct password and the alarm will be cancelled.
  2. Under the off screen state, press "0", the alarm system will be activated. If the box is shaken or violently hit, it will give an alarm immediately for one minute, at this point, enter the correct password to stop the alarm.
- ▲ Note: When the door is opened, the alarm is turned off and needs to be turned on again.

## BOLTING DOWN YOUR SAFE

### TOOLS NEEDED TO BOLT SAFE

1. Drill
2. Marker pen
3. Expansion bolts (included)

### MOUNT THE SAFE

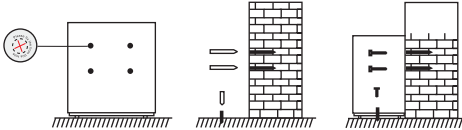

#### Step1:

Place the safe at the installation place(Wall or floor), Mark the drilling spots on the wall/floor from the inside pre-drilled holes.

#### Step2:

Remove the safe and drill a about 10 mm hole in the wall or floor with drill bit.

#### Step3:

Position the safe in place and install screws through the safe into the holes. Tighten screws.

**▲ Note:** Different modes have different numbers of pre-drilled holes.

This safe has 6 pre-drilled holes, 4 pre-drilled holes in the back and 2 pre-drilled holes in the bottom, you can mount the safe on the wall or floor according to your needs.



## SETTING UP THE PASSWORD

### FIRST OPENING

**▲ Note:** Please use the master key + emergency key to open the safe for the first time. The operation is as follows:

1. Left slide the keyhole cover to expose the master keyhole. Press the right edge of the emergency keyhole cover.		4. Turn the knob clockwise to open the door for the first time.	
2. Insert the master key into the keyhole, turn clockwise to the limit.		5. Remove the internal battery case cover and install 4 AA batteries at the right polarity. The system will be powered on.	
3. Insert the emergency key into the emergency keyhole and turn counterclockwise to the limit.		6. Weak current or power off. There are two ways of emergency opening. 1) Adopting emergency key + master key. 2) Using emergency battery box (Install four AA alkaline batteries, insert external power jack, the system will be energized). <b>Note:</b> 1.Rechargeable battery is not recommended as it may destroy the internal electronic components of your safe. 2, please use brand new batteries, do not mix used batteries with new batteries.	

### INITIALIZATION

System initial user password is "1234", administrator password is "123456", date: 00-01- 01, Saturday, 00 hours 00 minutes 00 seconds.

### SET THE USER PASSWORD

1. Press the setting button once, the display will light up and display "--", indicating that the user password can be set.
  2. After inputting any 1-8 digit password, press "#" key to confirm, and the screen will display "IN", that is, personal password input success.
- ▲ Test the password before you close the door.**



## CATALOGUE & WARNINGS

Warnings .....	2
Box Contents .....	3
Setting Up the Password .....	4-5
Date Setting and Alarm Function.....	6
Bolting Down Your Safe .....	7
Troubleshooting and Factory Reset .....	8

### WARNINGS

1. Do not lock the emergency key or emergency battery box into your safe.
2. If the safe box is not used for a long time, the battery should be removed to prevent leakage of liquid from damaging the electronic system.
3. Purchase 4 AA batteries in advance, this safe does not contain batteries.
4. There are protective films on the knob and LCD screen. You can remove or keep it according to your needs.