

# ASSEMBLY MANUAL

# MODEL#: LNCF0568A

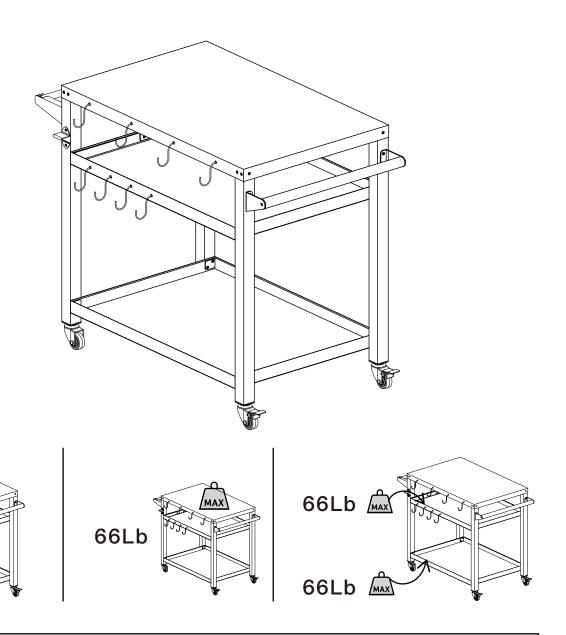

 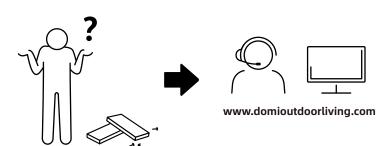



Missing part? Damaged?
Contact us via email at
service@domioutdoorliving.com


© Copyright 2023–2025 domi outdoor living LLC. All Rights Reserved.


# **BEFORE STARTING ASSEMBLY**

- ① Some parts have metal edges. Please be careful when handling components. Always wear work gloves.
- ② Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.
- ③ Please do not fully tighten the bolts prior to complete assembly.
- 4 Retain for future reference. Read carefully. For domestic use.



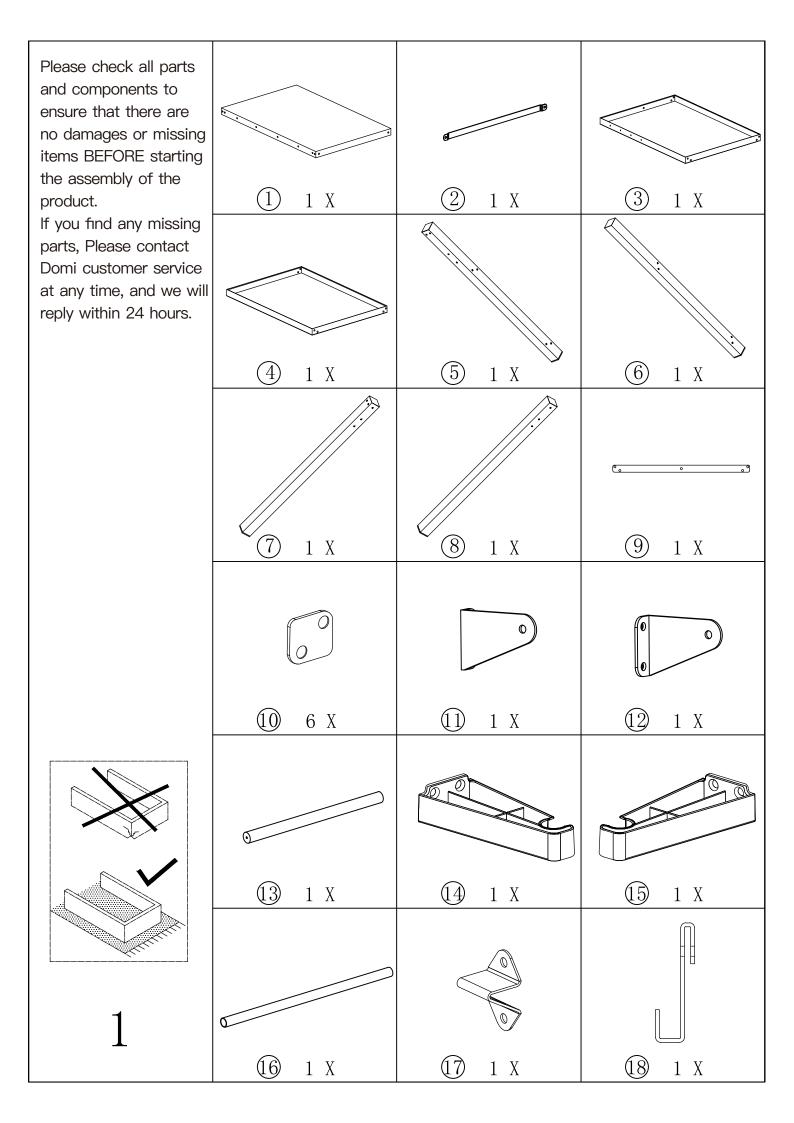


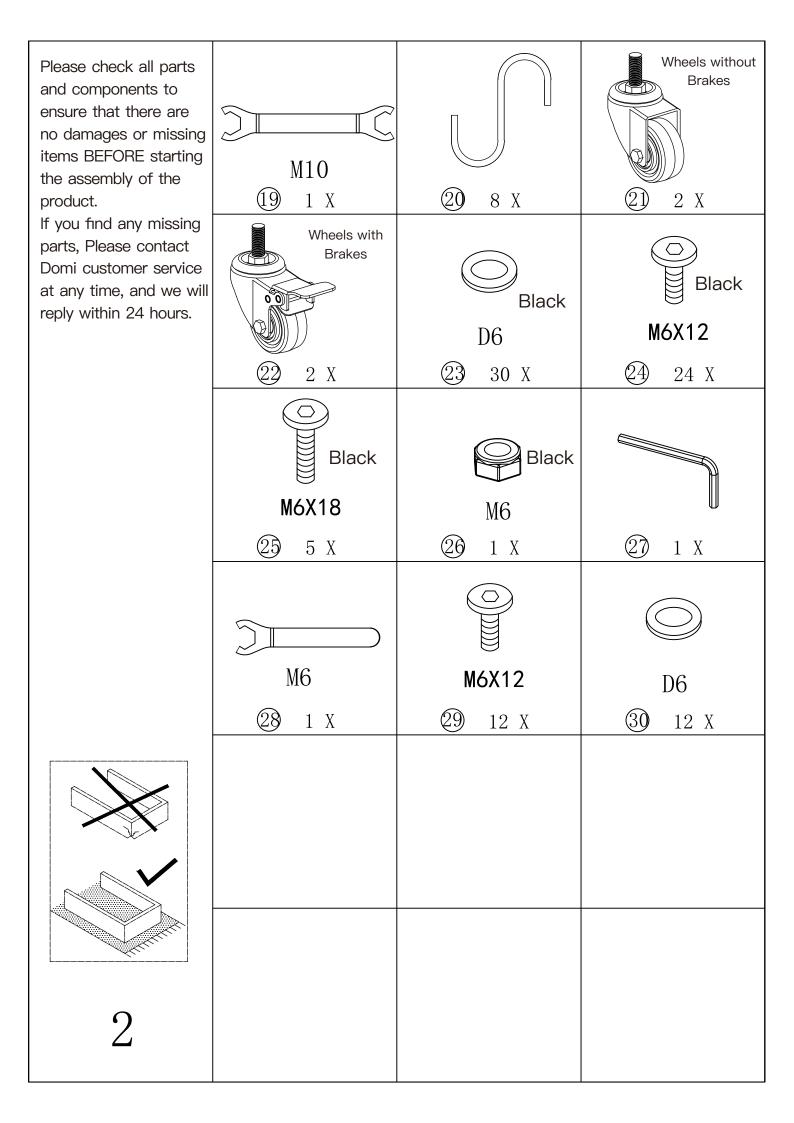


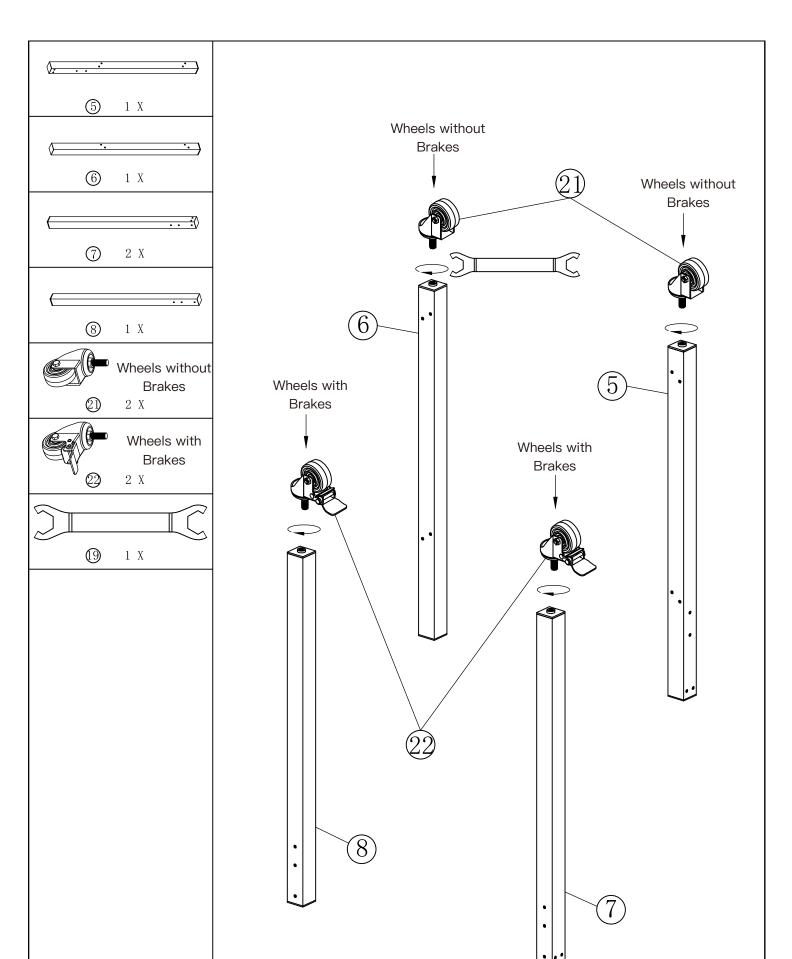



Please distinguish between the two wheels and install them on the corresponding legs.

3

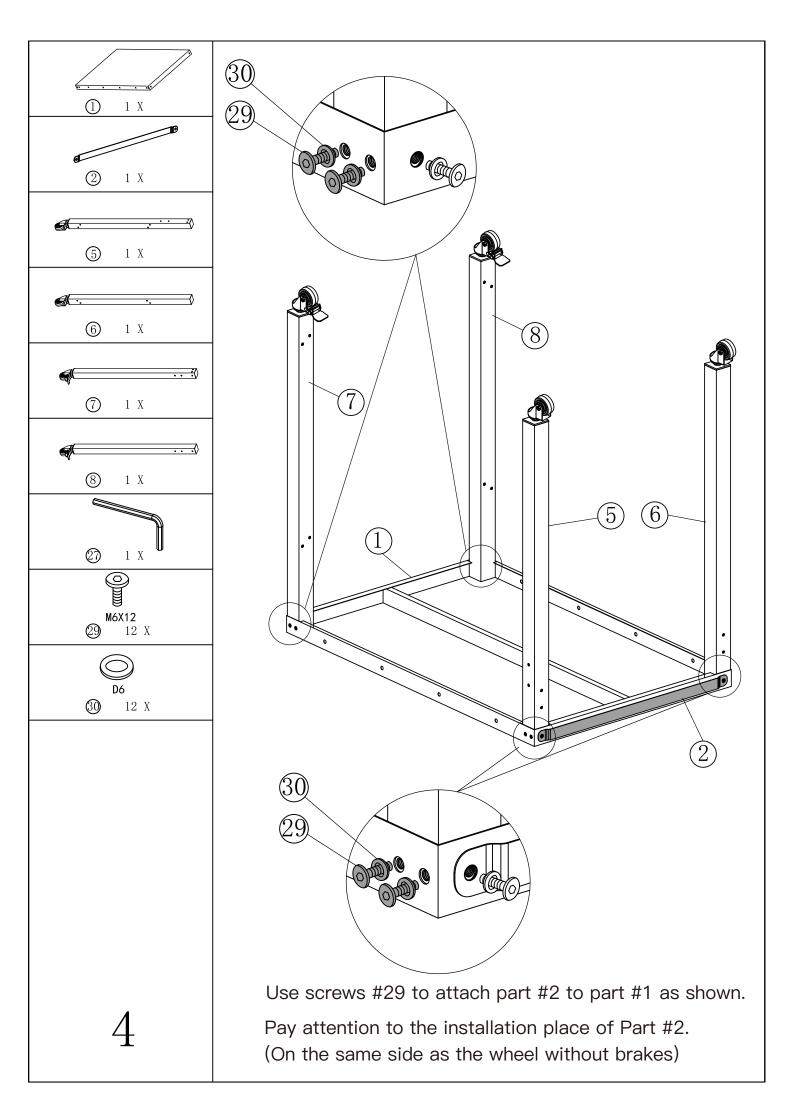


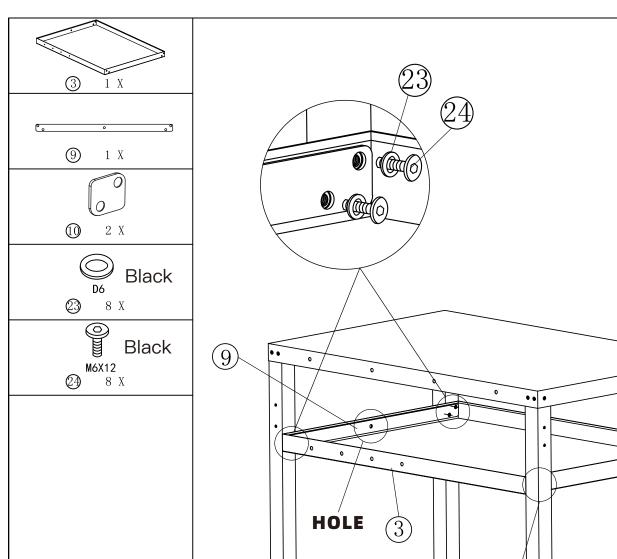

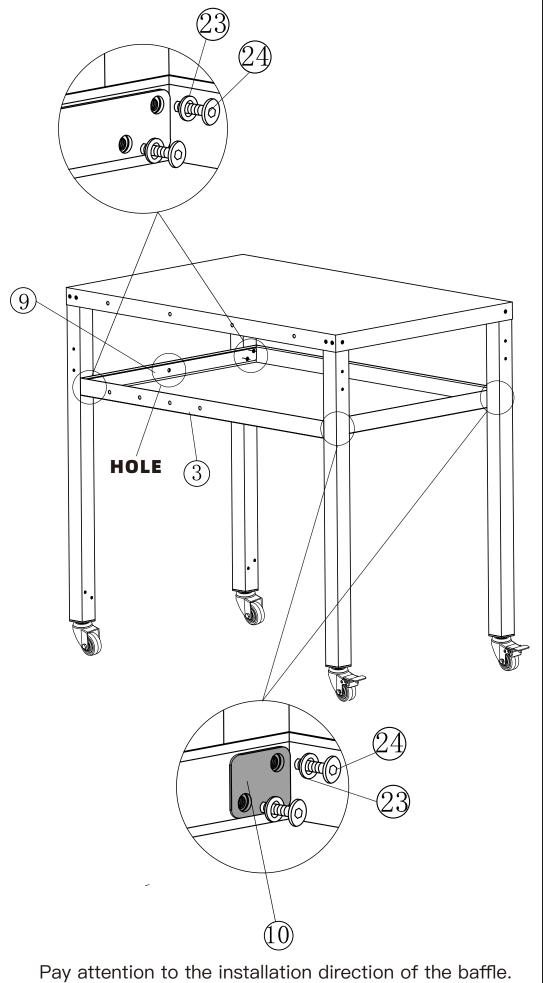

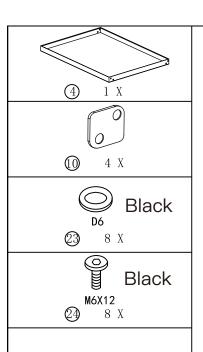



Assemble screws with gaskets #23 and nuts #24. Then screw the parts #4 and #10 to the legs.

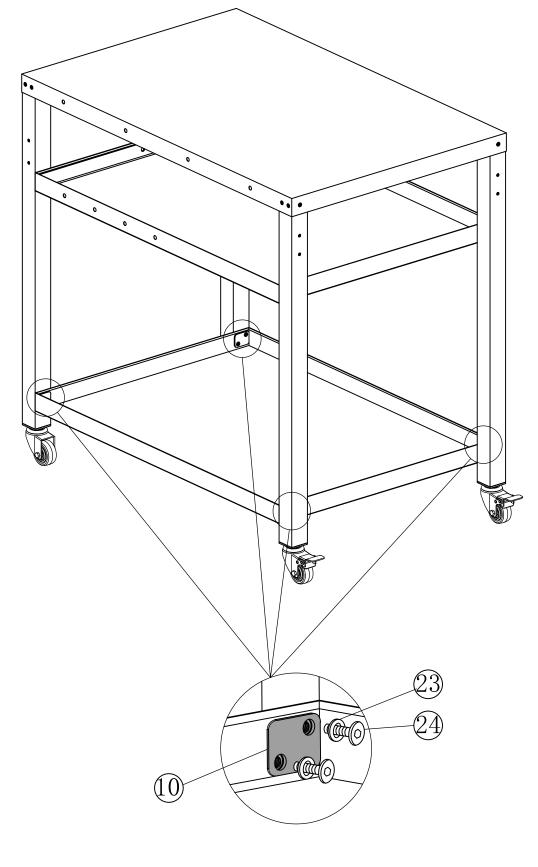


6


Repeat this procedure for the other 3 legs.

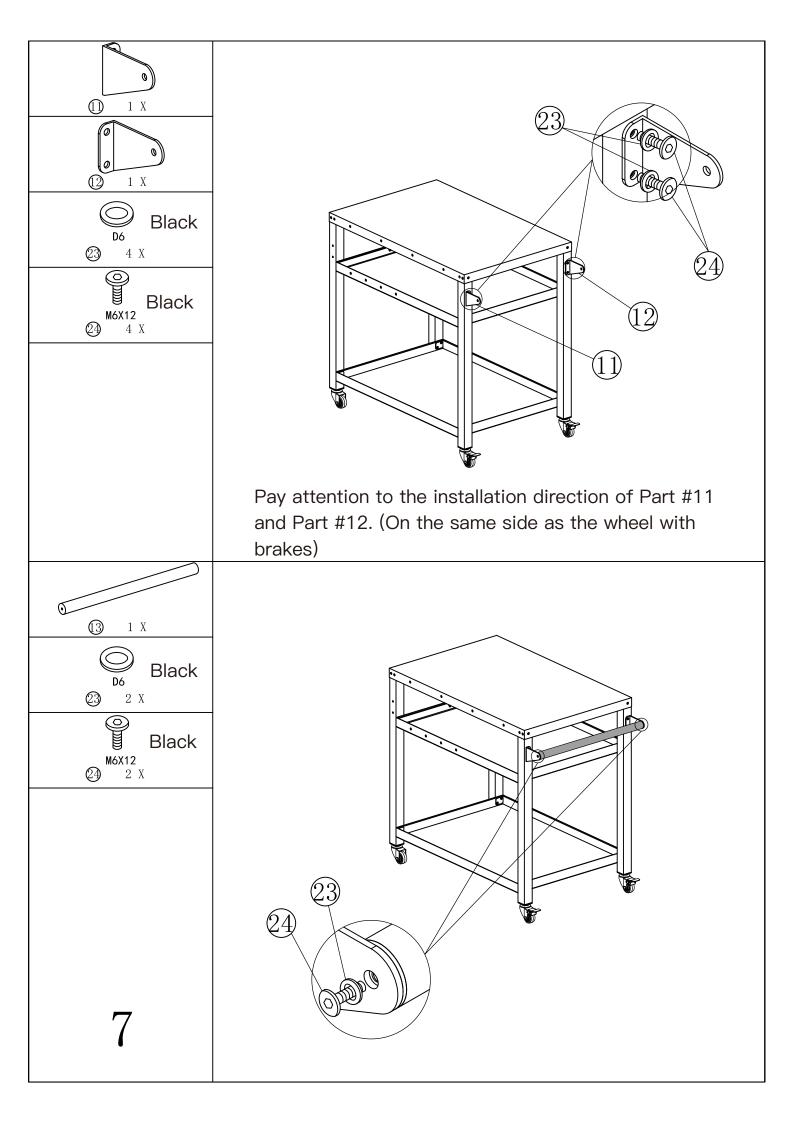

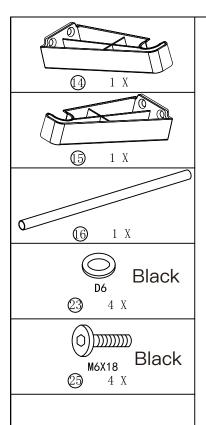


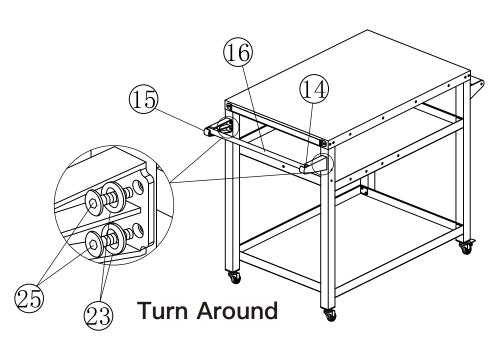

Pay attention to the installation direction of Part #14 and Part #15. (On the same side as the wheel without brakes)

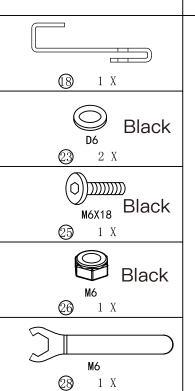


## Propane Tank Hook Assembly:

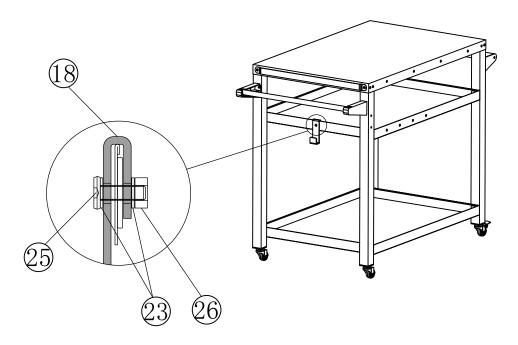


Pay attention to the installation direction of Part #18. (On the same side as the wheel without brakes)


8

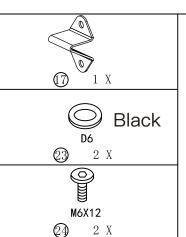

## **Bottle Opener Assembly:**

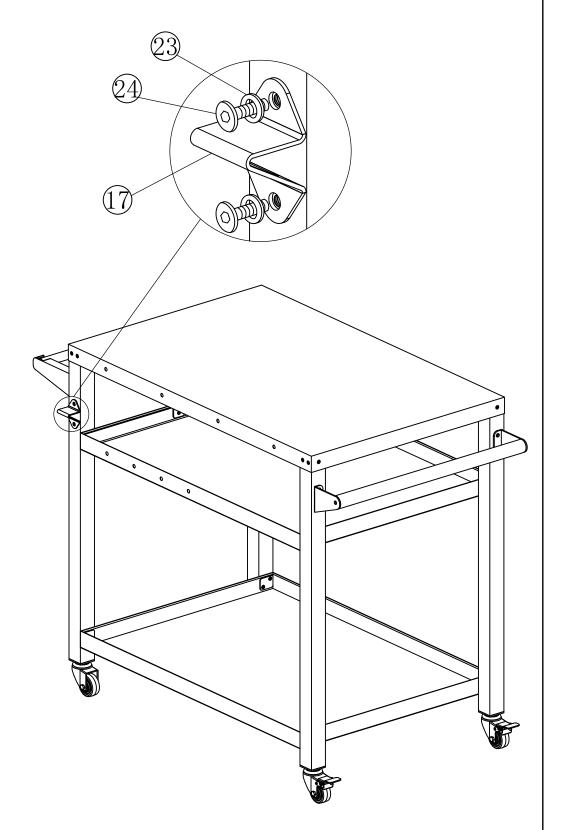

 Pay attention to the installation direction of Part #17.









## **CARE & SAFETY**

#### **CARE:**

#### Painted surfaces:

Wash with mild detergent or non-abrasive cleaner and warm water.

#### Stainless steel surfaces:

Wash with mild detergent and warm soapy water or use a stainless steel cleaner. Wipe dry with a soft cloth after each use. Wash only in the direction of the stainless brushed finish to avoid damage. Stainless steel can rust under certain conditions. This can be caused by acidic marinades, chlorine, saltwater, exposure to coastal climates, other natural elements, or improper cleaning tools such as wire or steel wool.

#### **SAFETY:**

- Not for permanent installation.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Wear safety goggles and always follow the manufacturer's instructions when using power tools.
- For outdoor use only.
- Use caution with all electric appliances, tools, extensioncords and lights on and around table.
- Surface can become hot in direct sun or high temperatures.
- Maximum top weight load of 66 LBS
- Use only on level surfaces.
- Do not allow children to climb the product.
- Do not stand on lid.

### **WARRANTY AND REPLACEMENT PARTS**

This warranty covers defects in parts and workmanship for a period of 1 year from the original purchase date.

IF THERE ARE MISSING OR BROKEN PARTS, PLEASE DO NOT RETURNTHE PRODUCT DIRETCLY. Please log onto our website, or contact Customer Service.

#### The following conditions are NOT covered by this warranty:

- Unevenness and color variations in the coated surfaces.
- Damage caused by improper assembly or disregard of the manual.
- Use of spare parts not supplied by manufacturer.
- Damage resulting from modifications or inappropriate use.
- Damage caused by improper maintenance or repairs by an unauthorized person.

#### **Limitations and exclusions:**

- 1. This warranty applies only to the original purchaser and may not be transferred.
- 2. If you can not verify the purchase date of the prep cart the warranty period will begin on the date the prep cart was manufactured.
- 3. Replacement or repair parts are warranted for the remaining period of the original part warranty.

#### Your obligations:

This prep cart must be assembled, installed, operated and maintained in accordance with all applicable codes and the instruction manual furnished with this prep cart. You must keep an invoice, cancelled check or payment record to verify the purchase date of the prep cart.