

SPECIFICATION

Product Name	Massage Chair
Product Model	TOK-601
Rated Voltage	110 -220V~
Rated Frequency	50Hz
Rated Power	90W
Rated Working Time	15min
Security Level	Class I

INSTRUCTION MANUAL

Luxury Health Massage Chair



BE SURE TO READ THIS **INSTRUCTION MANUAL** CAREFULLY AND USE IT PROPERLY.
AFTER USE, KEEP THIS MANUAL WITHIN REACH AT ALL TIME FOR FUTURE USE.

IMPORTANT SAFETY INSTRUCTIONS

OPERATING SURROUNDINGS

- Do not use or store the massage chair under damp environment: i.e. bathroom, sauna, spa to avoid any moldy, electric shock, fire or mechanical failure.
- Don't use the massage chair outdoors.
- Don't use the massage chair under dusty, smearable and anoxic conditions.
- Don't place the massage chair near heater, stove or sunlight radiation to avoid inner components overheating to cause fire.
- Make sure to place the massage chair on a flat level ground.
- The bracket part should be placed on the plain ground.
- To avoid an electric shock, please make sure to connect an earth wire.
- Don't use the machine while smoking.



FOLLOWING CONDITIONS SHOULD CONSULT DOCTORS BEFORE USE

- Suffered from malignant tumor.
- Serious heart disease.
- Serious skin disease.
- Serious bone hyperplasia.
- In pregnancy or during the menses.
- Be on the rest cure under the doctor's supervision.
- The back bended exceptionally by the accident or disease.
- Needing peaceful surroundings.
- Arthritis disease.
- Implanted pacemaker for medical purpose.
- Suffered from bowels disease (i.e. gastritis, enteritis, diarrhea, hepatitis).
- Serious blood circulation trouble.
- Consciousness trouble.
- Be in hyper pyretic.



WARNING

Children under 18 ages or special persons(as psychopath, the mental defects, the paralysis) are not allowed to operate the massage chair, in case of electric shock, injuries or mechanism malfunctions.

IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following manners and should be strictly noted.

⊘ CAUTIONS

Non-professional technicians are not allowed to dismantle or repair to avoid fire, electrical shock or serious hurt.



Do not flush to the switch when cleaning to avoid insulation fault, electrical shock or short-circuit.



When storing or maintenance, be sure to disconnect the power plug from socket.



Do not detach the plug by wet hands.

Make sure to shut off and detach the power plug when cleaning or storing product.



During cleaning or moving the machine, make sure to detach power cord to avoid fire or electrical shock.

Do not place the machine onto an unstable surface to avoid roast, insulation failure, electrical shock or turnover.



When storing the machine, make sure to disconnect power plug to avoid fire caused by electricity leaking.

Clean power plug periodically to avoid fire due to dust.



Do not use it at any unsafe places or on other purposes.



It is the main reason of product damage or accident.

Do not store the machine onto an unstable surface.



Unexpected earthquake or external force will cause damage or injury.

Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.




The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.





IMPORTANT SAFETY INSTRUCTIONS

CAUTIONS

Do not modify the structure or change components by unauthorized person.
Do not dismantle the machine by unauthorized person to avoid electrical shock, short-circuit or fire. 

Do not store it near a fire or flammable substances.
It is one of the reasons of causing product torture, deviation or damage. 

Should any abnormality occur(i.e. scorching smell), stop using immediately and detach power plug from socket.
Keeping operating under an abnormal situation will cause fire or electrical shock, please contact your local seller or authorized service agent for maintenance. 

Do not place the machine onto an unstable surface to avoid roast, insulation failure, electrical shock or turnover. 

Only rated voltage must be used. 

Stop using immediately if supply cord or power plug be damaged or loosen. 

Be sure to keep children away during operating to avoid any hazard. 

















Do not explore it under sunshine at all time. 

If the supply cord is damaged,it must be replaced by the manufacturer or its authorized persons for repaire or maintenance to avoid any hazard. 

 
 
HAND CONTROLLER OPERATION INSTRUCTIONS



MASSAGE PROCEDURE INSTRUCTIONS

-  **Power Button: on/off/timing/long press to turn off.**
Power Button: the massage chair starting massage while connecting the power working time 15 minutes.
Timing: the massage chair can be set up the massage time from 5 minutes to 30 minutes.
Long press to turn off: long press this button to turn off the massage chair while black screen.
-  **The button of change model: manual/auto.**
*Default auto model while starting massage. It will be adjustable the below function buttons when press the model button.
-  **Kneading Button:**
under manual state. It can be selected turn on/off kneading massage while press this button.
-  **Kneading Button:**
Under manual state. It can be selected turn on/off kneading massage while press this button.
-  **Tuina Button:**
Under manual state. It can be selected turn/off the tuina massage of waist part.
-  **Tuina Model Button:**
Under manual state. It can be selected turn/off the tuina massage of waist part.
-  **Intensity Button:**
Under manual state. It can be selected adjustable the intensity while press up and down button.
-  **Back Button:**
Under manual state. It can be selected turned on/off 20pcs roller massage while press this button.
-  **Airbag Button:**
Under manual state. It can be selected turned on/off full body airbag massage under manual state.
-  **Buttocks Button:**
Under manual state. It can be selected turned on/off the buttocks airbag massage under manual state.
-  **Armrest Button:**
Under manual state. It can be selected turned on/off the armrest airbag massage under manual state.
-  **Calves Button:**
Under manual state. It can be selected turned on/off the calves airbag massage under manual state.
-  **Vibration Button:**
Under manual state. It can be selected turned on/off the vibration function under manual state.
-  **Airbag intensity Button:**
Under manual state. It can be selected turned on/off the airbag intensity under manual state.
-  **Back Adjustable Button:**
 Under manual state. It can be selected adjustable lift or down of massage chair while long press that button.

MATTERS NEEDING ATTENTION

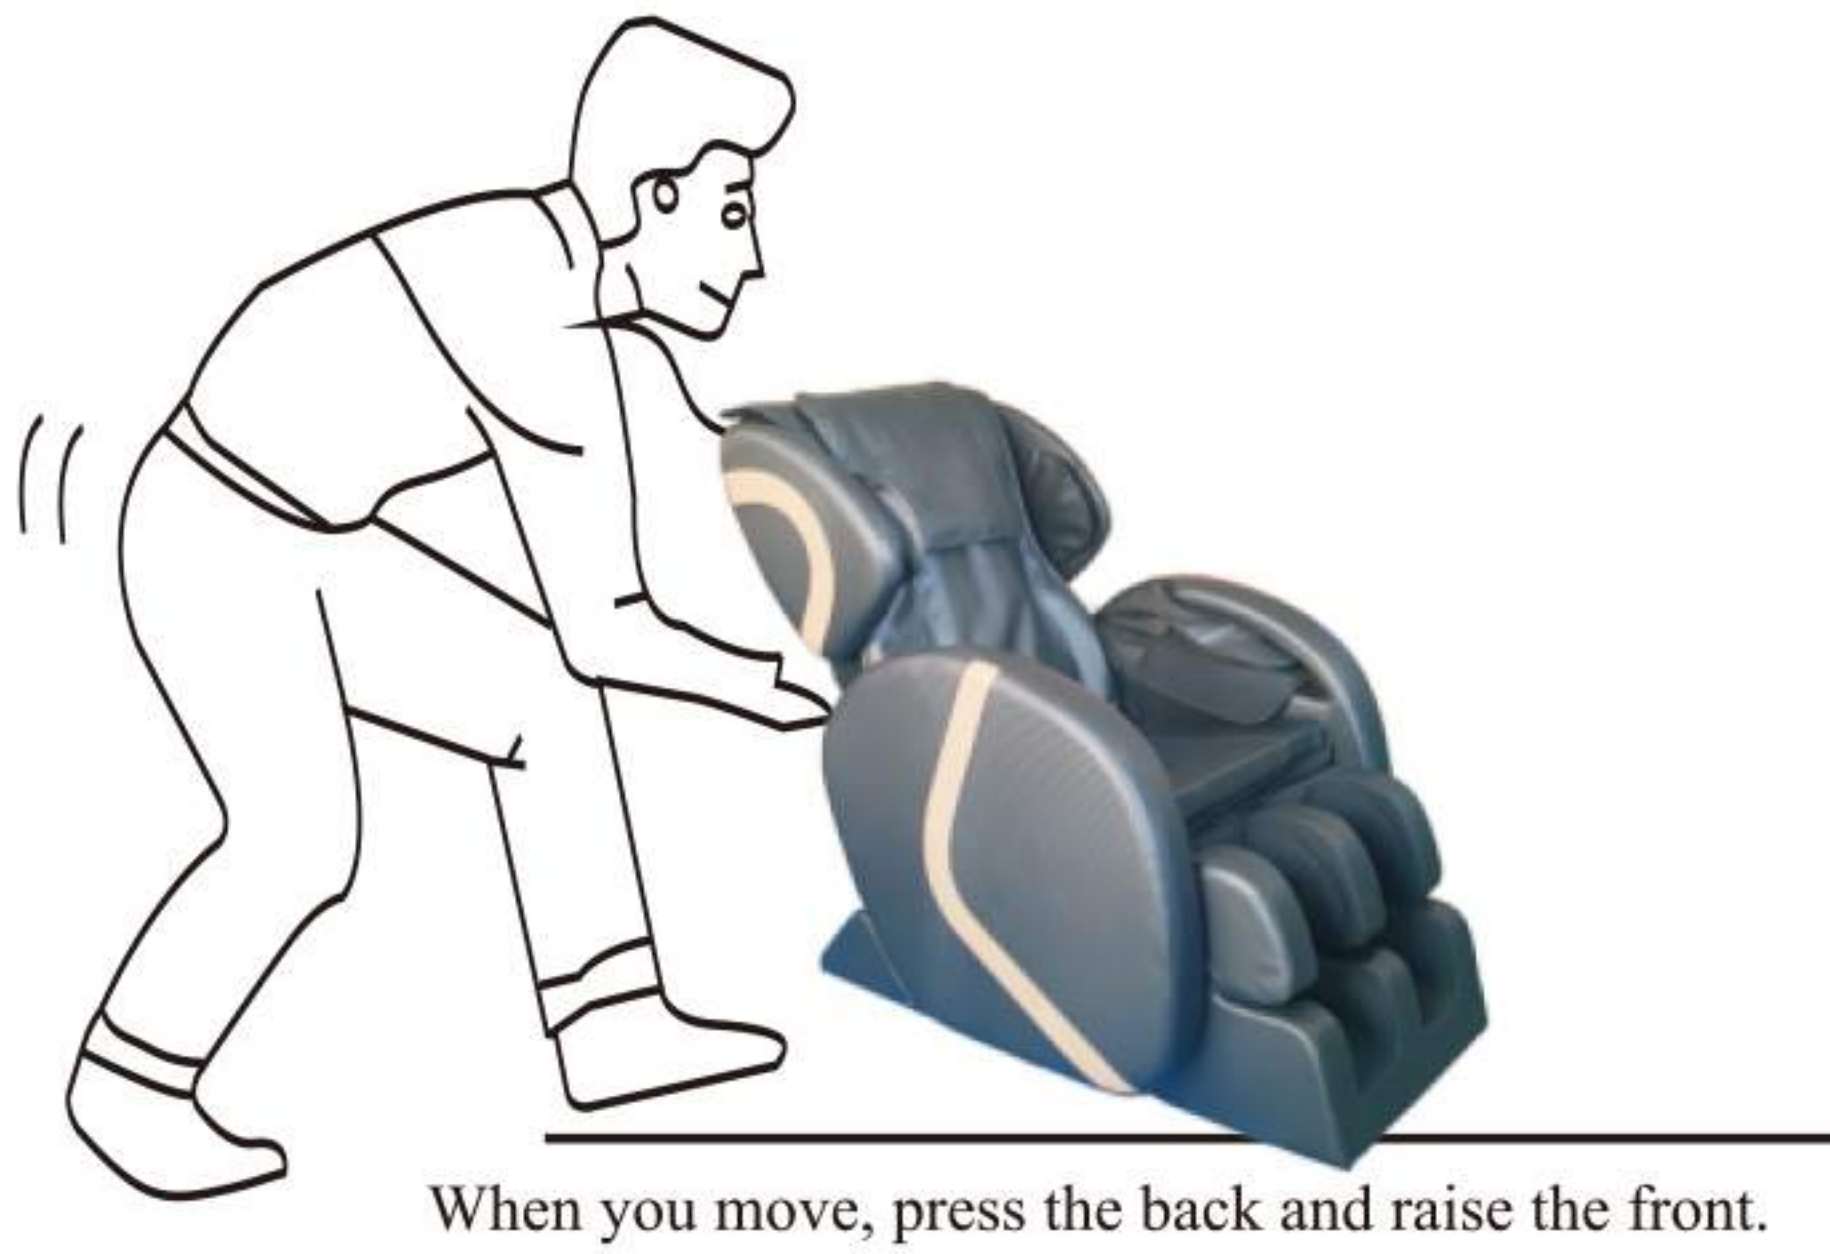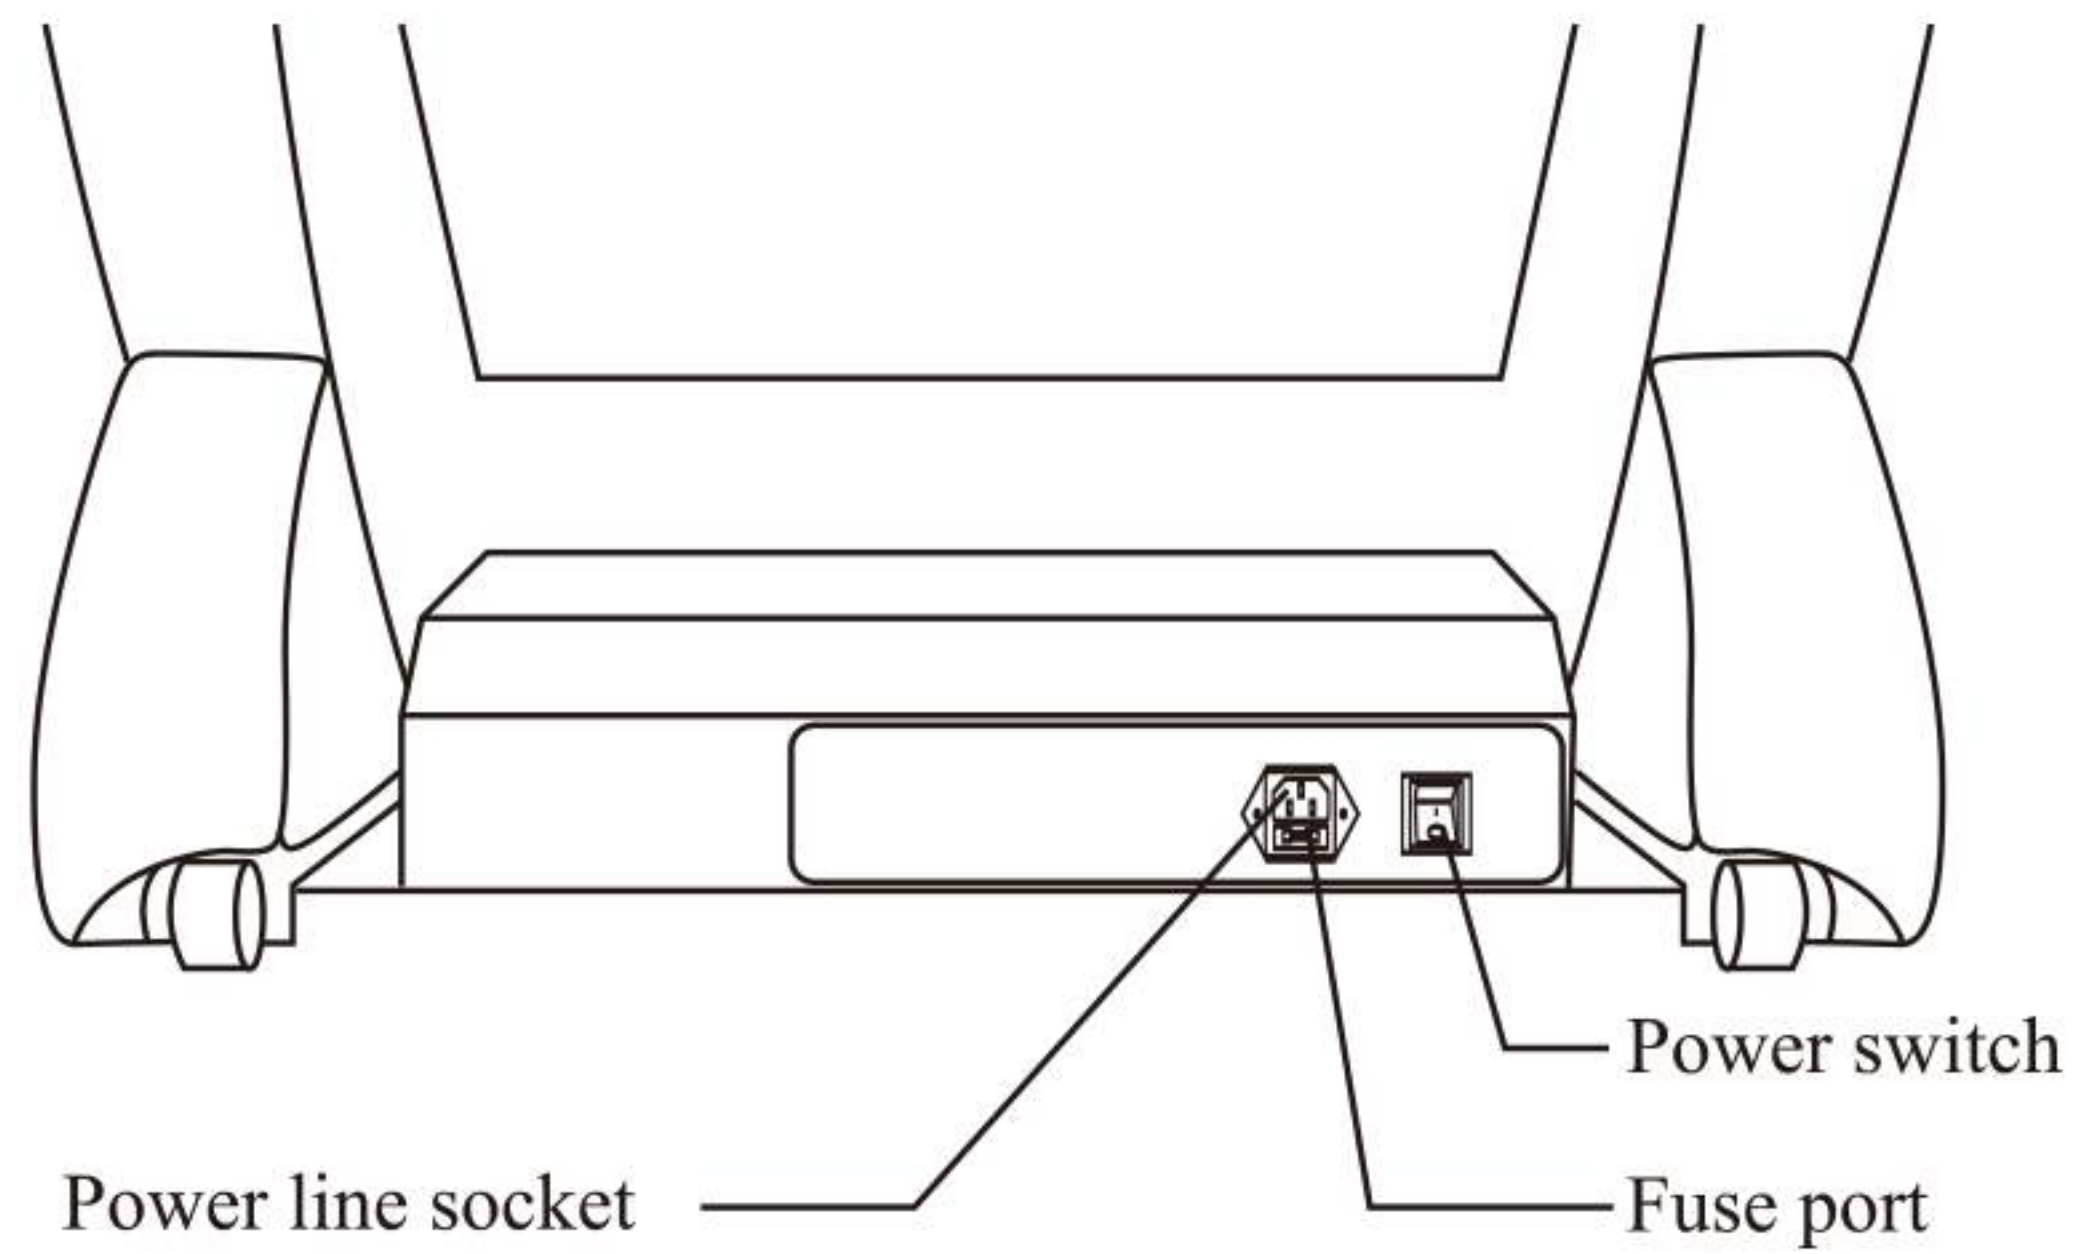

Attention

- ① Please check and confirm if the power cord has been pressed under the massage chair.
- ② Whether the ground line is connected well
- ③ Before inserting the plug, make sure that all the operation buttons, including the power switch, are turned off.

PRODUCT FUNCTION INTRODUCTION



 
INSTALLATION STEPS



Pull up against the back



The pin coincides with the HASP

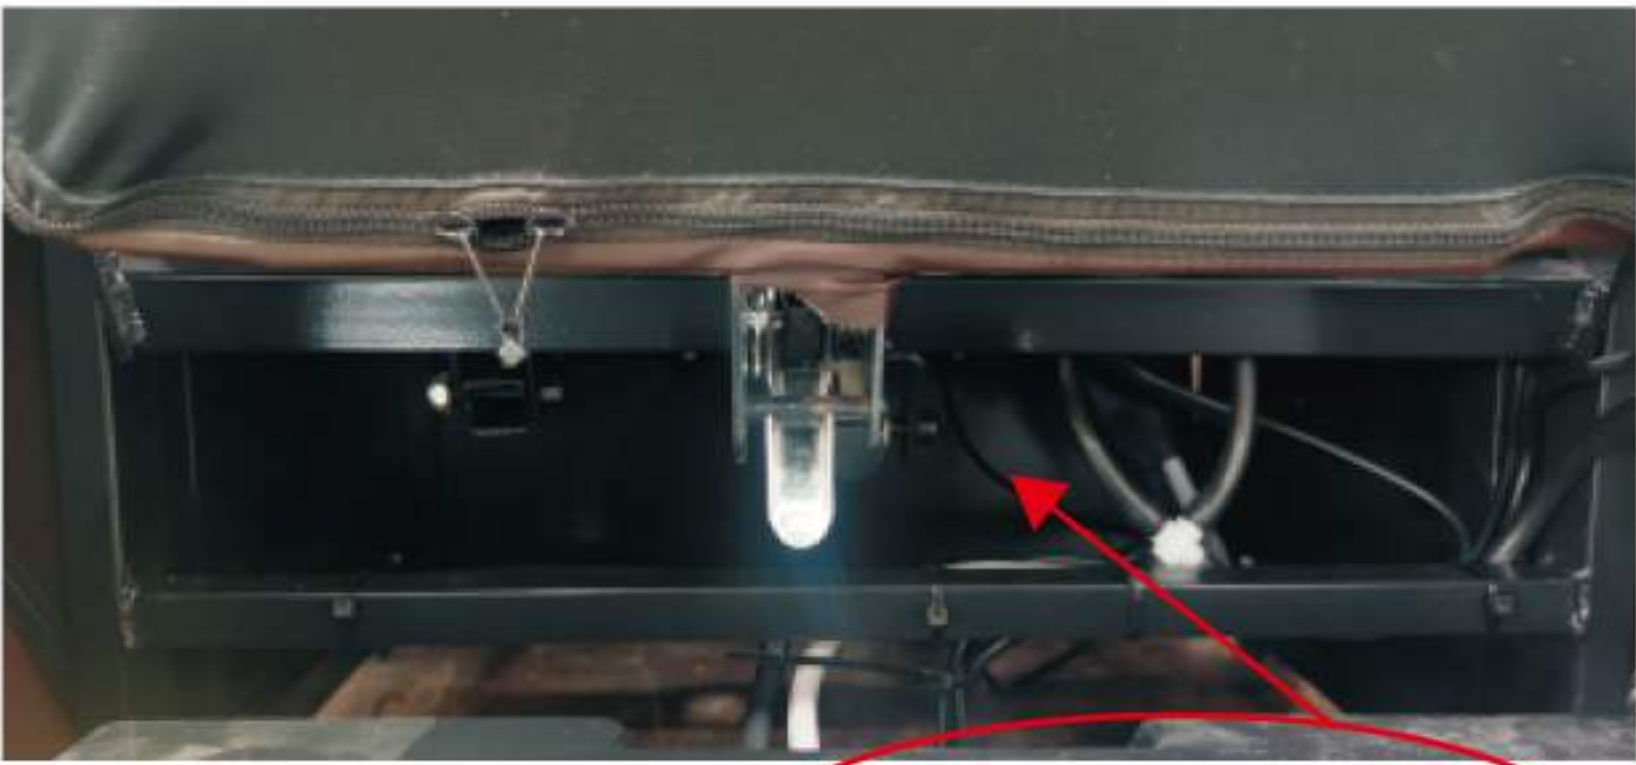


After the HASP and the pin overlap



The cushion vibration line is connected with the tail box vibration line

 Installation steps

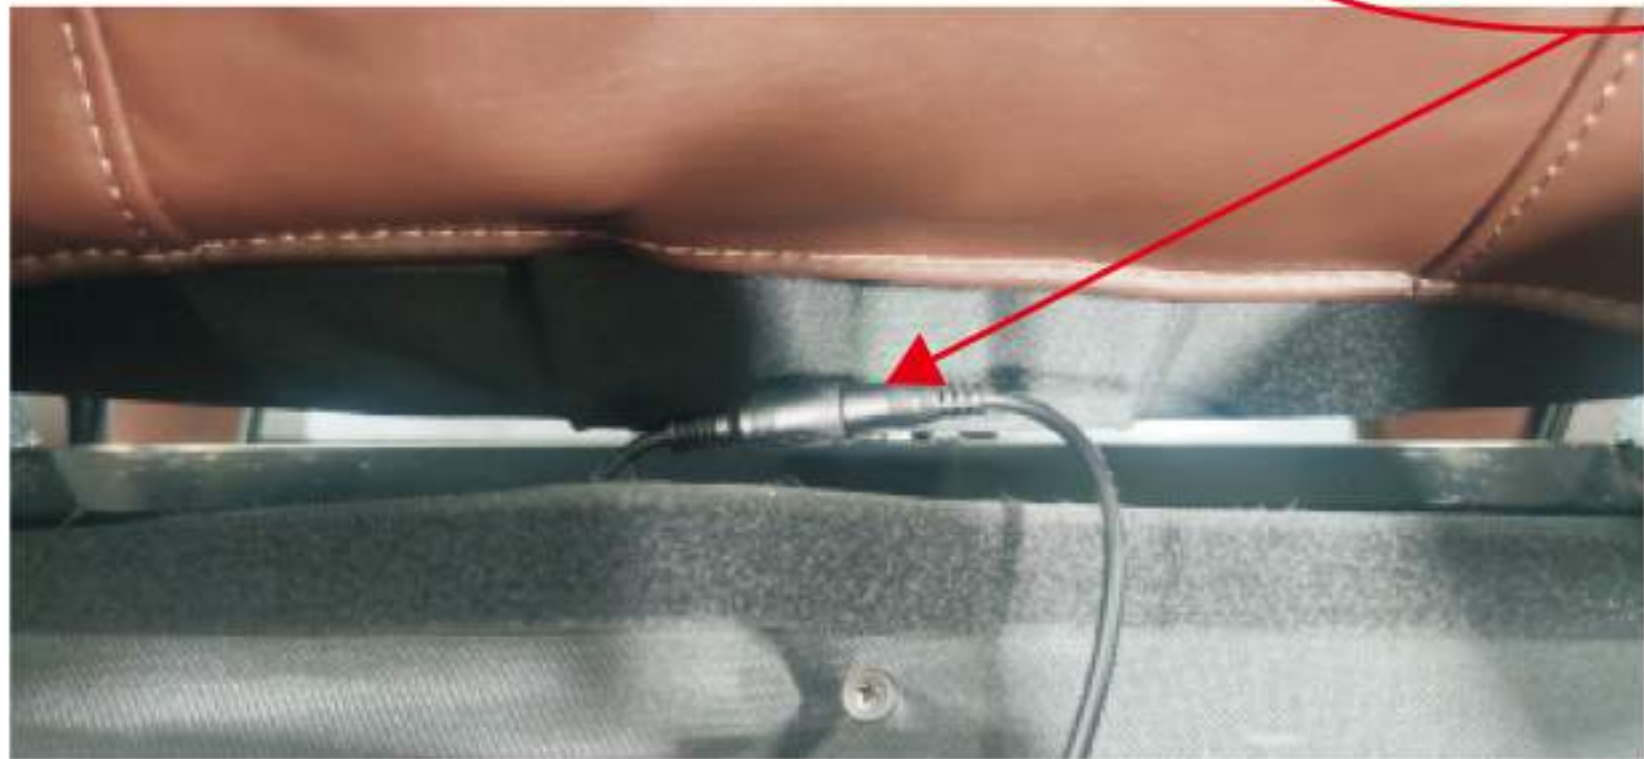

Clamp shoulder hanging iron and back hanging iron buckle


The clamp shoulder is connected with the straight through



The shoulder iron is inserted into the back iron so that it overlaps

SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When power cord damaged, it must be changed from special power cord or available from other manufacturer or service department.

 **Warning:** Do not dismantle, modify or change components by unauthorized person to avoid electric shock or fire.

DAILY CARE AND MAINTENANCE

Storage guide

- ⊙ Do not dismantle back of chair. The electrical shock may happen to touch inner elements of chair.
- ⊙ Do not dismantle the machine by unauthorized person to avoid electric shock or fire.
- ⊙ Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- ⊙ Keep the massage chair clean and free dust. Do not place the massage chair under damp environment.
- ⊙ If not in use for a long period, please cover it with a cloth to free dust.
- ⊙ Do not place the massage chair under sunlight.

Maintenance

- ⊙ Use neutral detergent only.
- ⊙ Use neutral detergent to clean back cushion, head cushion and leg cushion. Let it dry.
- ⊙ Use detergent and cloth to clean the plastic, pipe and leather material of massage chair.
- ⊙ Make sure not to use organic solvents as gasoline, amyl acetate, benzene for cleaning to avoid leather color fades, aging or broken.
- ⊙ Do not spray pesticide to avoid electric shock or fire.
- ⊙ Please clean with dry cloth to avoid mechanical failure.

Controller maintenance

- ⊙ Do not place the massage chair near heater or fire.
- ⊙ Keep away from damp to avoid electric shock.
- ⊙ Please clean dust with soft cloth or small banister brush.
- ⊙ Make sure not to use volatile detergent as benzene, gasoline, amyl acetate.

TROUBLE SHOOTING

Checking is necessary in frequent usage.

Make sure the machine work normally before usage.

Failure phenomenon	Possible cause	Processing method
Sound (running sound). The inflatable sound of the air bag. The bleed sound of the air bag. Switching sound of solenoid valve. Working sound of air pump.	When the product works, the sound of a mechanical operation.	The sound is normal. There is no need to deal with it.
The whole machine is completely out of work.	The power plug is not inserted into the socket. The socket switch is unopened. The massage button is not pressed.	Check the power plug and socket, ensure that the plug is in good contact with the socket, press the massage button.
The massage was stopped in the course of a sudden stop.	This product has just completed 15 minutes of rated working time and automatically switched to standby mode.	If you want to massage once again, please press the key to open, open massage function.
	Overheating protection of motor over rated use time.	Shut down, cut off the power supply to motor cooling after use.
The power indicator is not on.	Fuse damage.	Replace the spare fuse in the socket.