



ASSEMBLY INSTRUCTIONS

HFSN-693


Ax1

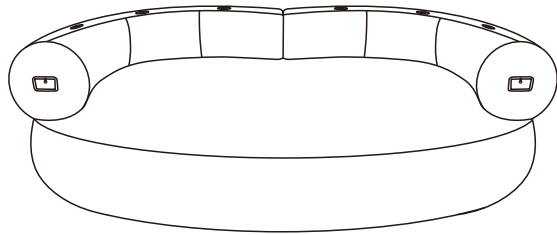

Bx1

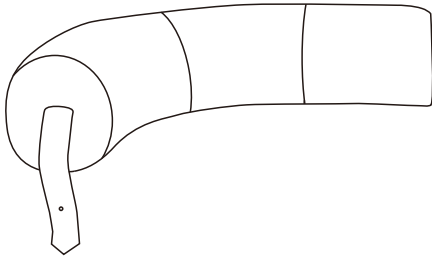

Cx1

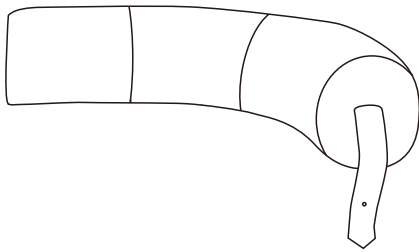


Dx4



Ex6



 
Fx12




Gx1



①

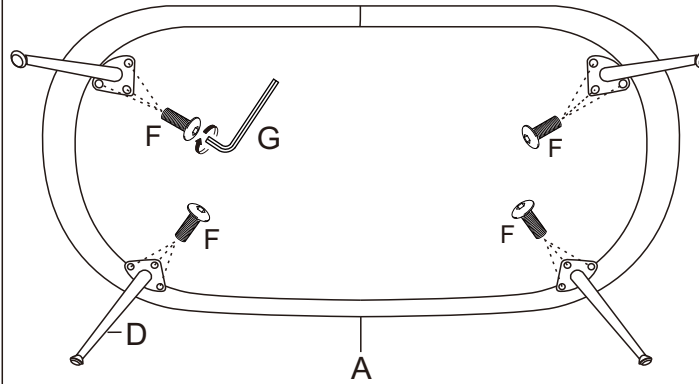

②

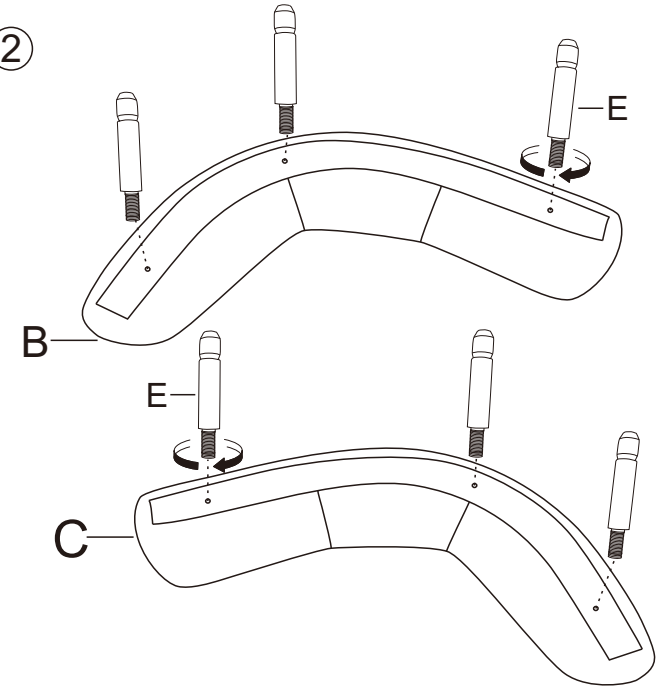

③

