
ASSEMBLY INSTRUCTIONS 24" BATHROOM VANITY

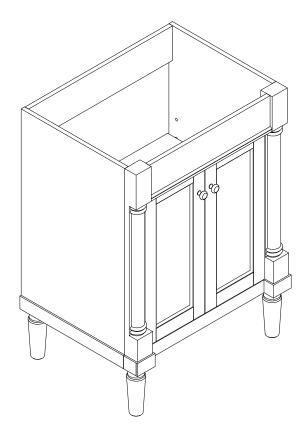

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
 make the assembly easier, and will help eliminate damage to the product or injury to persons during
 assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

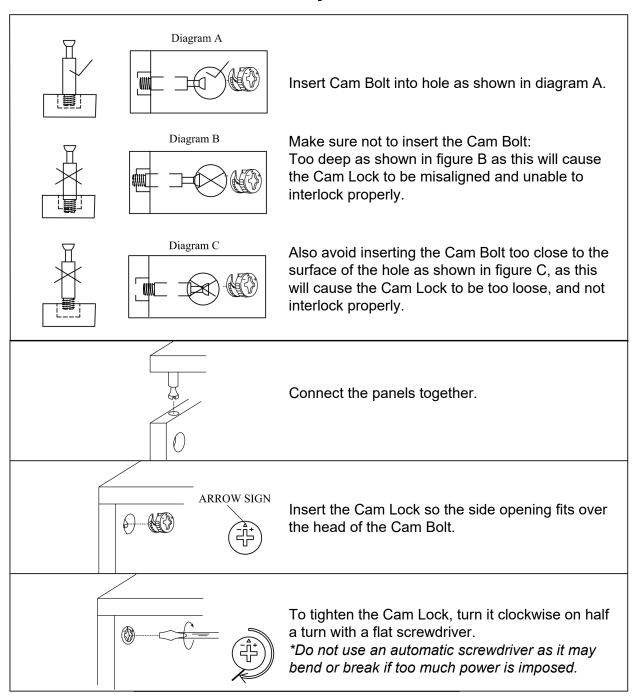


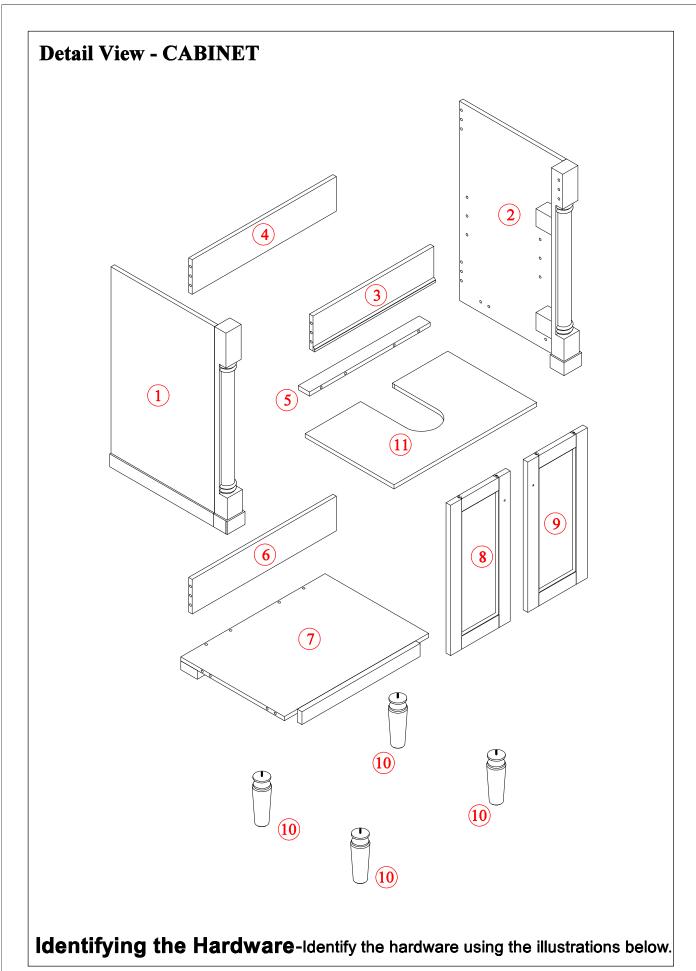



Part List - WF305072 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Front Panel Top - 1pc Rear Panel Top - 1pc 5 6 Crossbar - 1pc Rear Panel Bottom - 1pc 7 8 Bottom Panel - 1pc Left Door - 1pc 10 9 Foot - 4pcs Right Door - 1pc 11 Adjustable Shelf - 1pc


Hardware List - WF305072


Α	B	C
ø6x35mm	ø14.5x12mm	
Three in one bolts(20pcs)	Three in one lock(20pcs)	Handle(2pcs)
D	E	F
{\bar{\bar{\bar{\bar{\bar{\bar{\bar	218.1 E	(†)20000000>
		ø7xø3.5x15mm
ø5/32"x20mm		
Handle screw(2pcs)	Damping hinge (4pcs)	Flat head screw(24pcs)
G	H	I
	ø8x30mm	
Laminate pad(4pcs)	Wood dowel(14pcs)	Anti fall hardware(1set)

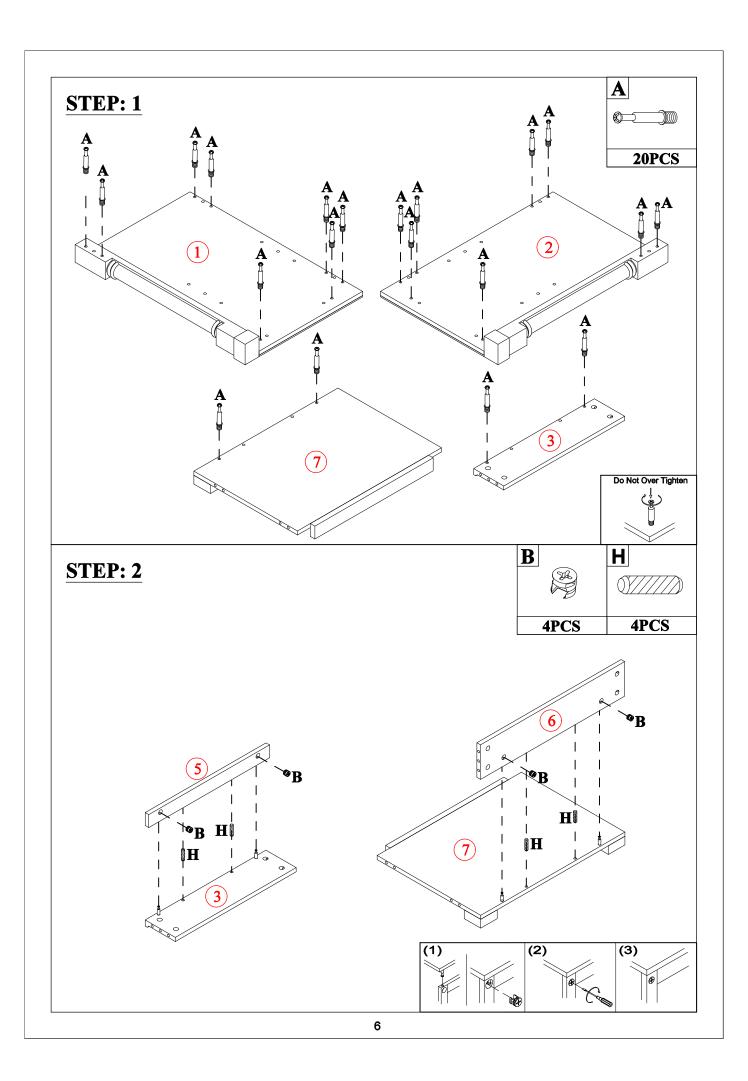

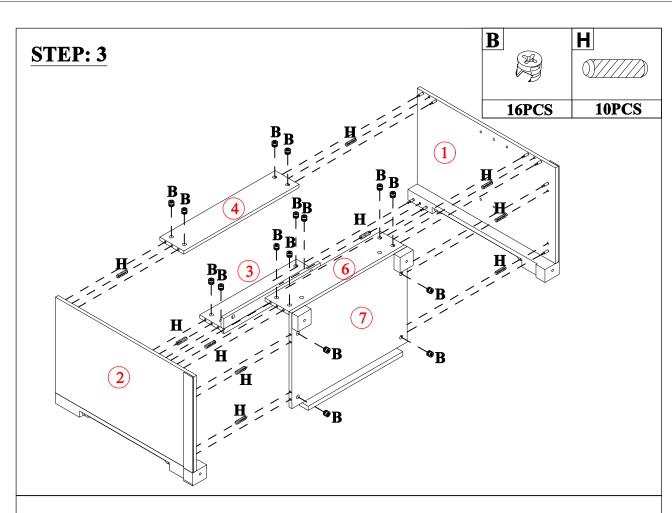

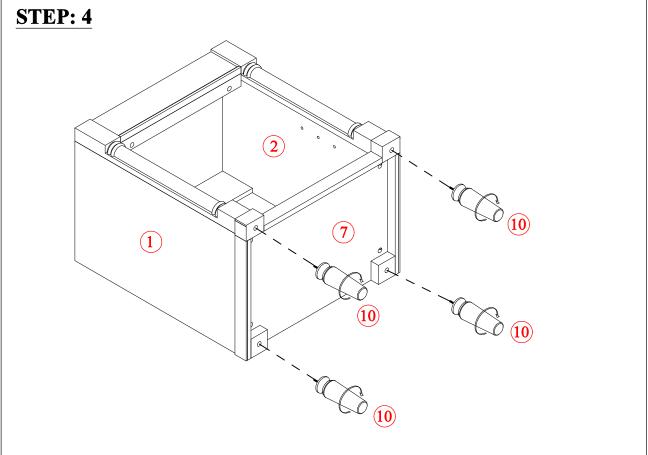


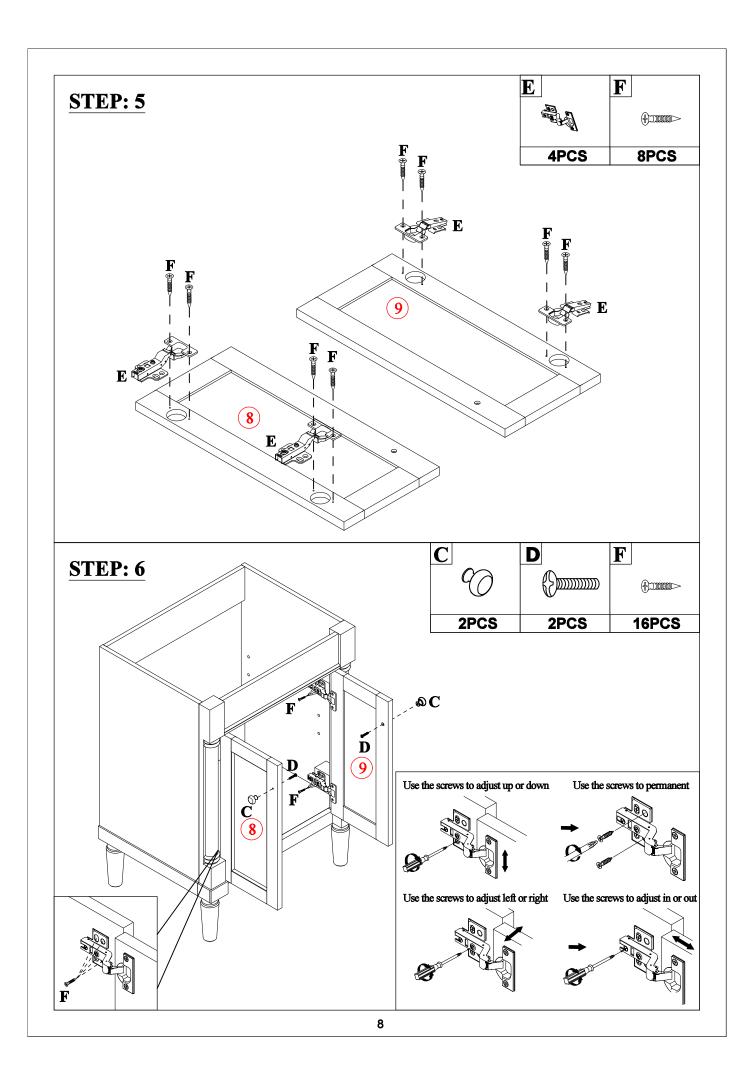

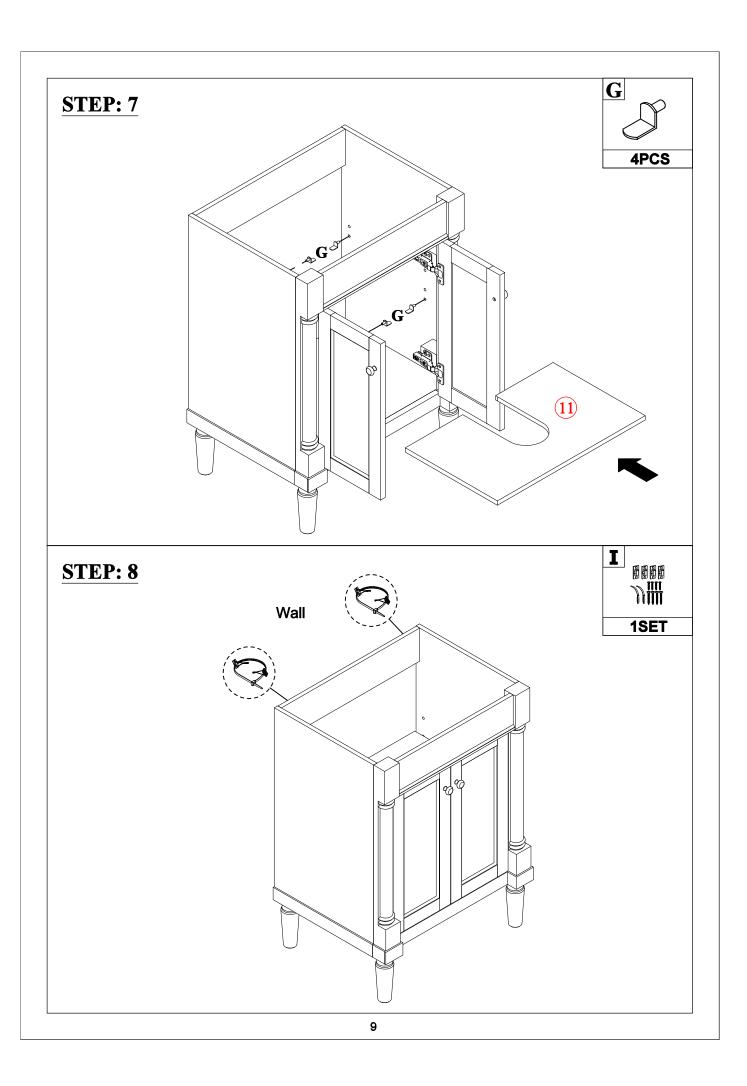

STEP: 9

Install the sink(if applicable) on the cabinet with glue. Let it stand for 24 hours.

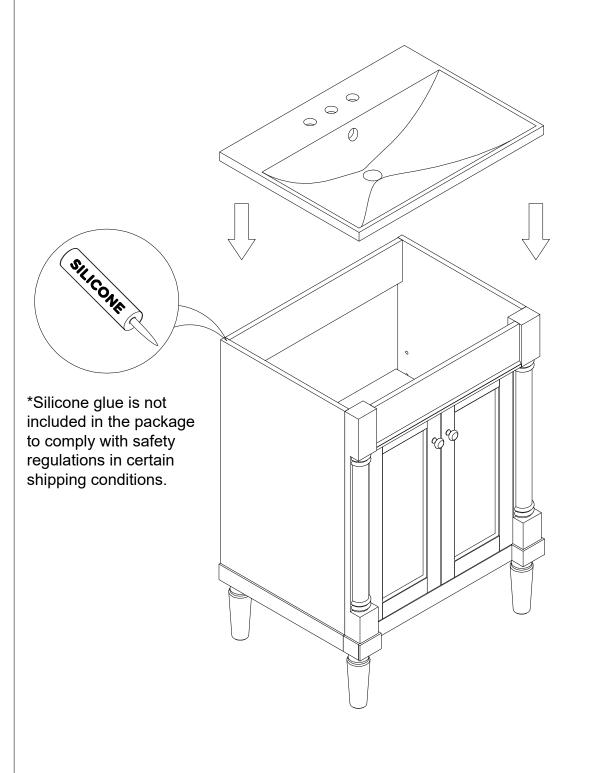


STEP: 10






HINGE ADJUSTMENTS

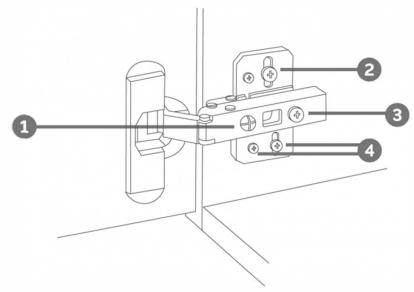

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

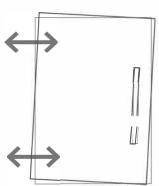

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

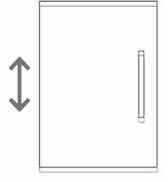

Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

