
#### **ASSEMBLY INSTRUCTIONS**

#### 24" BATHROOM VANITY

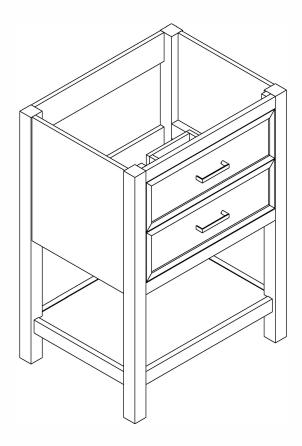

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



- \* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! \* Please assemble on a clean soft
- \* Please assemble on a clean soft surface to avoid damage.













**IMPORTANT:** 

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

# PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


# **Before Installation**


#### Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
  make the assembly easier, and will help eliminate damage to the product or injury to persons during
  assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


#### **Cam Lock Assembly Instructions**

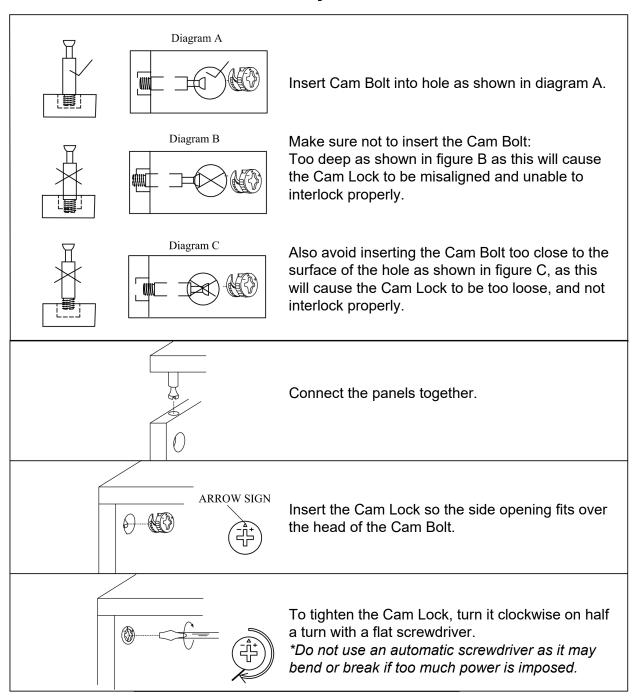

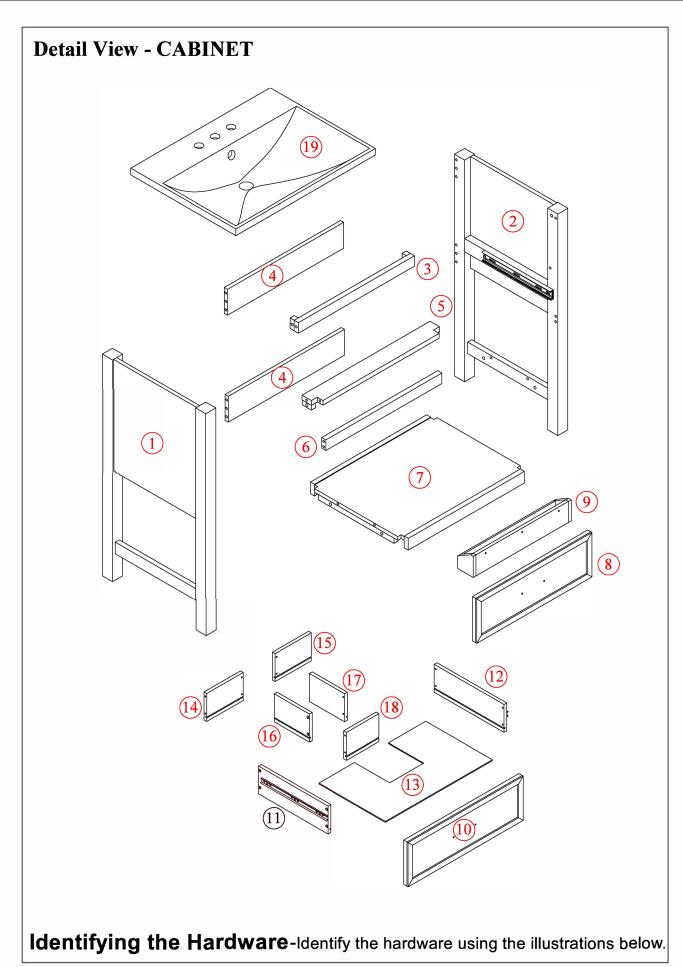


# Part List - WF305069 1 2 Side Panel (R) - 1pc Side Panel (L) - 1pc 3 4 Rear Panel - 2pcs Front Bar Top - 1pc 5 6 Front Bar Mid - 1pc Front Bar Bottom - 1pc 7 8 Bottom Panel - 1pc Flip Drawer Face - 1pc 10 9 Flip Drawer - 1pc Drawer Face - 1pc 11 12 Drawer Side(R) - 1pc Drawer side(L) - 1pc 13 14 Drawer Bottom - 1pc Drawer Rear(L) - 1pc

#### Part List - WF305069

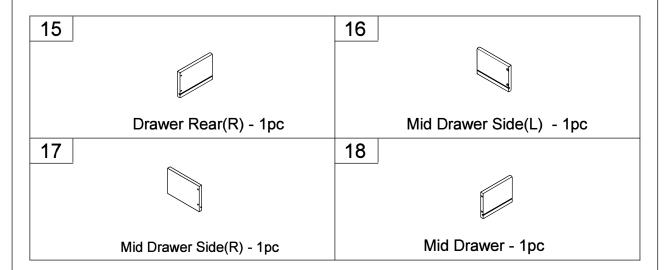



# Part List - WF305070 (if applicable)

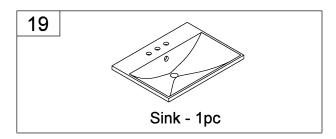



## Hardware List - WF305069


Α		В		С	
		4/411 40 4		ø6x35mm	
ø13x1/4"x28mm Hex-Head bolts(8pcs)		ø1/4"x16x1mm		Three in one bolts(10pcs)	
		Washer(8pcs)		F   F	
D		Е			
				<b>€]</b> mmm>	
ø14.5x12mm		ø8xø4x20mm		ø8xø4x32mm	
Three in one lock(10pcs)		Round head screw(3pcs)		Round head screw(16pcs)	
G		Н	_	I	_
		ø5/32"x15mm		ø5/32"x30mm	
Handle (2pcs)		Handle screw(2pcs)		Handle screw(2pcs)	
J		K		L	
		©mmmmo>		1801	
		ø6xø3x12mm			-
Duo Forte (1pc)		Flat head screw(4pcs)		Damping hinge (2pcs)	
M		N		0	
( <del>†</del> )20000000>		0/////			
ø7xø3.5x15mm		ø8x30mm		4mm	
Flat head screw(12pcs)		Wood dowel(16pcs)		Allen key(1pc)	
Р					
Ant	i fall hardware(1set)				

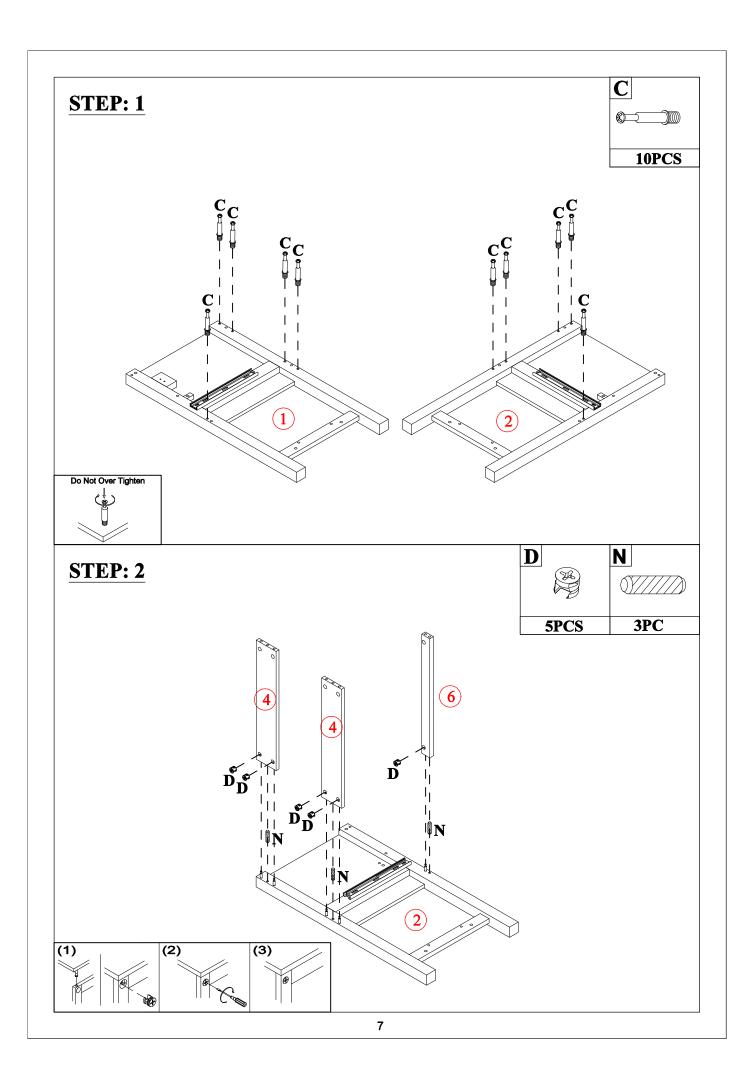


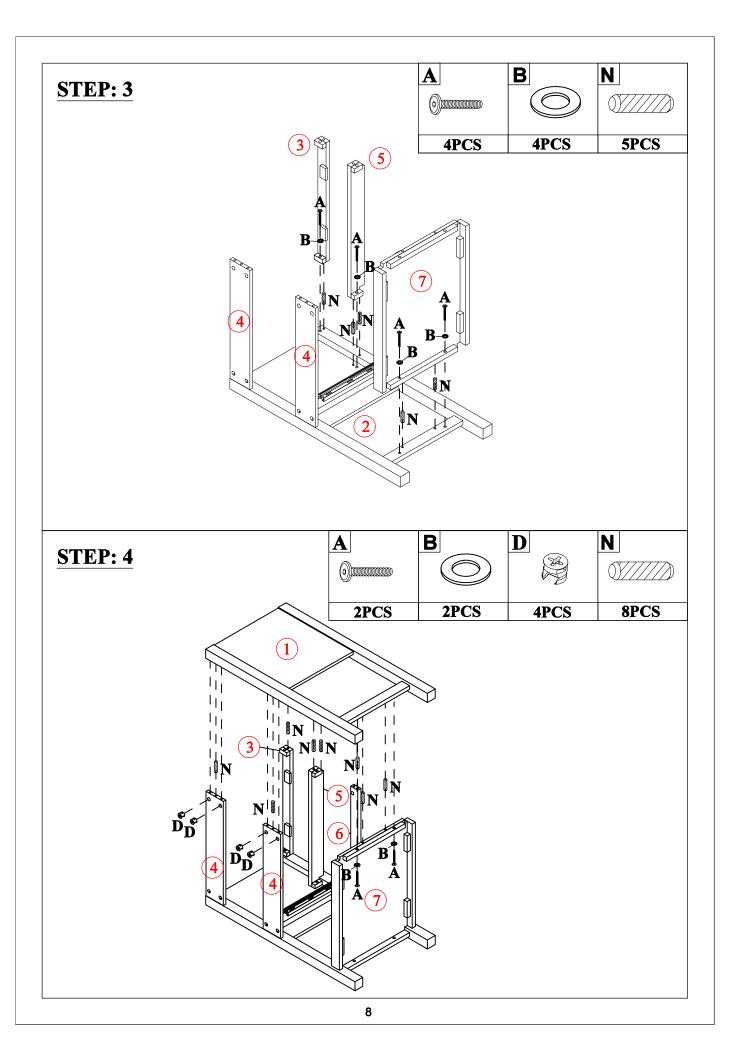

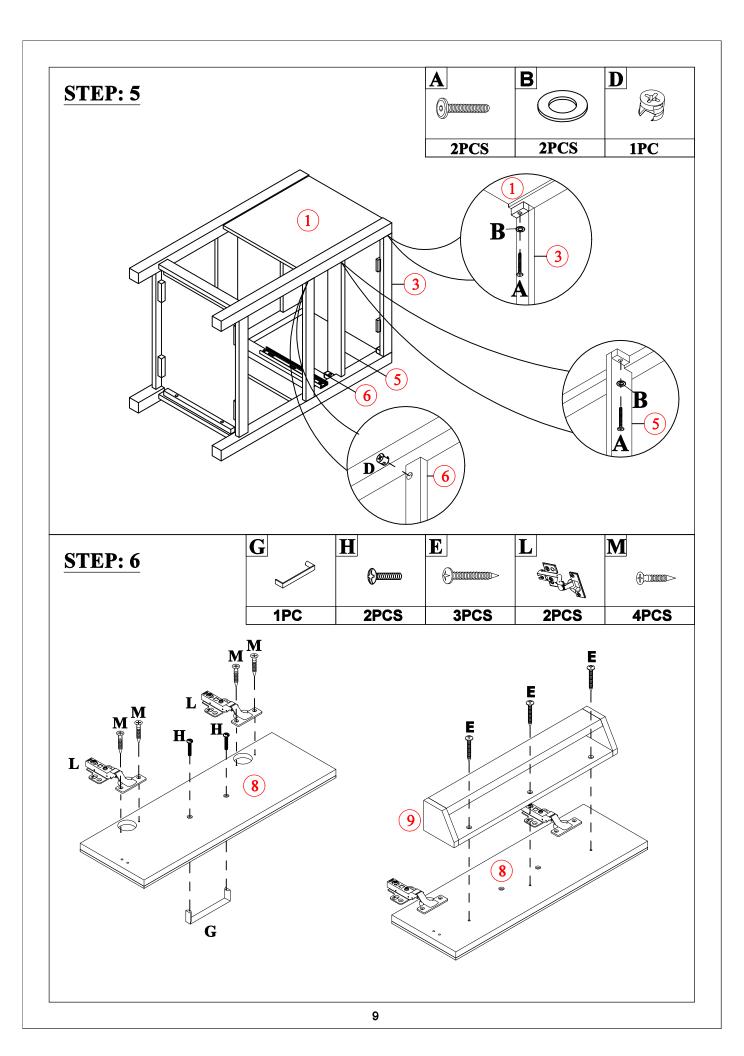


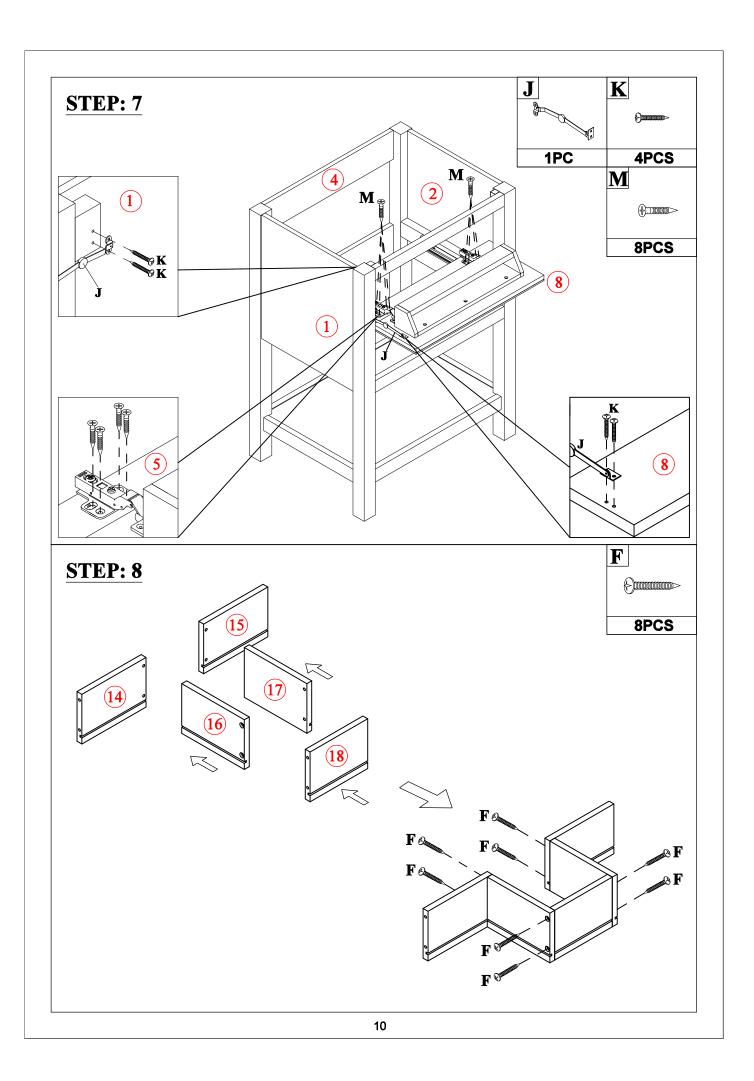

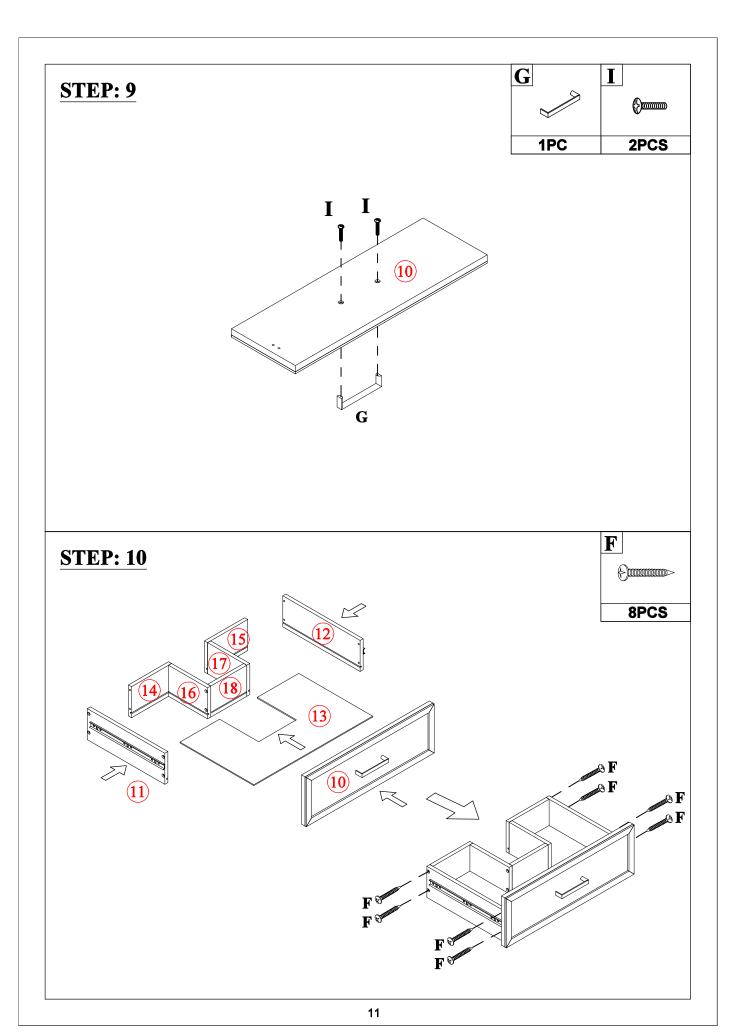

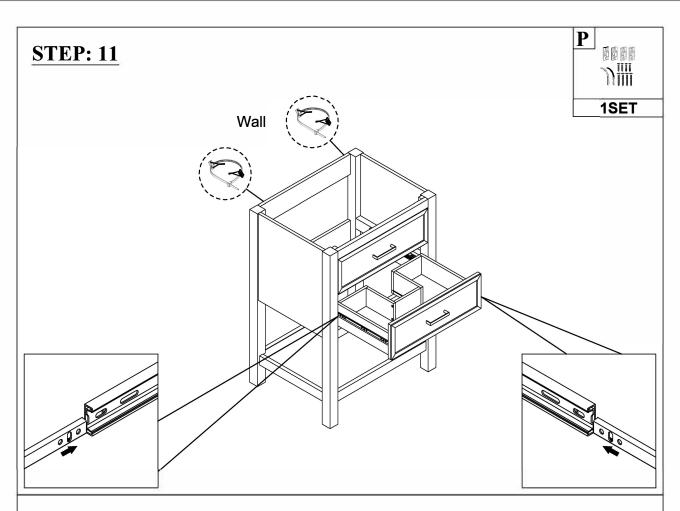

#### **STEP: 12**

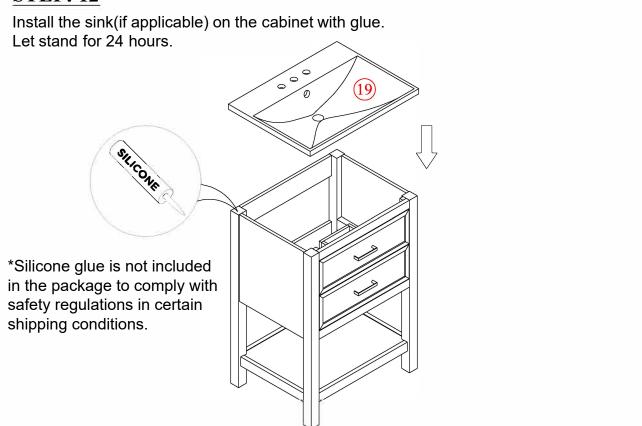


### **STEP: 13**






## HINGE ADJUSTMENTS

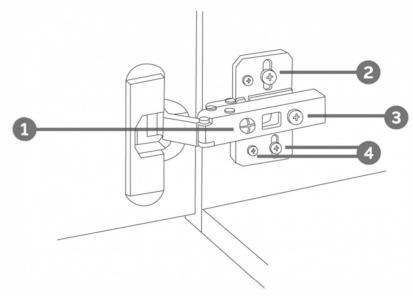

### 1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

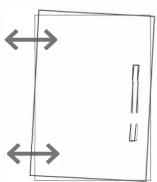

### 2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

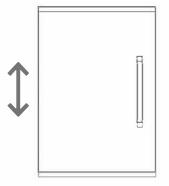

### 3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

**clockwise** to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

