
ASSEMBLY INSTRUCTIONS

36" BATHROOM VANITY

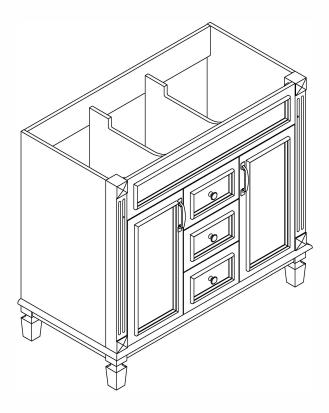

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present. "DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



- Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! Please assemble on a clean soft
- surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
 make the assembly easier, and will help eliminate damage to the product or injury to persons during
 assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

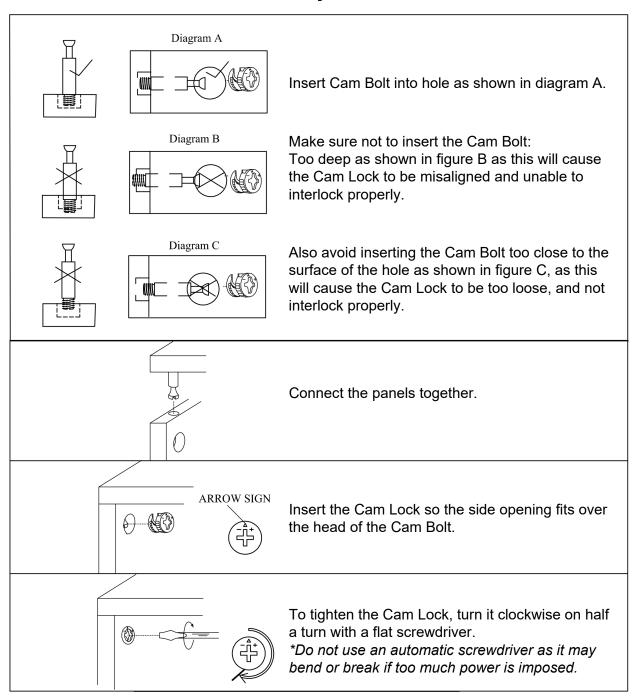

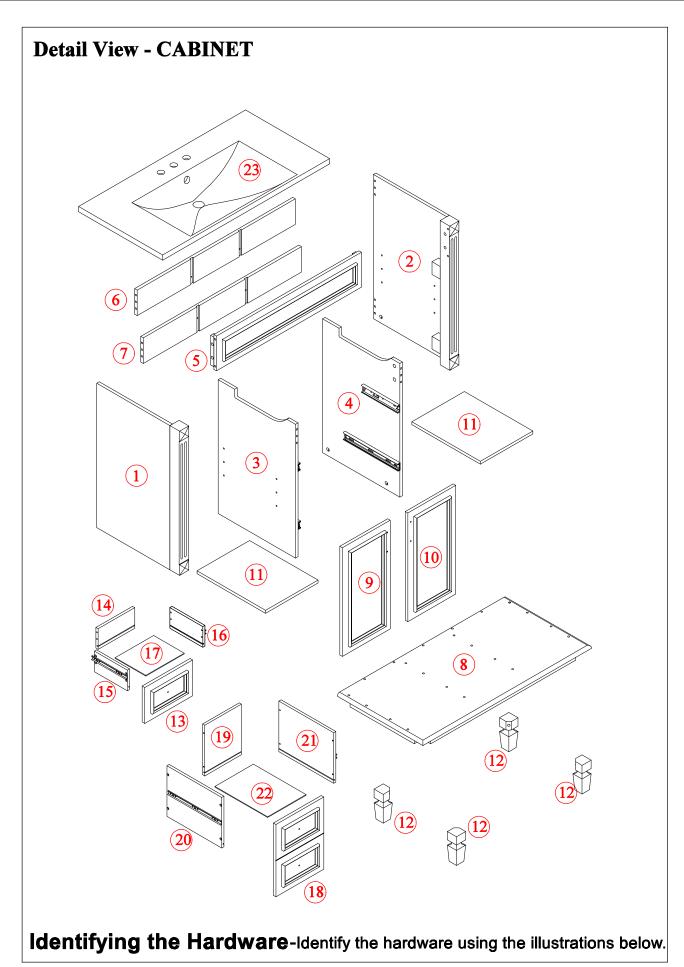


Part List - WF305078 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Mid Panel (R) - 1pc Mid Panel (L) - 1pc 5 6 Front Panel - 1pc Rear Panel Top - 1pc 8 7 Rear Panel Bottom - 1pc Frame Bottom - 1pc 10 9 Right Door - 1pc Left Door - 1pc 11 12 Foot - 4pcs Adjustable Shelf - 2pcs 13 14 Drawer Rear Top - 1pc Drawer Front Top - 1pc

Part List - WF305078

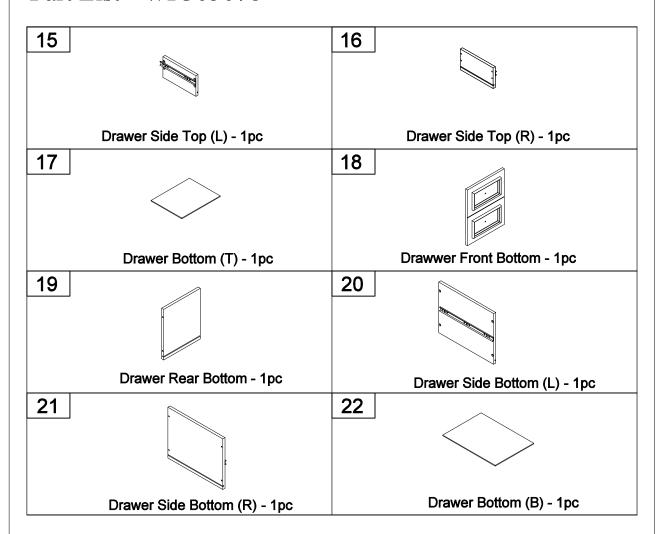



$Part\ List\ \textbf{-}\ WF305079\ (\text{if applicable})$

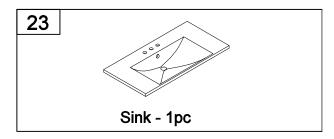



Hardware List - WF305078


Α		В		С	
	<u></u>		<u></u>		
ø13x1/4"x28mm		ø13x1/4"x40mm		ø1/4"x16x1mm	
Hex-Head bolts(4pcs)		Hex-Head bolts(4pcs)		Washer(8pcs)	
D		Ε		F	
				&]mmmm>	
ø6x35mm		ø14.5x12mm		ø8xø4x25mm	
Three in one bolts(23pcs)		Three in one lock(23pcs)		Round head screw(4pcs)	
G		Н		I	6)
ø8xø4x32mm					
Round head screw(16pcs)		Handle (3pcs)		Handle (2pcs)	
J		K		L	
				1801	
ø5/32"x15mm		ø5/32"x32mm			7
Handle screw(4pcs)		Handle screw(3pcs)		Damping hinge (4pcs)	
M		N		0	
				Q/////	
ø7xø3.5x15mm				ø8x30mm	
Flat head screw(24pcs)		Laminate pad(8pcs)		Wood dowel(20pcs)	
Р		Q			
4mm					
Allen key(1pc)		Anti fall hardware(1set)			

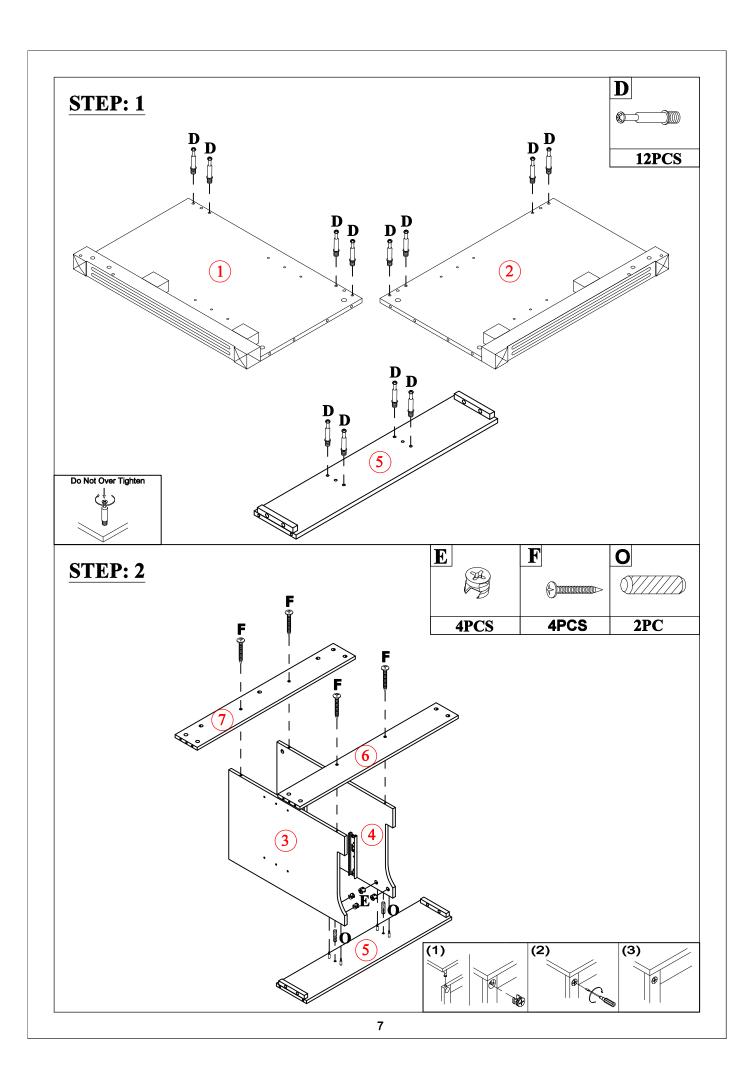


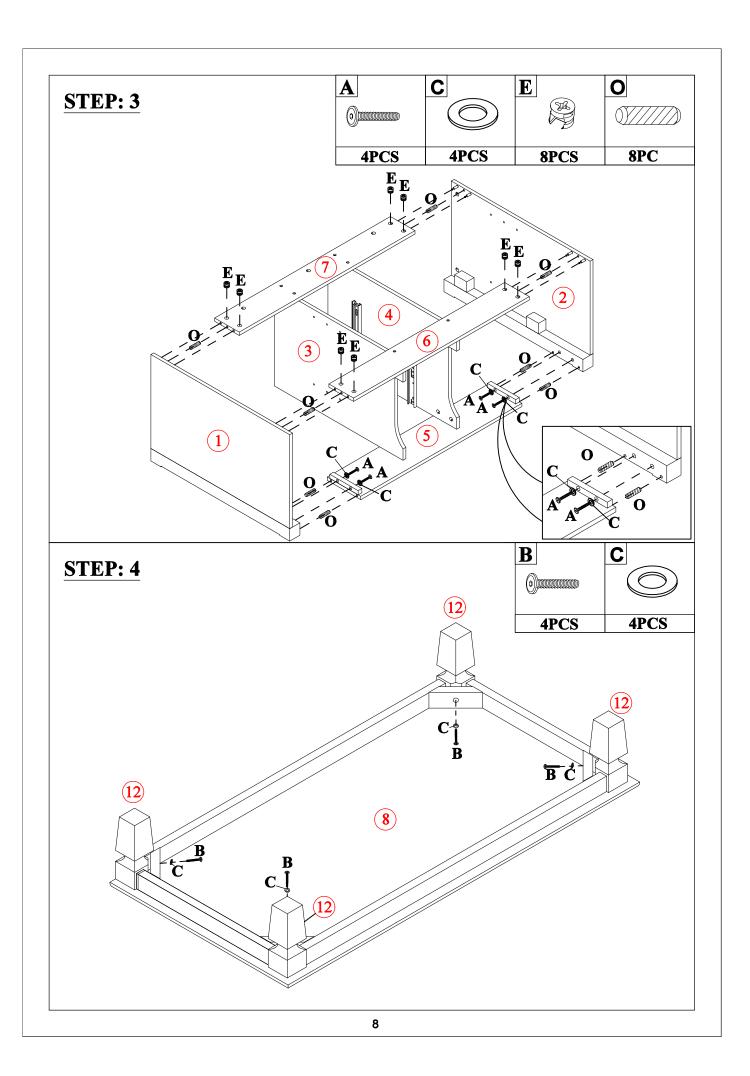


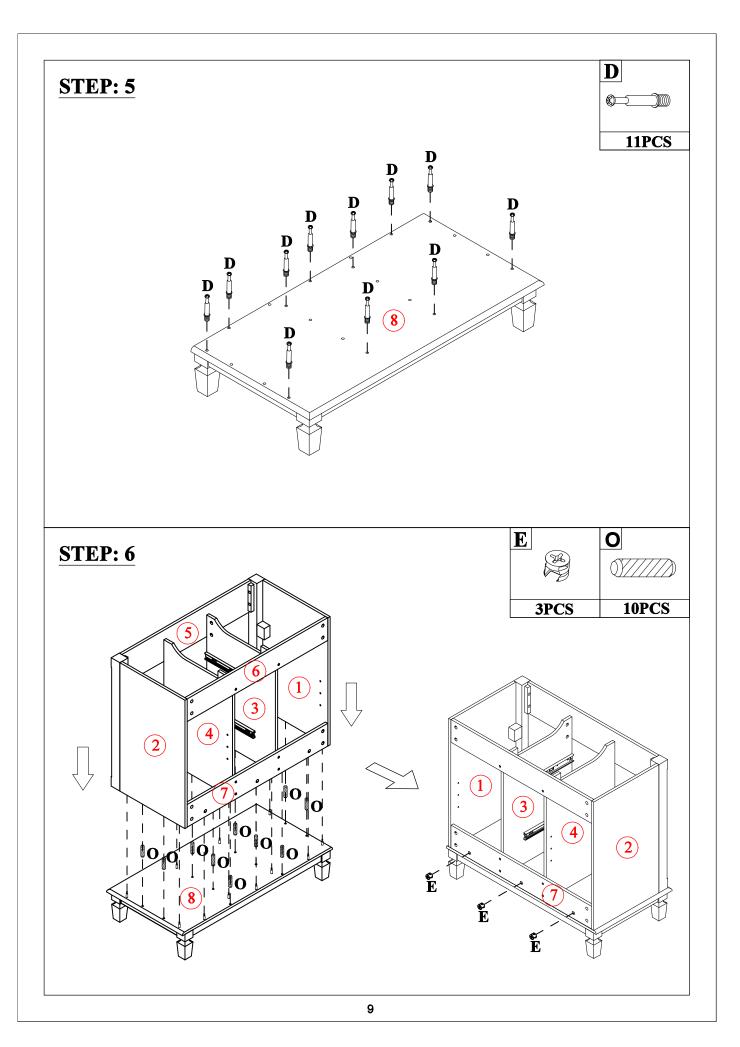

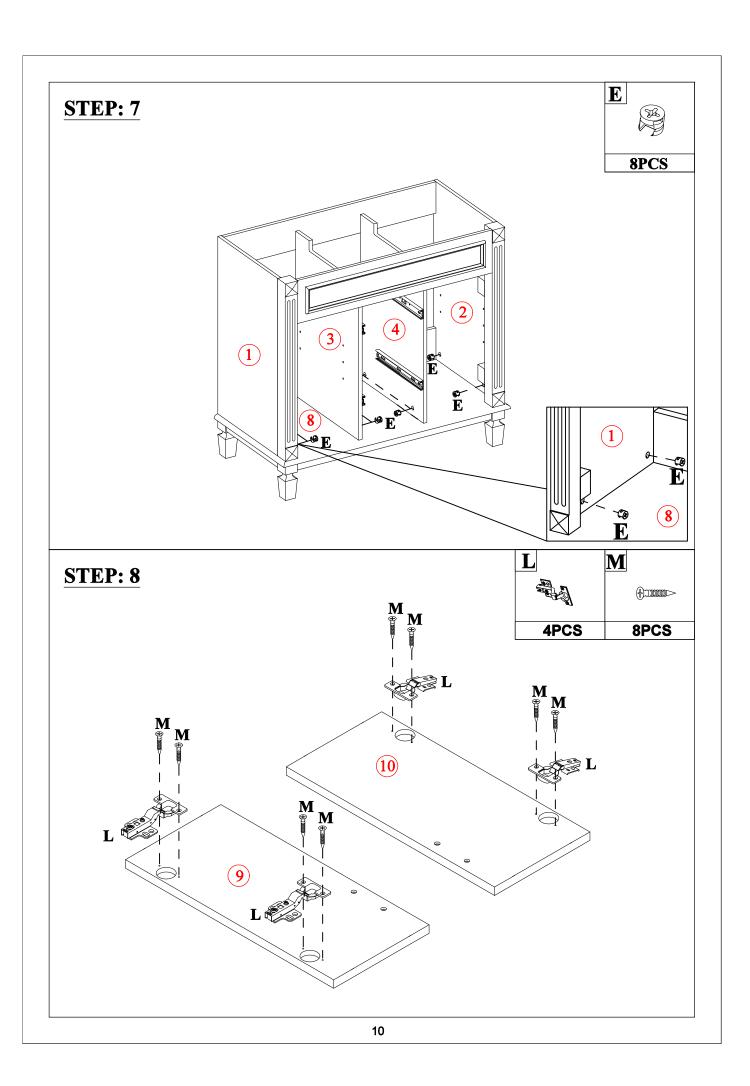

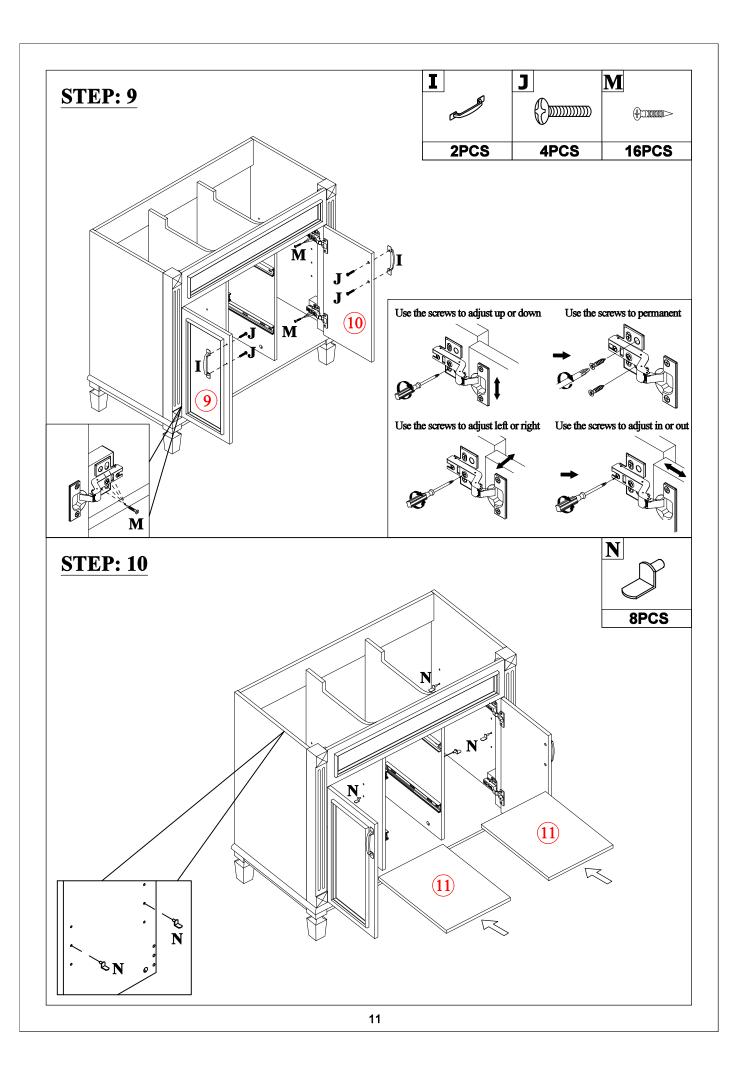


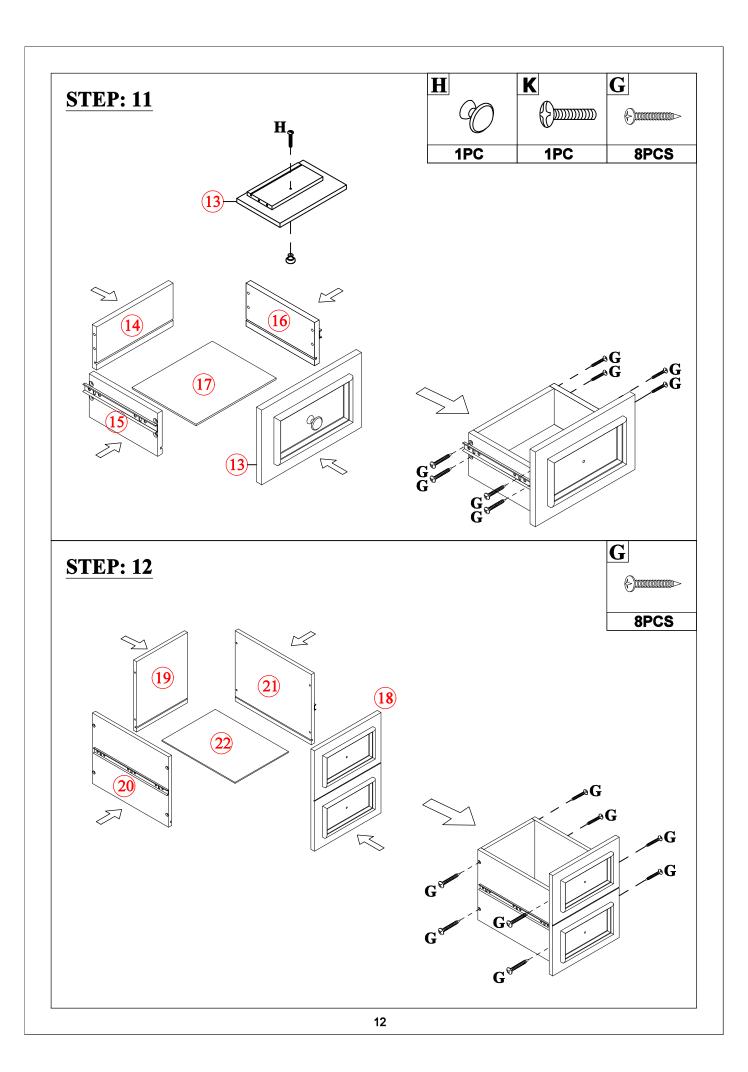

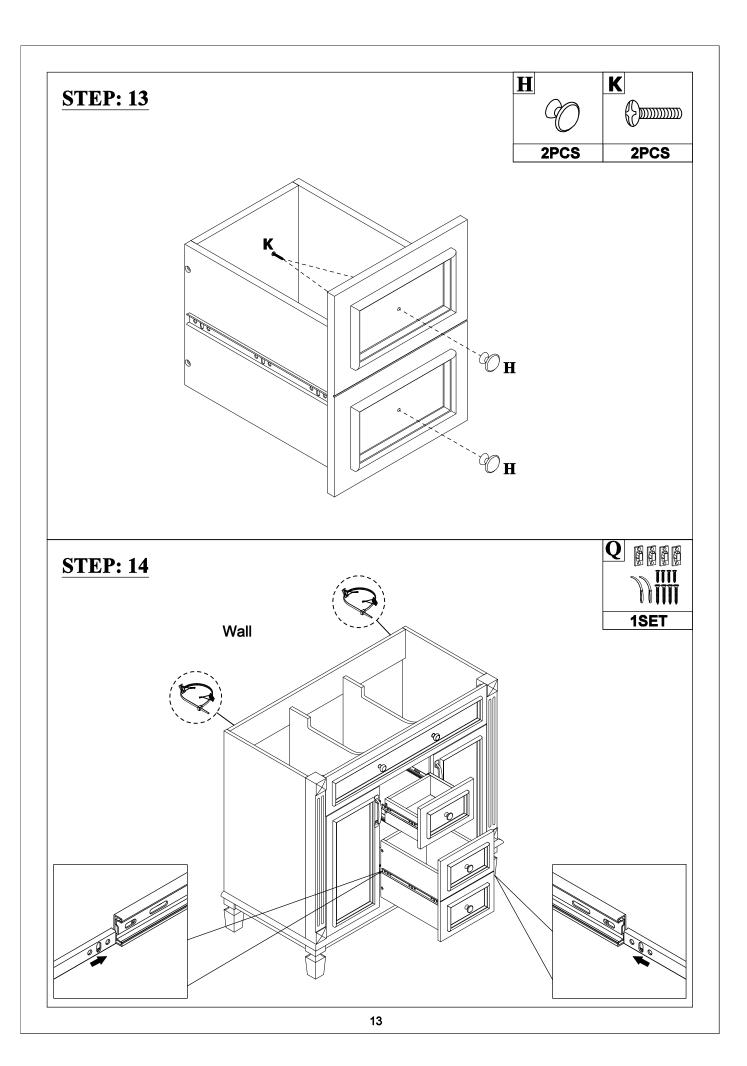


STEP: 15

Install the sink (if applicable) on the cabinet with glue. Let stand for 24 hours.

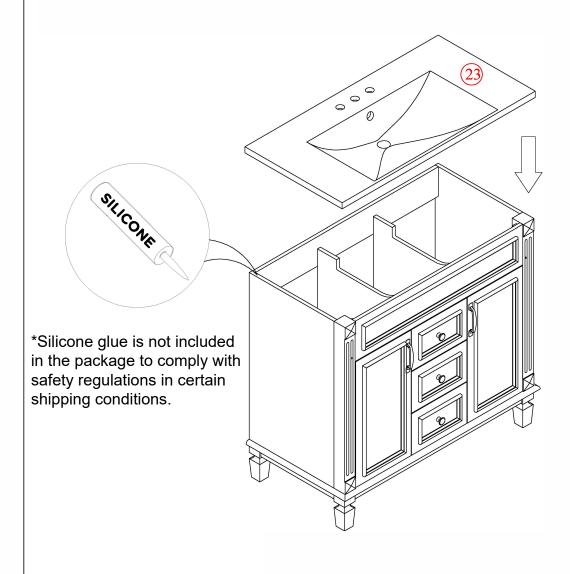


STEP: 17

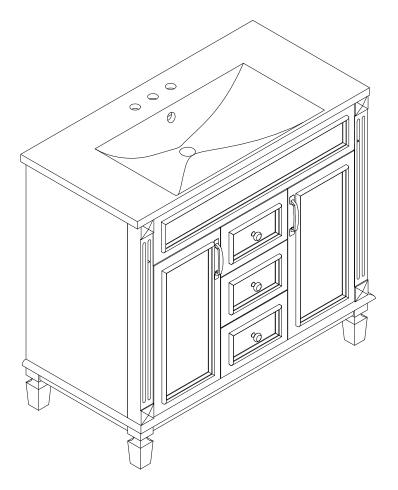




HINGE ADJUSTMENTS

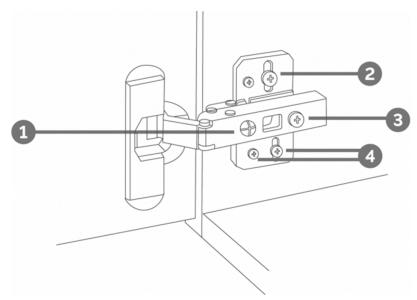

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

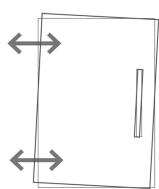

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up
anticlockwise to move the door down

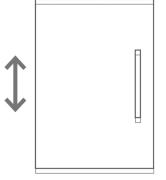

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

