

# Slide with Climber Playset

## USER MANUAL



READ AND SAVE THIS INSTRUCTION FOR FUTURE USE

## SAFETY & WARNINGS

### ADULT ASSEMBLY REQUIRED.

- Keep these instructions for future reference.
- This product is intended for indoor, outdoor, family, domestic use only.
- Place this product on level ground and at least 6.6' away from a fence, building, overhead branches, laundry lines or electrical wires. This product should be placed away from furniture that could cause injury if a fall occurs.
- Ensure the installation area is ventilated.
- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.
- Check that all parts are assembled well and are stable before use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- When temperatures fall below freezing (0°C/32°F), outdoor use of this product is not recommended. In extreme cold, plastic materials lose resilience and may become brittle and crack with impact. Store product in a warmer, protected place.
- Keep away from fire or any source of ignition.
- Packing materials are not toys, keep them away from children.
- Instruct children on proper use of this product: only after properly assembled and installed, and not in a manner other than intended.
- Dress children appropriately: do not allow children to wear loose-fitting clothing including ponchos, scarves and garments with drawstrings. Well-fitting shoes must be worn at all times.
- Avoid placing equipment in direct sunlight as hot surfaces could cause serious burns.
- Provide adult supervision at all times.


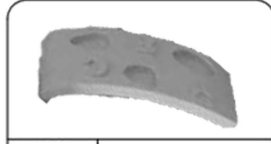 


 
 
 





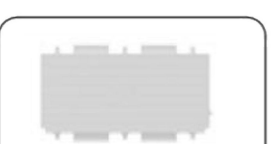 
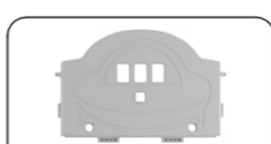 

**PLEASE DO NOT RETURN TO STORE**





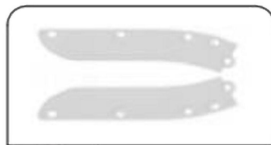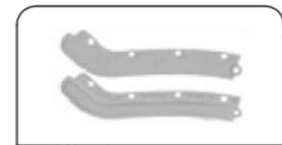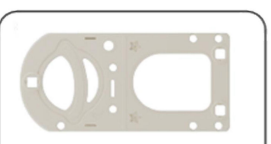













**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







# Part List

      		
① 1PC	② 1PC	③ 1PC
		
④ 1PC	⑤ 2PCS	⑥ 2PCS
		
⑦ 1PC	⑧ 1PC	⑨ 2PCS
		
⑩ 4PCS	⑪ 3PCS	⑫ 2PCS
		
⑬ 1PC	⑭ 2PCS	⑮ 1PC

# Part List





			
①⑥   1PC	①⑦   2PCS		
			
A   1PC	B   18PCS	C   58PCS	D   2PCS
			
E   2PCS	F   1PC	G   1PC	H   1PC
			
I   1PC	J   2PCS	K   4PCS	L   1PC
		※ F is a simple screw wrench	
M   1PC	X   1PC		

## ① ASSEMBLY

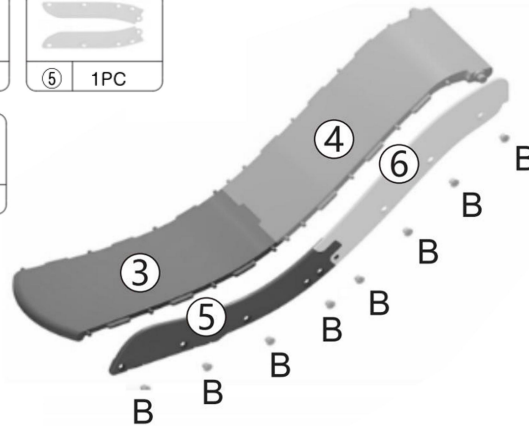

### STEP1

    - ①. Connect the Part ③ to Part ④.
- ②. Connect the Part ⑤ to Part ⑥.
- ③. Attach the Step ② assembled parts to the Step ① assembled parts, secure with 8 Screw B.

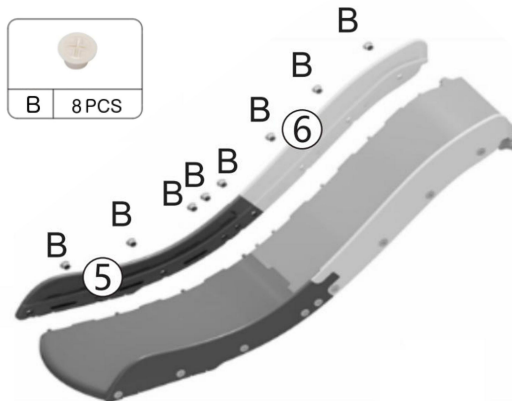

### STEP2

 
 
 
Connect the Part ⑤ to Part ⑥. Then attach the assembled parts to the STEP 1 assembled parts, secure with 8 Screw B

## ① ASSEMBLY



### STEP3

Secure with 2 Screw D to the handrail of the slide from inside. Then Secure with 2 Screw B from outside.


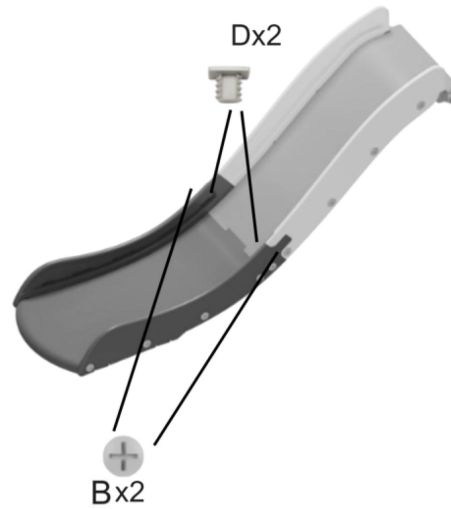


### STEP4

Connect the Part ⑦ to the STEP 3 assembled parts, secure with Screw E.




  
## ASSEMBLY

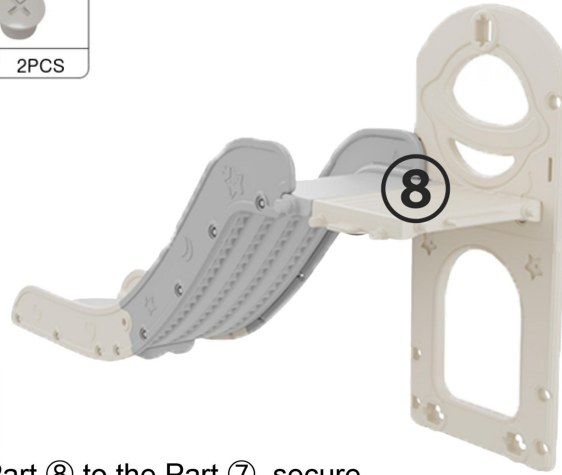

### STEP5

  
Connect the Part ⑧ to the Part ⑦, secure with 2 Screw C.

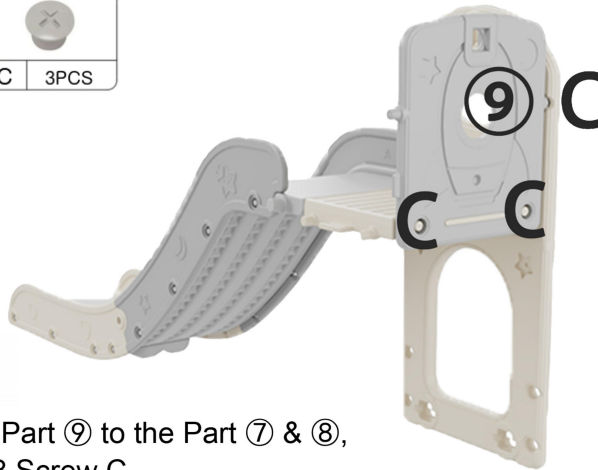

### STEP6



Connect the Part ⑨ to the Part ⑦ & ⑧, secure with 3 Screw C.
 
## ASSEMBLY

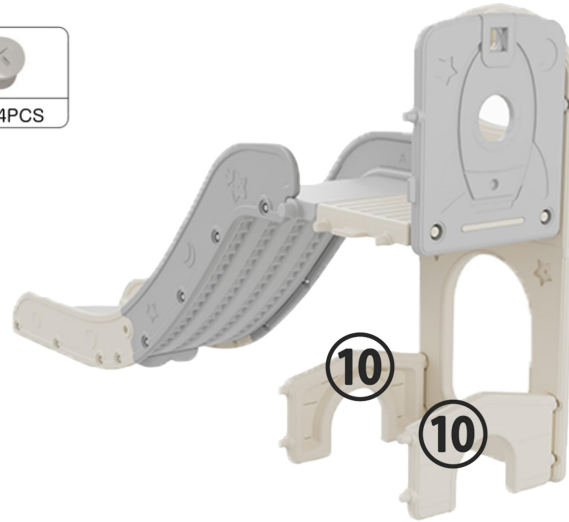

### STEP7

  Connect the 2 Part ⑩ to the Part ⑦, secure with 4 Screw C.

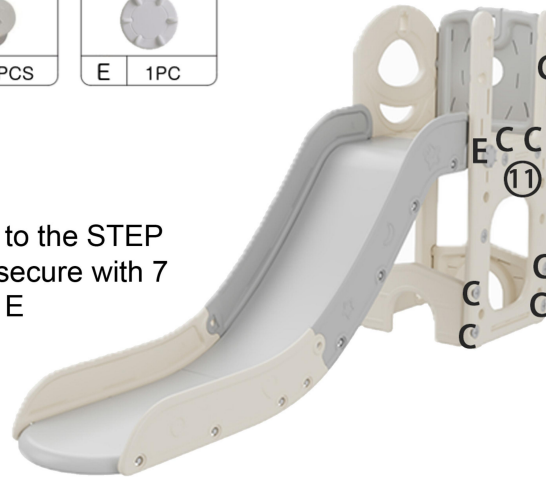



### STEP8

Connect the Part ⑪ to the STEP 7 assembled parts, secure with 7 Screw C and Screw E



  
## ASSEMBLY






Note: The 2 sides of Part 12 are different. The concave side always faces inward.

### STEP9

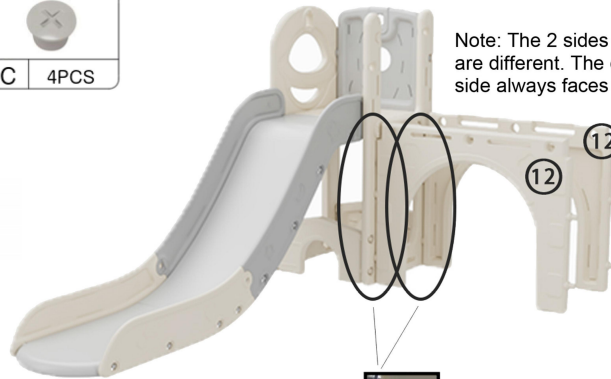 

   Connect the 2 Part ⑫ to the STEP 8 assembled parts, secure with 4 Screw C. For better stability, the space around the screw hole is rather tight with limited vertical clearance. Push the screw in first, and then use a screw hat to twist the screw.


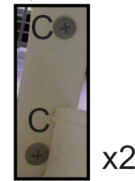


### STEP10




Connect the Part ⑬ to the STEP 9 assembled parts, secure with 6 Screw C.


 
 
## ASSEMBLY




### STEP11

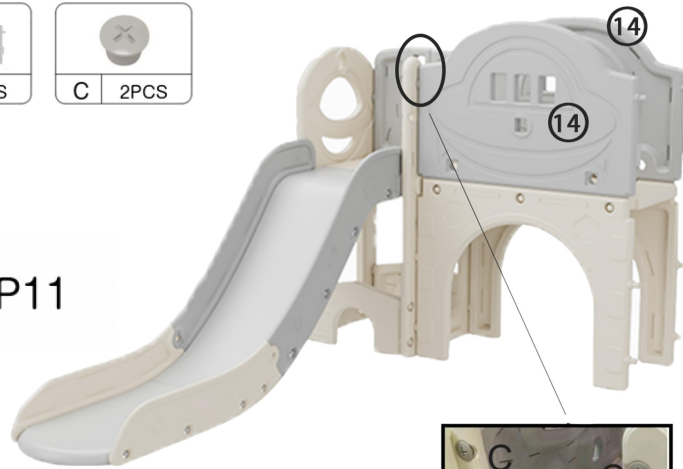 

   Connect the 2 Part ⑭ to the STEP 10 assembled parts, secure with 2 Screw C. Note: The 2 sides of Part 14 are different. The concave side always faces inward.




### STEP12

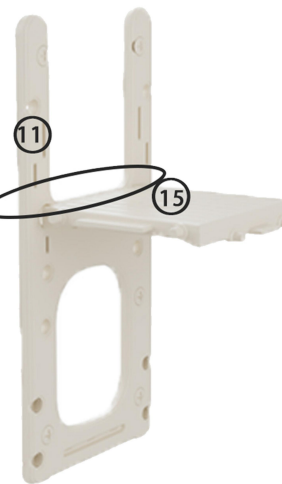 




Connect the Part ⑮ to the Part ⑪, secure with 2 Screw C.

## ASSEMBLY

 

### STEP13

   Connect the 2 Part ⑩ to the STEP 12 assembled parts, secure with 4 Screw C.





### STEP14

Connect the Part ⑨ & ⑩ to the STEP 13 assembled parts, secure with 6 Screw C.





  
## ① ASSEMBLY



### STEP15

   Connect the Part ① to the STEP 14 assembled parts, secure with 8 Screw C.


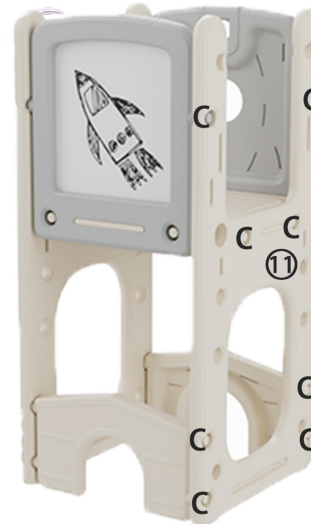


### STEP16

Connect the Part ② to the STEP 15 assembled parts, secure with 2 Screw C.



 
 
## ASSEMBLY

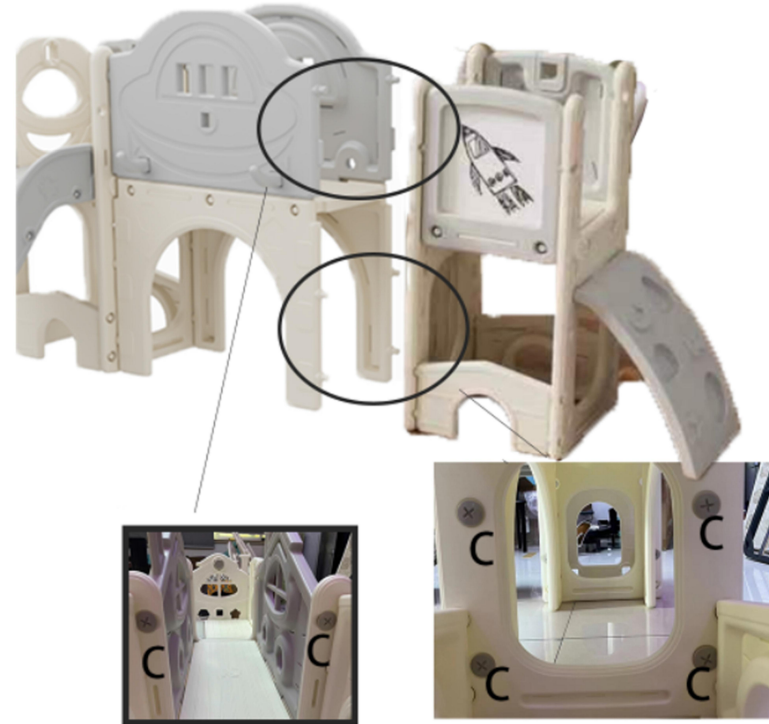

### STEP17

Connect the STEP 16 assembled parts to the STEP 11 assembled parts, secure with 6 Screw C.  
For better stability, the space around the screw hole is rather tight with limited vertical clearance. Push the screw in first, and then use a screw hat to twist the screw.
  
## ASSEMBLY

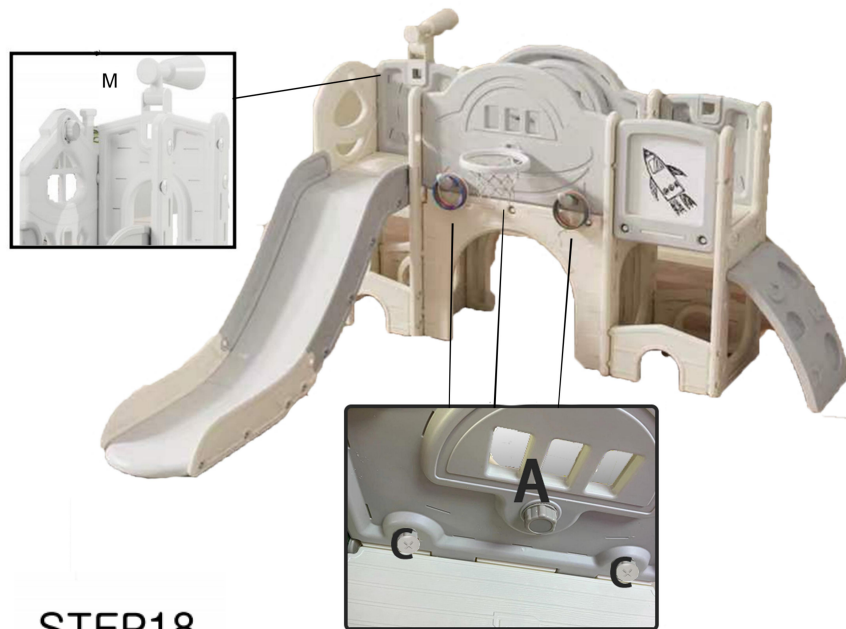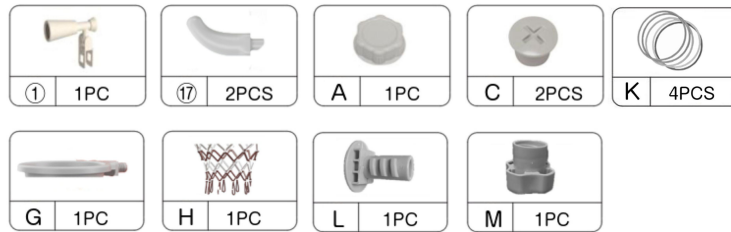

### STEP18

1. Connect the Part ① to the Part ⑨, Secure with Screw M & L.
2. Connect the 2 Part ⑰ to Part ⑭, Secure with 2 Screw C.
3. Tie the Part H to the Part G, then connect the Part G to the Part ⑭, Secure with Screw A.



## GENERAL SAFETY INSTRUCTIONS

This product is intended for indoor, outdoor, home, domestic use only. It is not suitable for commercial or medical use.

The assembly of the product must be done carefully and by an able-bodied adult. If in any doubt, ask a technically qualified person.

Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.

Check the product before each use. Defective parts must be changed immediately as they can impair the function and the safety of the product.

Use the product only on even and non-slip surfaces. Keep sufficient space around for safety.

Beware that when using tools or doing technical work, there is always a risk of injuries. Assemble the product with care.

After installing the product according to the instruction manual, ensure all screws, bolts and nuts are correctly installed and tightened and that all joints are secure.

Do not make alterations to the product. Only use original spare parts. Only qualified technicians should carry out repairs - improper repairs can lead to danger for the user. Use this product only as described in this manual.

## IMPORTANT

The owner's manual contains safety, assembly, use and maintenance instructions. The product must be assembled by an adult who has read and understood these instructions. Keep the packaging away from children and dispose of all packaging before use.

## OPERATION INSTRUCTIONS

Provide adult supervision at all times.

The disassembled product contains small parts which pose a choking hazard to children under 3.

Dress children appropriately, including wearing well-fitting shoes that fully protect feet.

Instruct children:

- to sit in the center of the swings with their full weight on the seats,
- to avoid swinging empty seats,
- to slide feet first; one child down slide at a time,
- to remove articles, before playing on equipment, that create hazards when they get tangled and caught.
- not to walk close to, in front of, behind, or between moving items,
- not to get off equipment while it is in motion.

Never allow children to use the equipment in a manner other than intended. Do not swing while standing or slide down head first.