ASSEMBLY INSTRUCTIONS 36 INCH BATH VANITY-CABINET



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.











IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

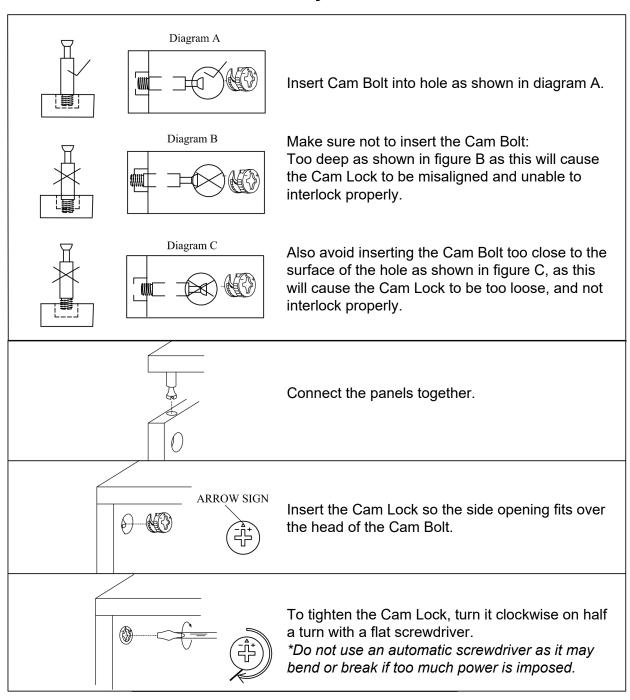

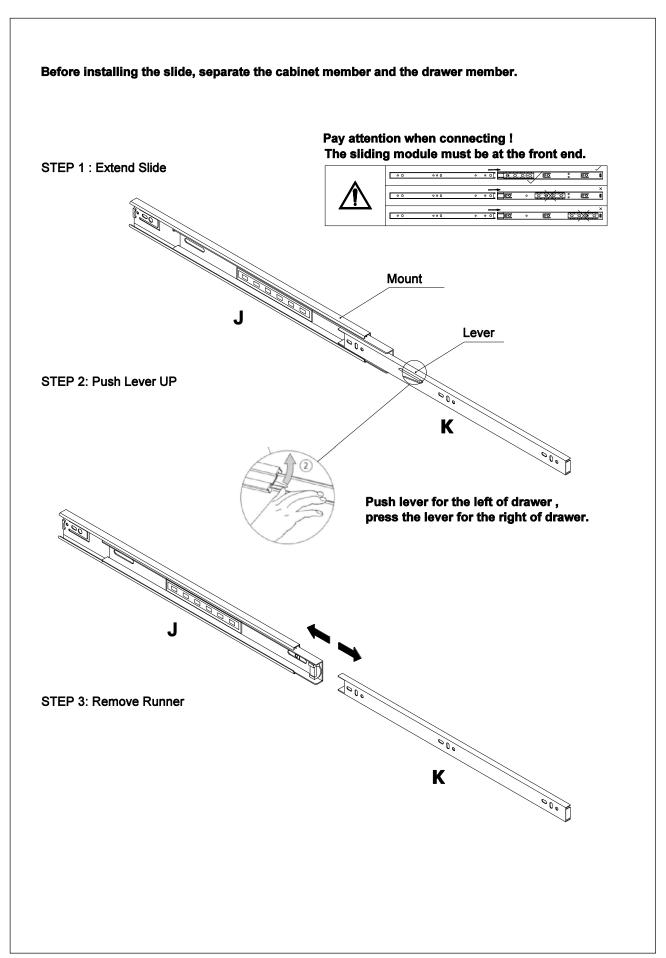

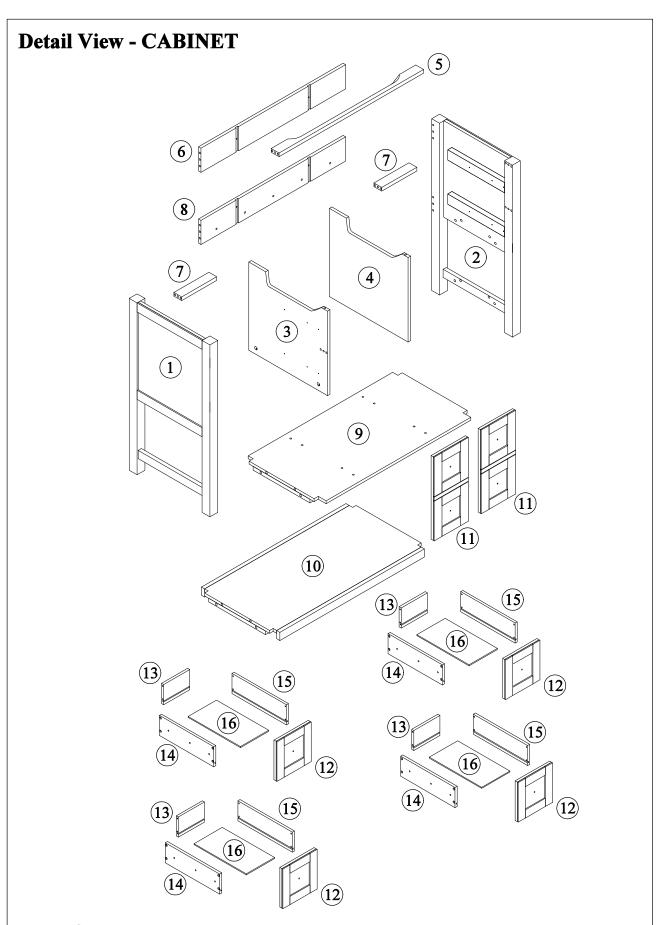



Identifying the Hardware-Identify the hardware using the illustrations below.


Part	List - WF317175					
1	Side Panel (L) - 1pc	2	Side Panel (R) - 1pc			
3		4	ciae i ane. (i y lipe			
3	Mid Panel (L) - 1pc	4	Mid Panel (R) - 1pc			
5		6				
	Top Bar Front - 1pc		Top Panel Rear - 1pc			
7	E CONTROL OF THE CONT	8				
	Mid Bar - 2pcs		Bottom Panel Rear - 1pc			
9	Mid Frame - 1pc	10	Bottom Frame - 1pc			
11		12				
42	Cabinet Door - 2pcs	11	Drawer Face - 4pcs			
13		14				
	Drawer Back Panel - 4pcs		Drawer Side Panel (L) - 4pcs			
15		16				
	Drawer Side Panel (R) - 4pcs		Bottom Drawer Panel - 4pcs			
	3.2 5.20 · a (. v) · ipoo	6				


Hardware List - WF317175


Α		3		С			
		. (a	<u> </u>			
(a))=11111111111111111111111111111111111							
ø13x1/4"x28mm		ø1/4"x16x1mm			ø6x35mm		
Hex-Head bolts (8pcs)		Washer (8pcs)			Three in one bolts (21pcs)		
D	E	E		F			
					(E) 00000000000>		
ø14.5x12mm		ø8xø4x25mm			ø8xø4x32mm		
Three in one lock (21pcs)		Round head screw (6pcs)			Round head screw (32pcs)		
G	Н		I	_			
		ø5/32	2"x20mm		ø5/32"x32mm		
Handle (8	Spcs)	Handle s	crew(4pc)	ŀ	-landle screw(4pc)		
J		(35	L			
		SS			(†))))))))		
		538 /		ø6xø3x12mm			
ø300x35mm		ø298x18mm					
Slide rails (Slide rail	s (8pcs)		head screw (48pcs)		
M	<u> </u>	1		0			
20 0		(1)))))))))>		9////			
		ø7xø3.5x15mm		ø8x30mm			
Damping hinge (4pcs)		Flat head screw(24pcs)		Wood dowel (30pcs)			
Р		Q	777				
4mm							
Allen key (1pc)		Anti fall hardware (1set)					
Allen key	(190)	, ard ran ric	1411410 (1001)				

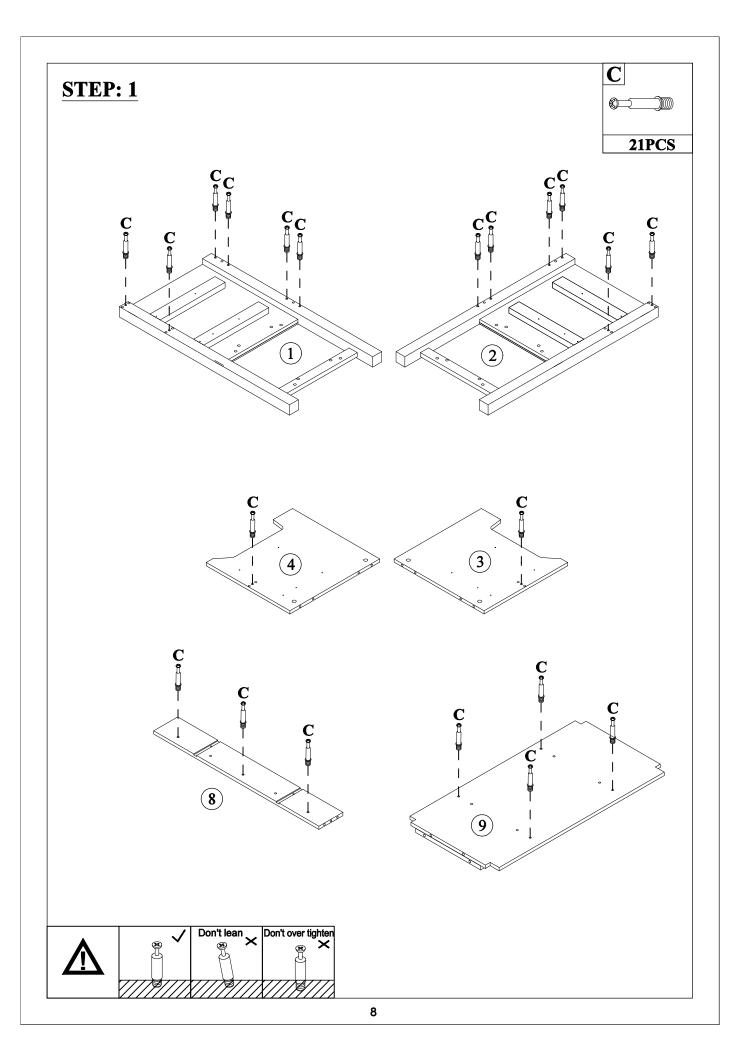


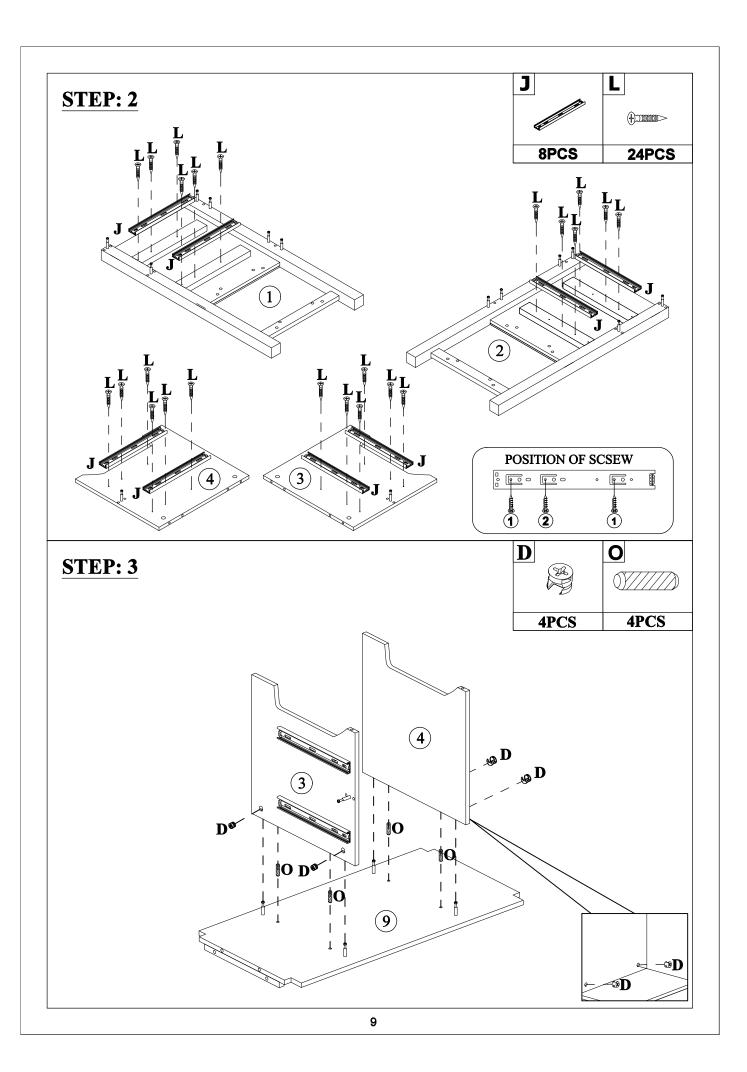


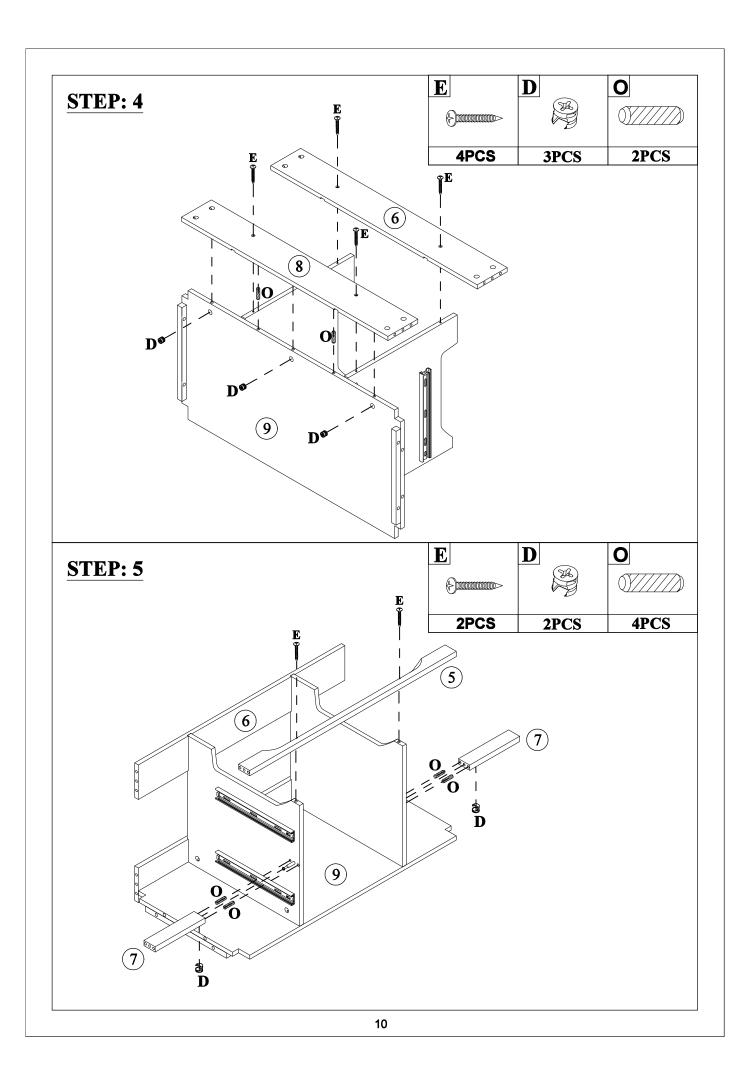


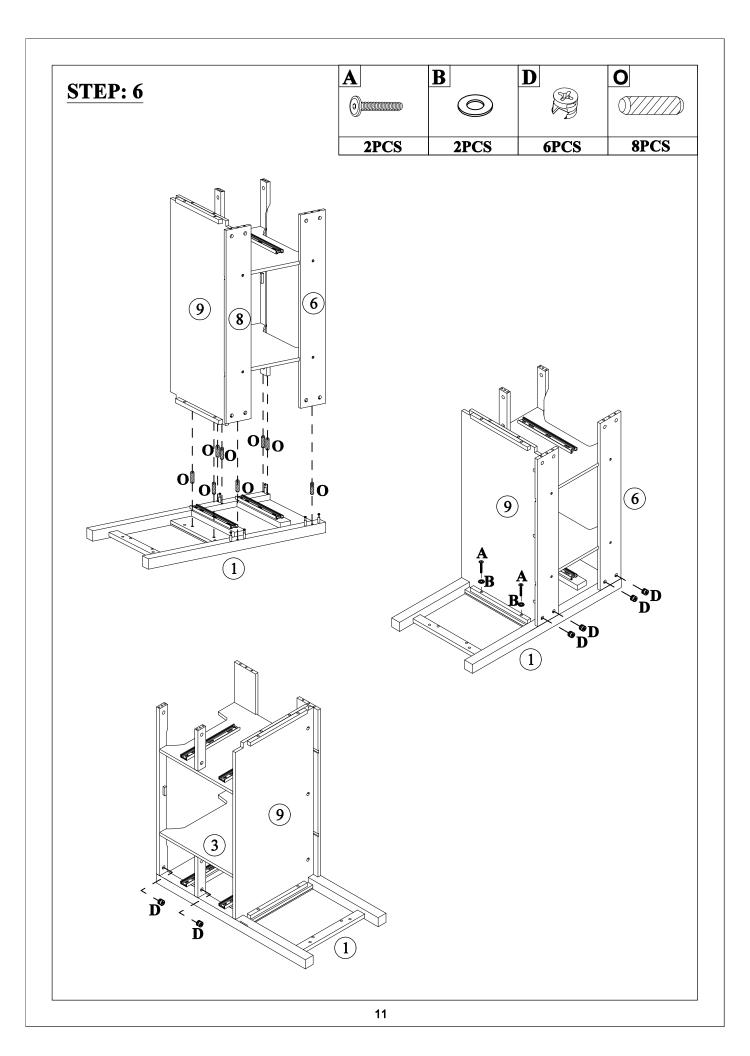


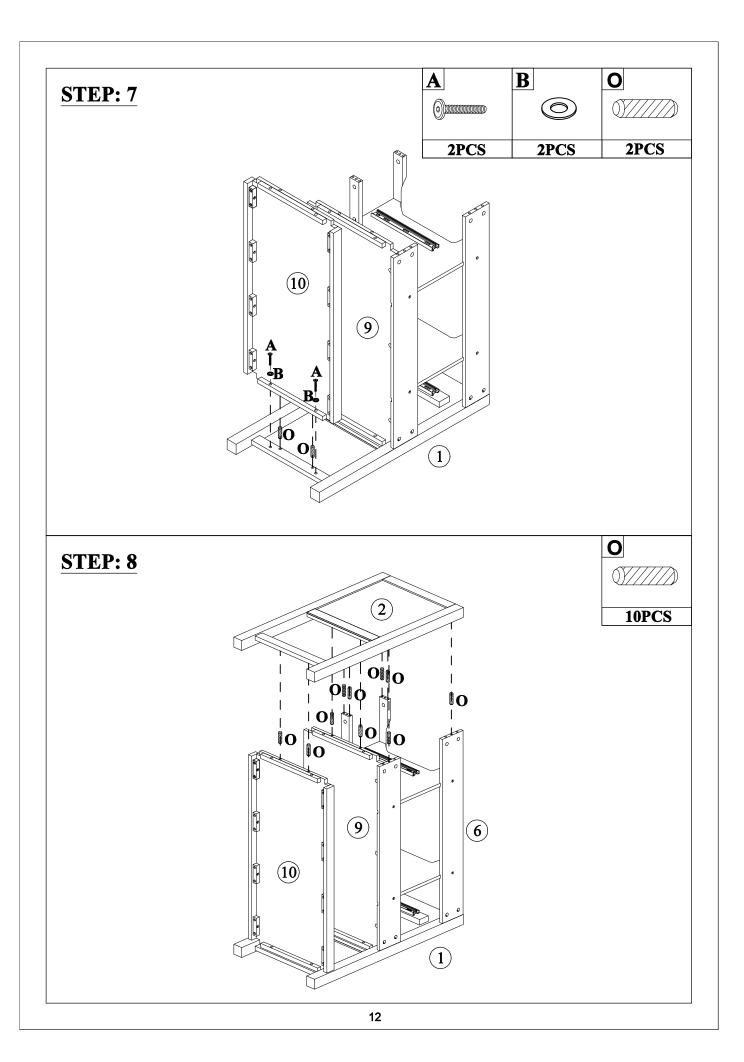


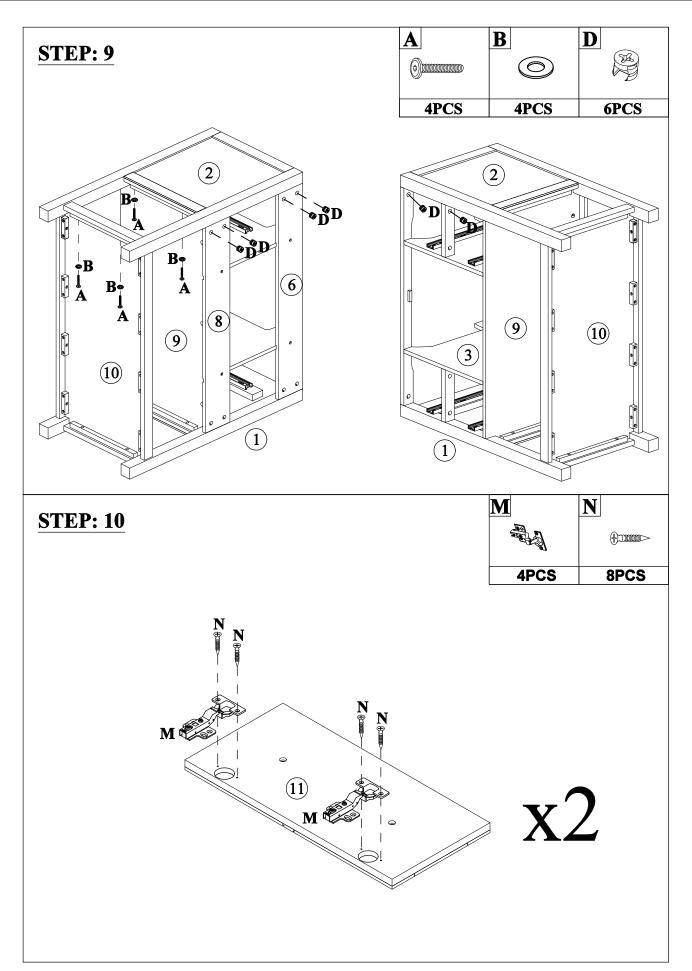

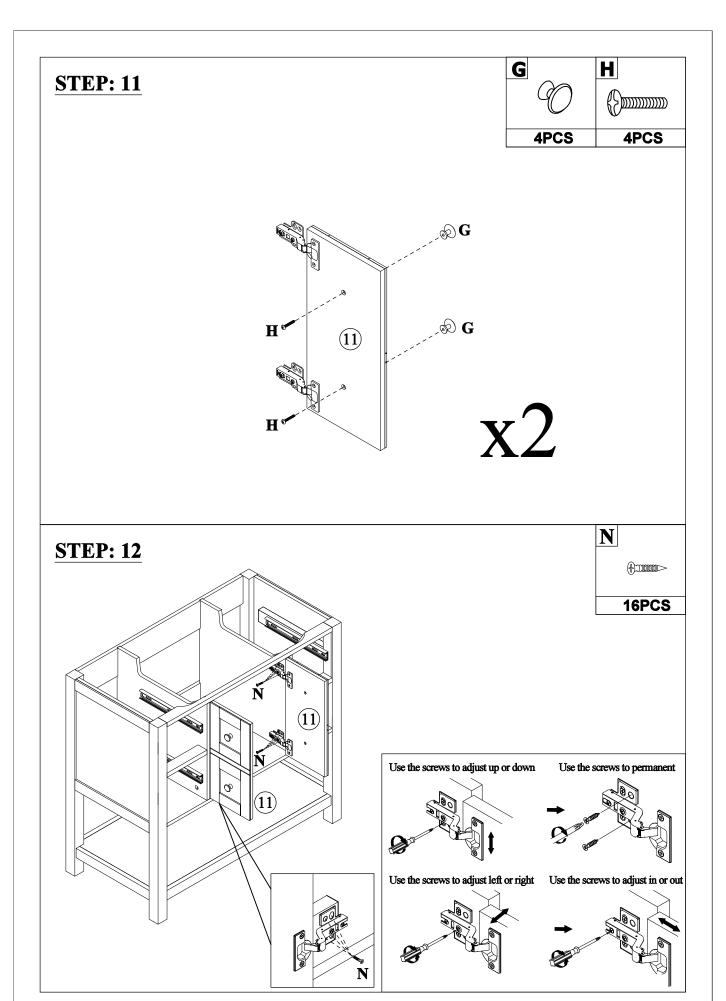

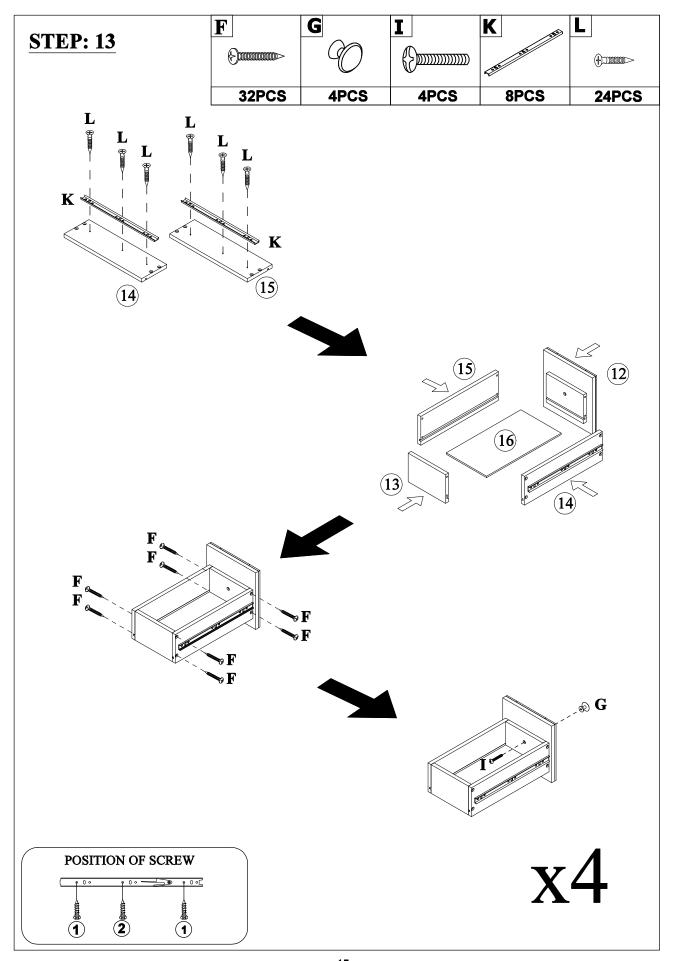

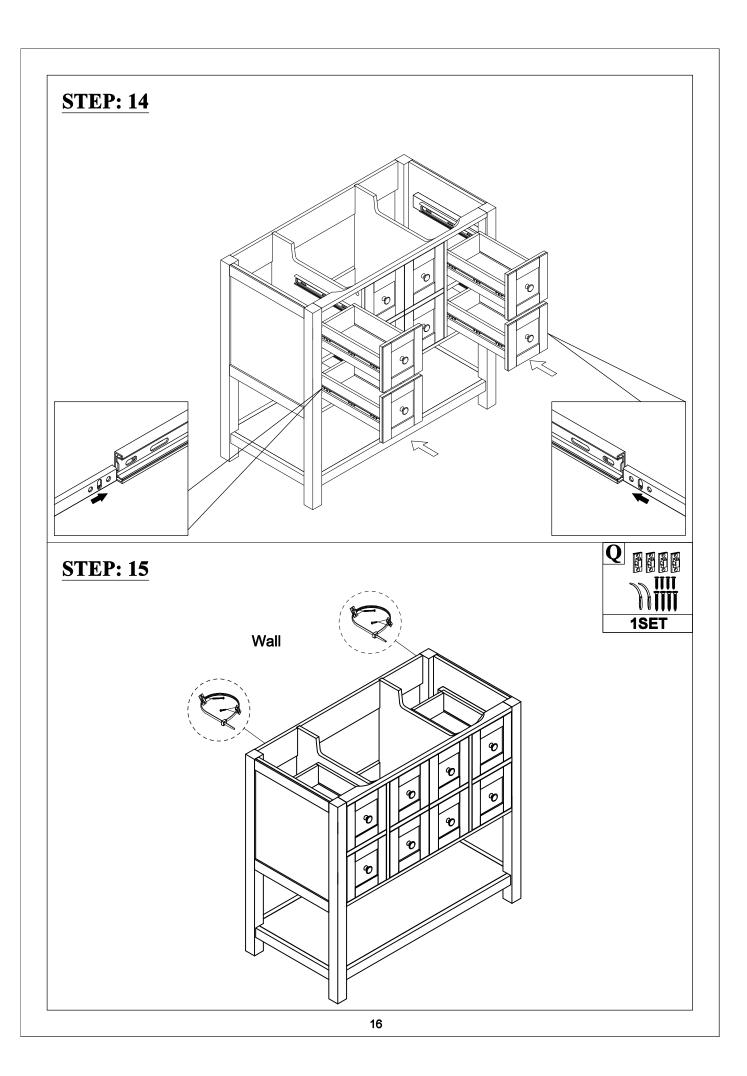

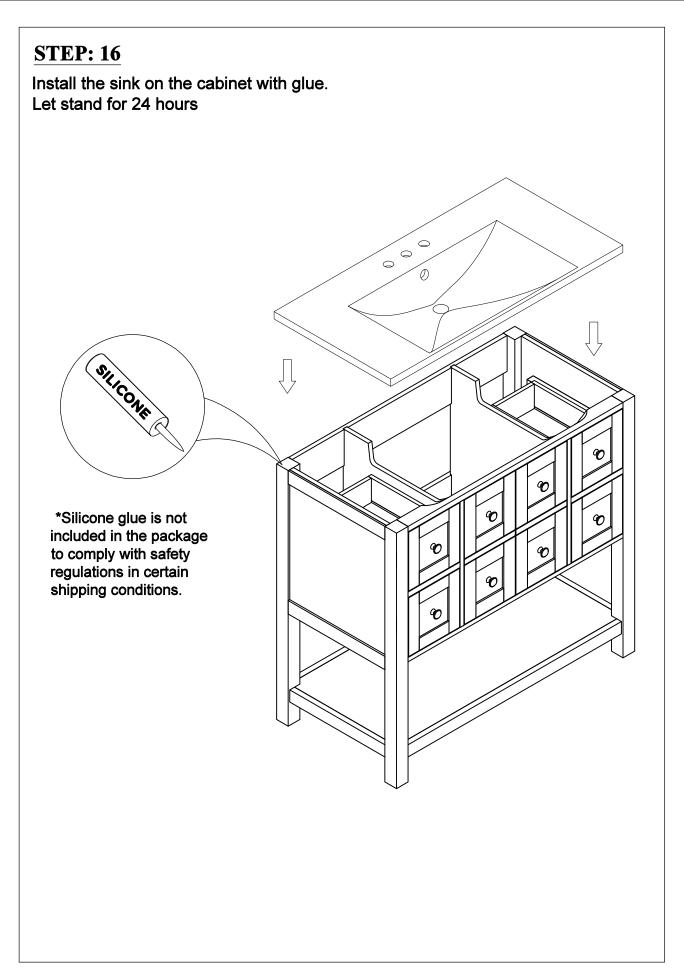


STEP: 17






HINGE ADJUSTMENTS

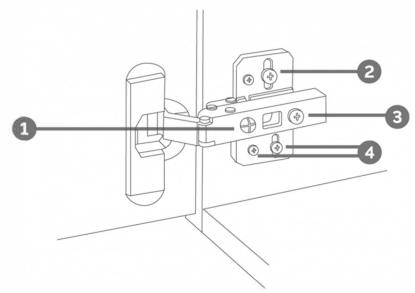

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

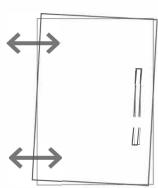

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

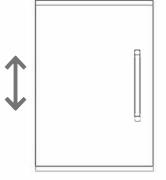

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

