
 
ASSEMBLY INSTRUCTIONS 36" BATHROOM VANITY

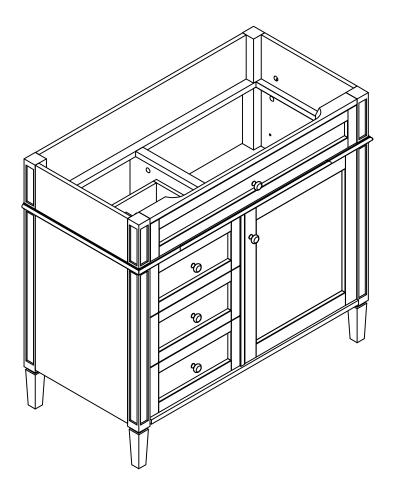

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will
 make the assembly easier, and will help eliminate damage to the product or injury to persons during
 assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

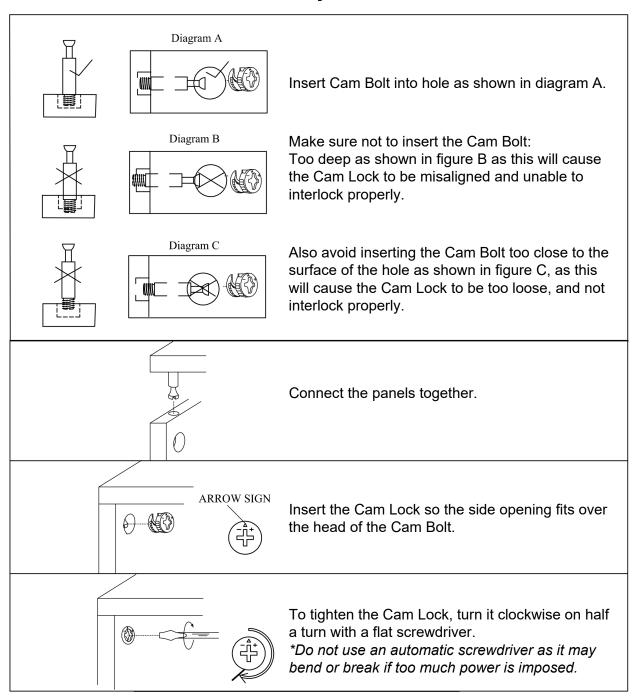

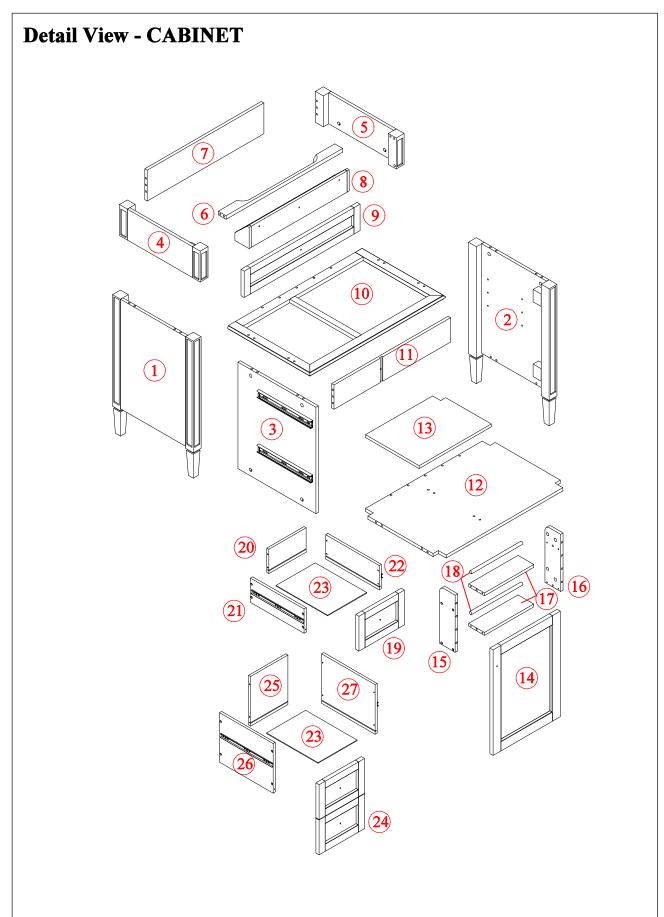



Part List - WF315154 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Side Panel Top (L) - 1pc Mid Panel - 1pc 5 6 Side Panel Top (R) - 1pc Crossbar Top - 1pc 7 8 Flip Drawer - 1pc Panel Top Rear - 1pc 10 9 Frame Mid - 1pc Flip Drawer Face - 1pc 11 12 Rear Panel Bottom - 1pc Bottom Panel - 1pc 13 14 Adjustable Shelf - 1pc Door - 1pc


| Part List - WF315154 | | | | |
|----------------------|------------------------------|----|------------------------------|--|
| 15 | | 16 | | |
| | Left Panel of Door - 1pc | | Right Panel of Door - 1pc | |
| 17 | | 18 | | |
| | Mid Panel of Door - 2pcs | | Round Bar - 2pcs | |
| 19 | | 20 | | |
| | Drawer Front Top - 1pc | | Drawer Rear Top - 1pc | |
| 21 | | 22 | | |
| | Drawer Side Top(L) - 1pc | | Drawer Side Top(R) - 1pc | |
| 23 | | 24 | | |
| | Drawer Bottom - 2pcs | | Drawer Front Bottom - 1pc | |
| 25 | | 26 | | |
| | Drawer Rear Bottom - 1pc | | Drawer Side Bottom (L) - 1pc | |
| 27 | | | | |
| | Drawer Side Bottom (R) - 1pc | | | |
| | | 5 | | |


Hardware List - WF315154


| Α | В | С |
|-----------------------------------|--------------------------|--|
| | | |
| ø6x35mm | ø14.5x12mm | ø8xø4x25mm |
| Three in one bolts(36pcs) | Three in one lock(36pcs) | Round head screw(4pcs) |
| D | E | F |
| ⊘ > | 90 | (S) |
| ø8xø4x32mm | | ø5/32"x20mm |
| Round head screw(24pcs) | Handle(5pcs) | Handle screw(1pc) |
| G | H | |
| ø5/32"x25mm | Duo Forte (1pc) | Rotary Hinge(2pcs) |
| Handle screw(4pcs) J Ø6xø3x12mm | K Solution (Tpc) | L # ################################## |
| Flat head screw(8pcs) | Damping hinge (2pcs) | Flat head screw(12pcs) |
| M | N | O Tract ricad sciew(12pcs) |
| | Ø8x30mm | |
| Laminate pad(4pcs) | Wood dowel(36pcs) | Anti fall hardware(1set) |

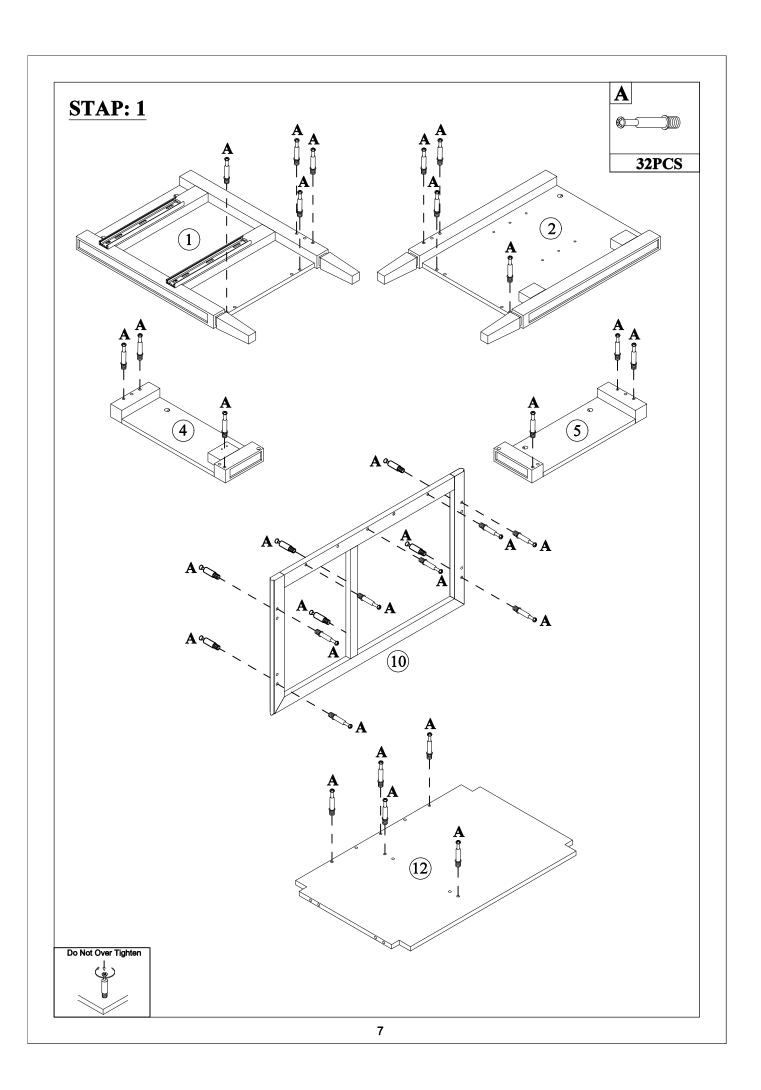


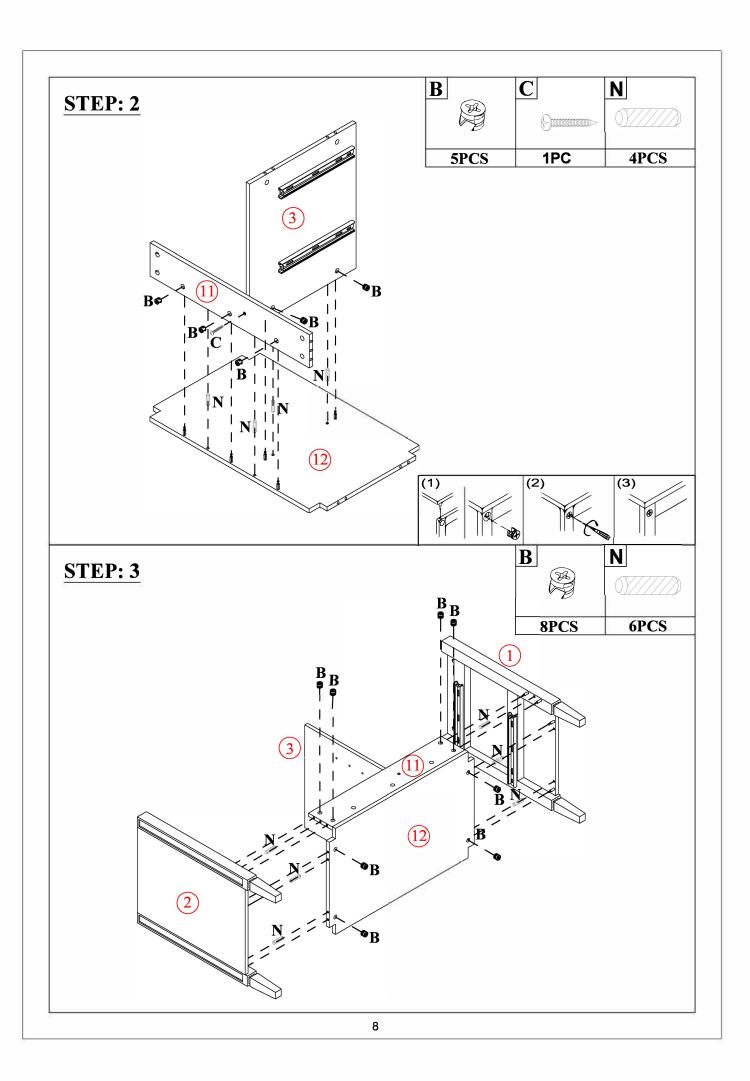


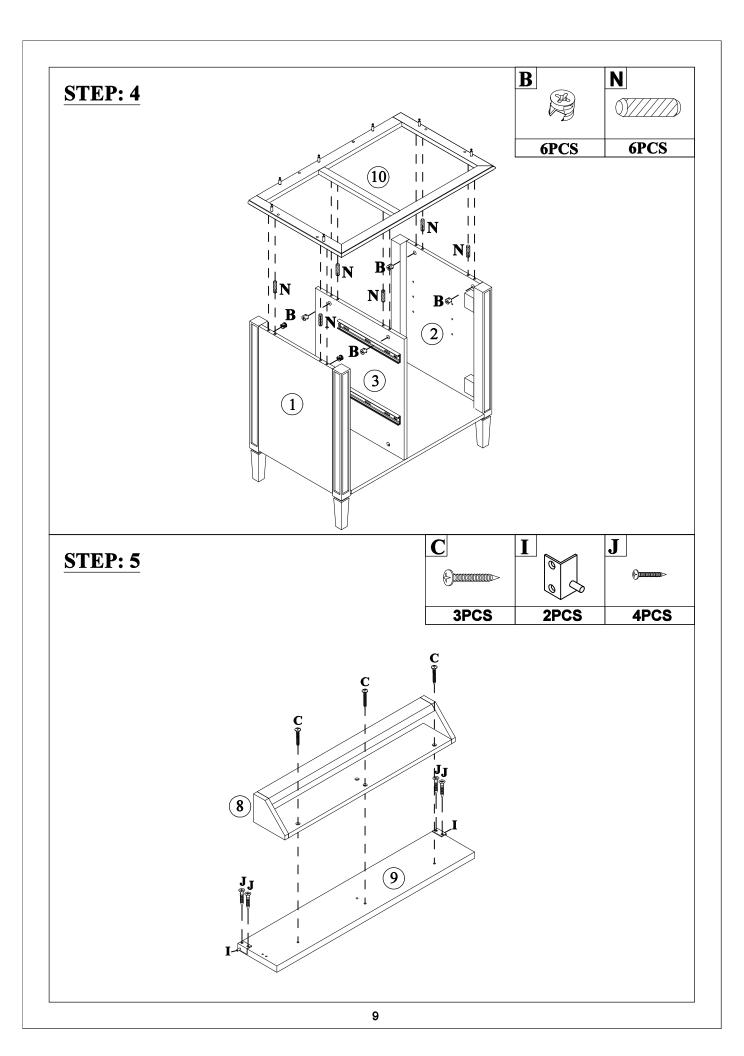


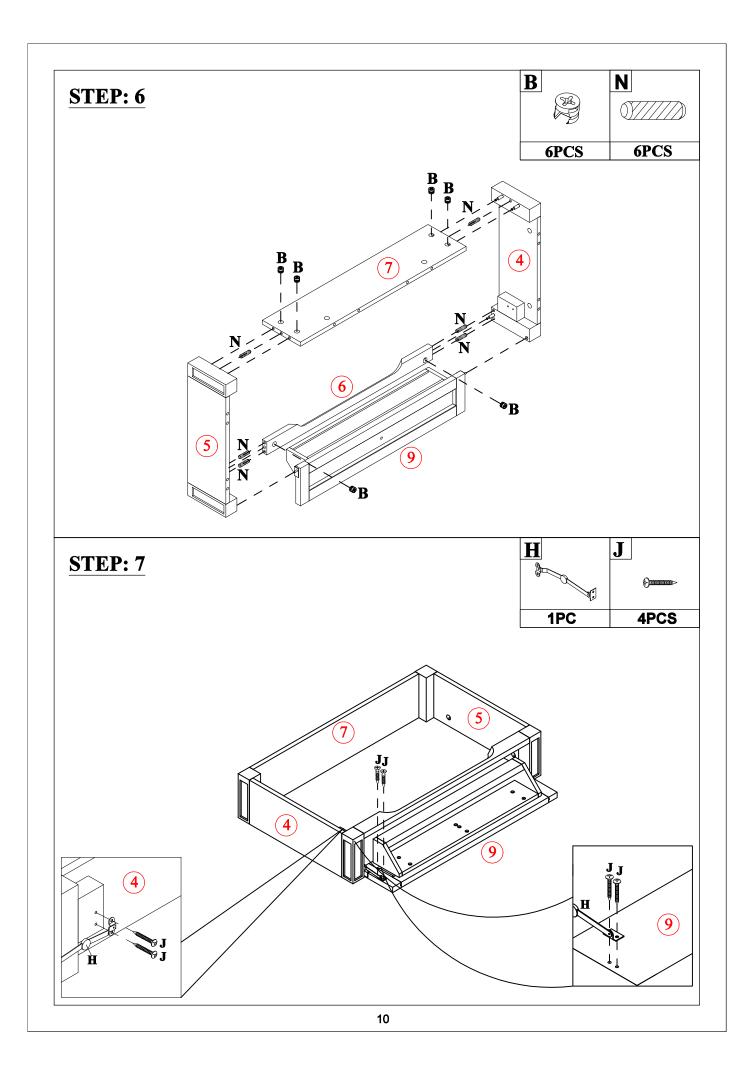


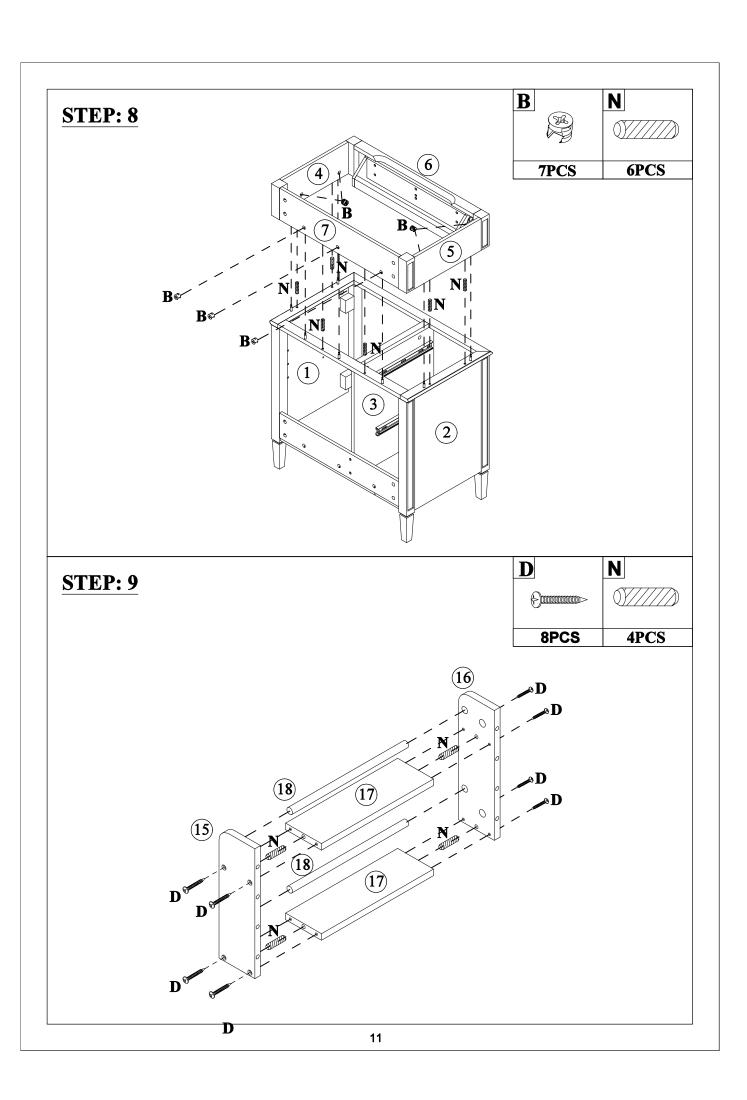


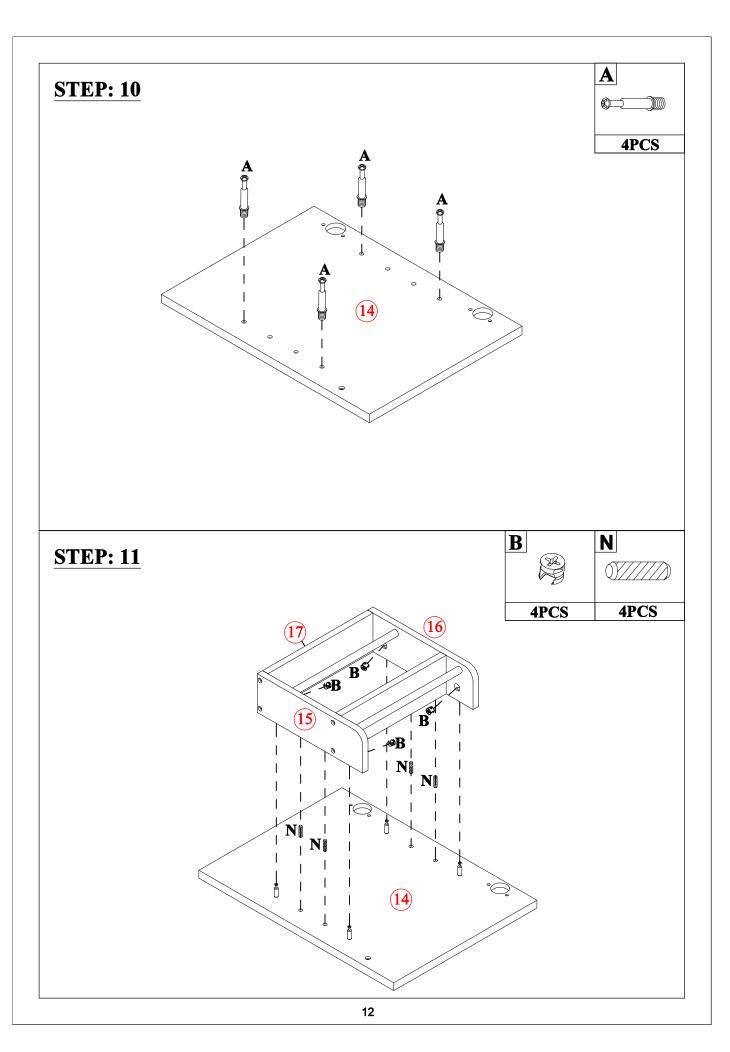

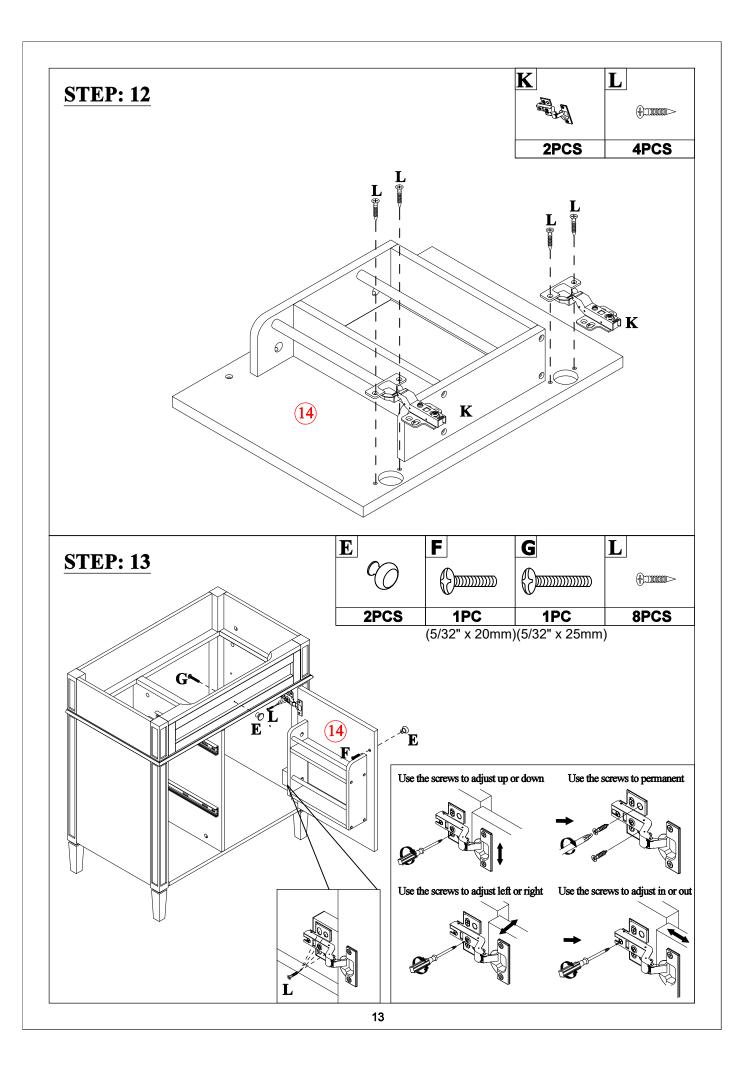

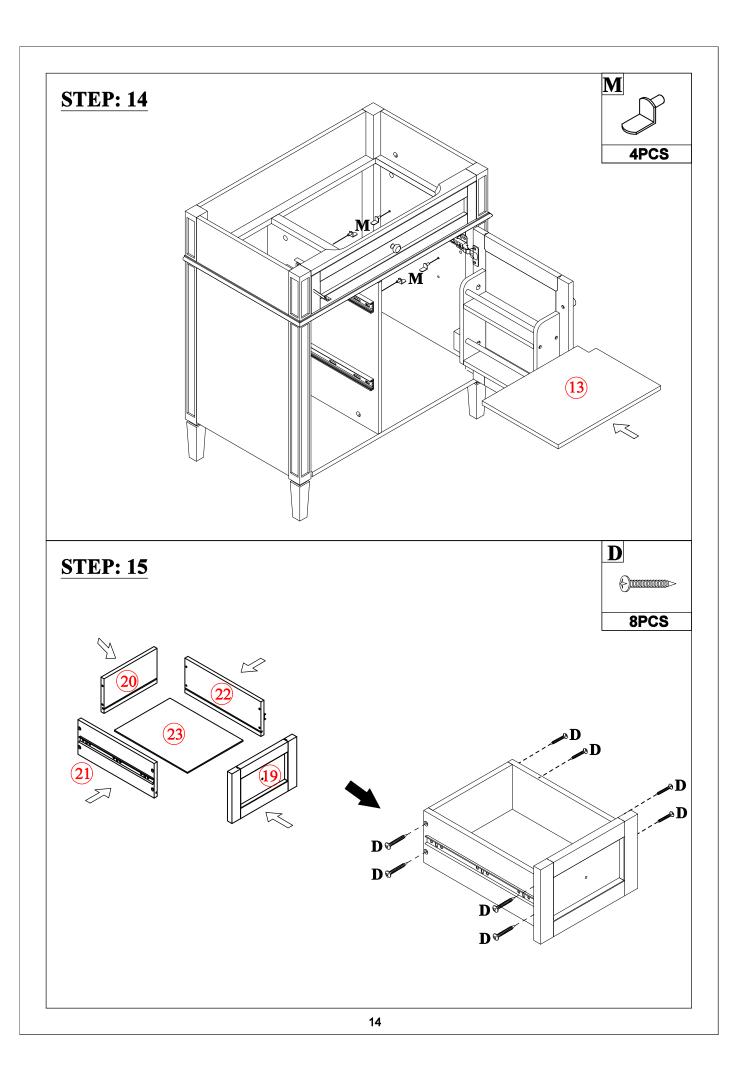

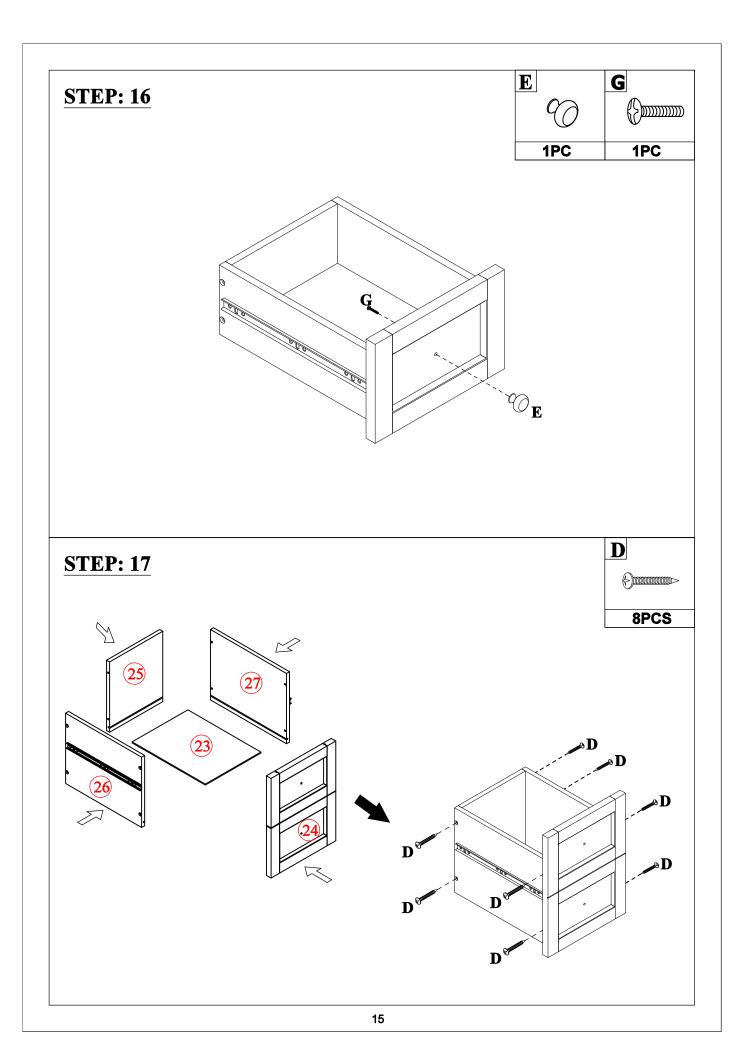

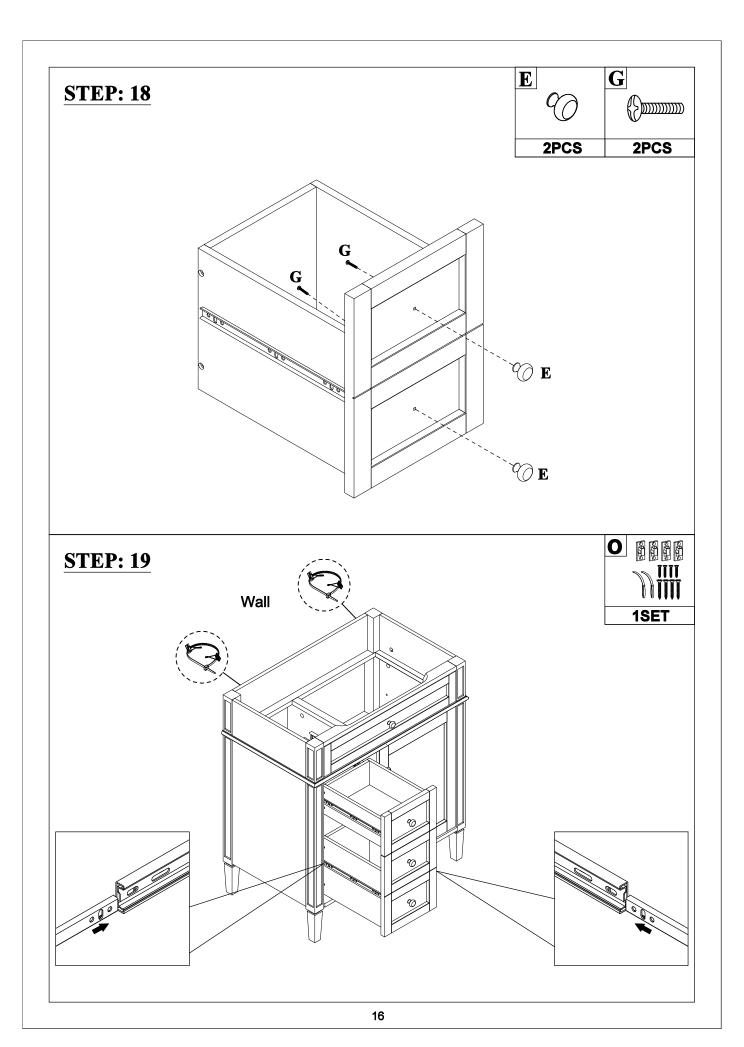

STEP: 20

Install the sink on the cabinet with glue. Let stand for 24 hours




STEP: 21






HINGE ADJUSTMENTS

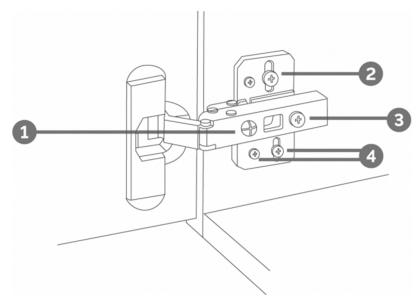

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

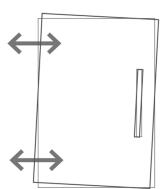

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up
anticlockwise to move the door down

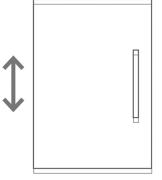

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

