


## **ASSEMBLY INSTRUCTION**


SKU CODE: WF314026/WF314027

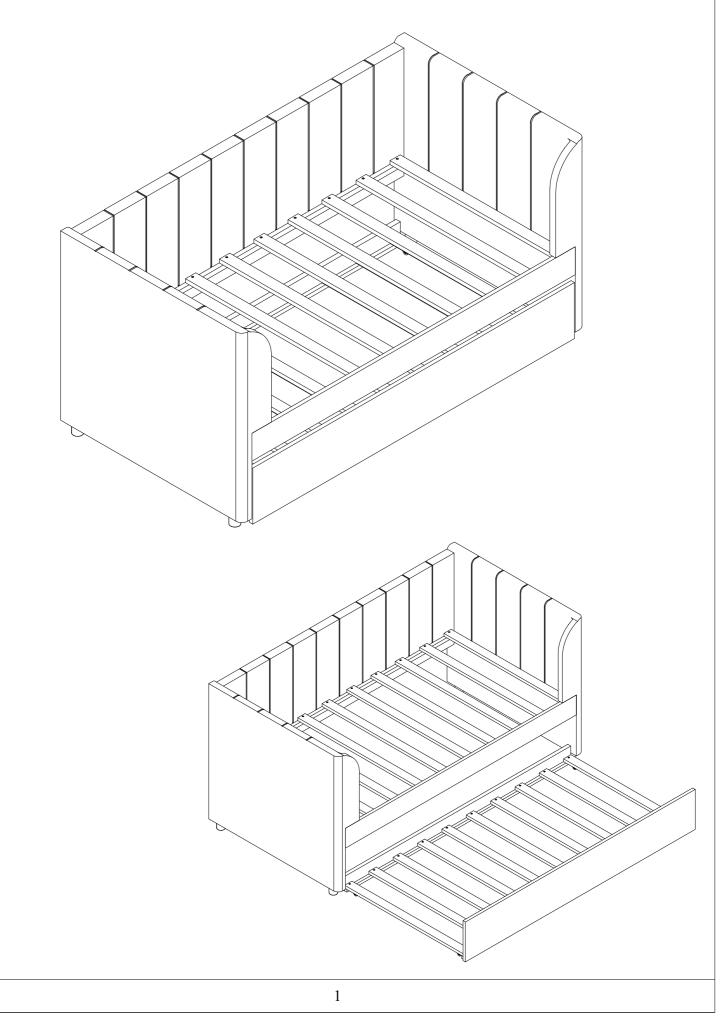

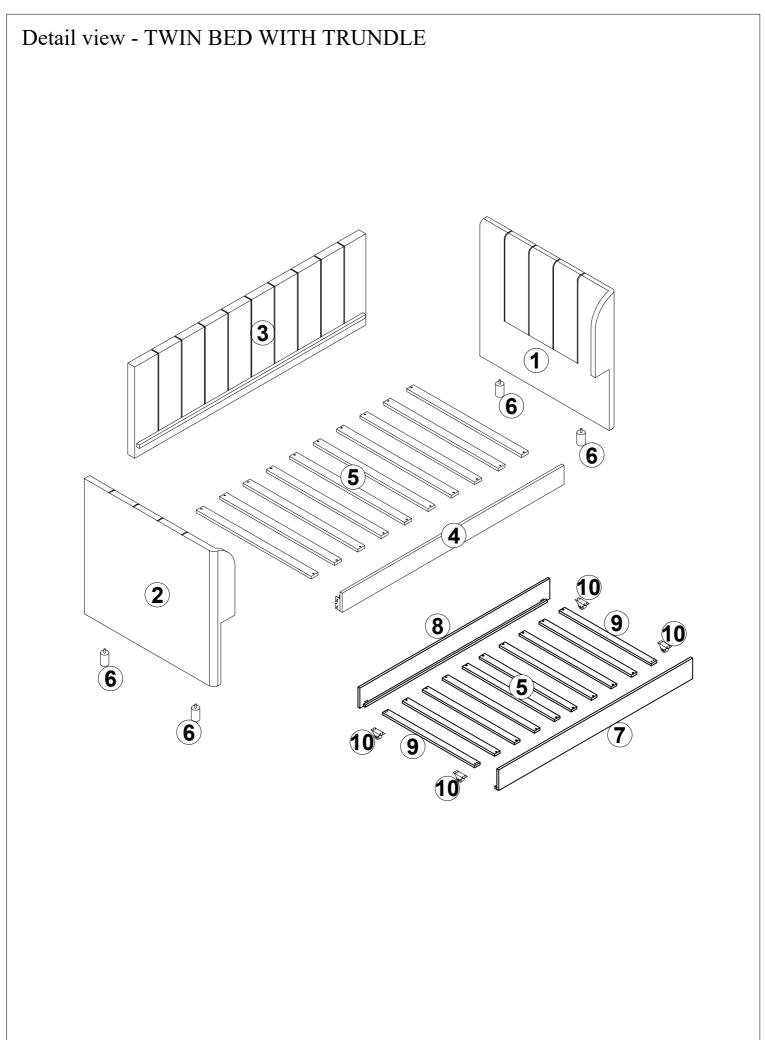

Identifying the Hardware - Indentify the hardware using the illustrations below.

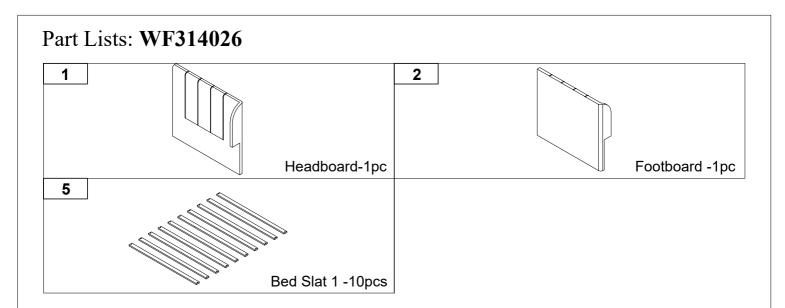

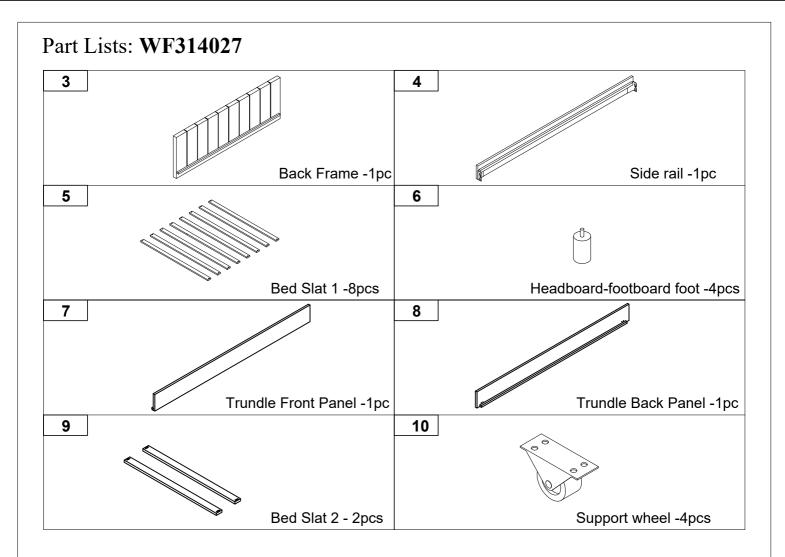

A	B
	aaaaaad
4mm	Ø5/16" x 20mm
Allen key (1pc)	Hex-head bolt (4pcs)
Ø5/16" x 40mm	Ø5/16"
Hex-head bolt (4pcs)	Spring washer (8pcs)
E	F
Ø5/16"	Ø4 x 30mm
Flat washer(8pcs)	Wood screw (40pcs)
	H
Ø4 x 20mm Wood screw (32pcs)	Metal bracket(4pcs)
ASSEMBLY TOOLS REQ	UIRED ( NOT INCLUDED )
ASSEMBLY TOOLS REQ	UIRED ( NOT INCLUDED )

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling. CAUTIONS :

- 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

