


DJYC2411 / 2411G

ASSEMBLY INTRODUCTION

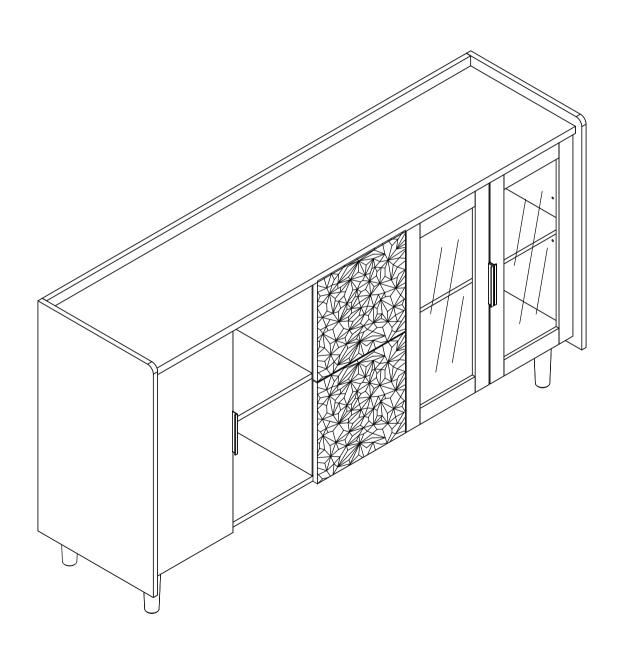

 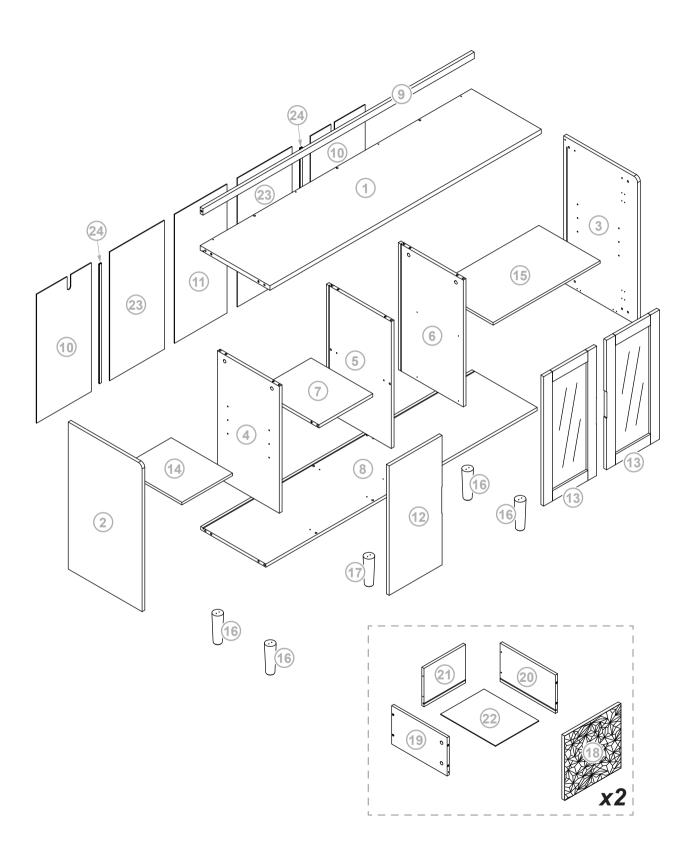


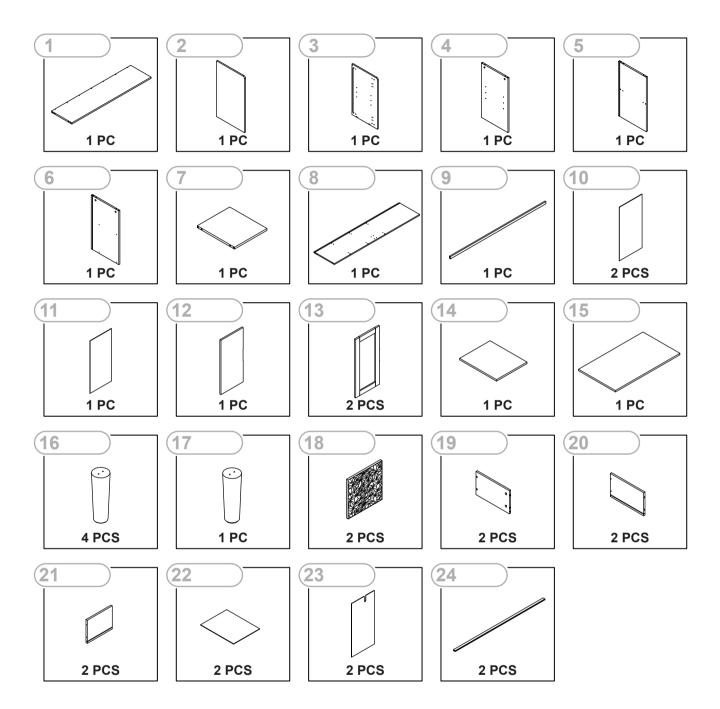



Fitting









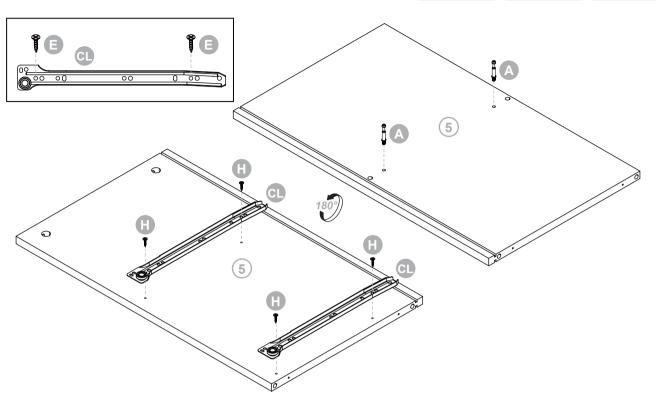

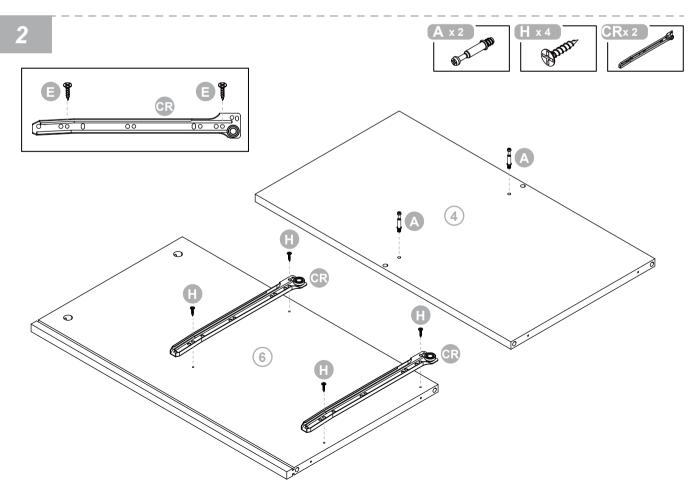



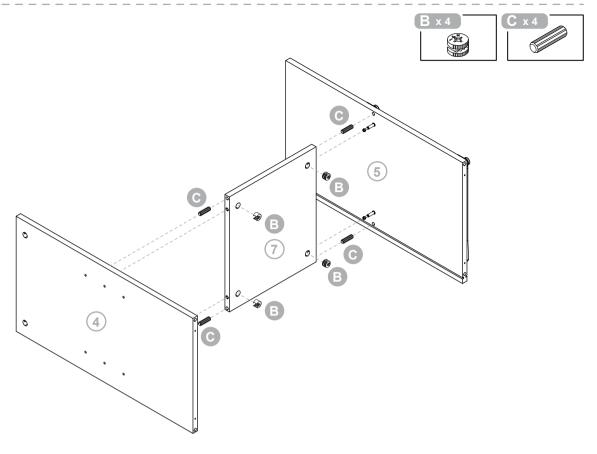


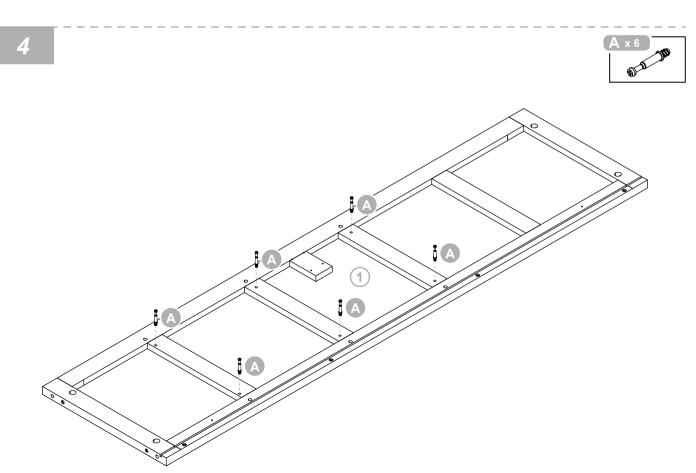










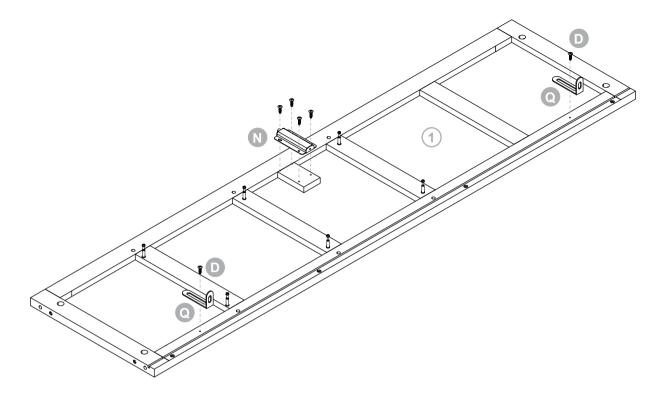


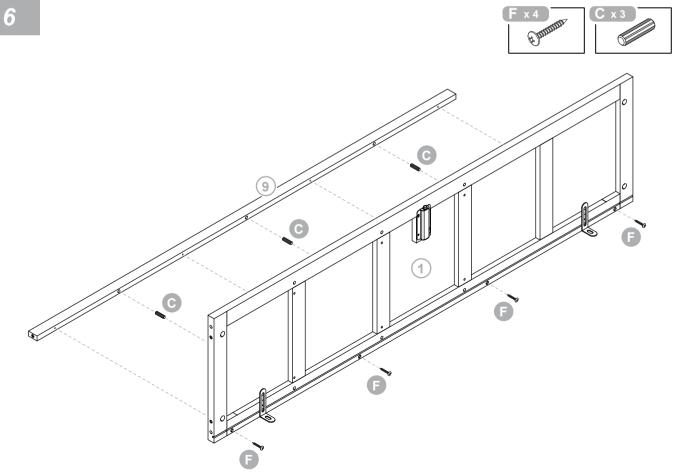


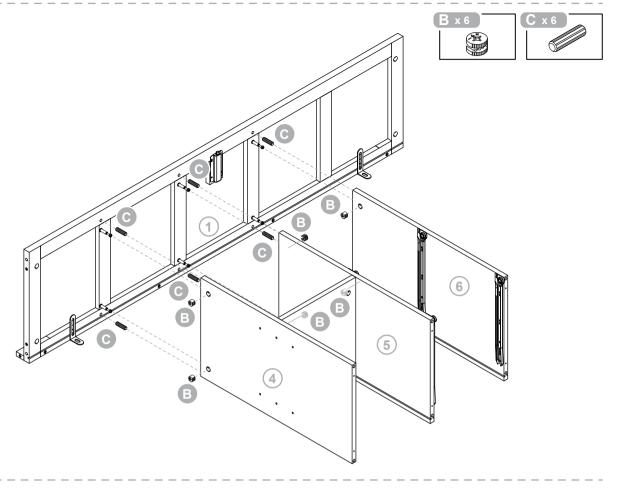


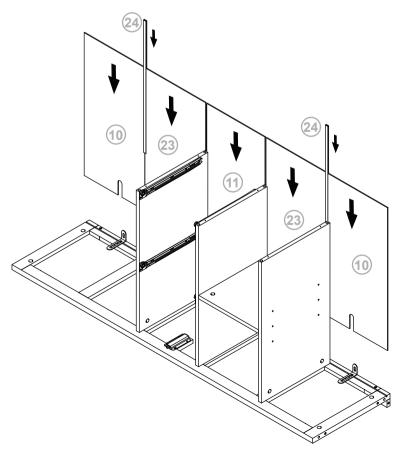





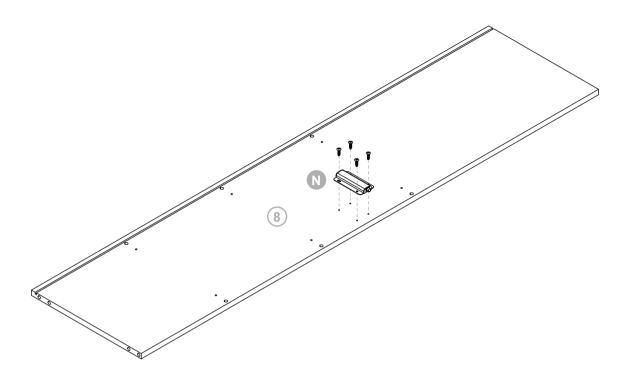


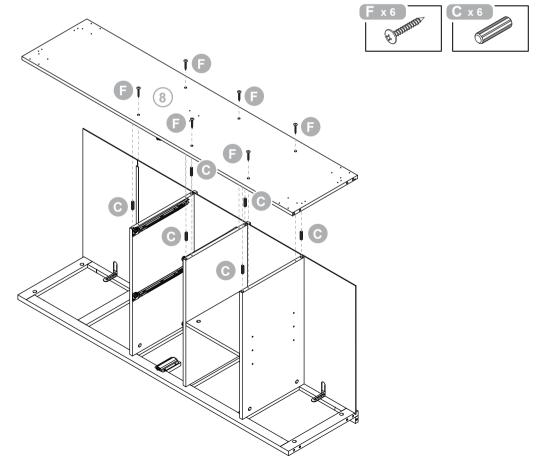

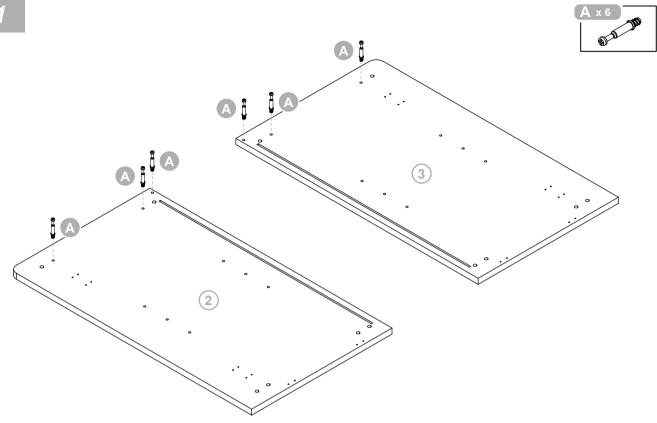


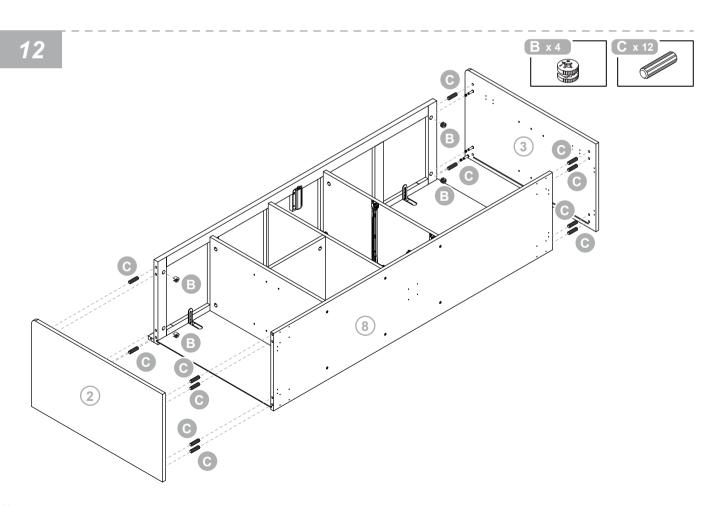


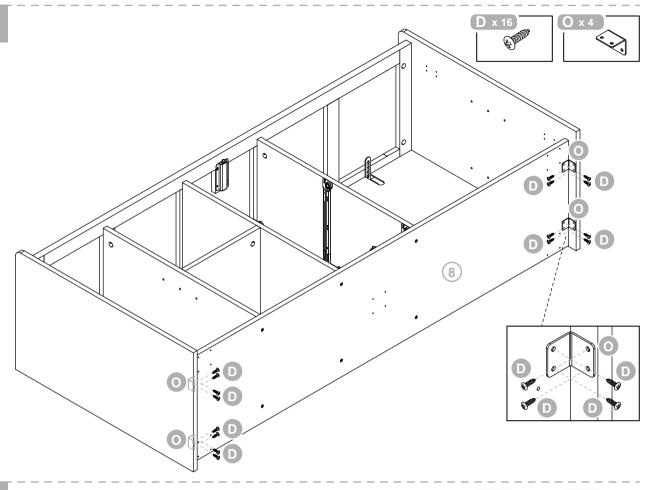


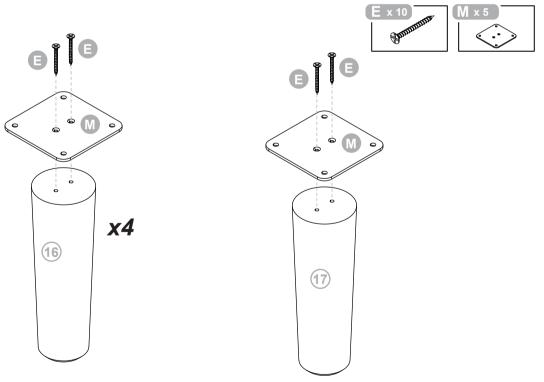




 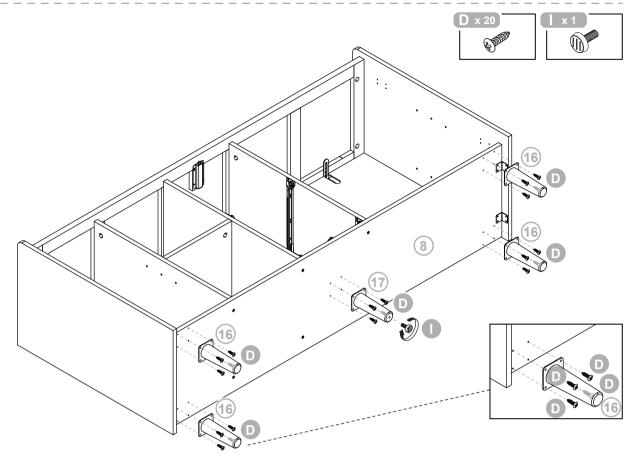


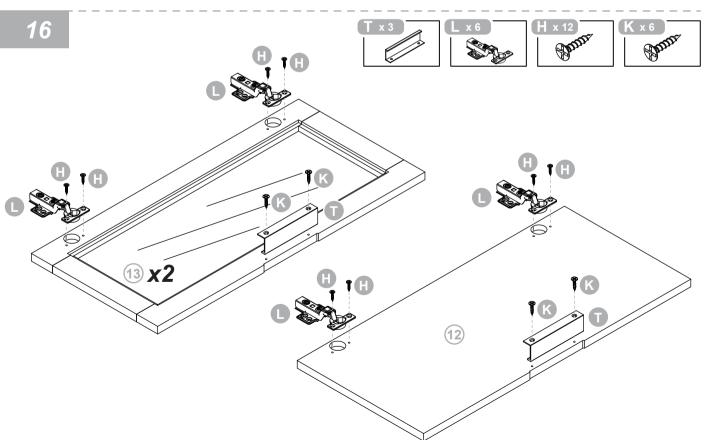


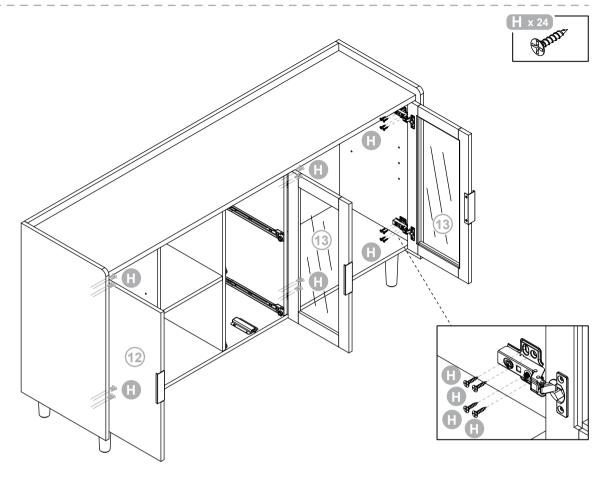




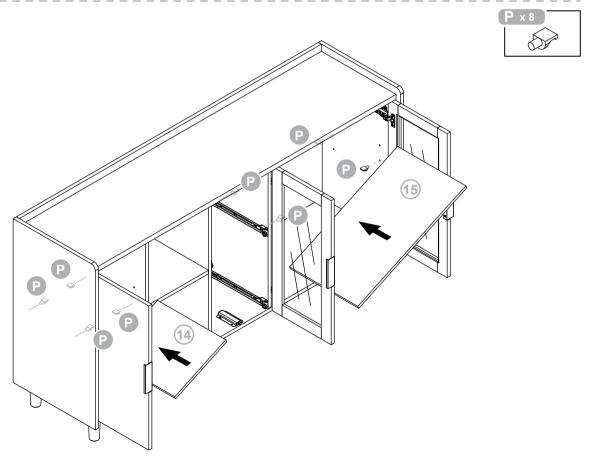





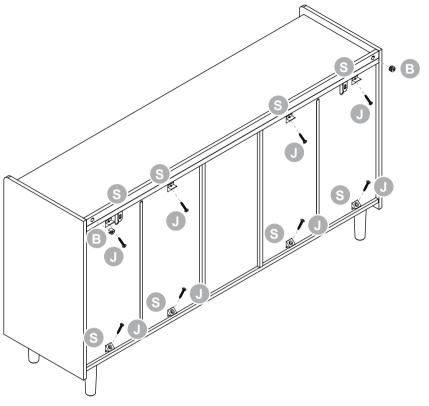


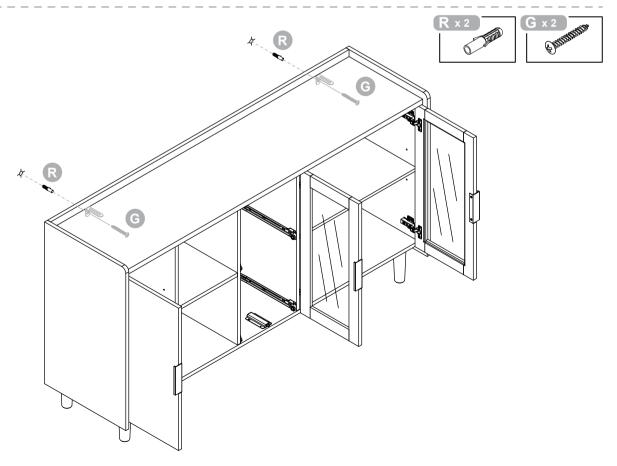




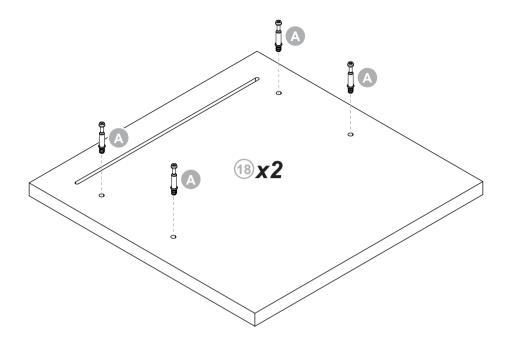


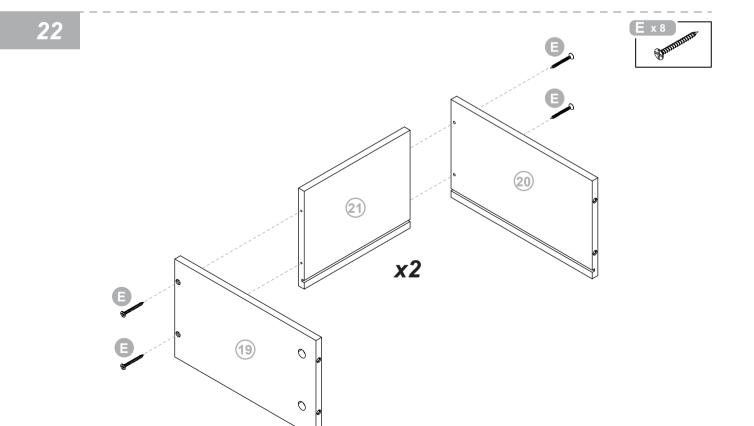


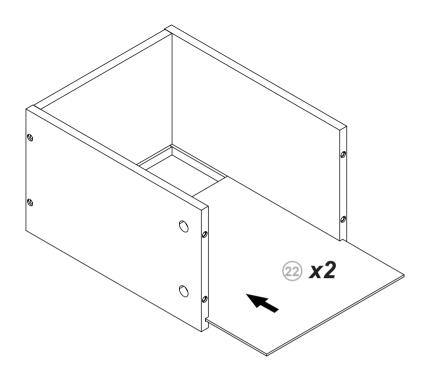



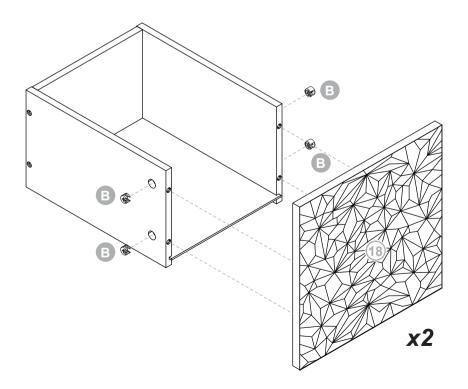

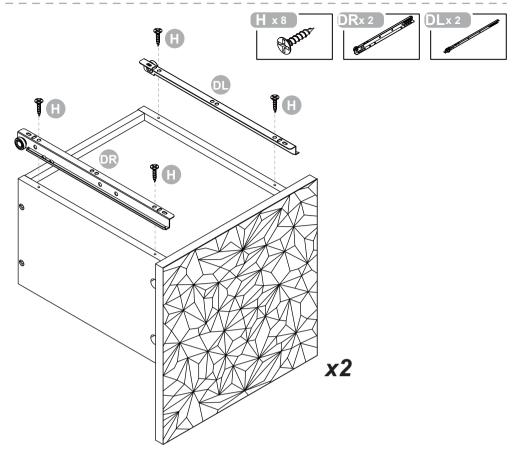

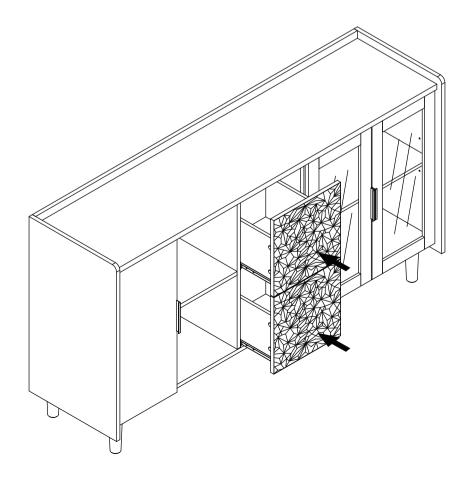






Customer Attention:


To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.

This can be done by adjusting appropriate screws. See below illustration.

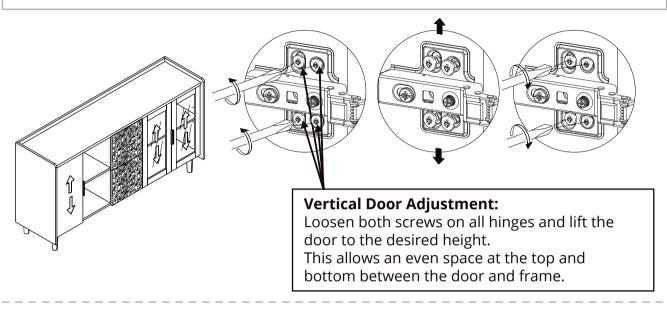

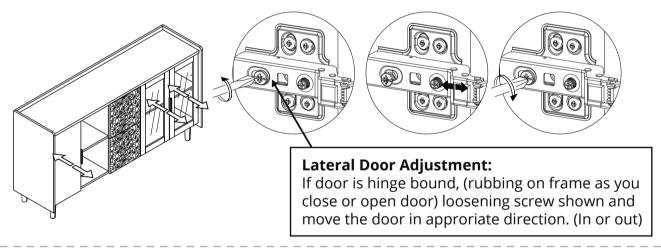

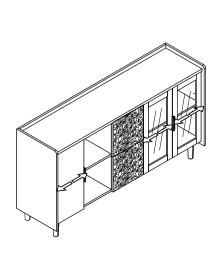

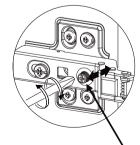

Horizontal Door Adjustment:

Rotate Screw clockwise or anticlockwise. This will produce an even gap between doors and frame.