

### **ASSEMBLY INSTRUCTIONS**

<<Before assembling, read all instructions>>

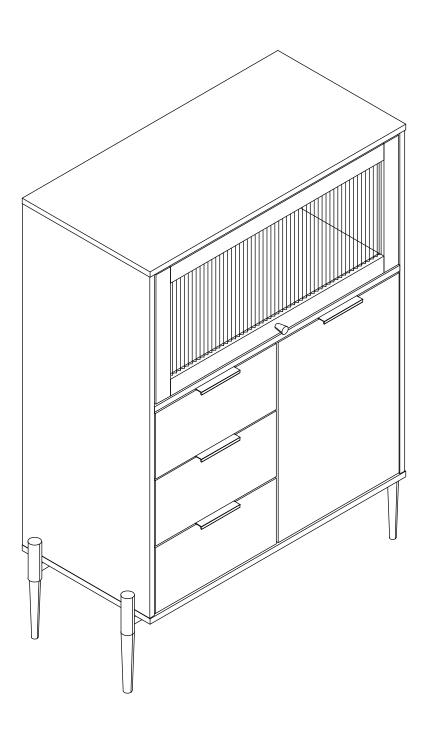

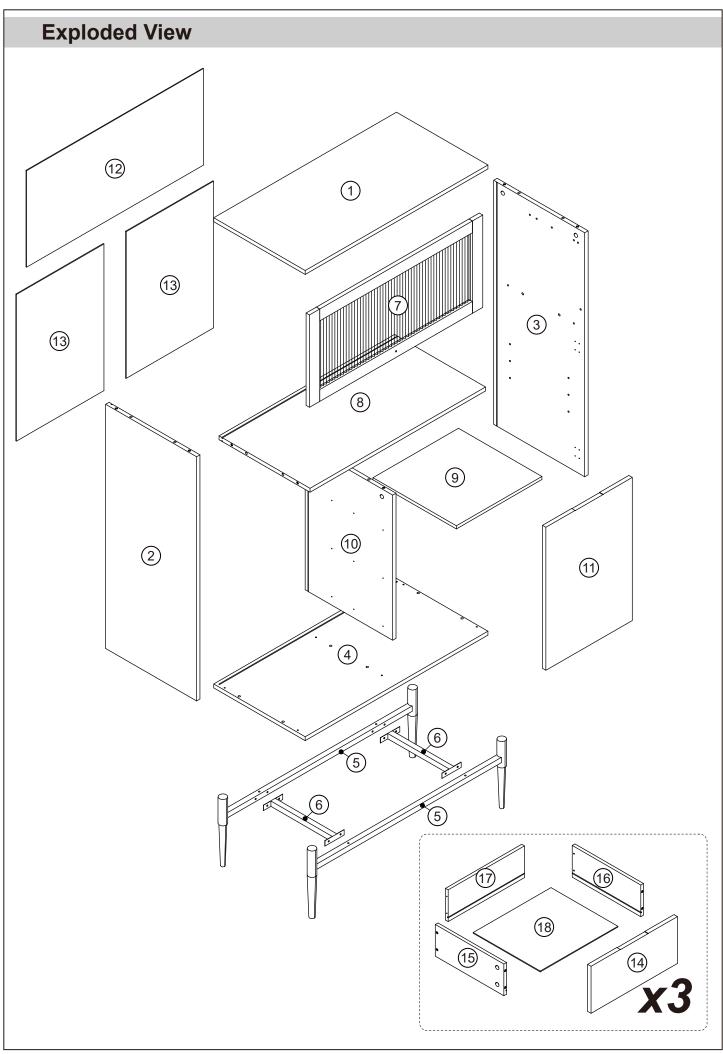

### **Fittings**






























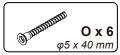










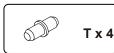













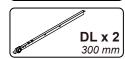




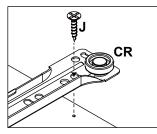

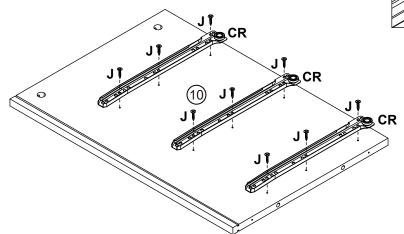

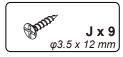





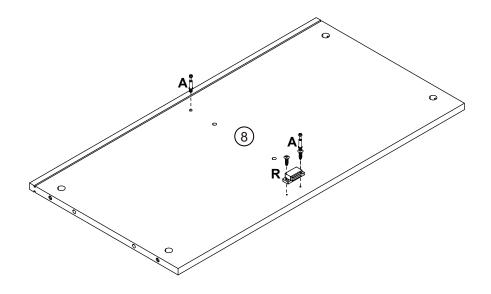








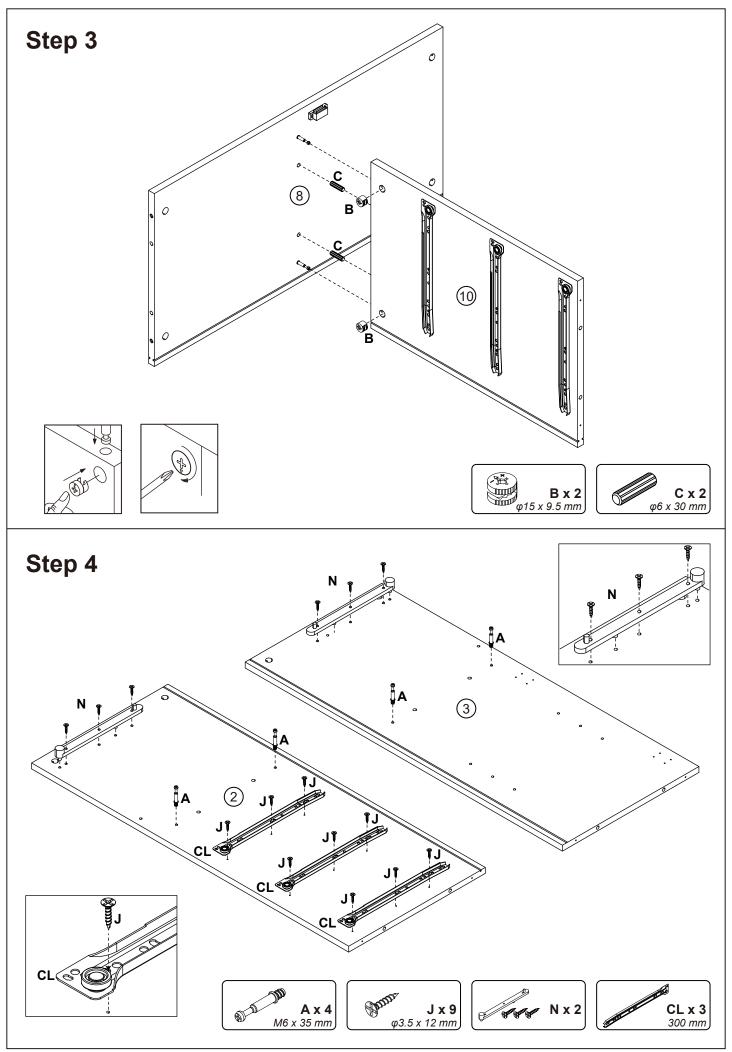


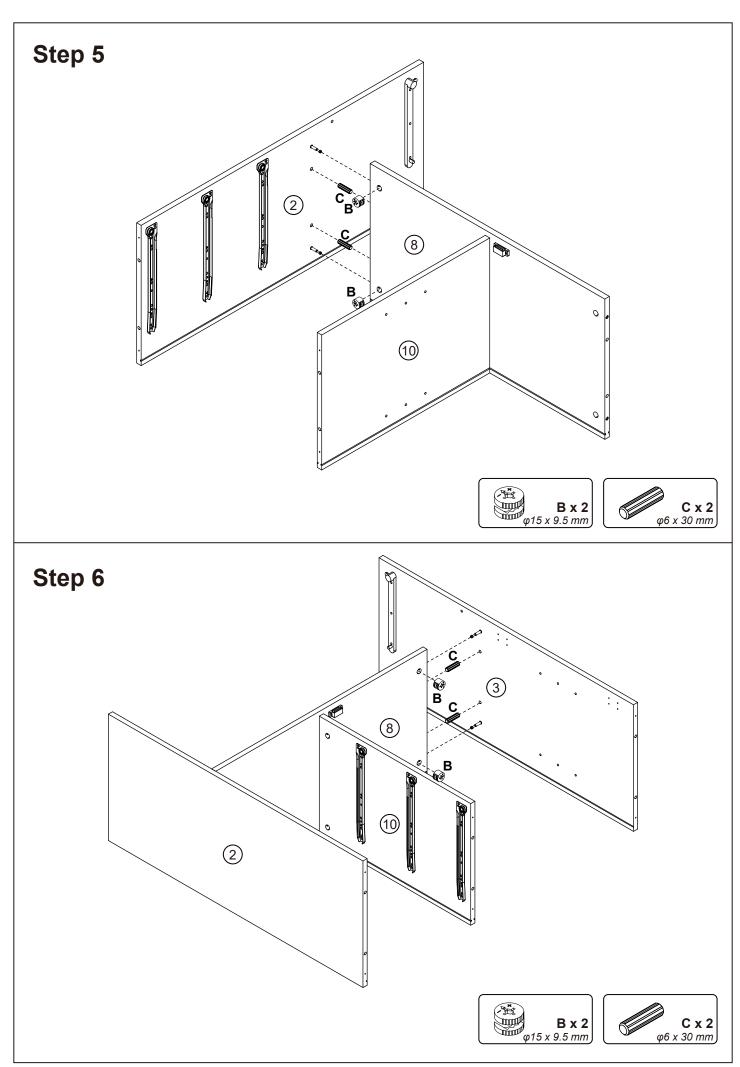


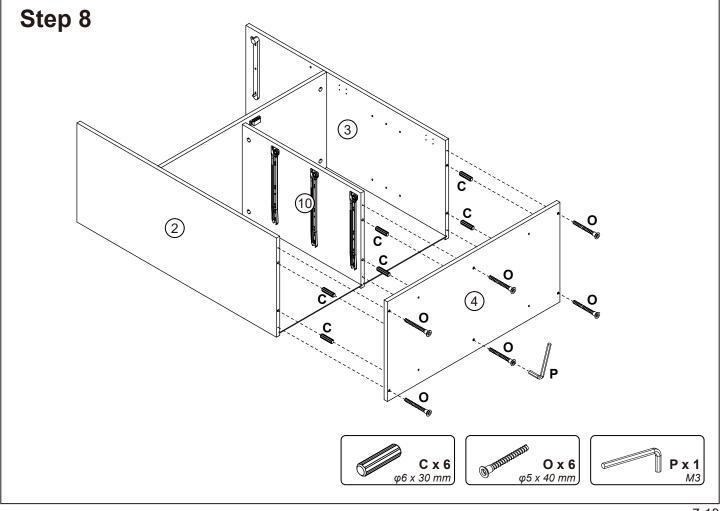


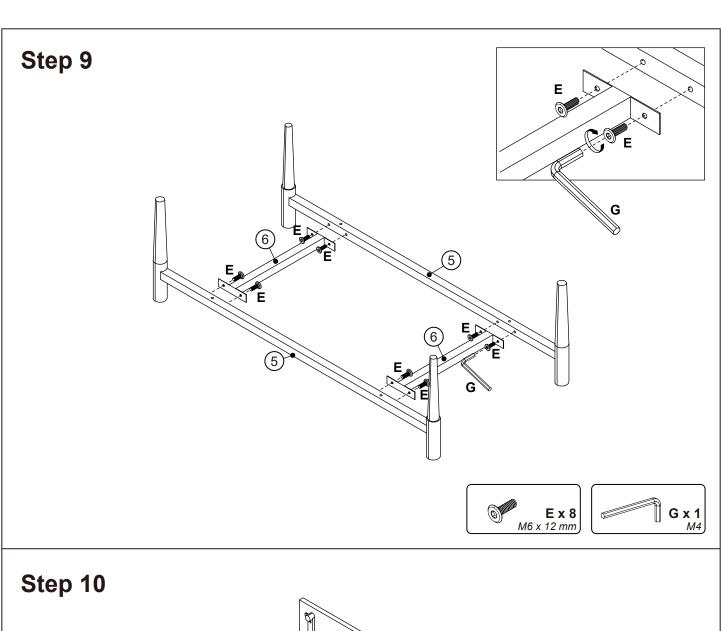


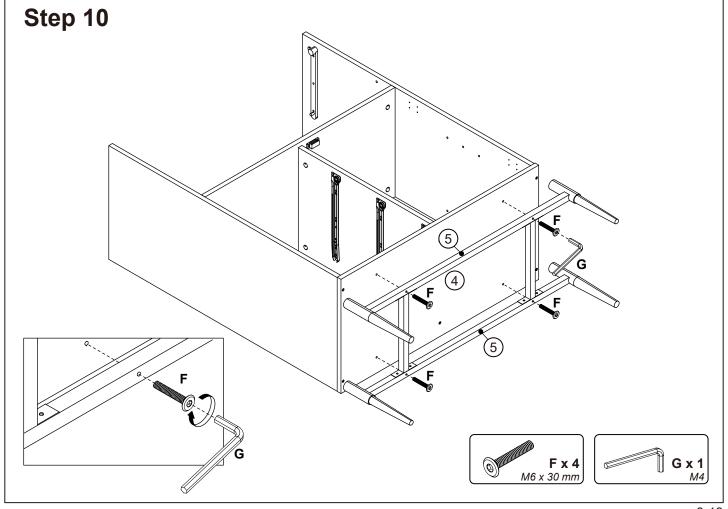


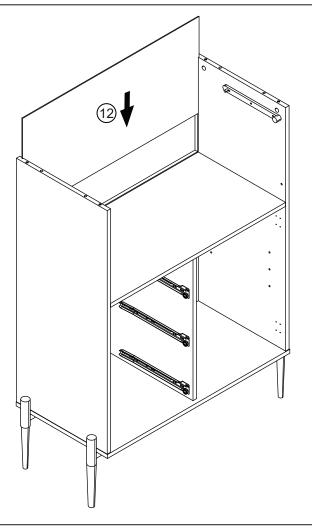


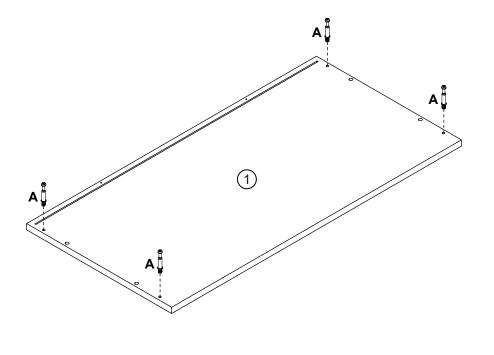


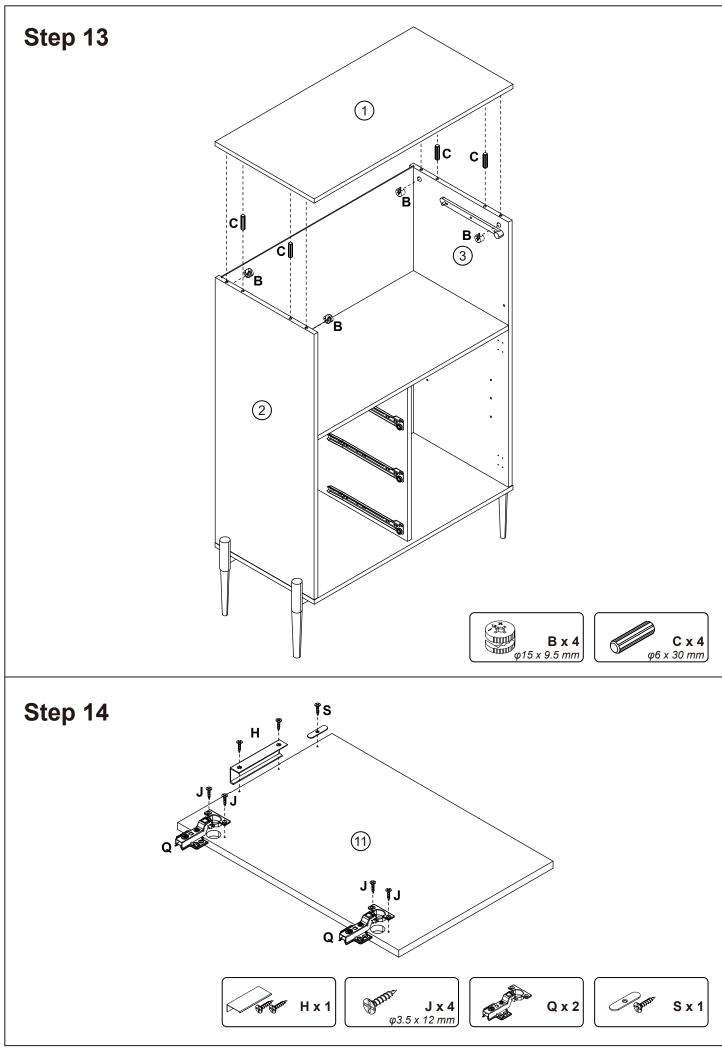

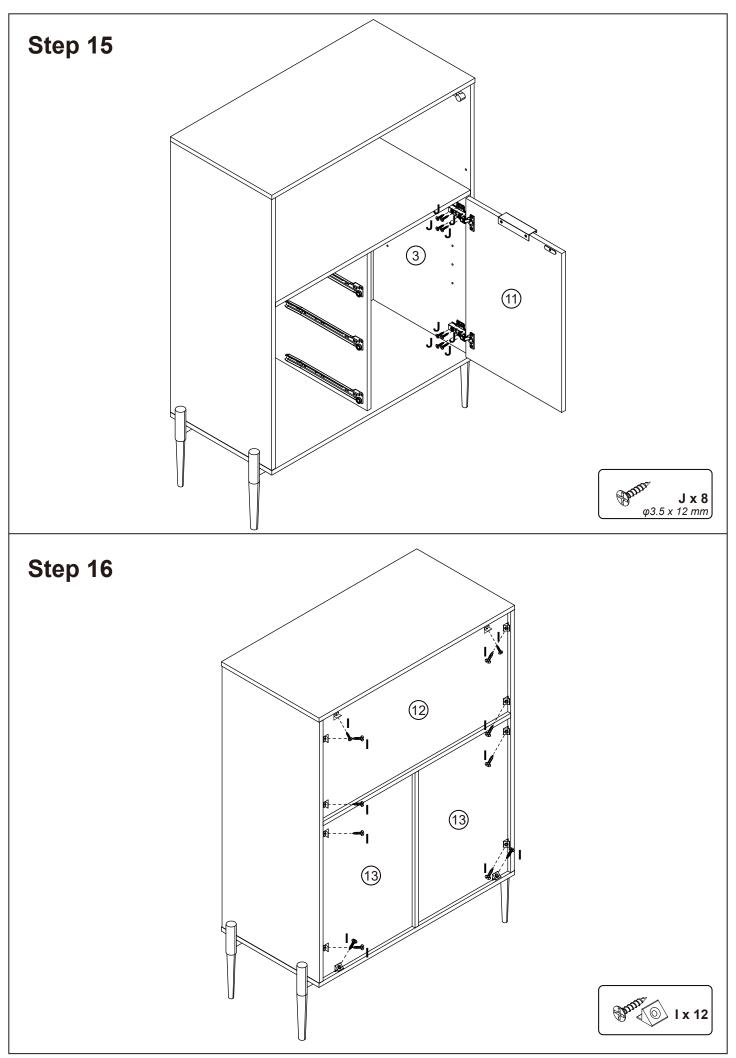


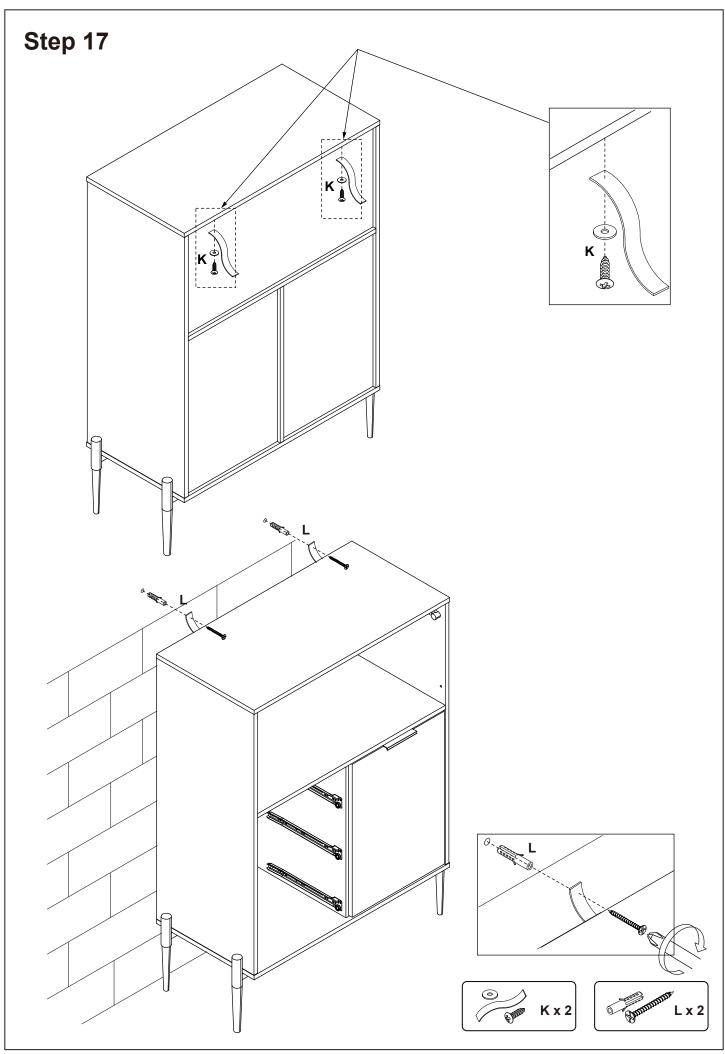

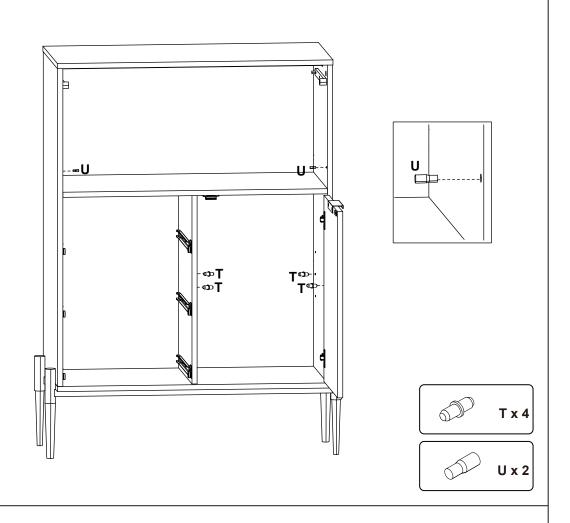

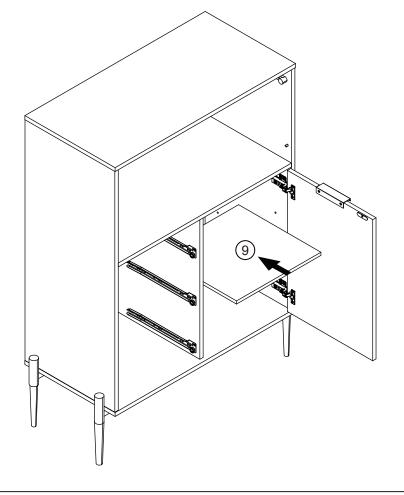


**x**3

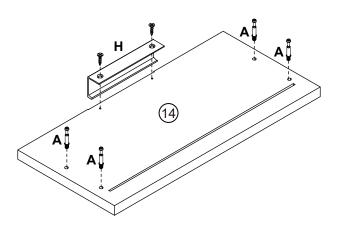






# Step 21 **X3**

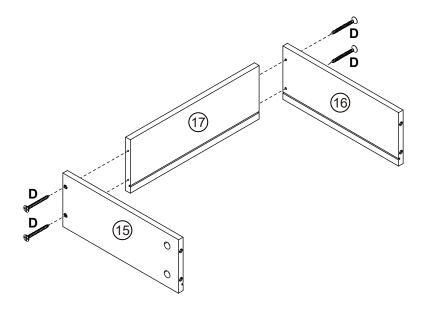





Step 22 **X3** 

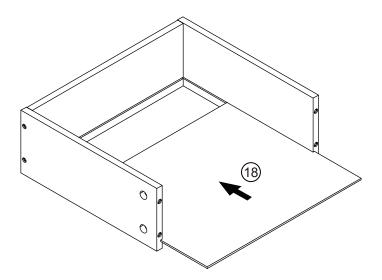


# Step 23 **X3**

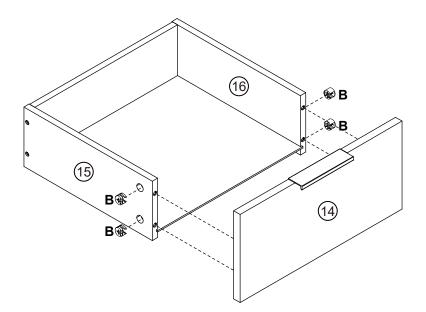


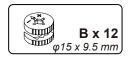

# Step 24 X3 DR JX 18 @3.5 x 12 mm DL x 3 300 mm



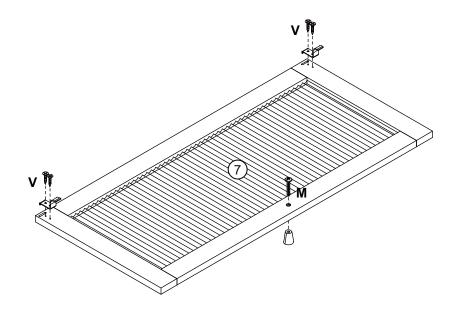

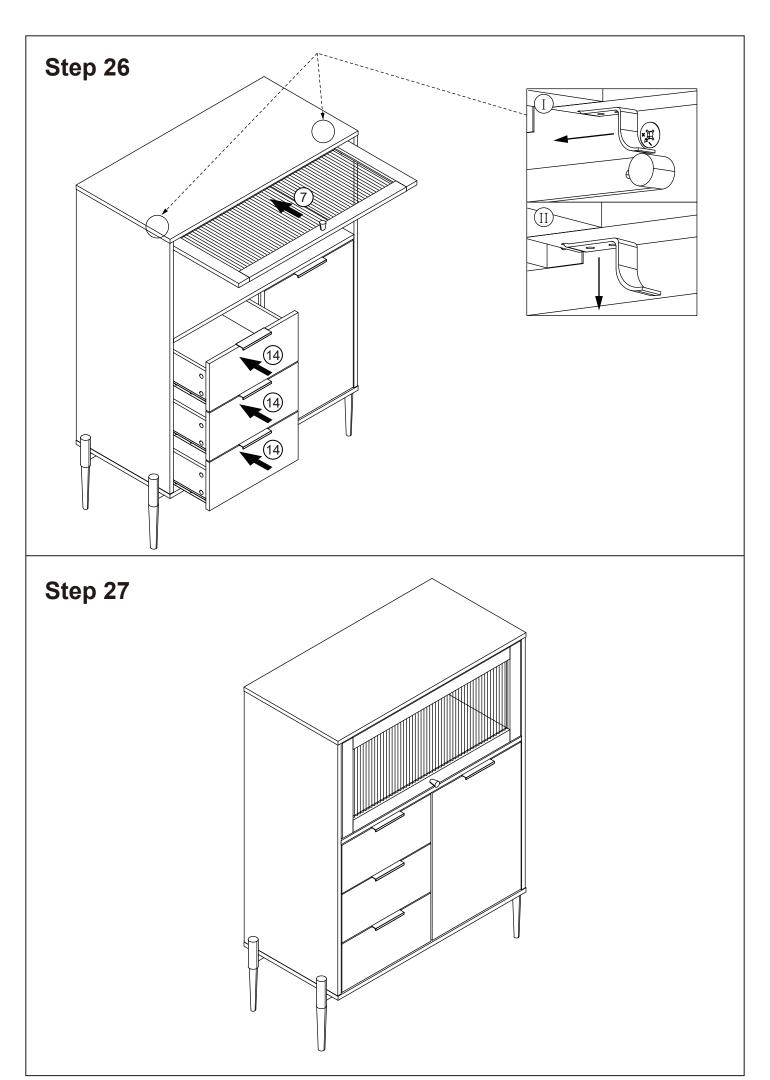





### **Customer Attention:**

To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.

This can be done by adjusting appropriate screws. See below illustration.

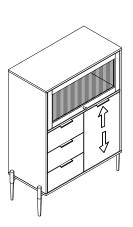


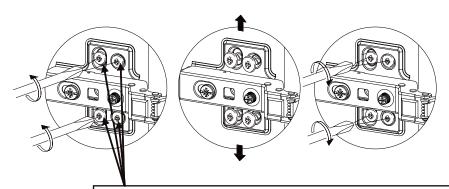


### **Vertical Door Adjustment:**

Loosen both screws on all hinges and lift the door to the desired height.


This allows an even space at the top and bottom between the door and frame.

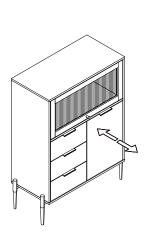


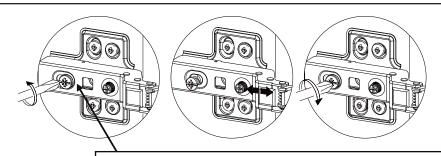

### **Lateral Door Adjustment:**

If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in approriate direction. (In or out)

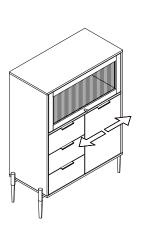

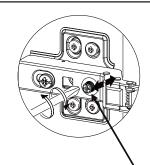

### **Horizontal Door Adjustment:**

Rotate Screw clockwise or anticlockwise. This will produce an even gap between doors and frame.