



# **ASSEMBLY INSTRUCTIONS**


<<Before assembling, read all instructions>>

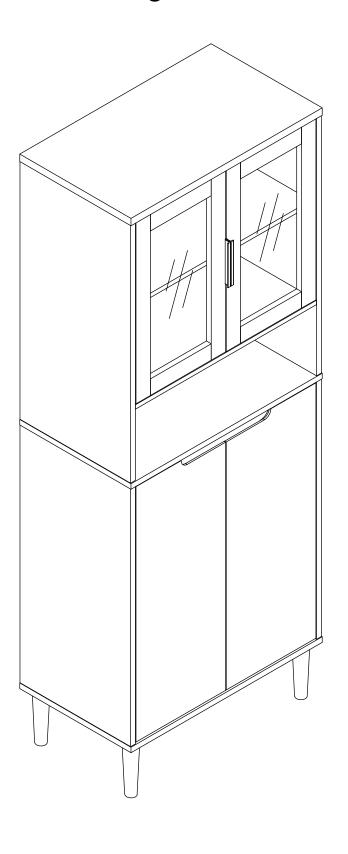


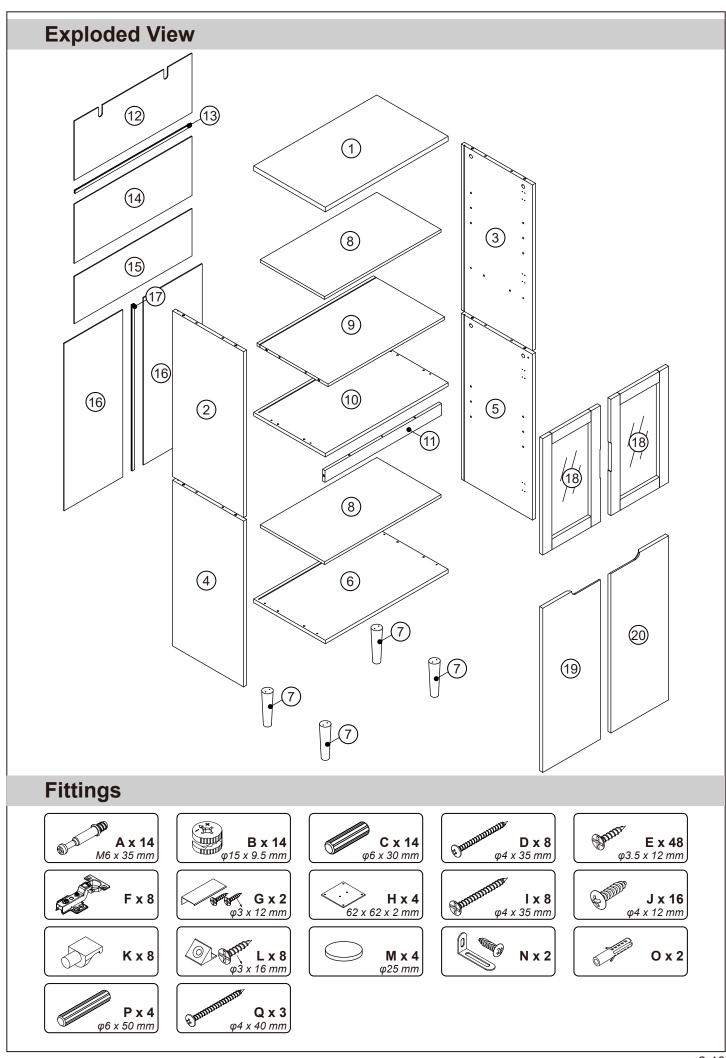


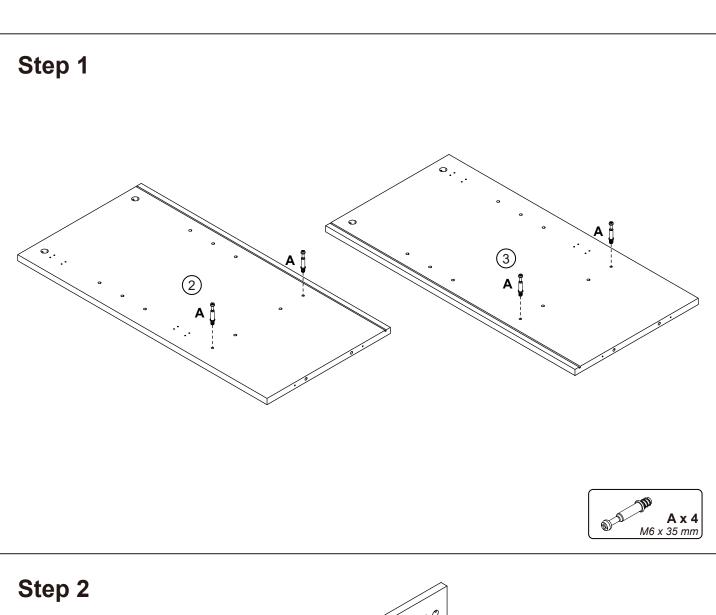


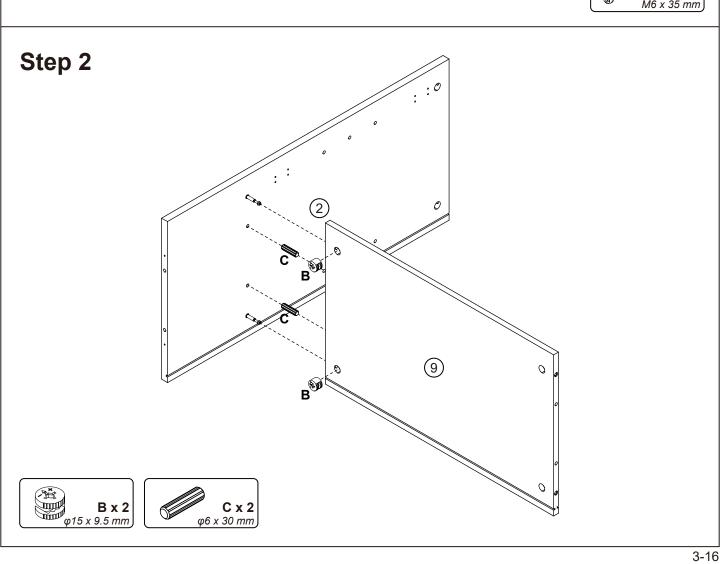


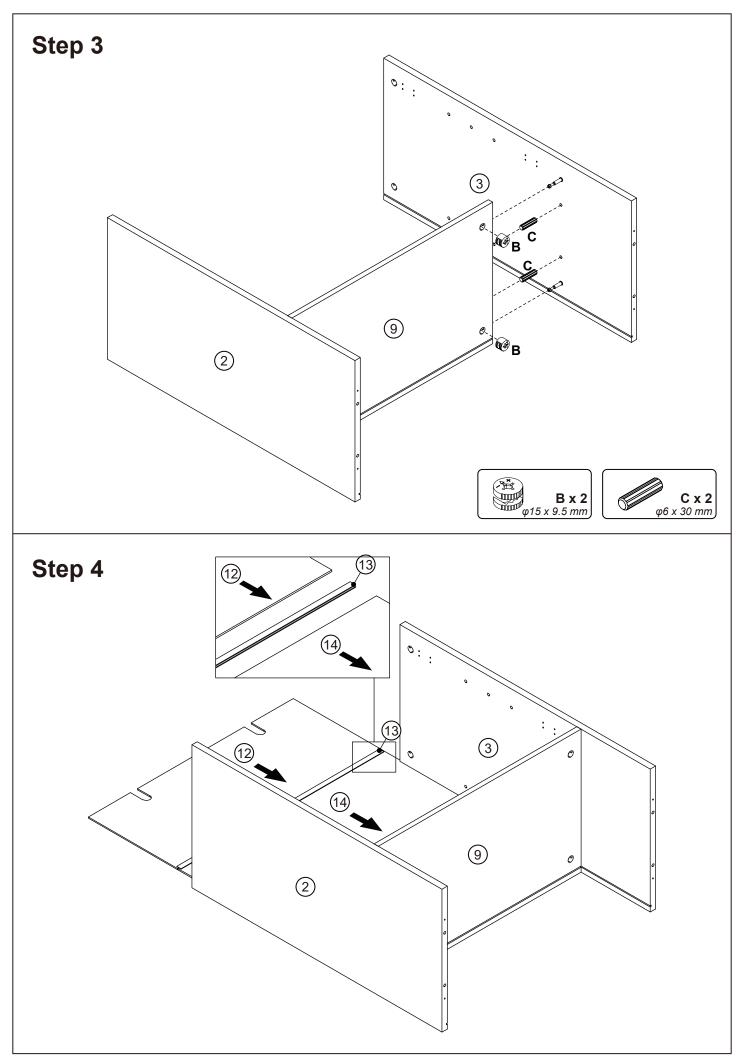


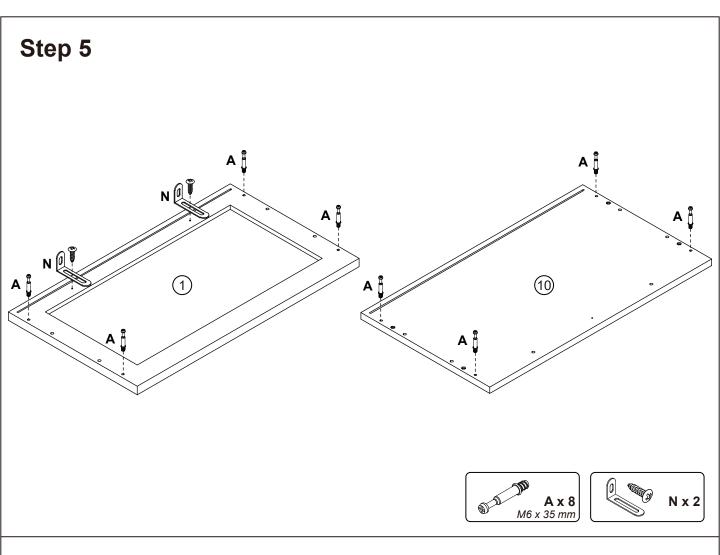


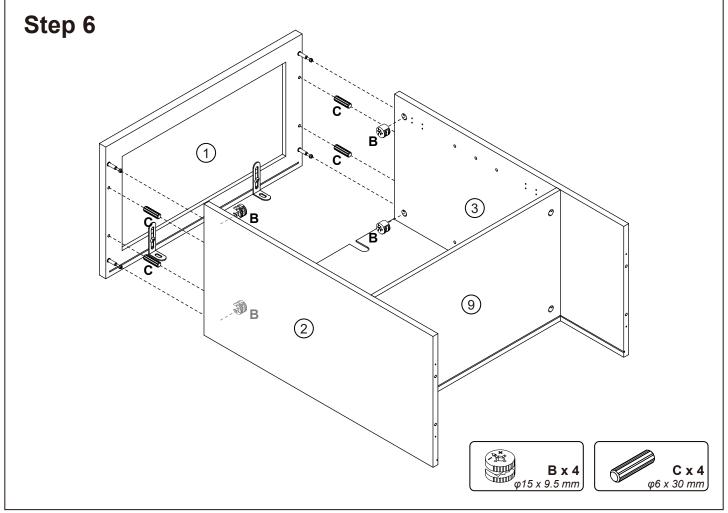


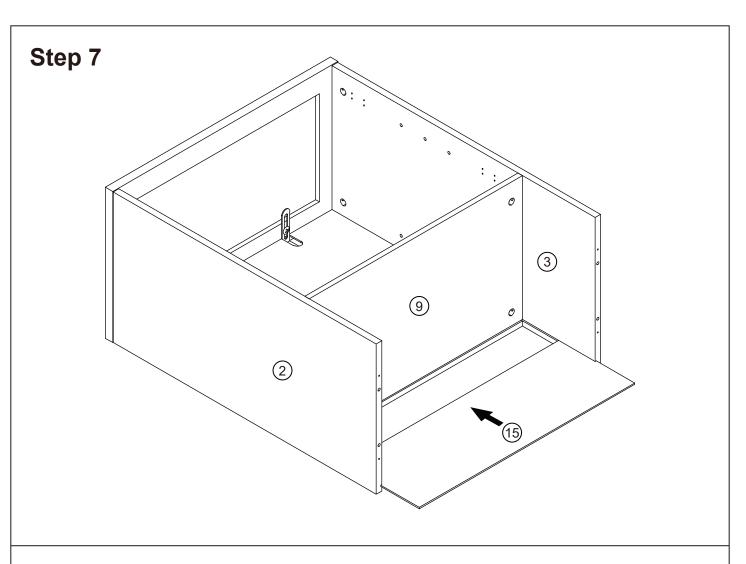


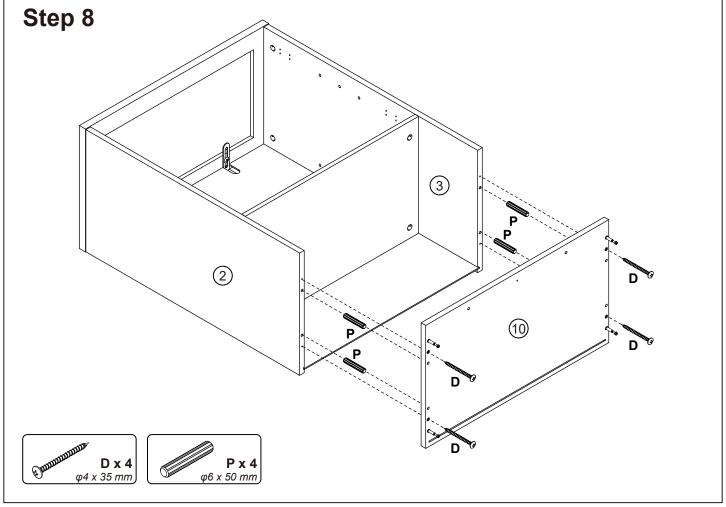

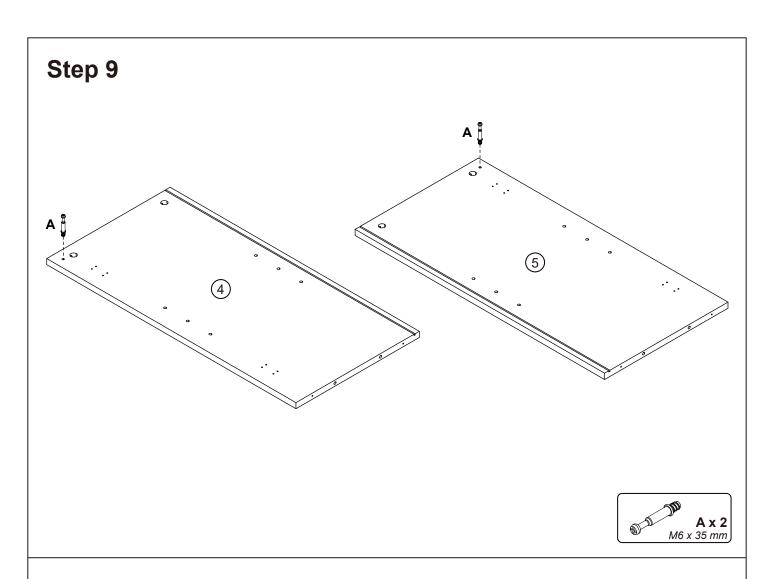

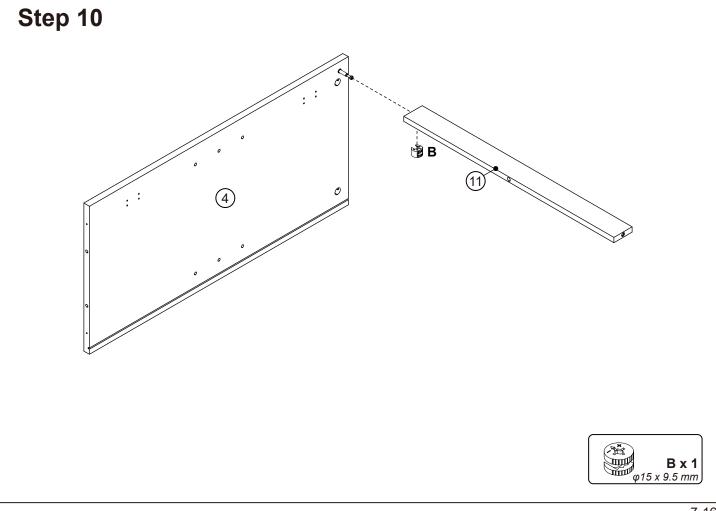

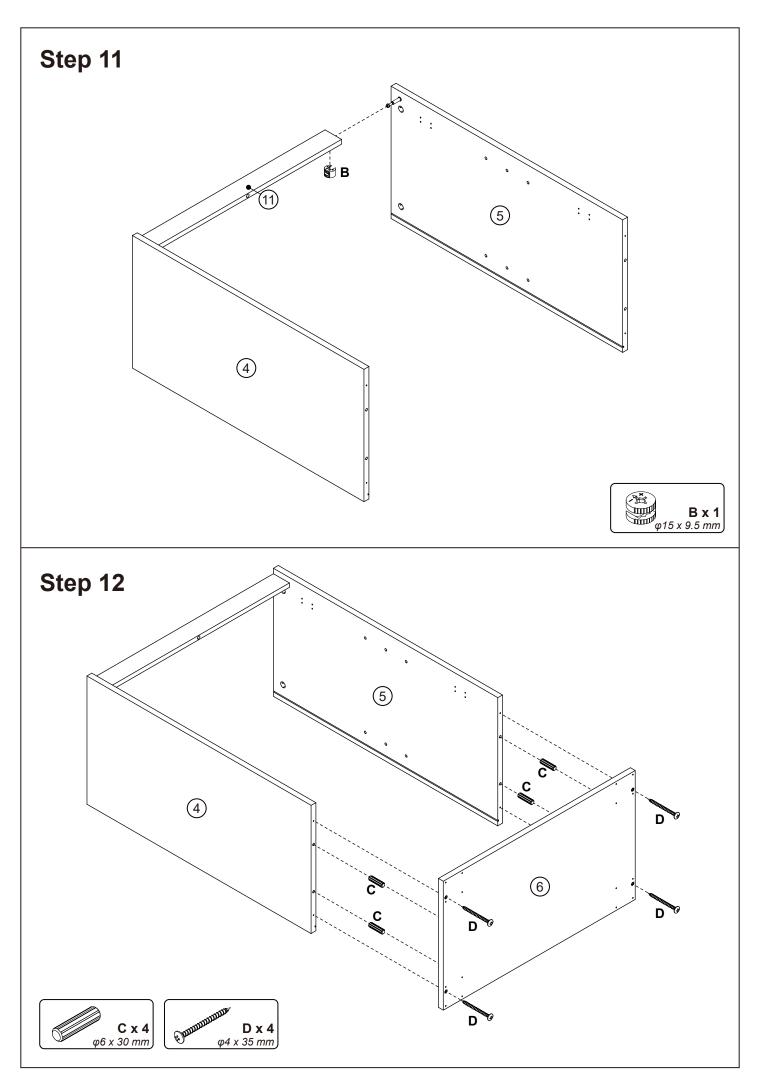

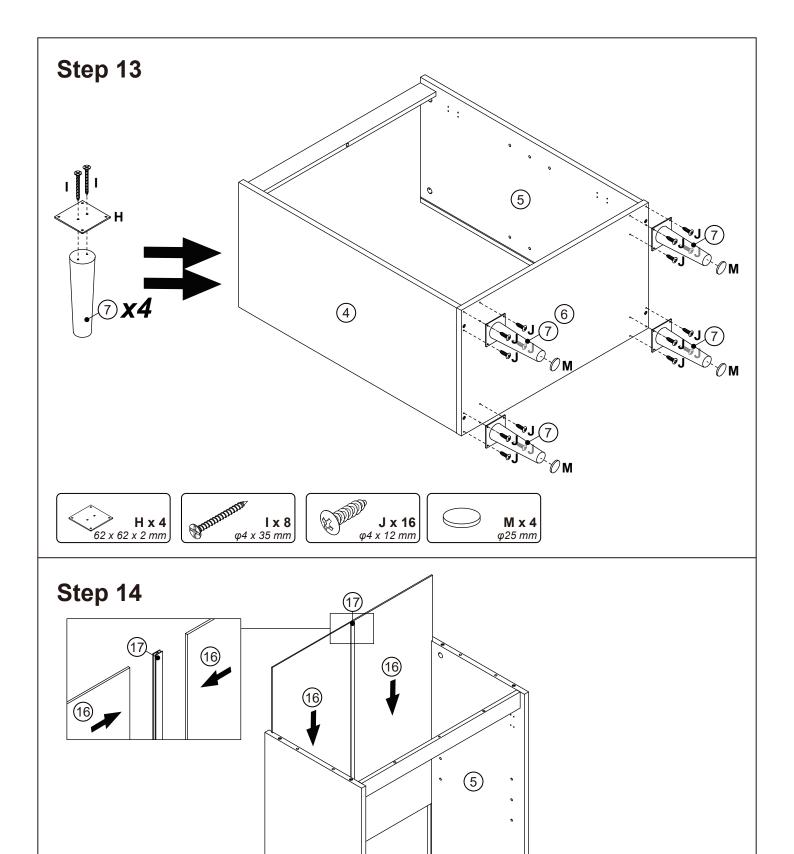


4

# Step 15 2 (5) 4 B x 4 φ15 x 9.5 mm **C x 2** φ6 x 30 mm **Q x 1** φ4 x 40 mm


# Step 16




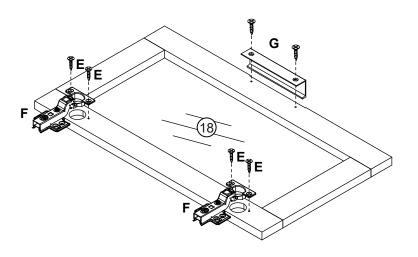








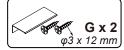

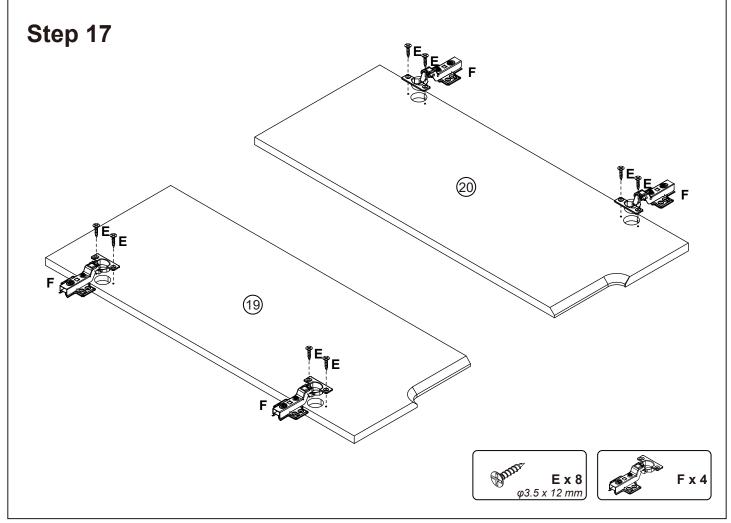

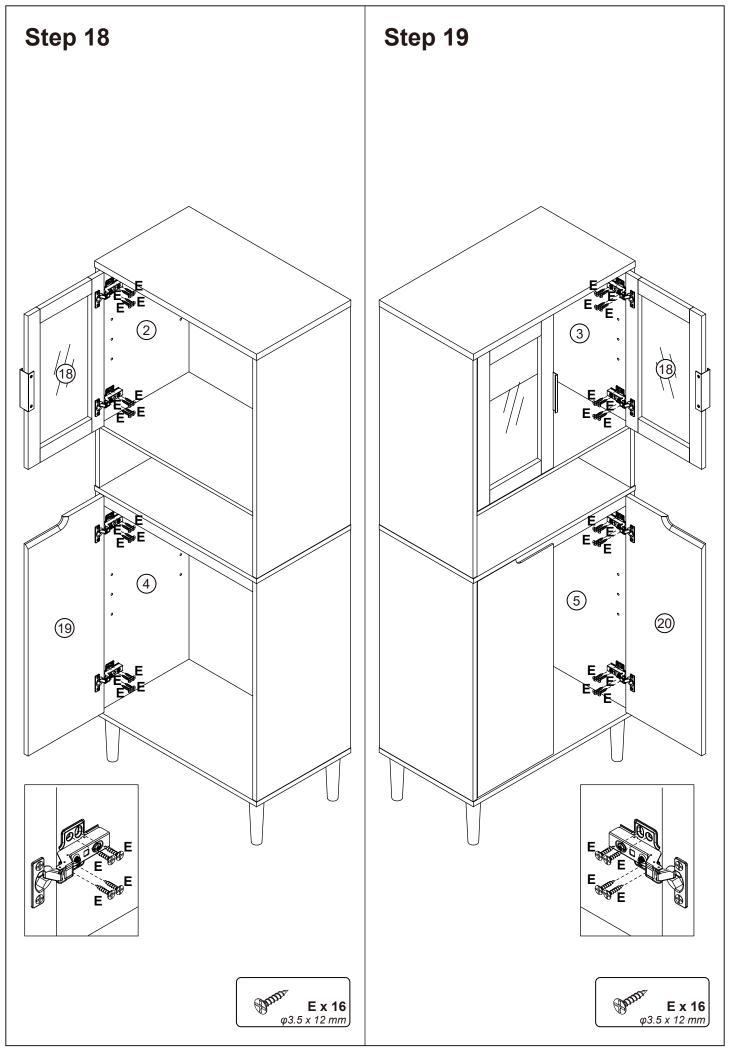

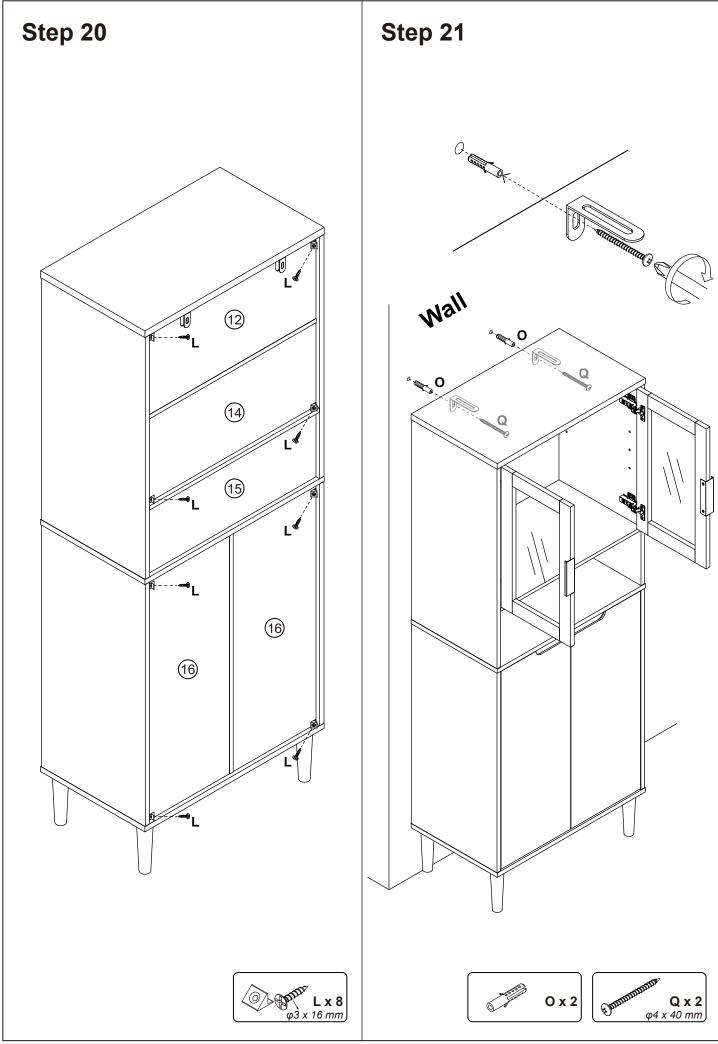

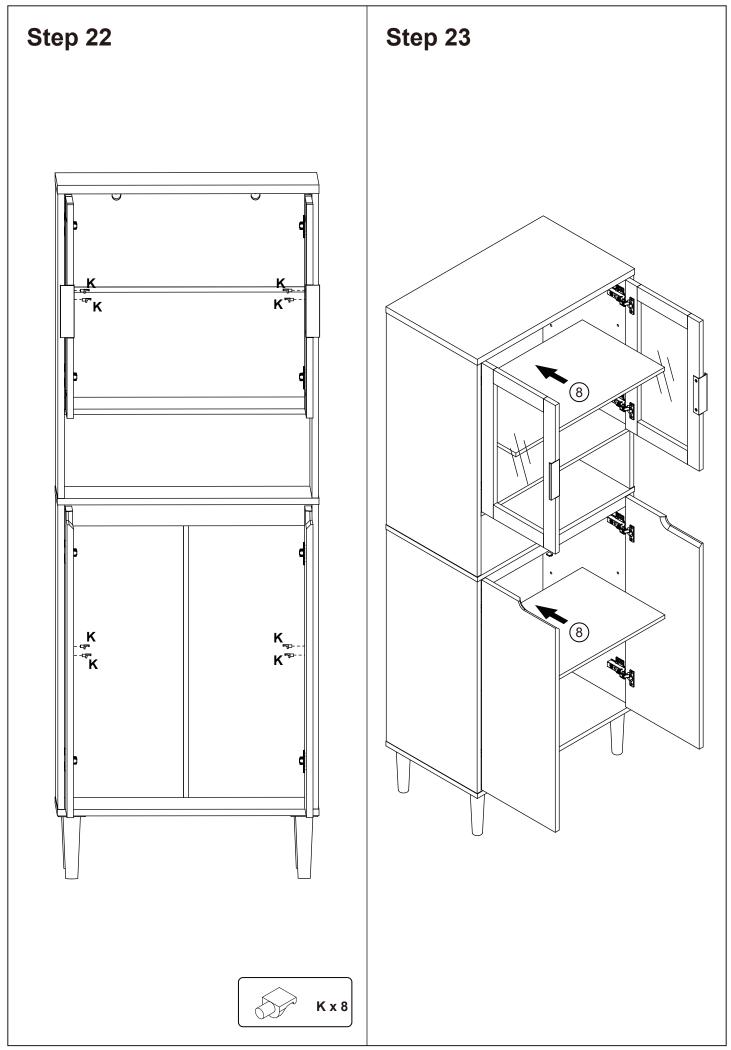

# Step 24


# Step 25




### **Customer Attention:**

To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.

This can be done by adjusting appropriate screws. See below illustration.

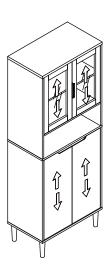


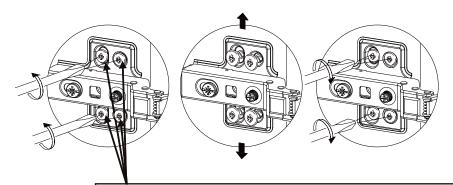


### **Vertical Door Adjustment:**

Loosen both screws on all hinges and lift the door to the desired height.


This allows an even space at the top and bottom between the door and frame.

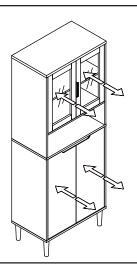


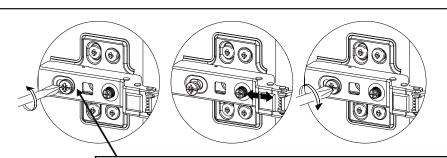

## **Lateral Door Adjustment:**

If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in approriate direction. (In or out)

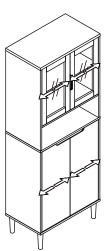

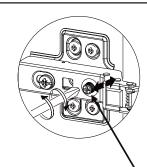

### **Horizontal Door Adjustment:**

Rotate Screw clockwise or anticlockwise. This will produce an even gap between doors and frame.