
LV C724 / LV C730

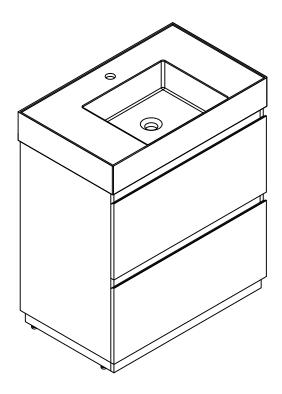

Thank you for shopping with us!

We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- •We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- •Keep children and animal away from the work area, small parts could choke if swallowed.
- •Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

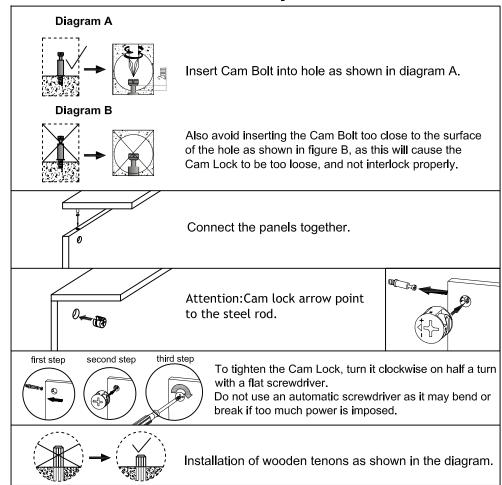

Dimensions

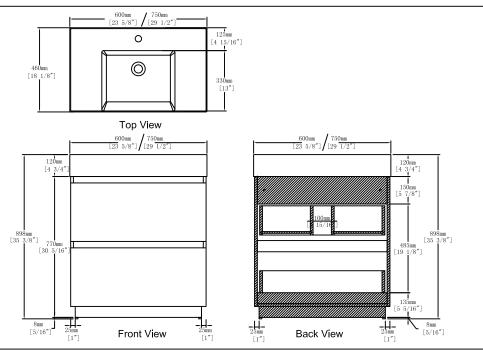


Hardware


NO.	Draw	QTY
Α	Screws Ø4x14mm	44
В	Two-in-one connector	57
С	Two-in-one connector	57
D	Q Wood plug	4
E	Plastic anchor(Ø10mm)	2
F	Screws for fix on the wall	2
G	Bracket (53x70x44mm)	2

NO.	Draw	QTY
Н	Bracket (19x19x35mm)	2
	Track	2
J	Screws Ø4x25mm	6
K	Screws Ø4x20mm	8
L	Anti-collision gasket	8
М	Adjustable feet	4
N	Screwdriver	1

Components

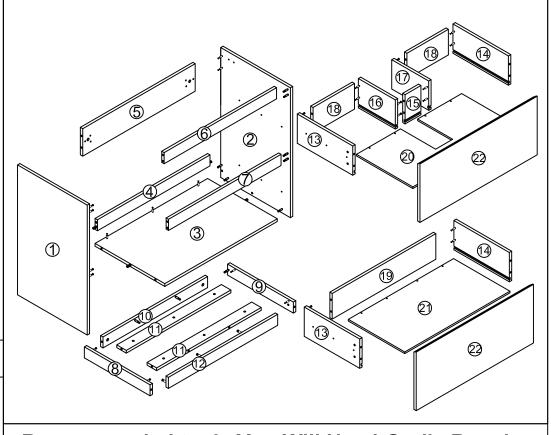



Recommended tools You Will Need-Outils Require

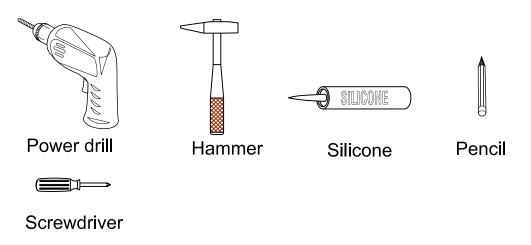



Page


Page

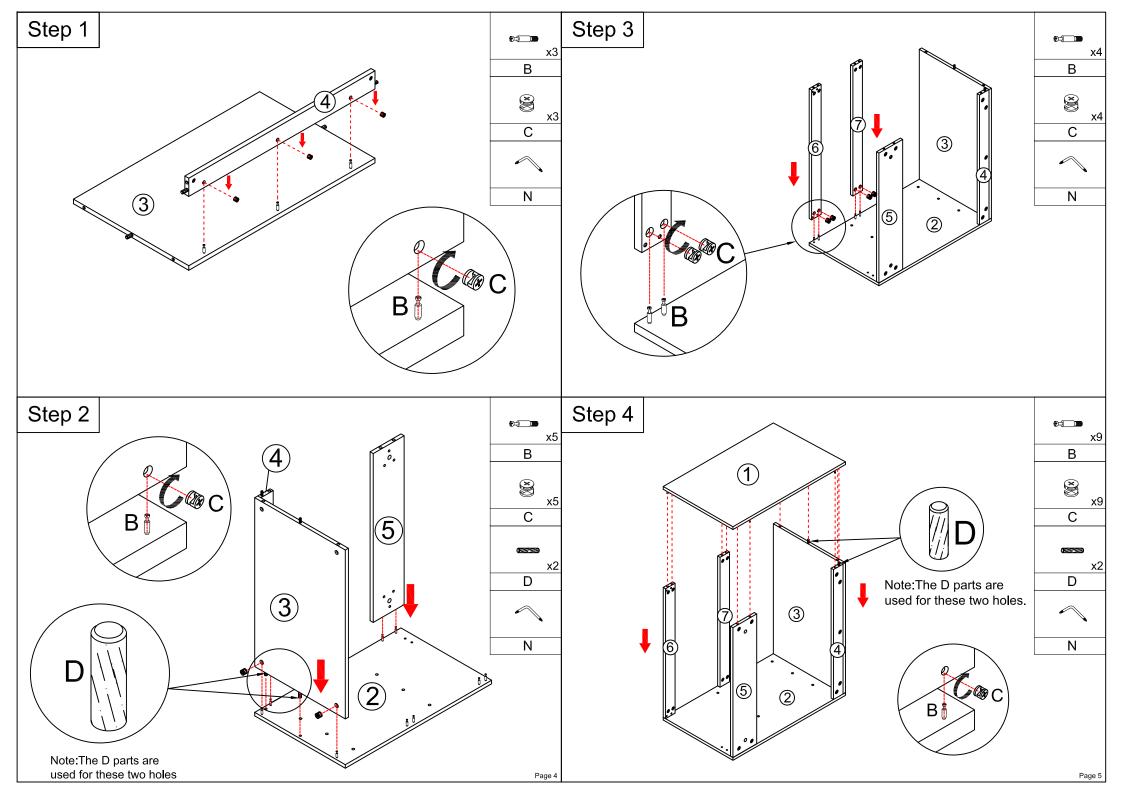

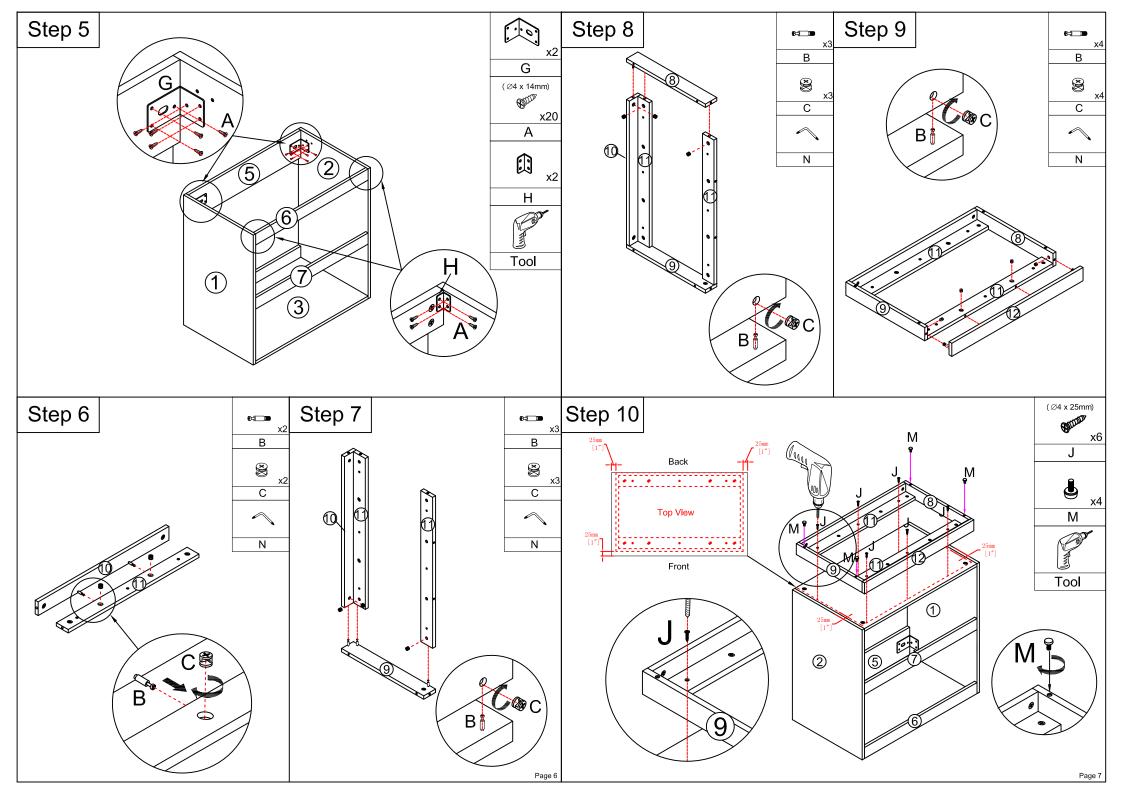


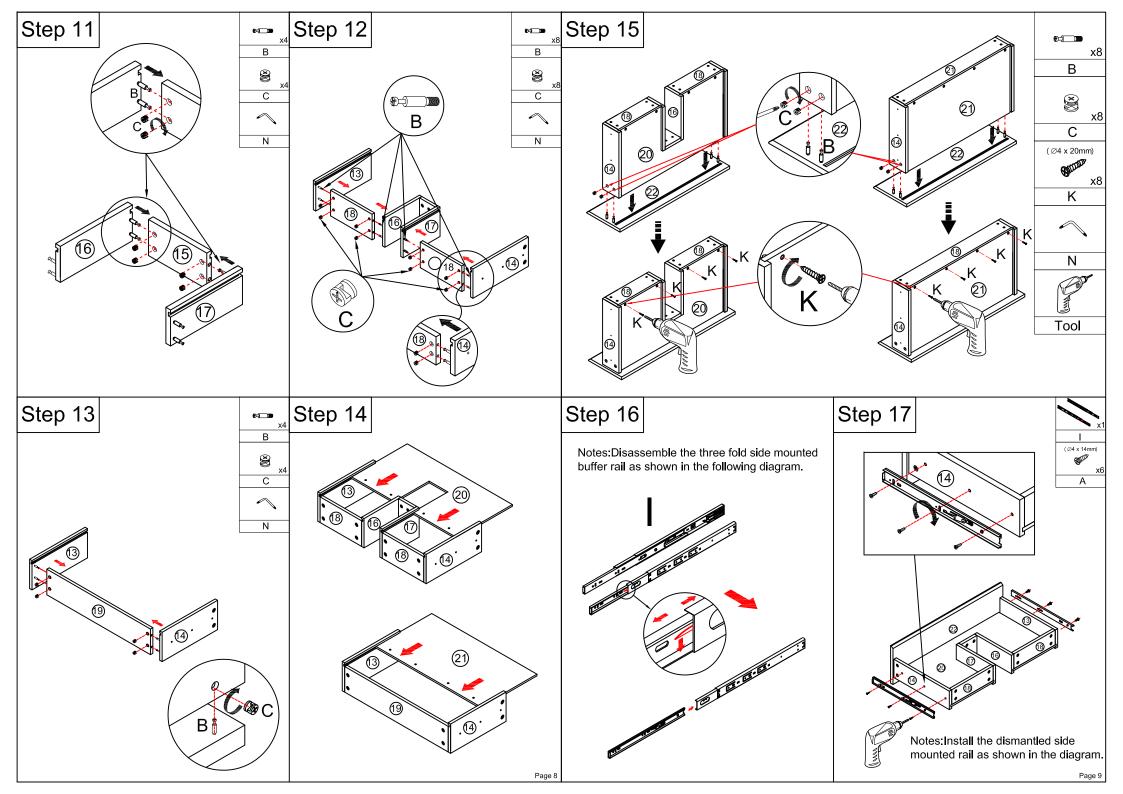

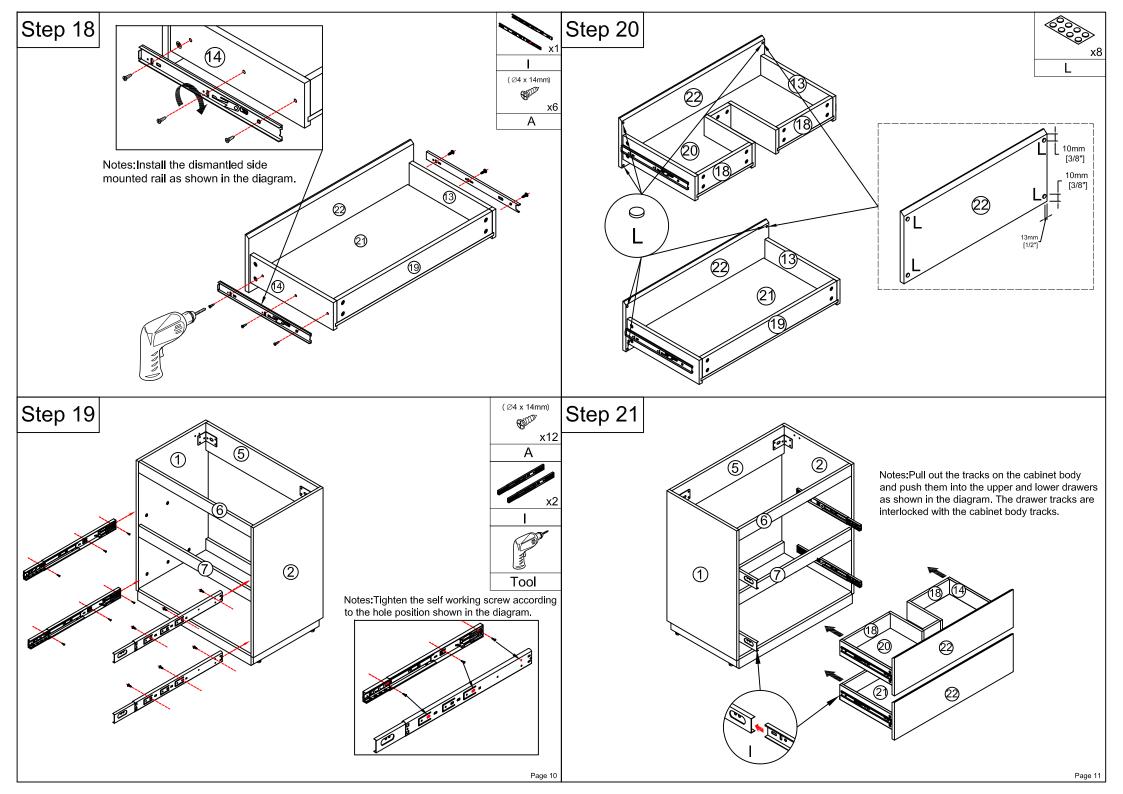

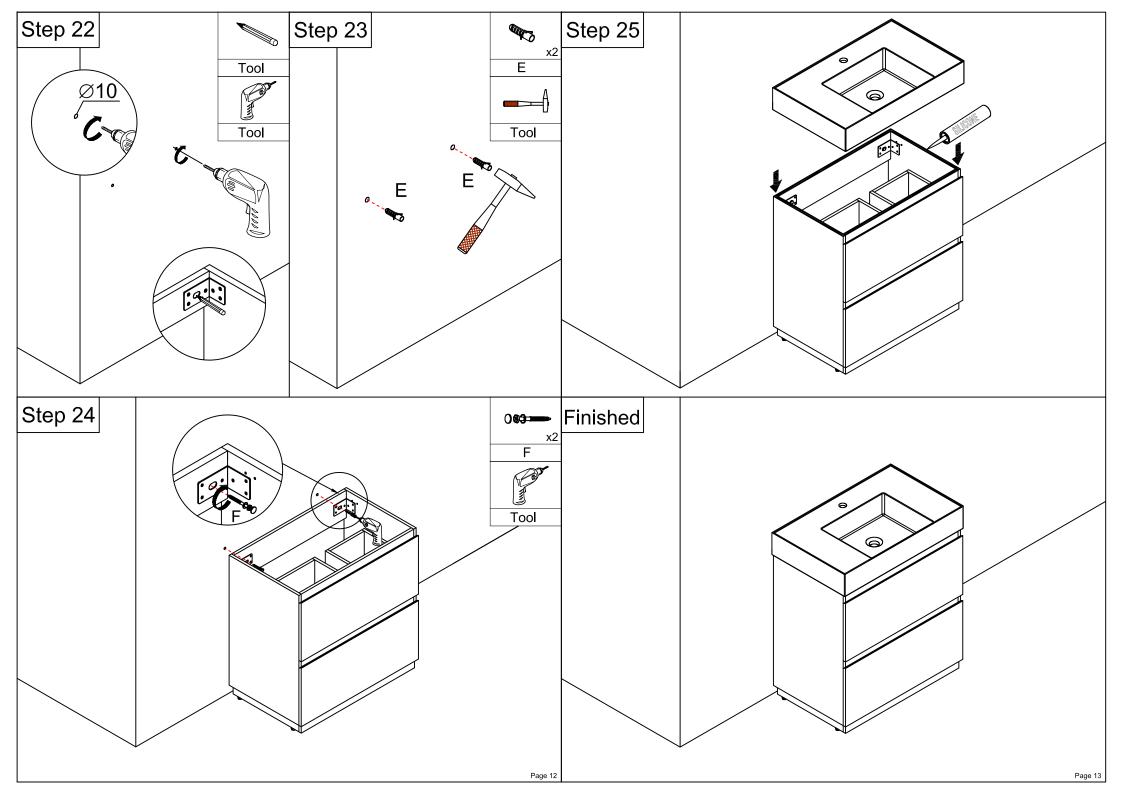

HINGE ADJUSTMENTS

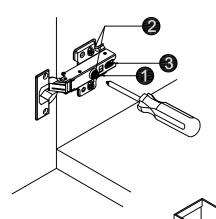

Coverage Distance

Rotate screw to the right:Coverage distance decrease (-) Rotate screw to the left:Coverage distance decrease (+)

2 Depth Distance

Rotate screw to the right:Coverage distance decrease (-) Rotate screw to the left:Coverage distance decrease (+)

3 Height Distance

Release the base screw, adjust the height of the door, and then tighten the screw.



CARE CLEANING AND MAINTENANCE

- 1.Dust regularly with a soft, dry cloth.
- 2. Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.
- 3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.
- 4. The sink is fragile, please pay attention to maintaining its appearance.
- 5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.

THANKS FOR WATCHING

Your feedback is invaluable to us and we would love to hear about your experience. Please take the time to leave us a review.