
Desk SKU:N751P178493 N751P178494

Assembly Instruction-Pleasekeepfor future reference

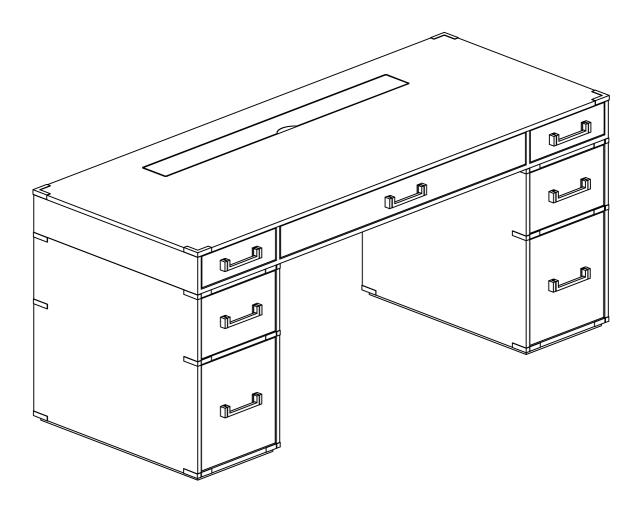

Dimensions

Width-70inch

Depth-28inch

Height-30inch

Important-Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable) Do not allow children to climb or hang on the furniture Do not open more than one drawer at a time Do not place heavy items in the top drawers Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


PARTS LIST-N751P178493

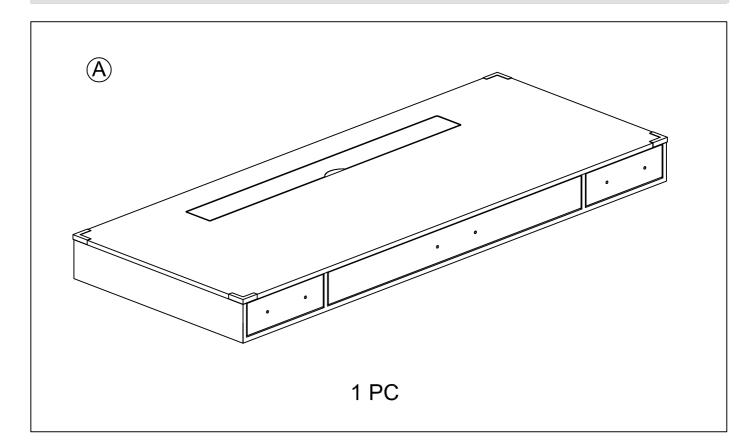

PARTS LIST-N751P178494

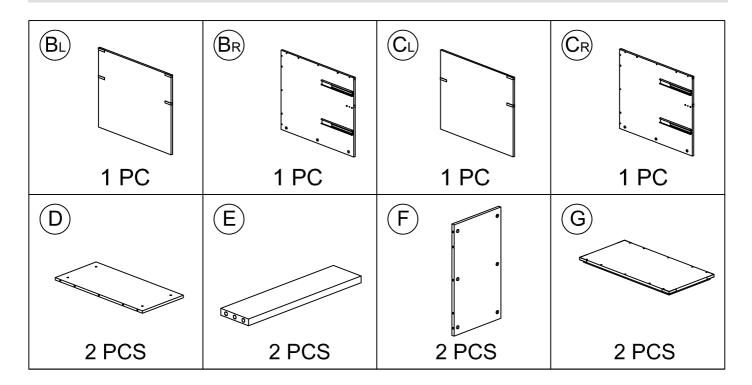


PARTS LIST-N751P178494

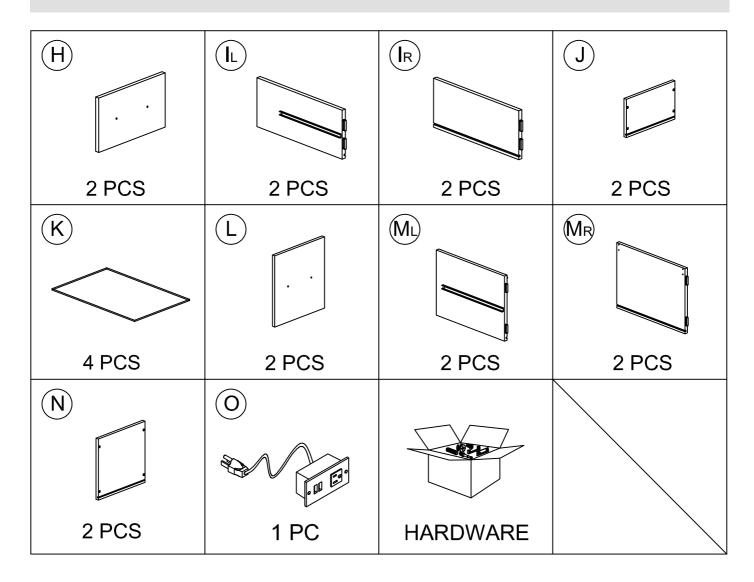

HARDWARE LIST

Please check you have all the panels listed below

Note: the quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

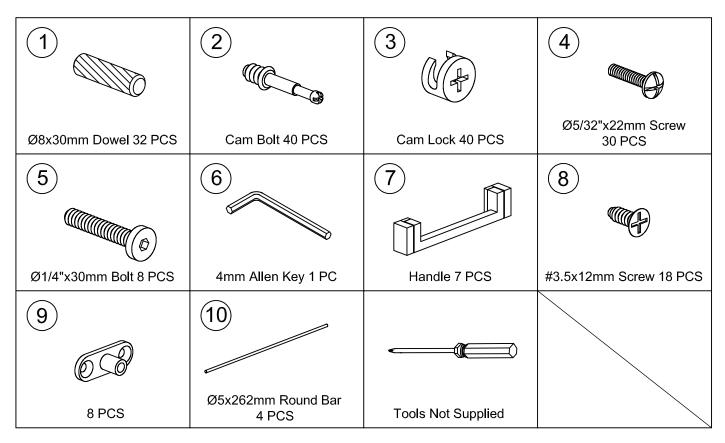

Using Camlocks

Step 1

Step 2

Connect the male camlock as diected in the assembly instructions using a scewdriver.

Push the male camlock

into the entry hole.

DO NOT OVER TIGHTEN. NE PAS SERRER EXCESSIVEMENT.

1

Step 3

Insert the female camlock as shown in the instruction.


Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

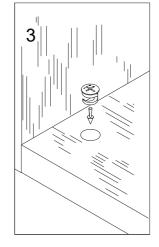


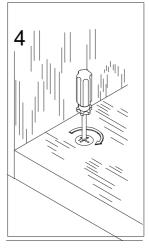



6


COMPONENTS - KEY DIAGRAM N751P178494

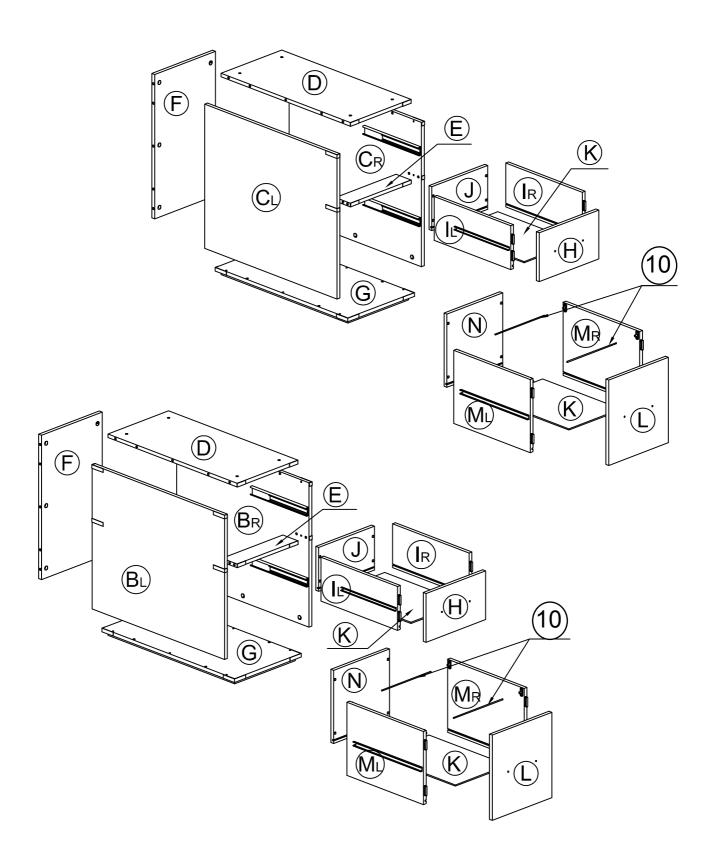


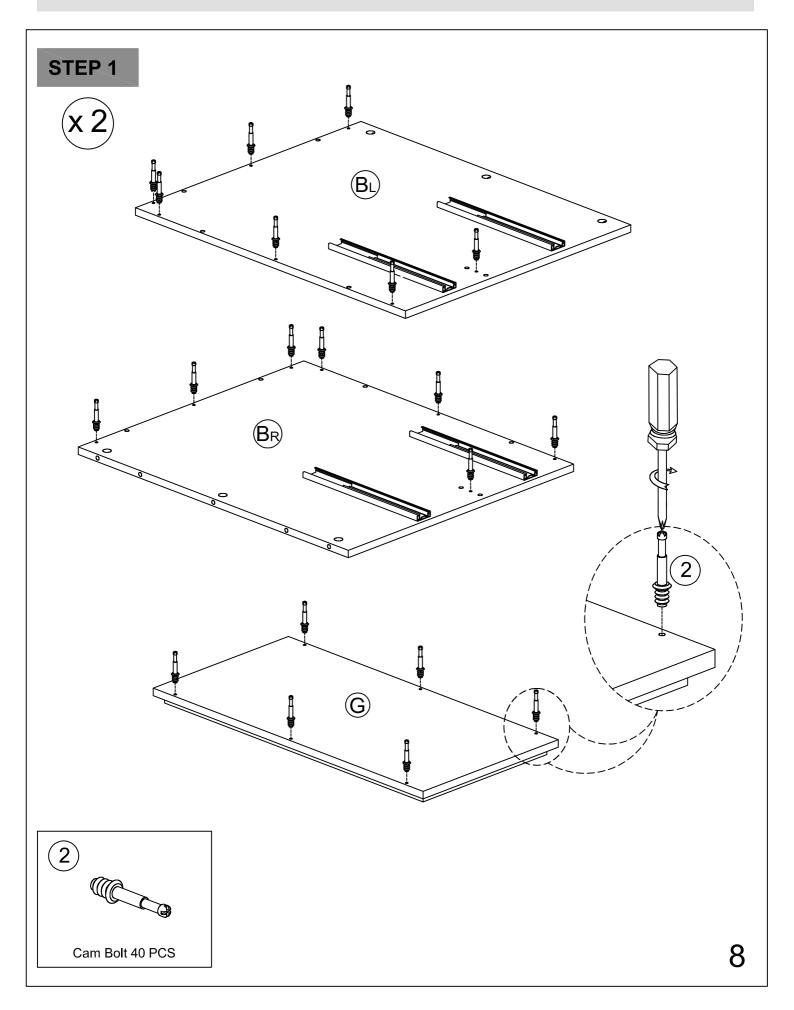


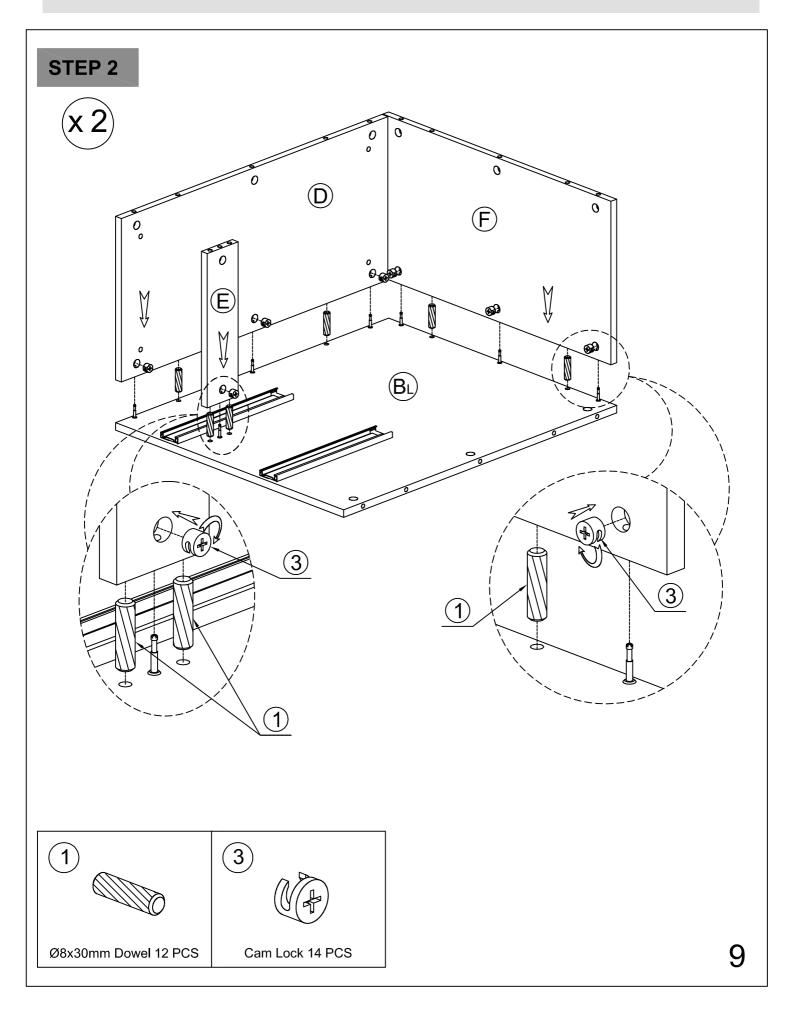


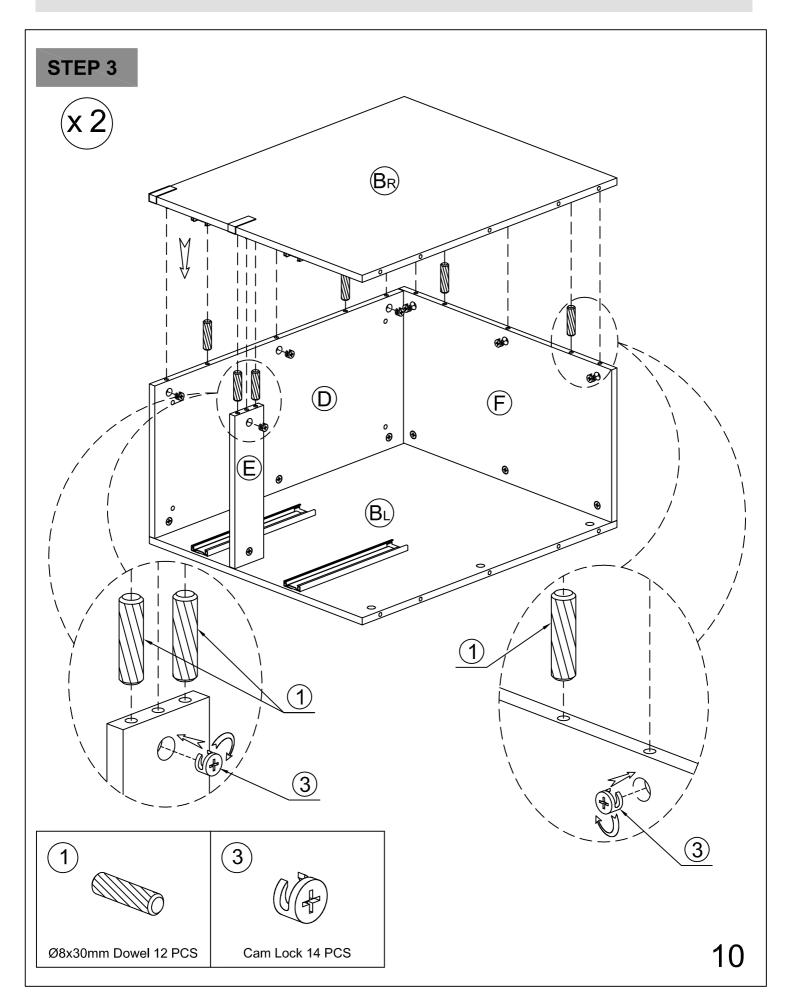


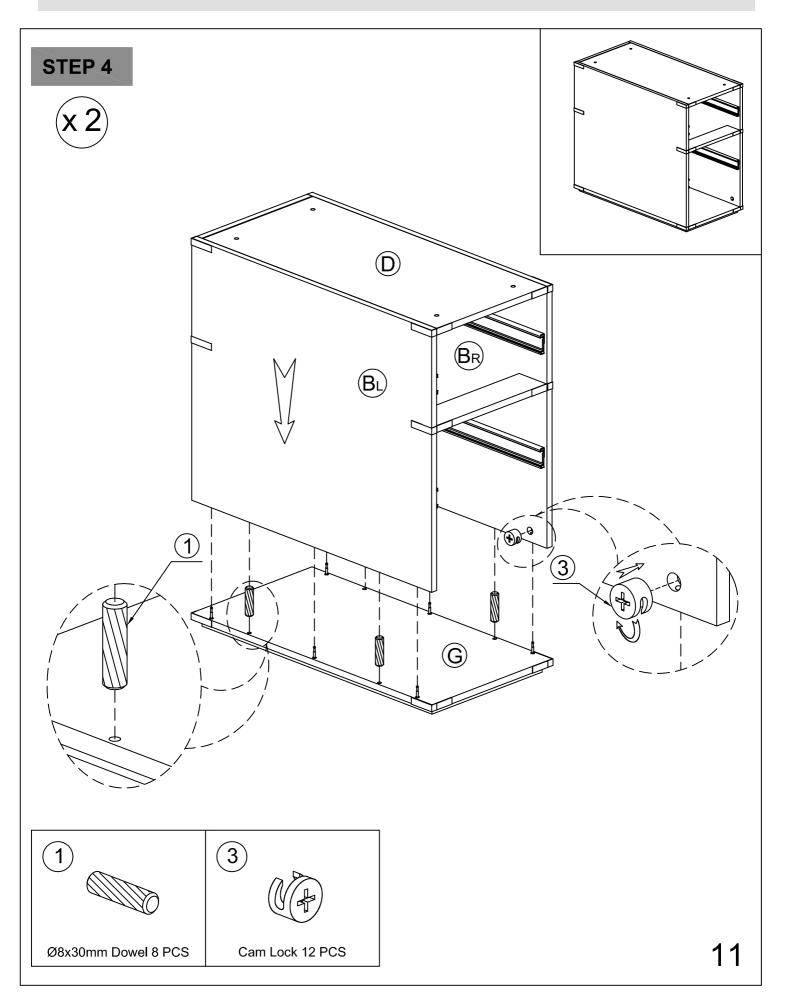


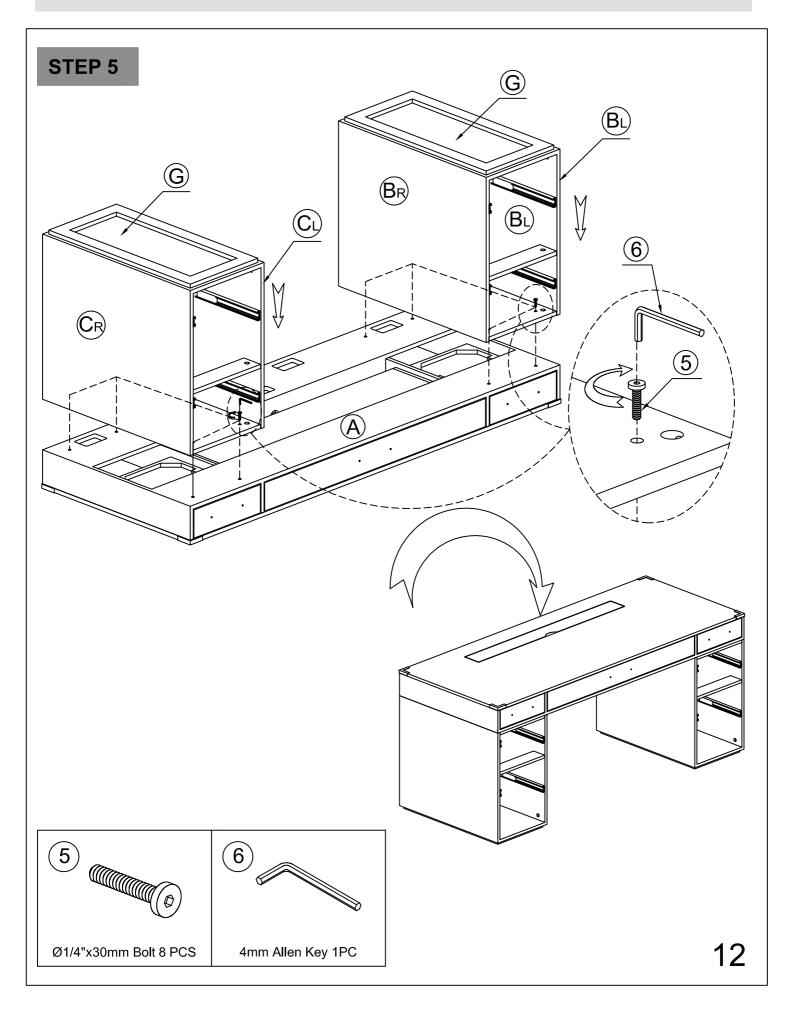


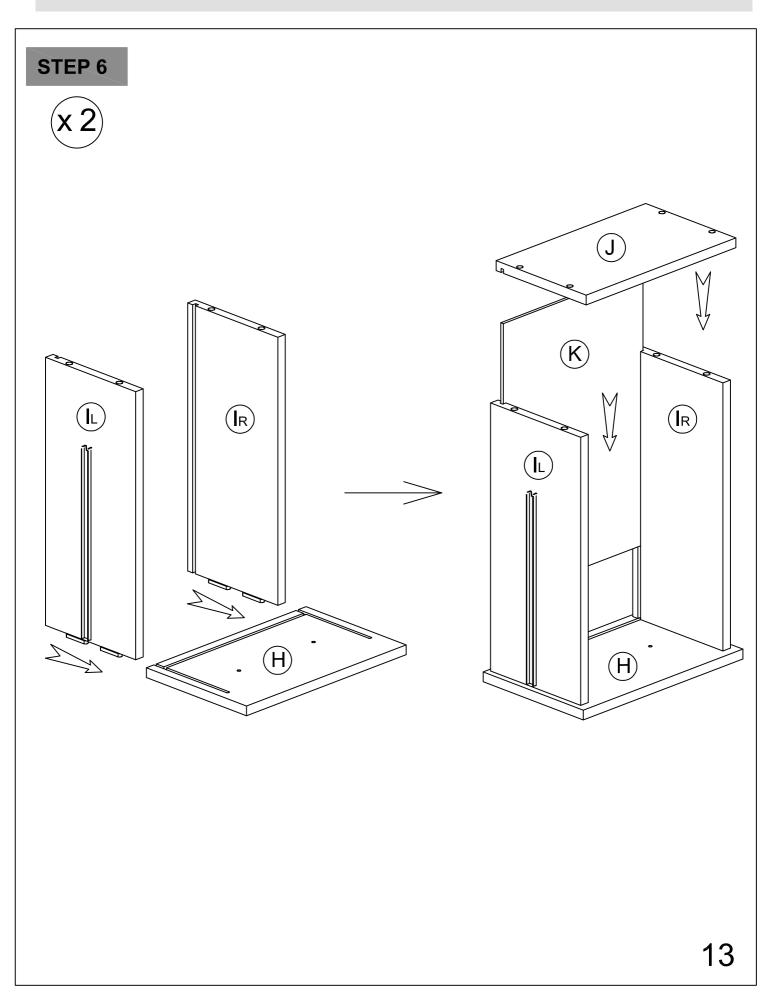


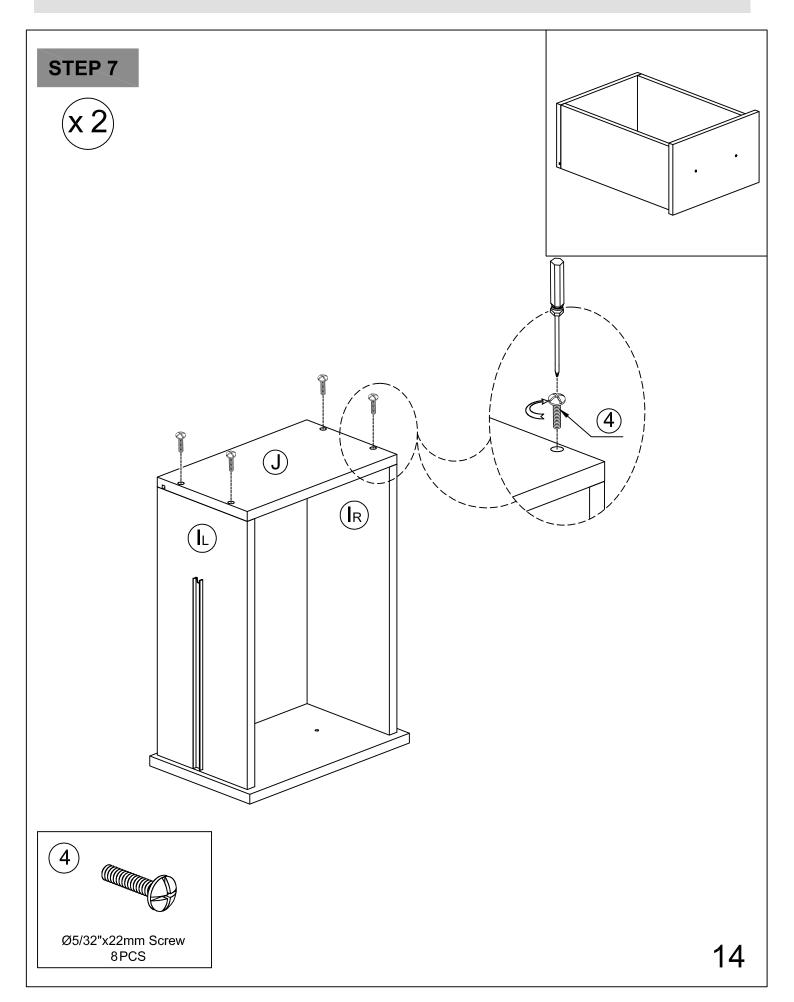


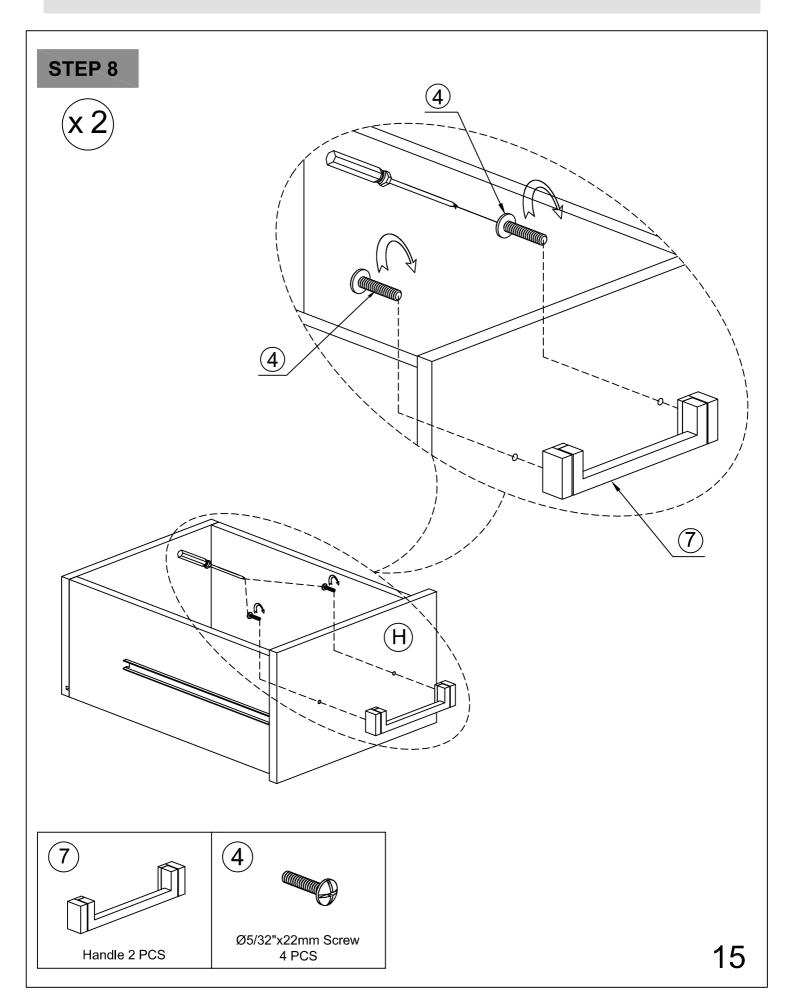

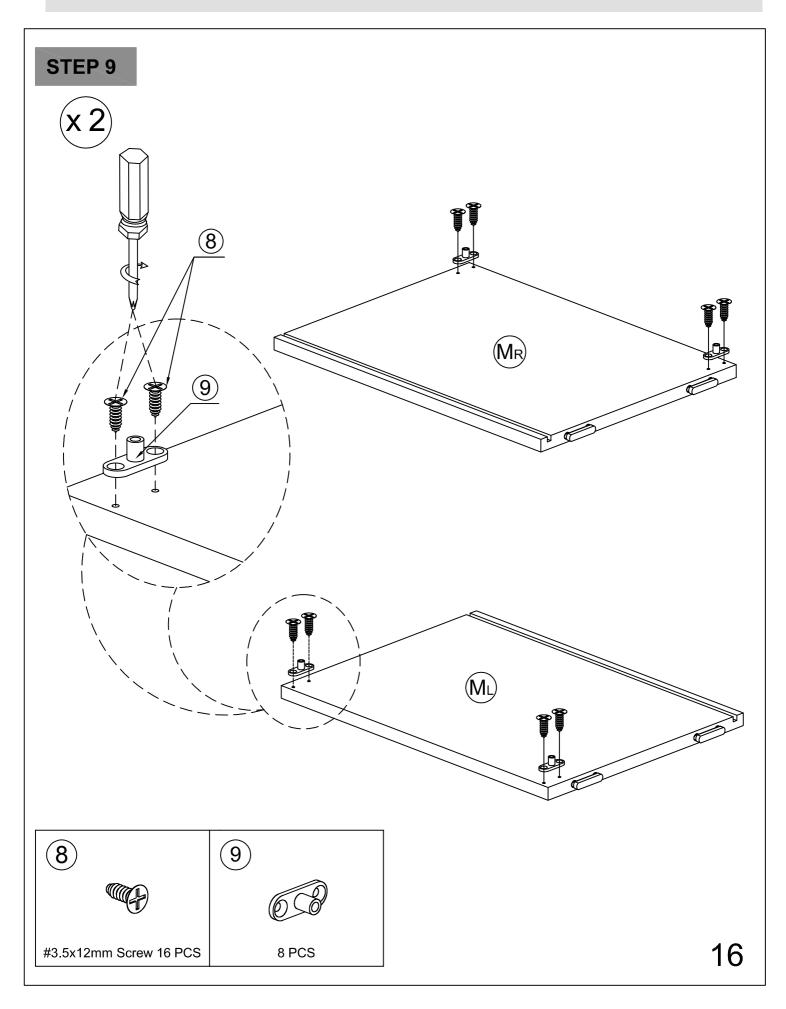


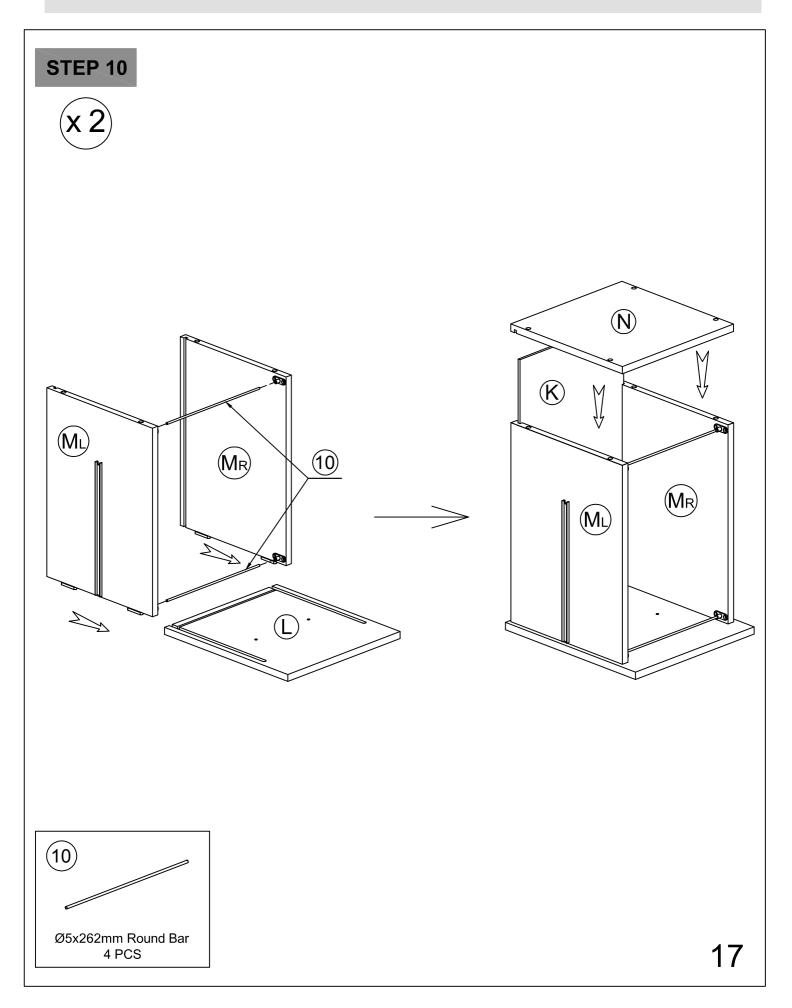

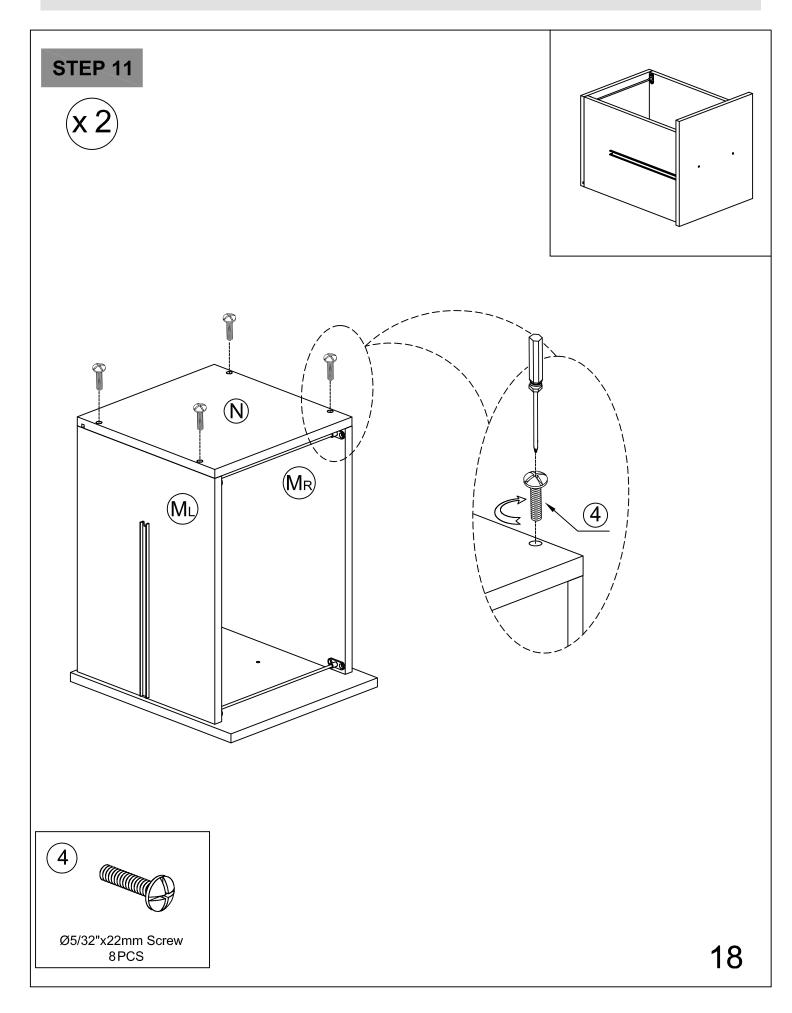

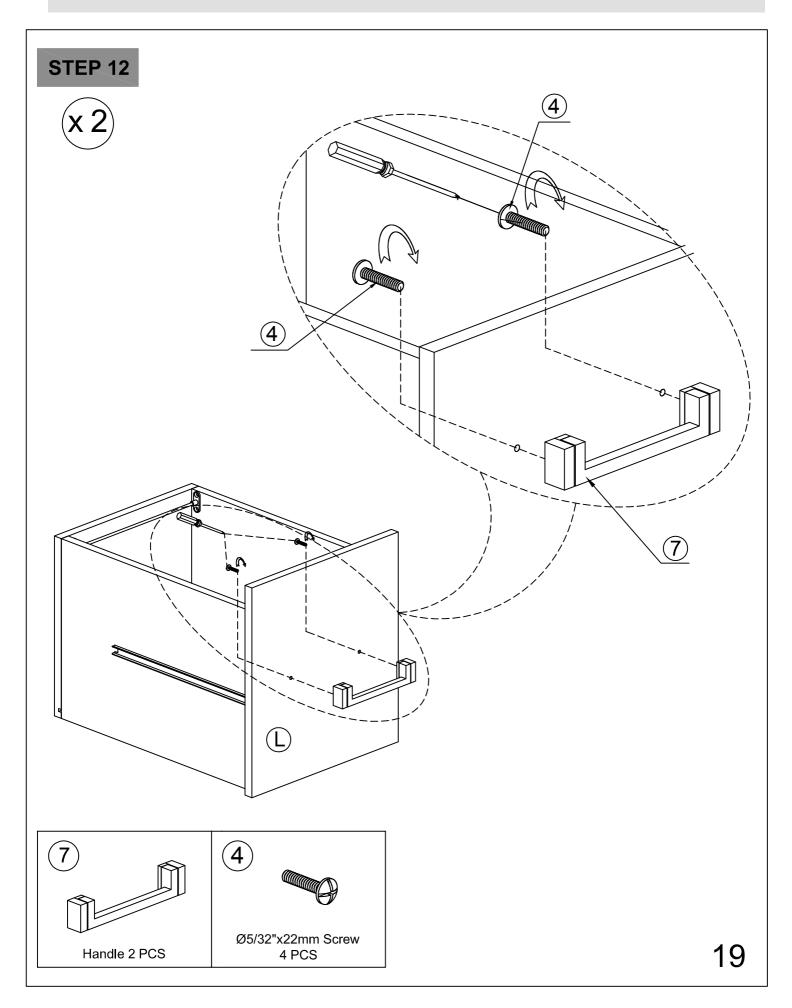



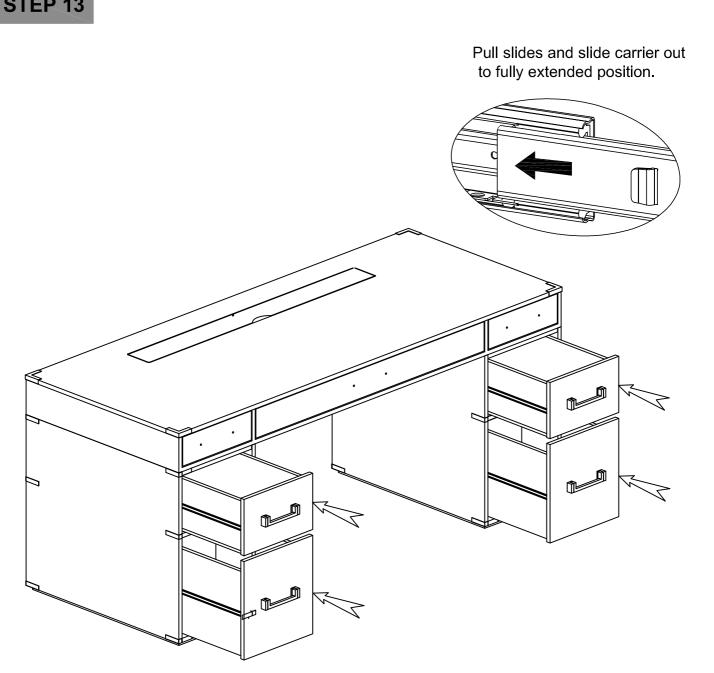

INSTALLING DRAWERS

Pull slides and slide carrier out to fully extended position (see illustration). Hold the slide on the cabinet while aligning it with the slide on the drawer. Slightly insert one side and repeat for the other side. Slowly push the drawer to its fully closed position to engage the slide. Open the drawer and reclose to ensure proper operation.

