

Barber Chair

OWNER'S MANUAL



CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

PLEASE DO NOT RETURN TO STORE



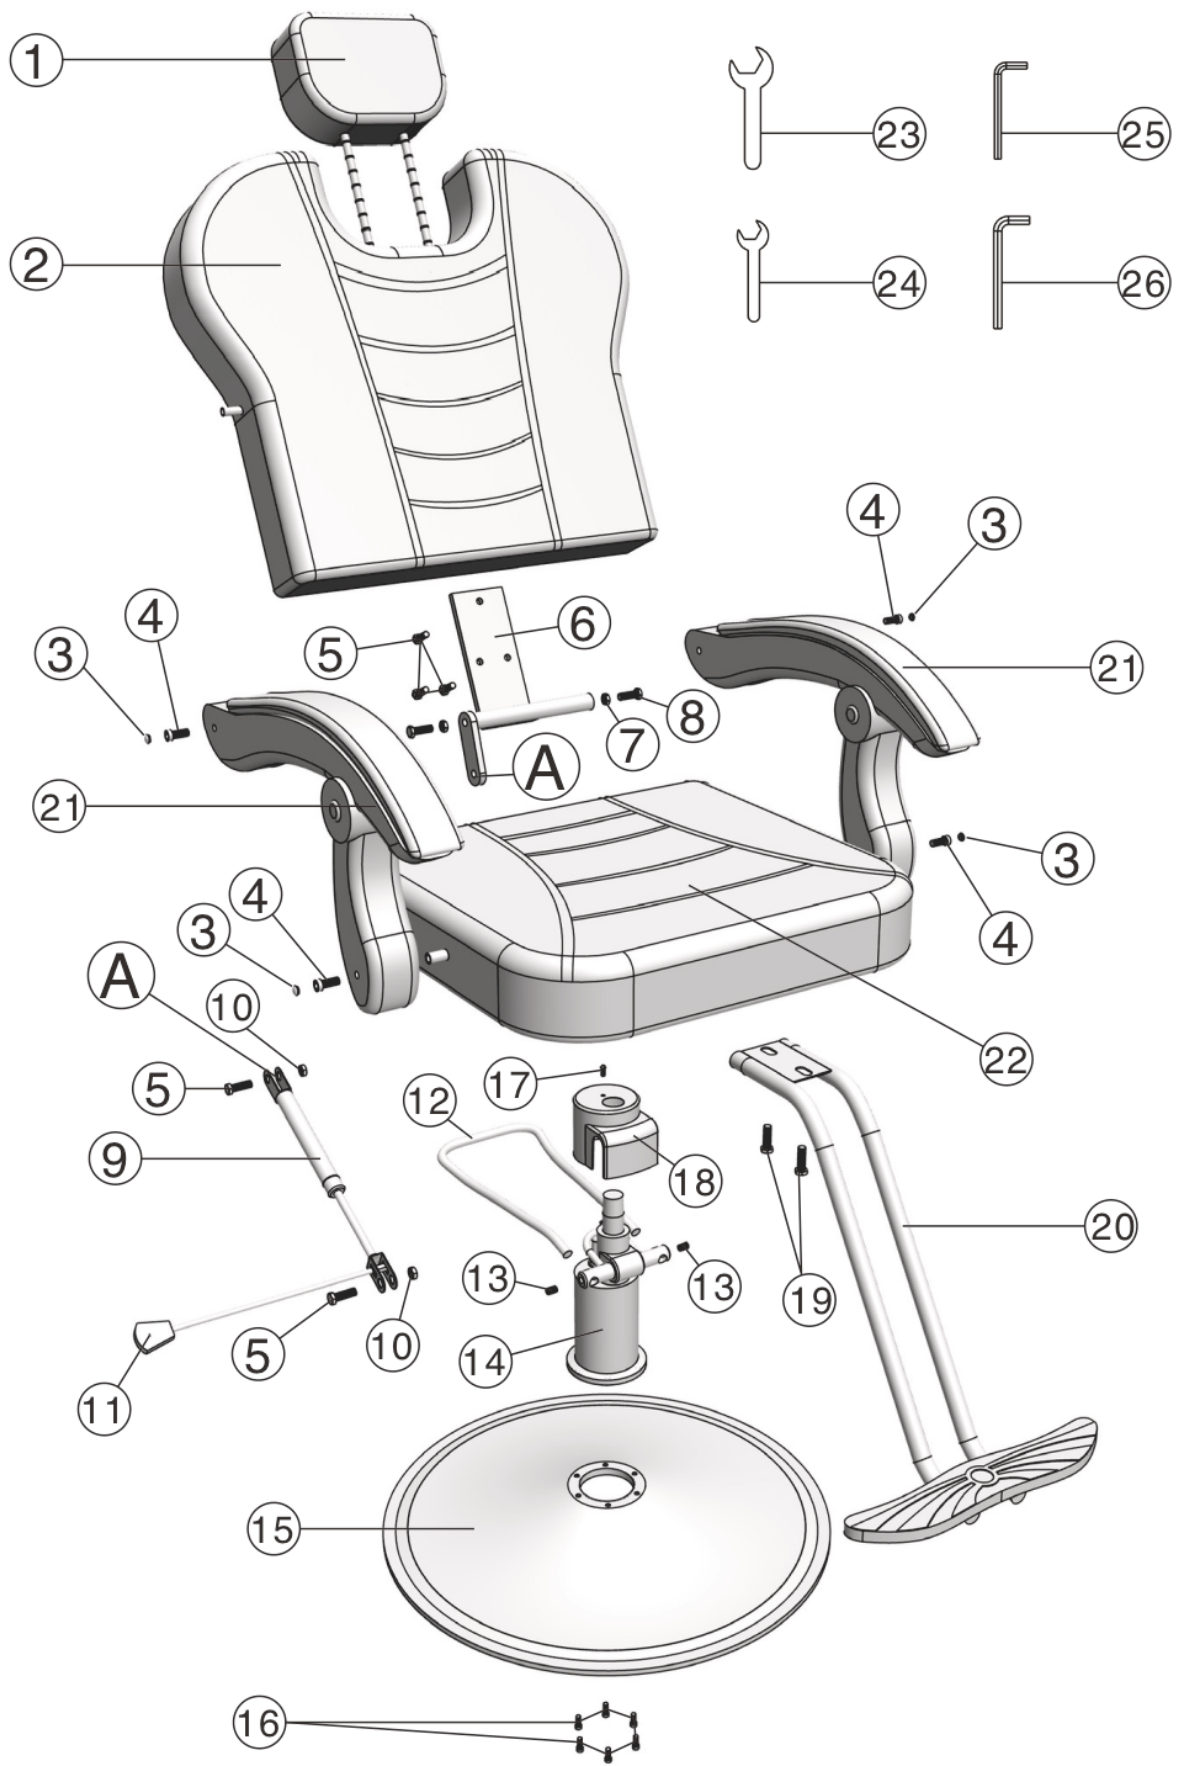
Please do not return this product to the retailer!!

We are able to assist you in ANY way

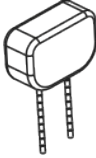
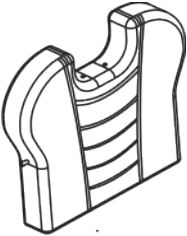



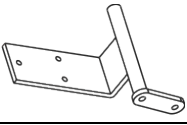

 
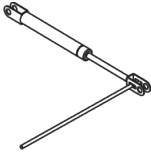
 

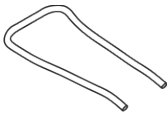

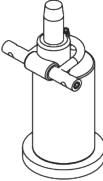
If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.









Table of Contents

Parts -----	03
Tools -----	04
Installation Diagram -----	05
Instructions for Use -----	08



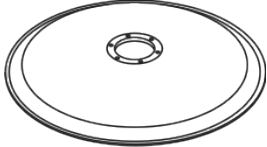

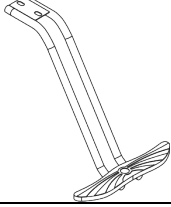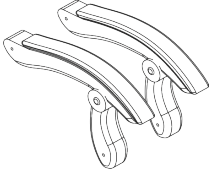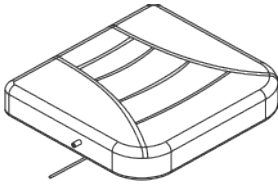

Parts

Parts Code	Image	Parts Name	Qty(Pcs)
1		Headrest	1
2		Backrest	1
3		Cover of Screw	4
4		Allen Socket Screw M8*50	4
5		Hex Screw M8*30	5
6		Rotating Shaft	1
7		Hex Nut M10	2
8		Hex Screw M10*40	2
9		Reclining Aerobar	1
10		Hex Nut M8	2
11		Reclining Handle	1
12		Foot Pump Rod	1
13		Lock Nut M8	2
14		Oil Pump	1

15		Base	1
16		Allen Socket Screw M6*12	6
17		Semi-round head screw M5*15	1
18		Oil Pump Cover	1
19		Hex Screw M8*16	2
20		Footrest	1
21		Armrest	1 Couple
22		Seat	1


Tools

Parts Code	Image	Parts Name	Qty(Pcs)
23		Wrench 17mm	1
24		Wrench 14mm	1
25		Allen Key 4mm	1
26		Allen Key 5mm	1

Installation Diagram


Step One:

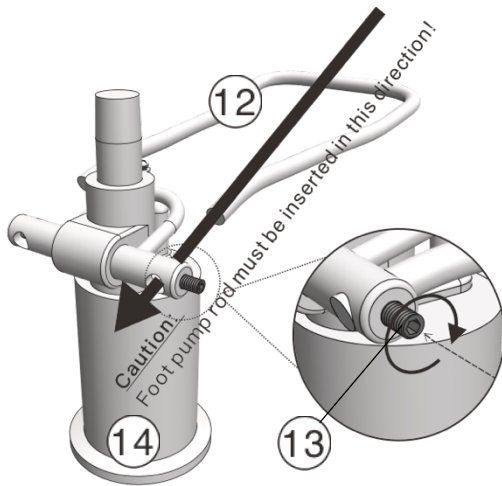Install the Foot Pump Rod (12) to the Oil Pump (14) in the correct direction from the diagram and fix it with 2 Lock Nuts M8 (13)




Step Two:

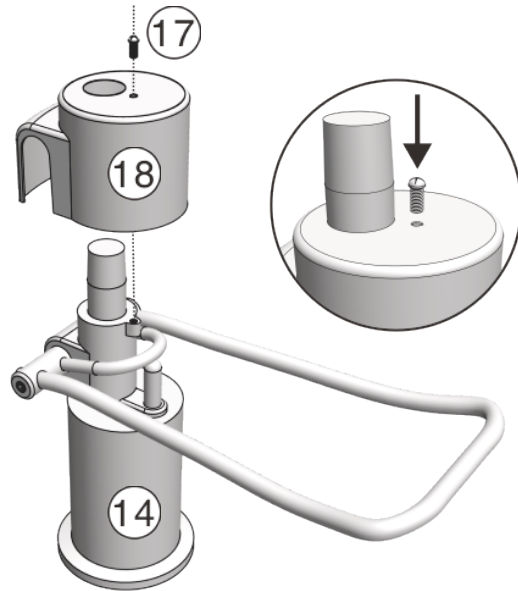Install the oil pump cover (18) on the oil pump (14) and fix it with the semi-round head screw M5*15 (17)




Step Three:

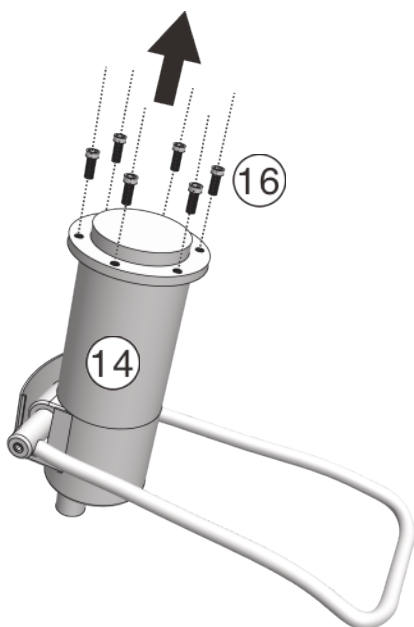Unscrew the 6 Allen Socket Screws M6*12 (16) from the bottom of the oil pump (14) for later use




Step Four:

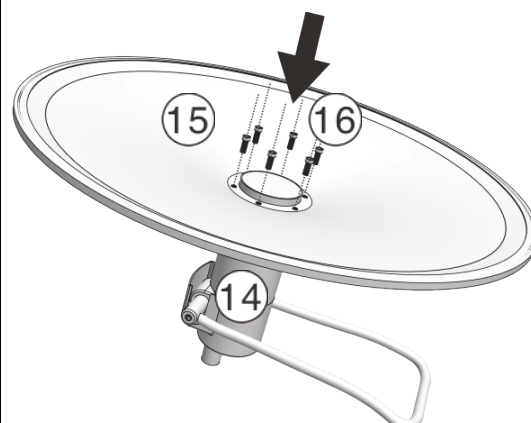Fix the base (15) with 6 Allen Socket Screws M6*12 (16) to the bottom of the oil pump (14)




Step Five:

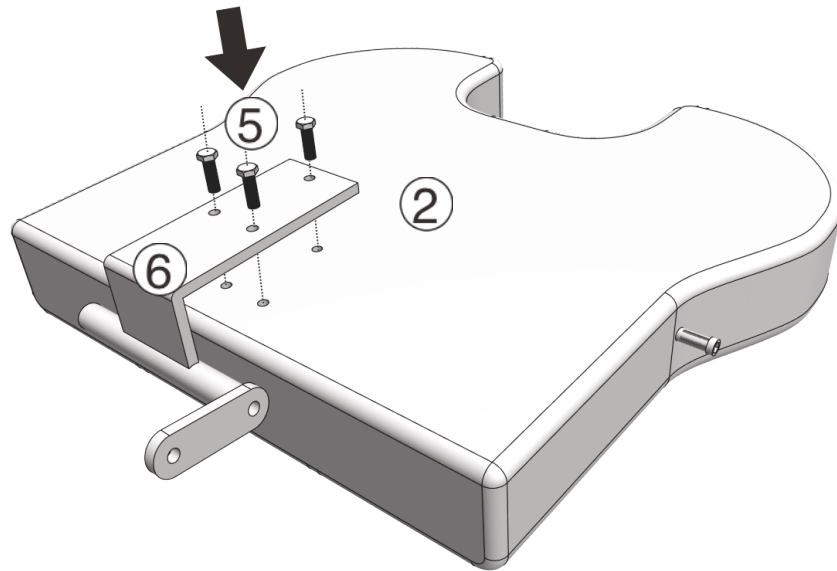Fix the Rotating Shaft (6) to the back of the Backrest (2) with 3 Hex Screws M8*30 (5)



Step Six:

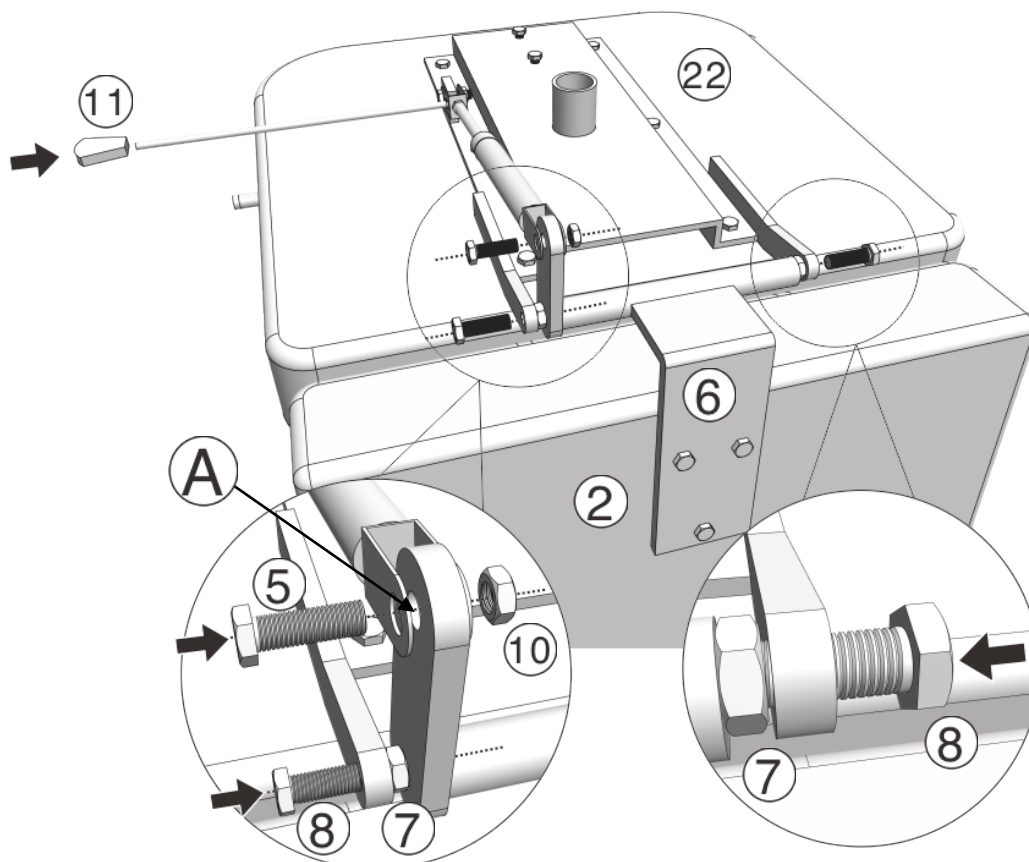Connect the Backrest (2) and Seat (22) and fix it to the Rotating Shaft (6) with 2 Hex Screws M10*40 (8) and 2 Hex Nuts M10 (7), close the 2 Hex Nuts M10 (7) to Rotating Shaft (6) tightly, and fix one end (A) of the Reclining Aerobar to the end (A) of the Rotating Shaft with Hex Screw M8*30 (5) and Hex Nut M8 (10), and insert the Reclining Handle (11)




Step Seven:

Install the Armrests (21) to the Backrest (2) and Seat (22) with 4 Allen Socket Screws M8*50 (4) and cover the screws with 4 Covers (3)




Step Eight:

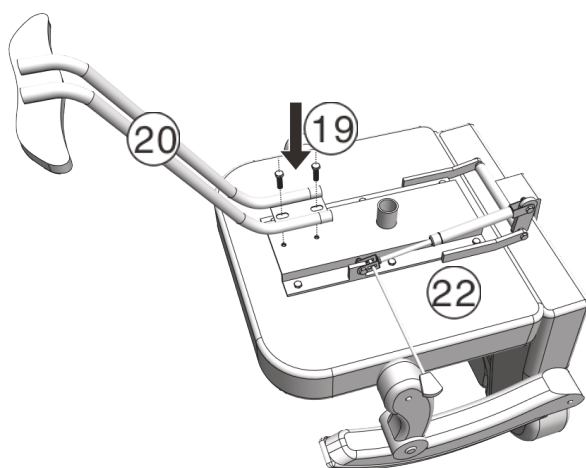Secure the Footrest (20) with 2 Hex Screws M8*16 (19) to the bottom of the Seat (22)



Step Nine:

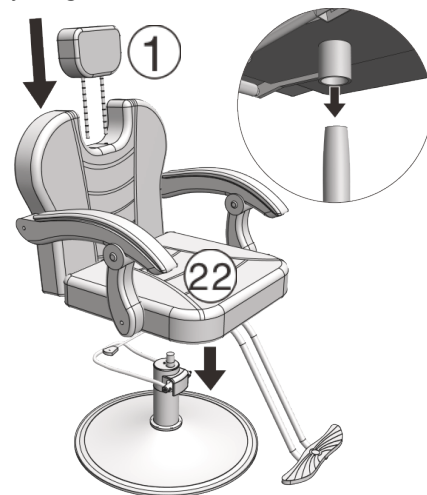Combine the Seat: Attach the assembled seat to the pump, sit on it, insert the Headrest (1) and there you go.




Note: No screws are needed to connect the seat and the base. The longer you sit, the tighter it gets.

Instruction for use




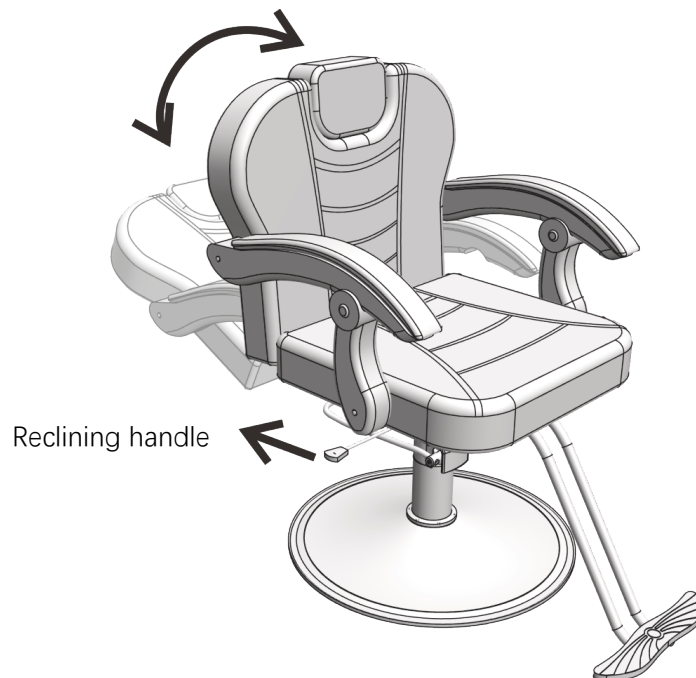
The headrest can be adjusted up and down





Reclining the backrest: Sit on the chair and pull the handle on the right side of the seat back without letting go, while leaning back hard while the backrest is down. Release the handle at the desired angle and fix the backrest angle.

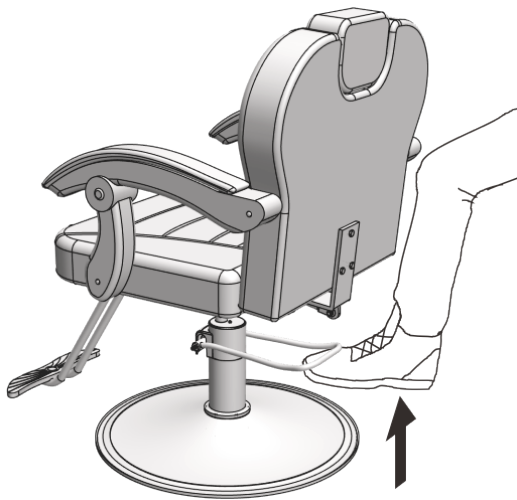Backrest rebound upright: Return to the body upright, pull the handle on the right side of the seat back again, and the seat back rebounds and stands upright.




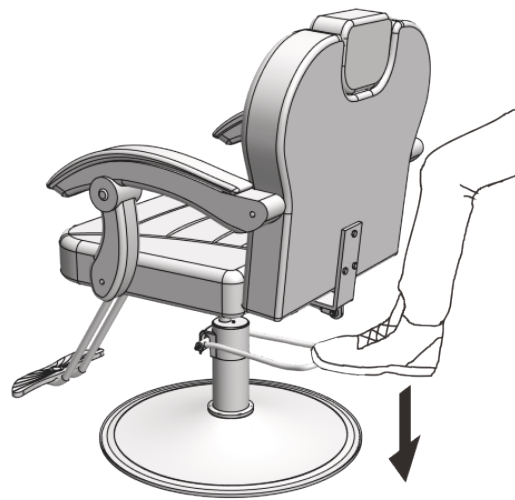 **Lock:** Lift the foot pump rod upward, and the rotation and lifting functions are locked.



 **Unlock:** Press the foot pump rod down, and the rotation and lift functions resume.

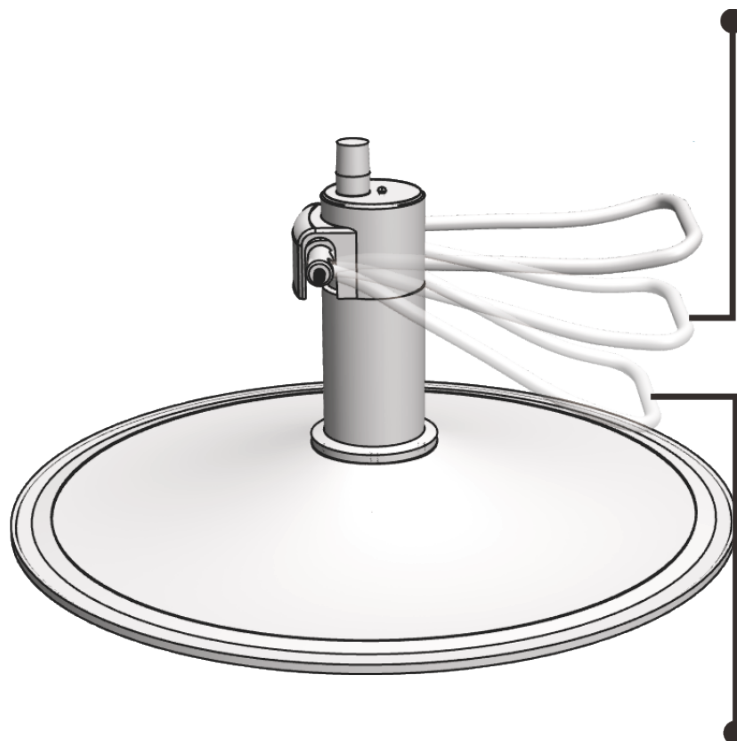Seat up: Foot down on the foot pump rod 5-10 cm, and repeat. Don't step too deep!



Seat down: Downhill the foot pump rod and hold still to lower the seat.

