

# Barber Chair

OWNER'S MANUAL

---



**CAUTION!** Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

# PLEASE DO NOT RETURN TO STORE




**Please do not return this product to the retailer!!**

**We are able to assist you in ANY way**


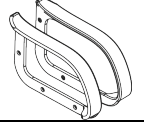
 
 
 
 
 
 

 
 
 


If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

## Table of Contents

 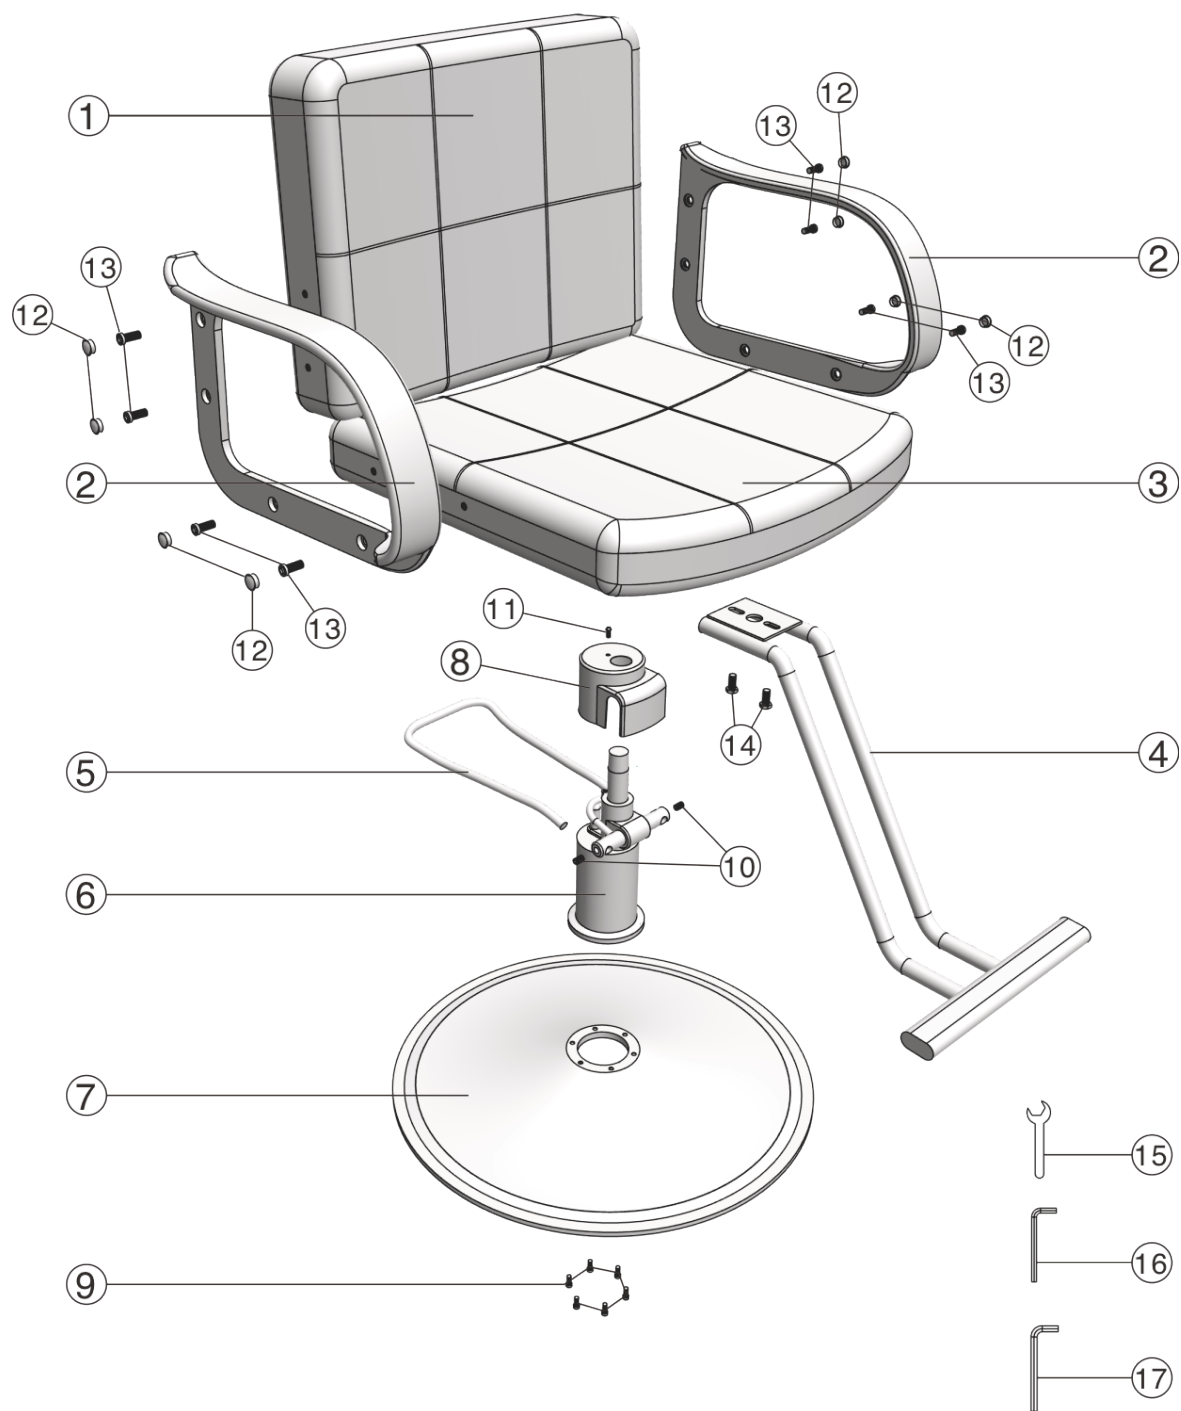
|                            |    |
|----------------------------|----|
| Parts -----                | 03 |
| Tools -----                | 03 |
| Installation Diagram ----- | 04 |
| Instructions for Use ----- | 07 |



## Parts

| Parts Code | Image   | Parts Name                  | Qty(Pcs) |
|------------|---|-----------------------------|----------|
| 1          |    | Backrest                    | 1        |
| 2          |    | Armrest                     | 1 Couple |
| 3          |    | Seat                        | 1        |
| 4          |    | Footrest                    | 4        |
| 5          |    | Foot Pump Rod               | 1        |
| 6          |   | Oil Pump                    | 1        |
| 7          |  | Base                        | 1        |
| 8          |  | Oil Pump Cover              | 1        |
| 9          |  | Allen Socket Screw M6*12    | 6        |
| 10         |  | Lock Nut M8                 | 2        |
| 11         |  | Semi-round head screw M5*15 | 1        |
| 12         |  | Cover of Screw              | 8        |
| 13         |  | Allen Socket Screw M8*30    | 8        |
| 14         |  | Hex Screw M8*16             | 2        |


## Tools

| Parts Code | Image   | Parts Name    | Qty(Pcs) |
|------------|---|---------------|----------|
| 15         |  | Wrench 14mm   | 1        |
| 16         |  | Allen Key 4mm | 1        |
| 17         |  | Allen Key 5mm | 1        |

## Installation Diagram


### **Step One:**

Install the Foot Pump Rod (5) to the Oil Pump (6) in the correct direction from the diagram and fix it with 2 Lock Nuts M8 (10)

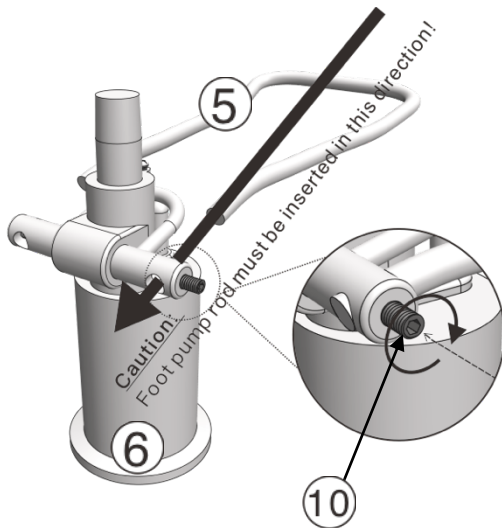


### **Step Two:**

Install the oil pump cover (8) on the oil pump (6) and fix it with the semi-round head screw M5\*15 (11)

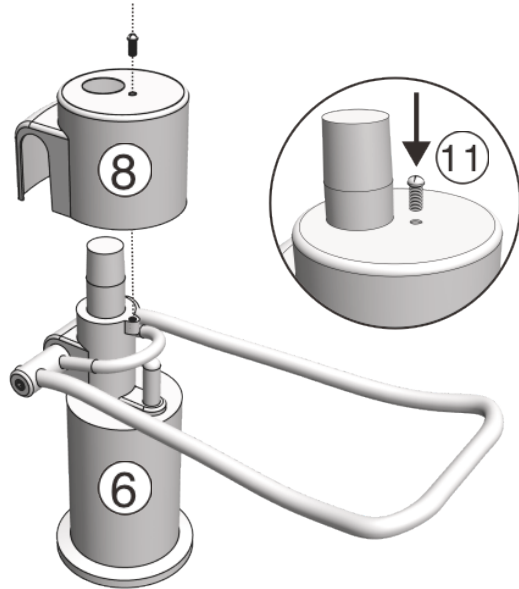


### **Step Three:**

Unscrew the 6 Allen Socket Screws M6\*12 (9) from the bottom of the oil pump (6) for later use

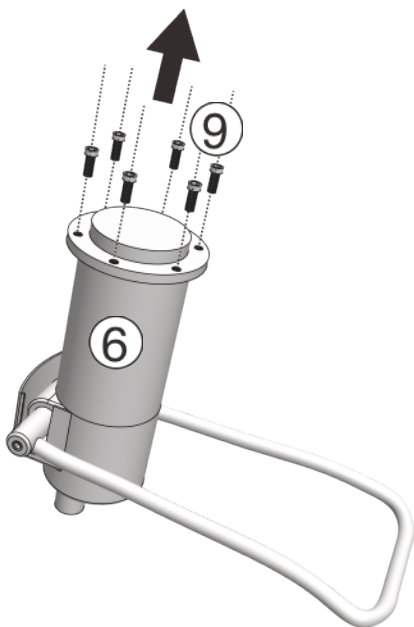


### **Step Four:**

Fix the base (7) with 6 Allen Socket Screws M6\*12 (9) to the bottom of the oil pump (6)

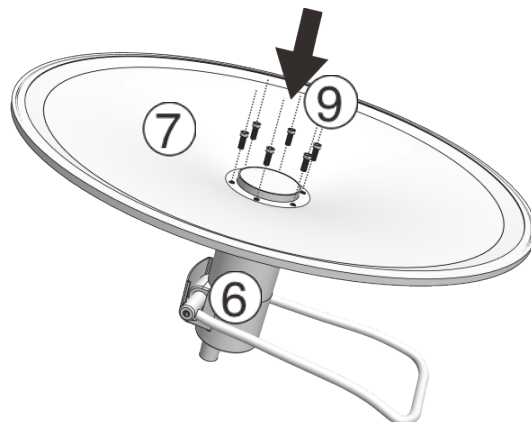


**Step Five:**

Install the Armrests (2) to the Backrest (1) and Seat (3) with 8 Allen Socket Screws M8\*30 (13) and cover the screws with 8 Covers (12)

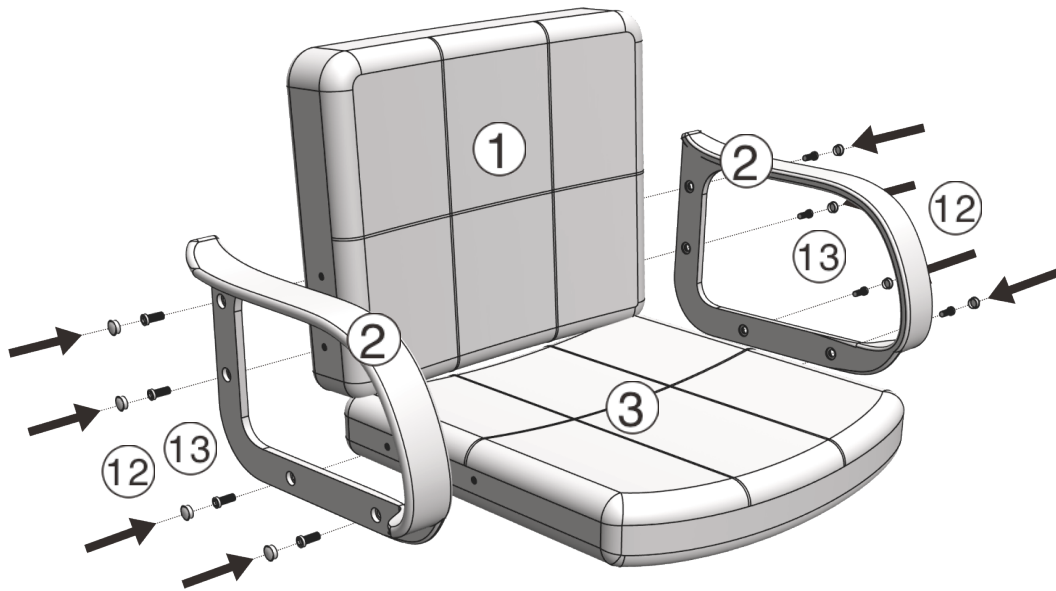


**Step Six:**

Secure the Footrest (4) with 2 Hex Screws M8\*16 (14) to the bottom of the Seat (3)

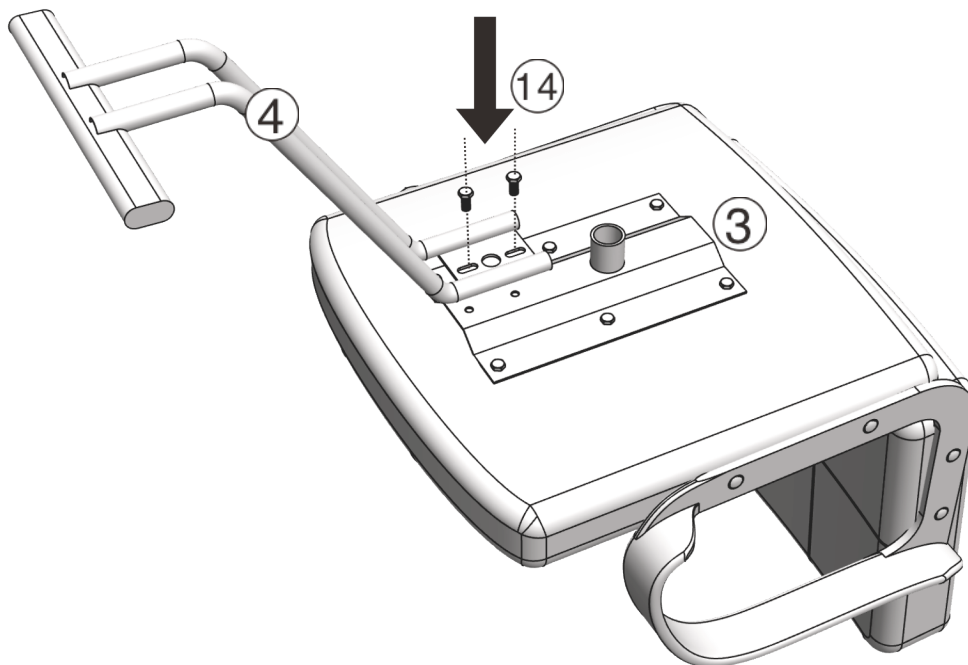


**Step Seven:**


Combine the Seat: Attach the assembled seat to the pump, sit on it, and there you go.

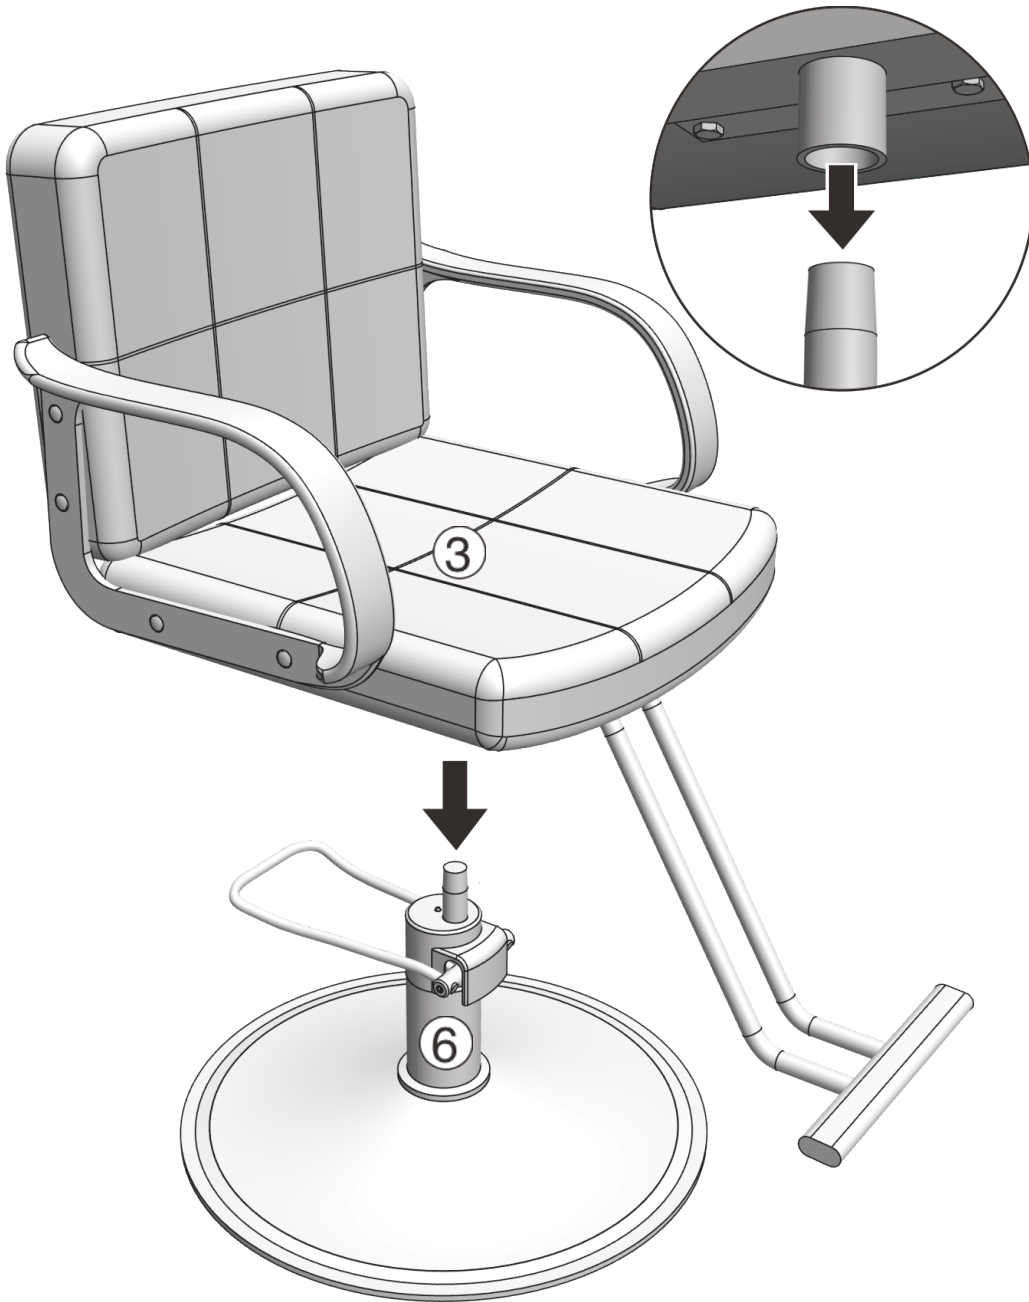



**Note:** No screws are needed to connect the seat and the base. The longer you seat, the tighter it gets.

## Instruction for use

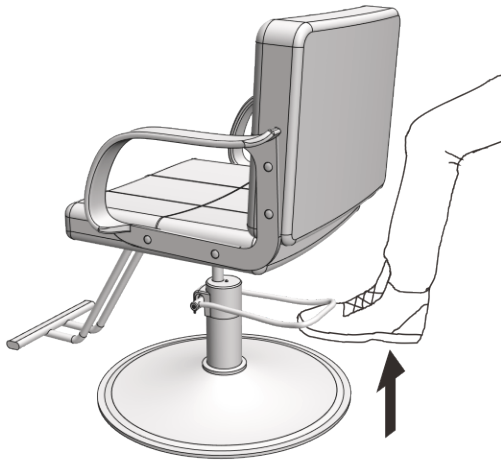


 **Lock:** Lift the foot pump rod upward, and the rotation and lifting functions are locked.

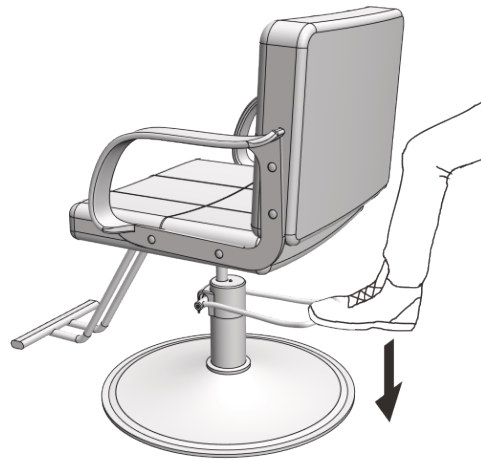

 **Unlock:** Press the foot pump rod down, and the rotation and lift functions resume.

**Seat up:** Foot down on the foot pump rod 5-10 cm, and repeat. Don't step too deep!

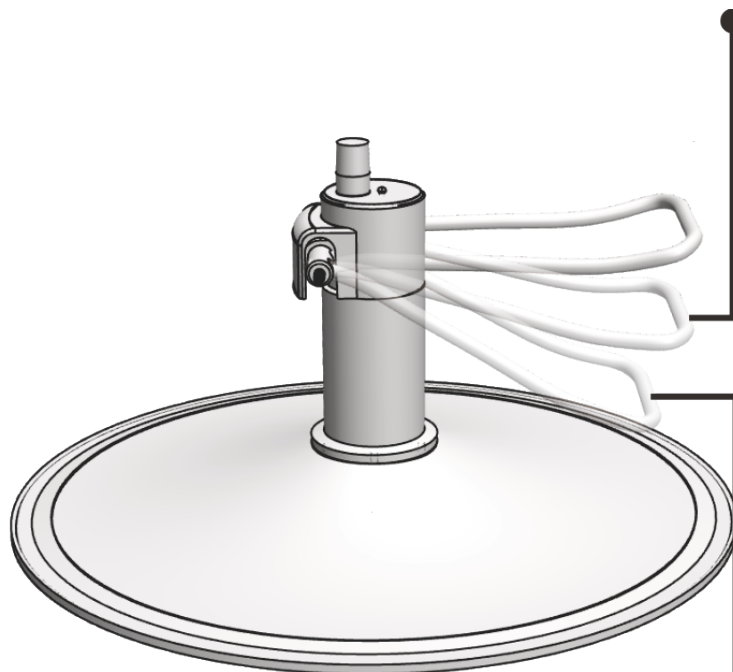

**Seat down:** Downhill the foot pump rod and hold still to lower the seat.