 


ASSEMBLY INSTRUCTIONS


DINING TABLE

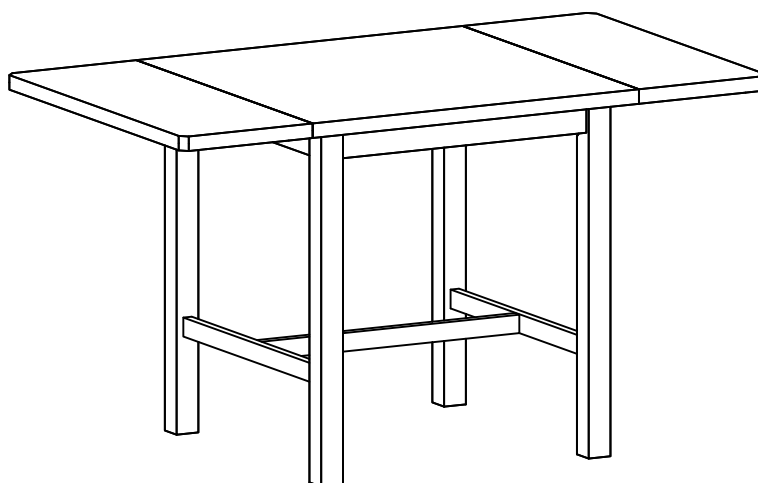

WF310399


IMPORTANT NOTE:

 - PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

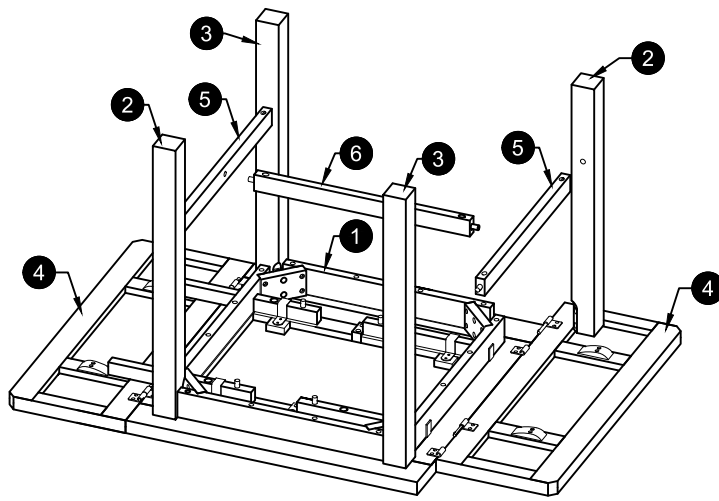

CARTON CONTENT:

 WF310399 :

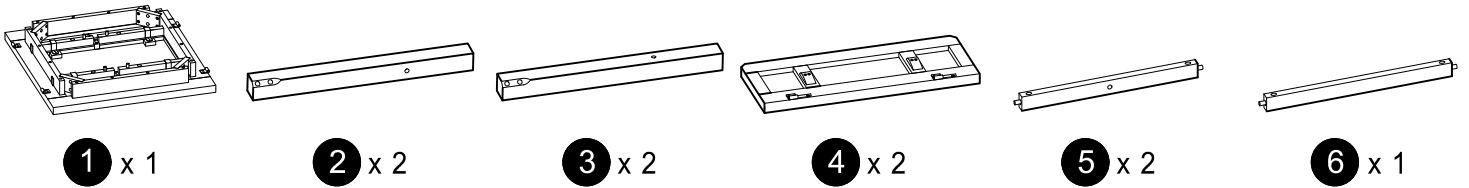

1 x 1

2 x 2

3 x 2

4 x 2

5 x 2

6 x 1


TABLE PART LISTS

NO.	DESCRIPTION	SKETCH	QTY
1	TABLE TOP		1 PC
2	TABLE LEG (R)		2 PCS
3	TABLE LEG (L)		2 PCS
4	LEAF		2 PCS
5	STRETCHER (S)		2 PCS
6	STRETCHER (L)		1 PC



TABLE HARDWARE LISTS

NO.	DESCRIPTION	SKETCH	QTY
A	HEX COMB 5/16 x 2 1/2"		8 PCS
B	SPRING WASHER 5/16"		8 PCS
C	FLAT WASHER 5/16"		8 PCS
D	SPANNER 1.28		1 PC
E	C/B SCREW M4 x 45mm		6 PCS

 
STEP 1

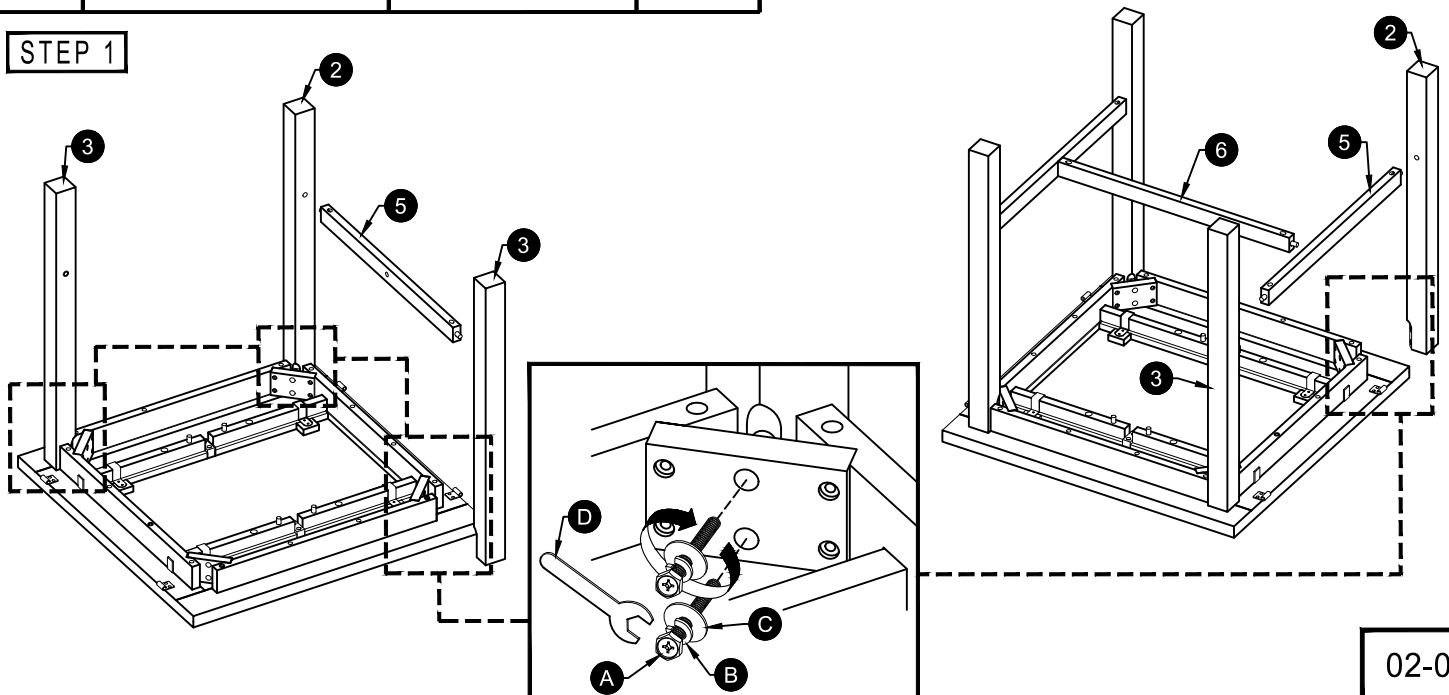

  
STEP 2

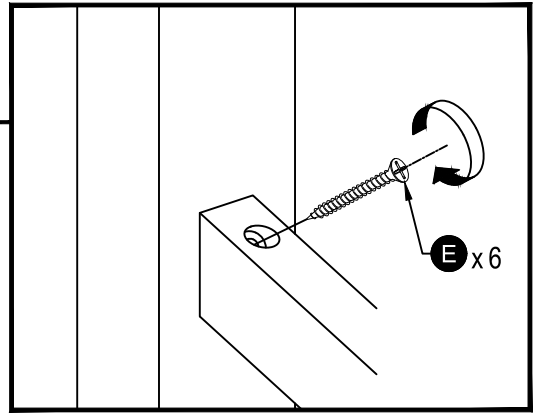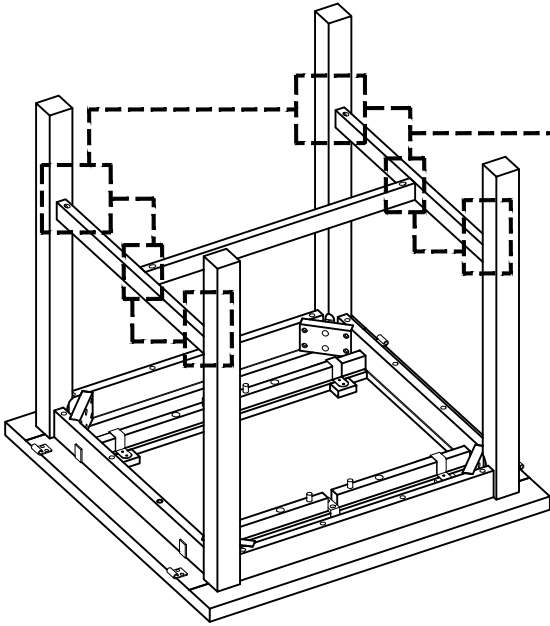

 
STEP 3

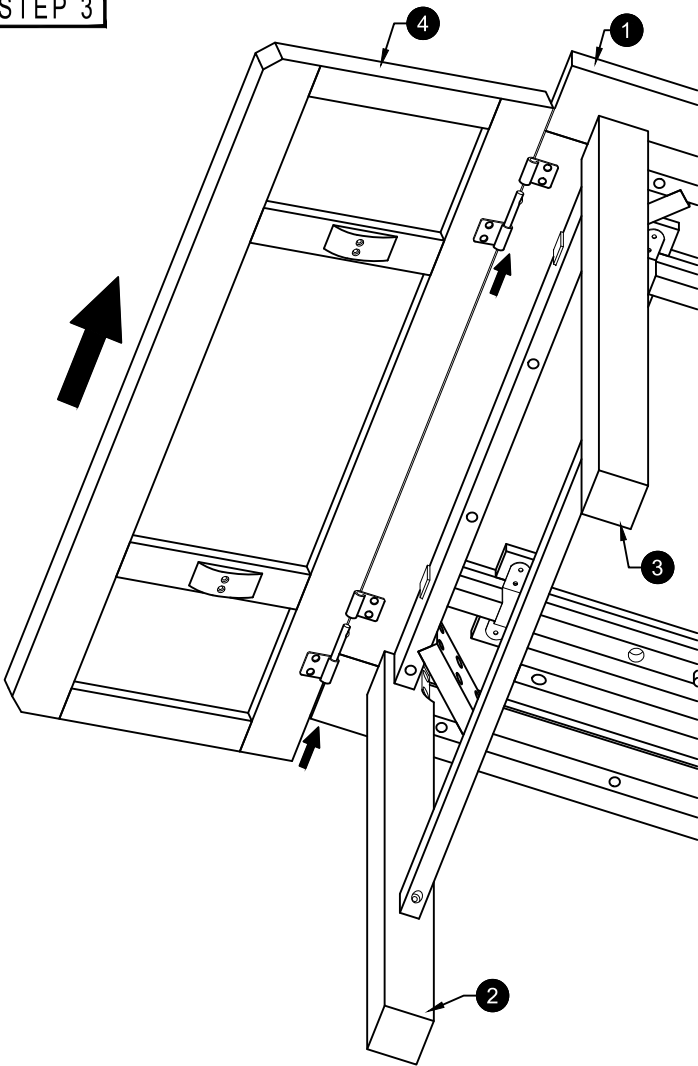

 STEP 4

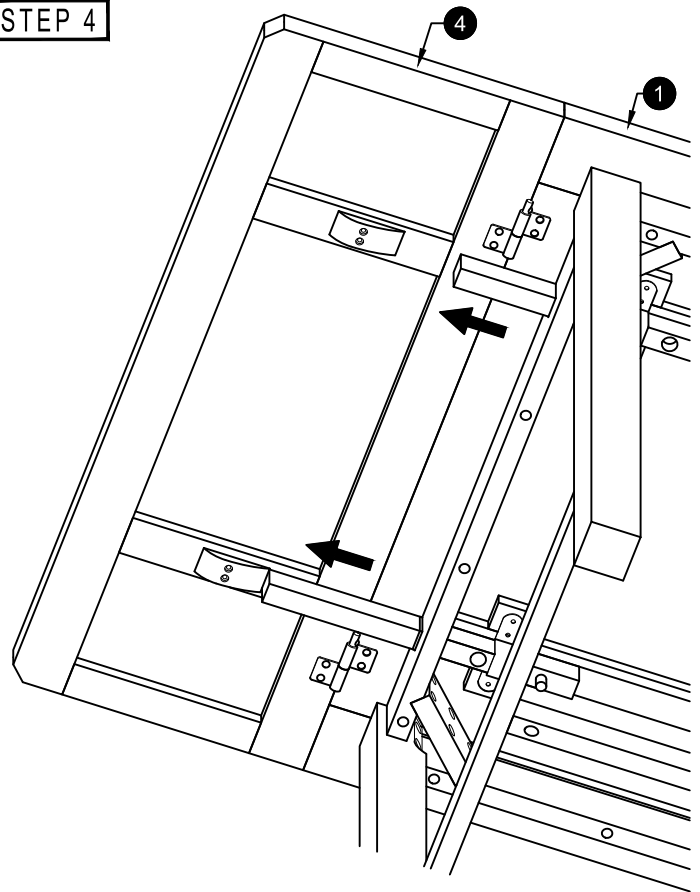


ASSEMBLY
COMPLETE !

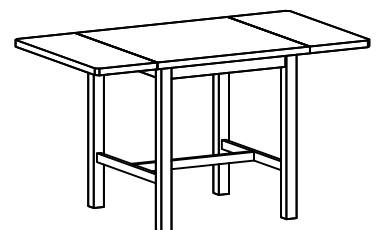 

ASSEMBLY INSTRUCTIONS

 
DINING CHAIR

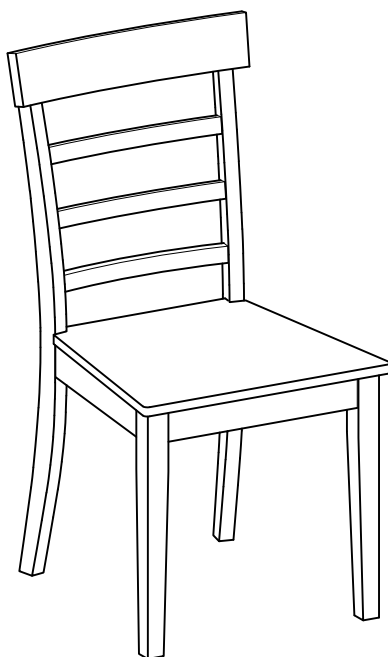

WF310400


IMPORTANT NOTE:

 - PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

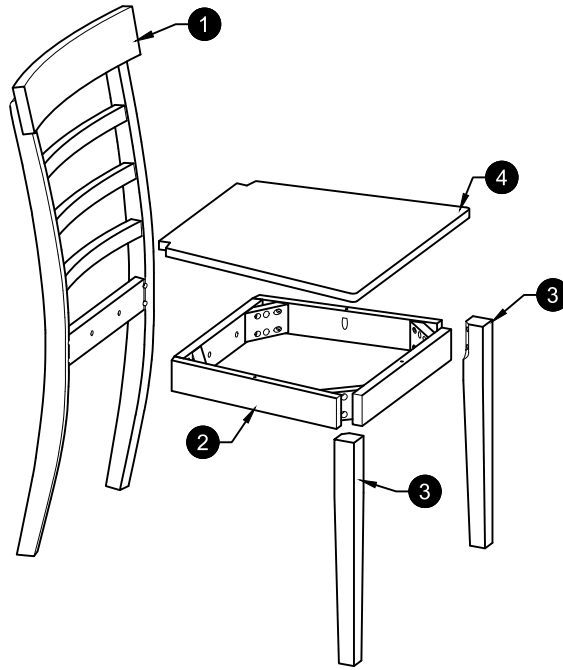


CARTON CONTENT:

 
WF310400 :




1 x 4

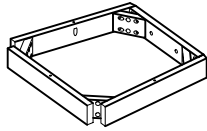 

2 x 4

 

3 x 8

 

4 x 4


CHAIR PART LISTS

NO.	DESCRIPTION	SKETCH	QTY
1	BACK LEG		4 PCS
2	BOX SEAT		4 PCS
3	FRONT LEG		8 PCS
4	SEAT		4 PCS


CHAIR HARDWARE LISTS

NO.	DESCRIPTION	SKETCH	QTY
A	JCBC BOLT M6 x 35mm		8 PCS
B	JCBC BOLT M6 x 60mm		16 PCS
C	JCBC BOLT M6 x 80mm		16 PCS
D	SPRING WASHER 1/4"		40 PCS
E	FLAT WASHER 1/4"		40 PCS
F	ALLEN KEY M4		1 PC
G	C/B SCREW M4 x 30mm		12 PCS

 
STEP 1

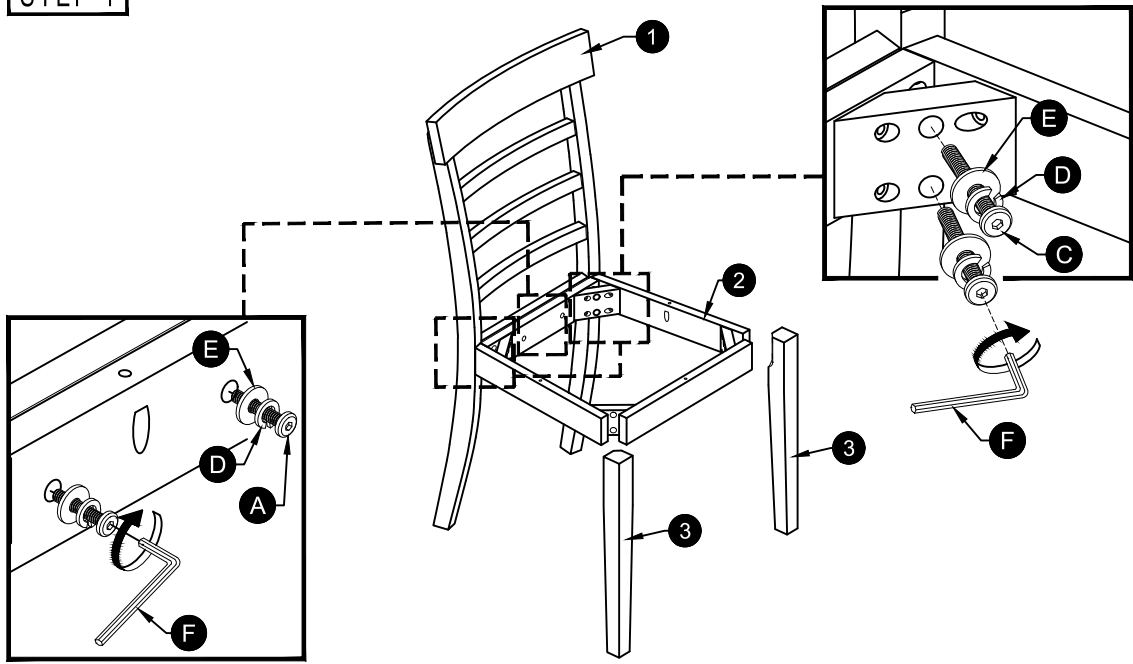

 STEP 2

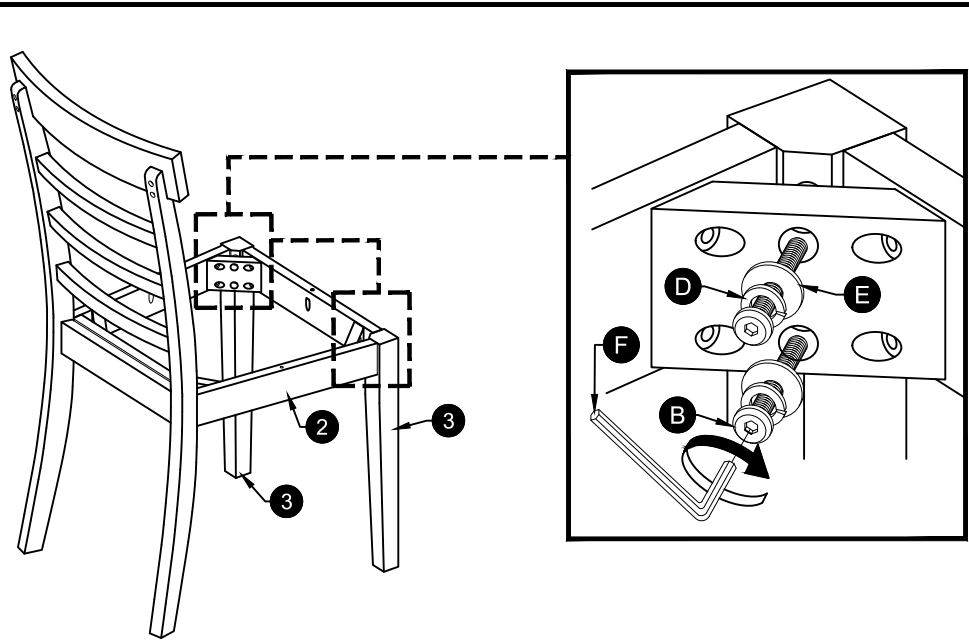

 STEP 3

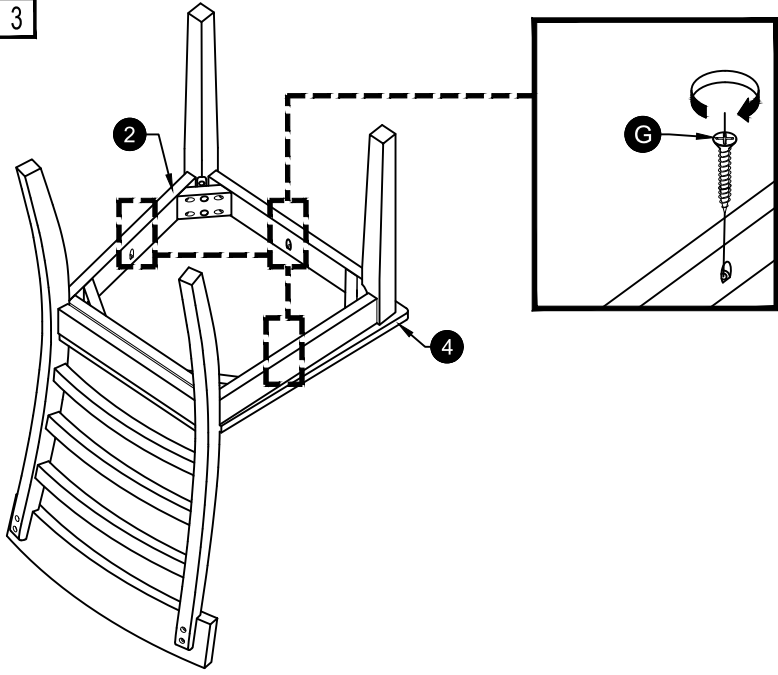

ASSEMBLY COMPLETE !

