

ASSEMBLY INSTRUCTION

SKU CODE : WF301417 / WF301419

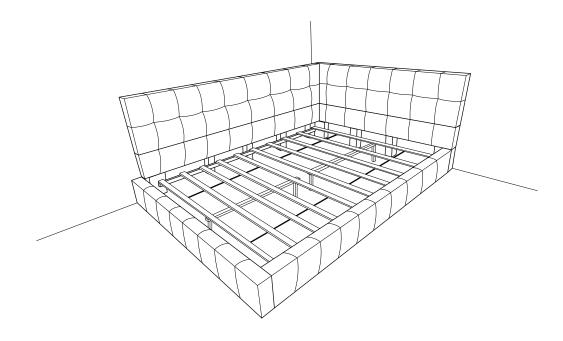

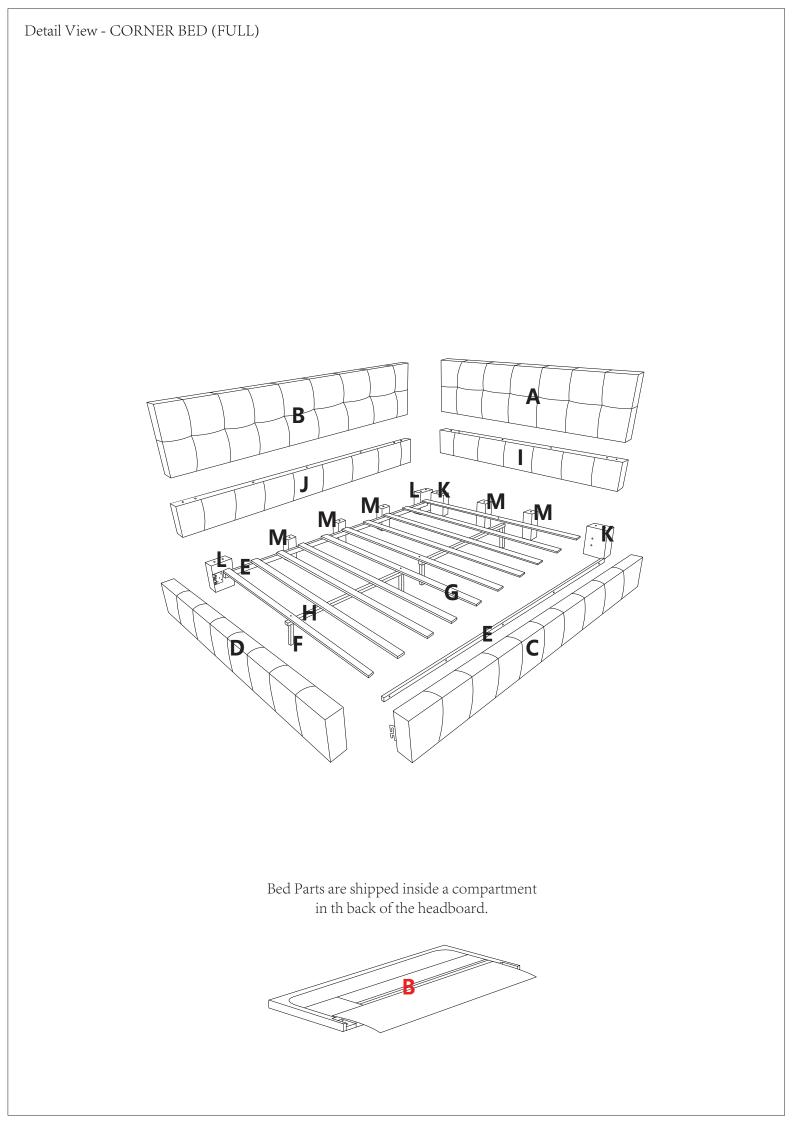

NO	PART LIST (WF 301419)	QTY
С	Side Rail	1 pc
D	Footboard	1 pc
Ι	Headboard Lower Panel	1 pc
J	Side Rail Lower Panel	1 pc
L	Large Bottom Leg (with bracket)	2 pcs

NO	PART LIST (WF 301417)	QTY
A	Headboard Upper Panel	1 pc
В	Side Rail Upper Panel	1 pc
E	Slat Support	2 pcs
F	Center Support Leg	4 pcs
G	Bed Slat	10 pcs
Η	Center Support Rail	2 pcs
K	Large Bottom Leg	2 pcs
М	Small Bottom	5 pcs

NO	HARDWARE LIST (WF 301417)) QTY
1	JCBB M8 x 20mm	8 pcs
2	JCBC M6 x 60mm	4 pcs
3	JCBC M6 x 40mm	19 pcs
4	JCBC M6 x 30mm	13 pcs
5	Flat Washer M6	22 pcs
6	Adjuster M6	4 pcs
7	CSK M4 x 30mm	20 pcs
8	Allen Key M4	1 pc
9	Allen Key M5	l pc

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.

CAUTION :

- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.



