



ASSEMBLY INSTRUCTION

SKU CODE: WF305335/WF305336

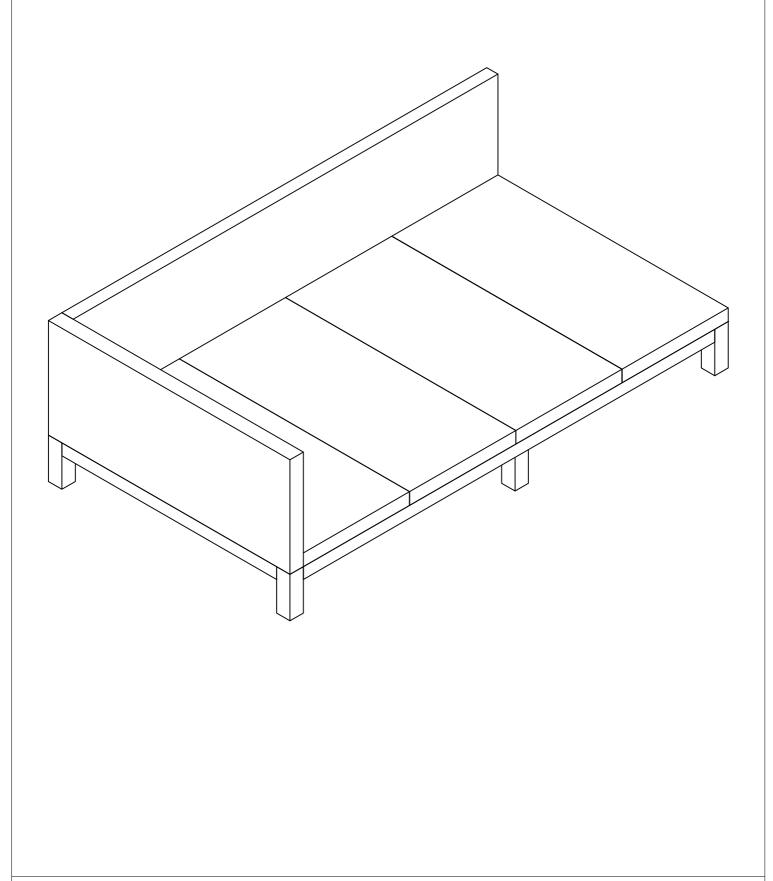

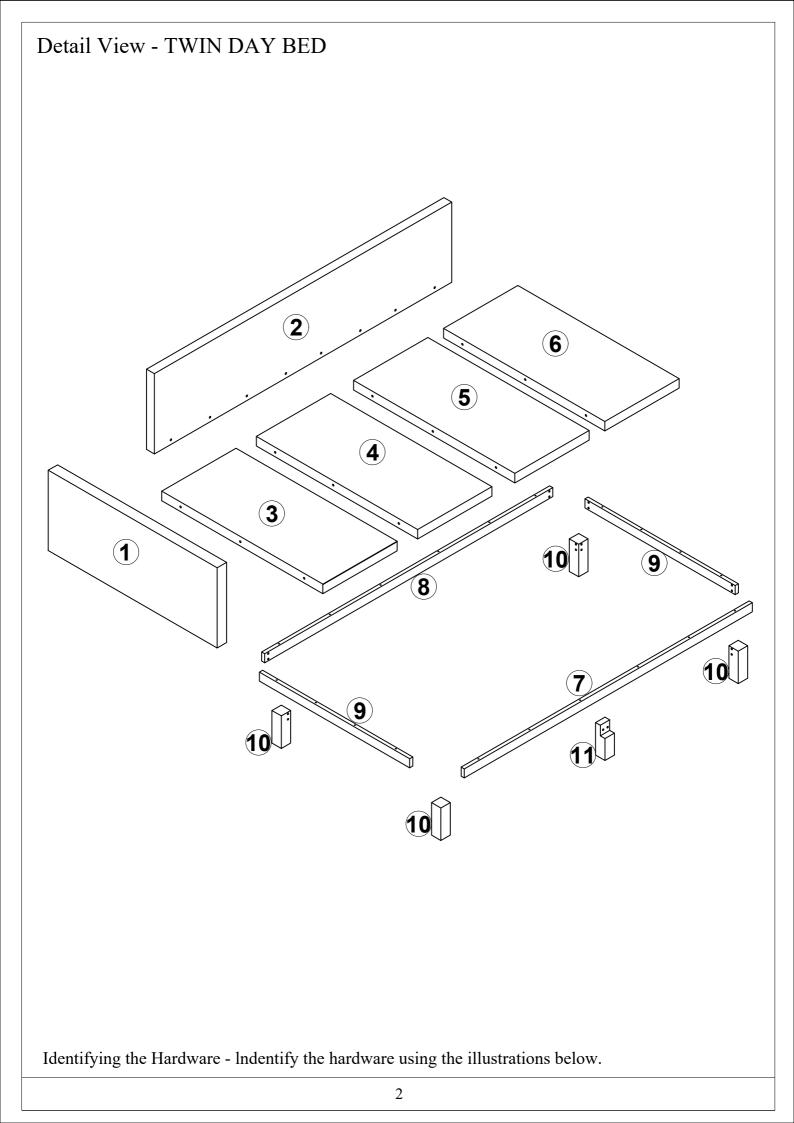

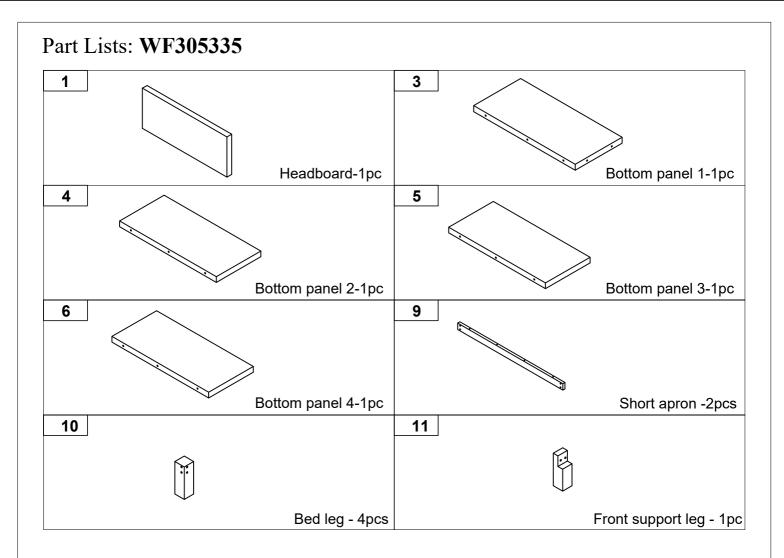

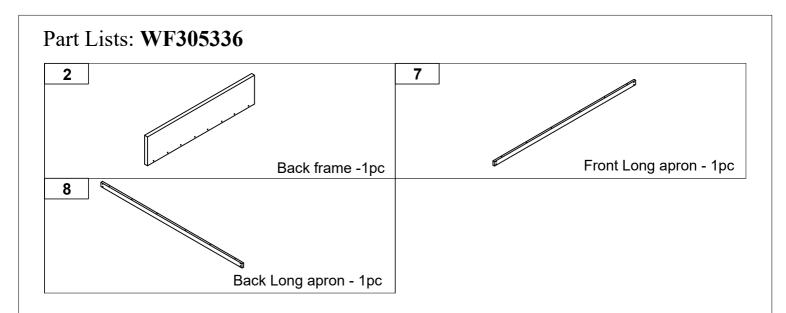

HARDWARE LISTS: WF305336	
Α	В
4mm	Ø1/4" x 15mm
Allen key (1pc)	Hex-head bolt (32pcs)
Ø5/16" x 40mm	Ø1/4"
Hex-head bolt (22pcs)	Spring washer (34pcs)
E Ø1/4"	F 0 0
Flat washer(34pcs)	Metal bracket (8pcs)
G Ø4 x 60mm	
Wood screw (20pcs)	Ø1/4" x 25mm Hex-head bolt (02pcs)
	J Ø
Ø5/16"	Ø5/16"
Spring washer (22pcs)	Flat washer(22pcs)
ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)	

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS :

- 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

