 


ASSEMBLY INSTRUCTIONS

 
DINING CHAIR

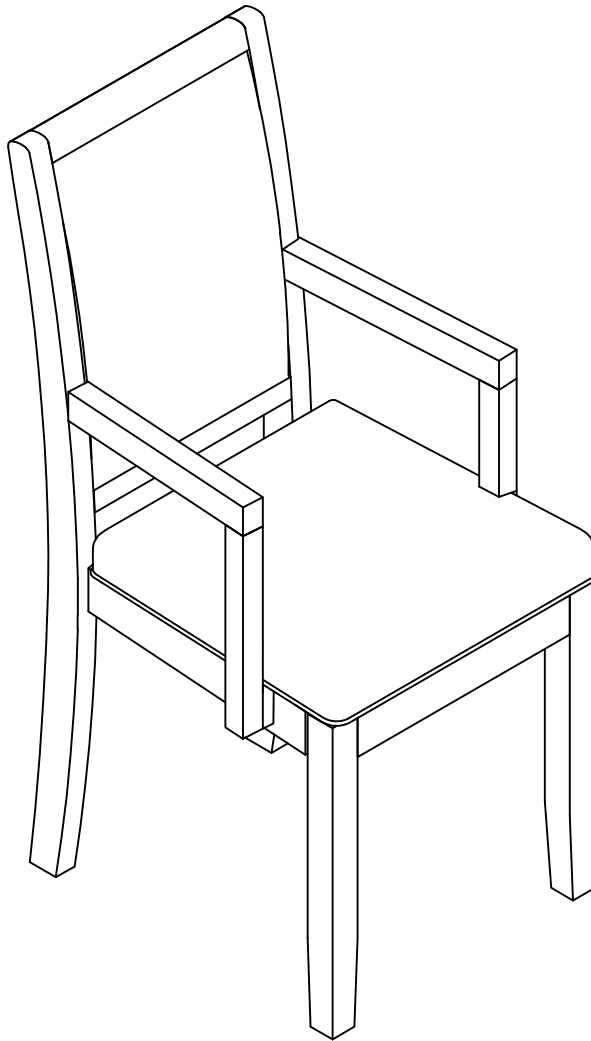

WF302628

 
IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP

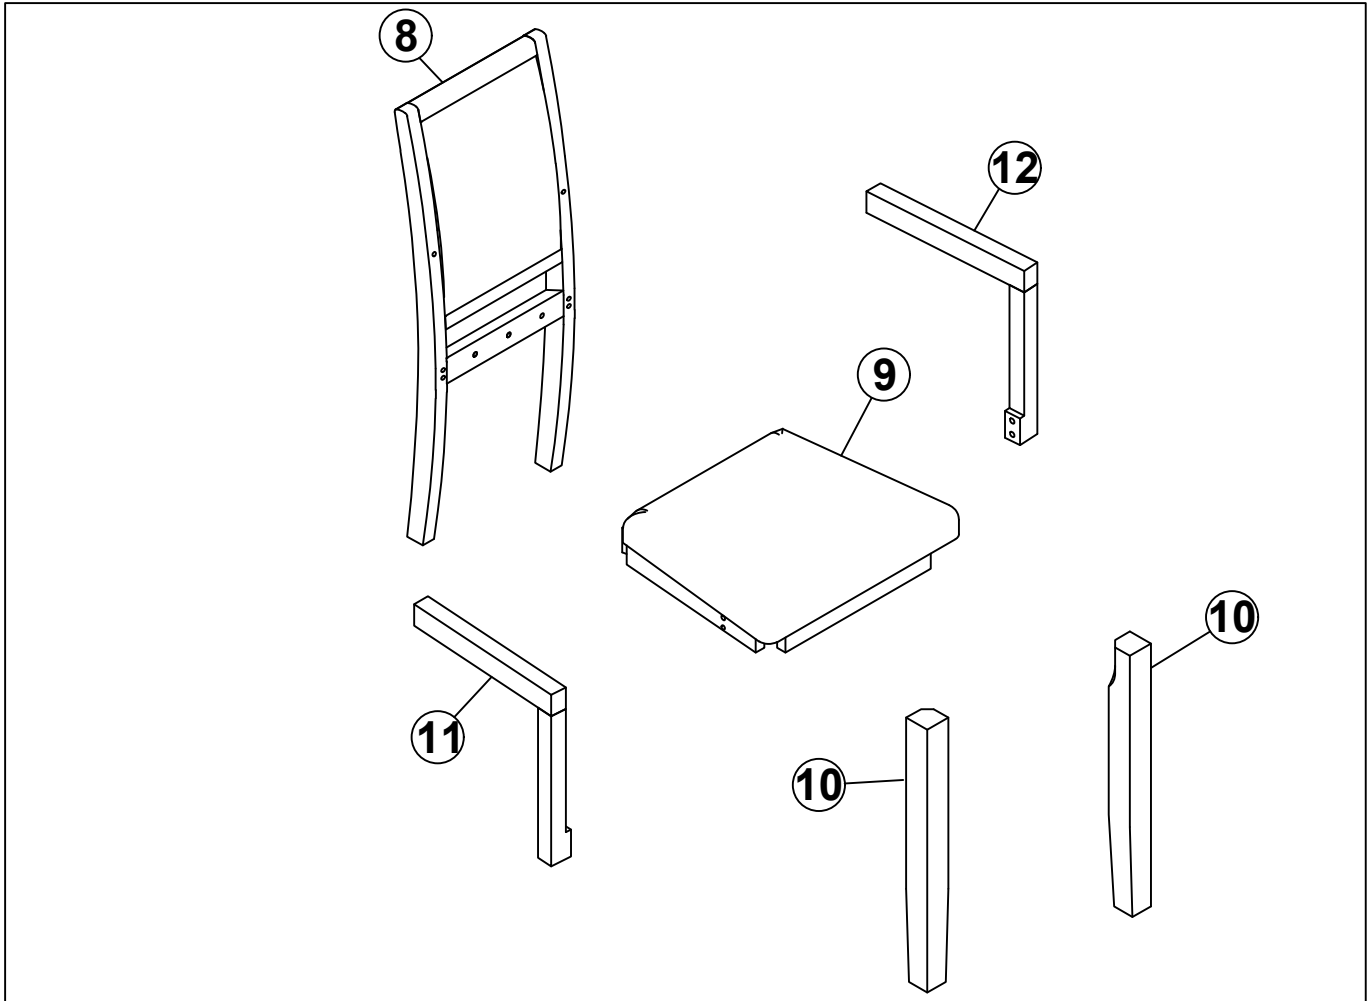

 
Part List For One Chair

8

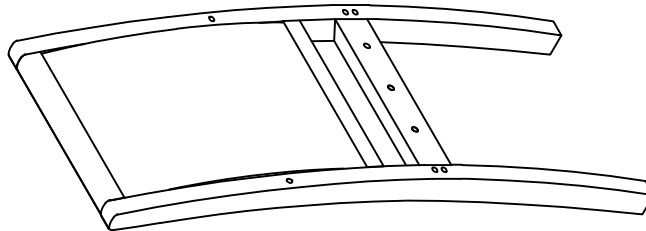

 
BACK FRAME (1pc)

9

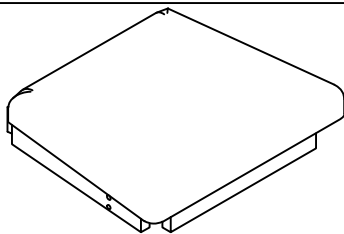

 
SEAT FRAME (1pc)

11



 
LEFT HANDRAILS (1pc)

10



 


 

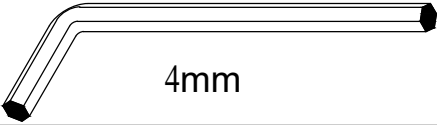 

LEGS CHAIR (2pcs)

12

 








RIGHT HANDRAILS (1pc)

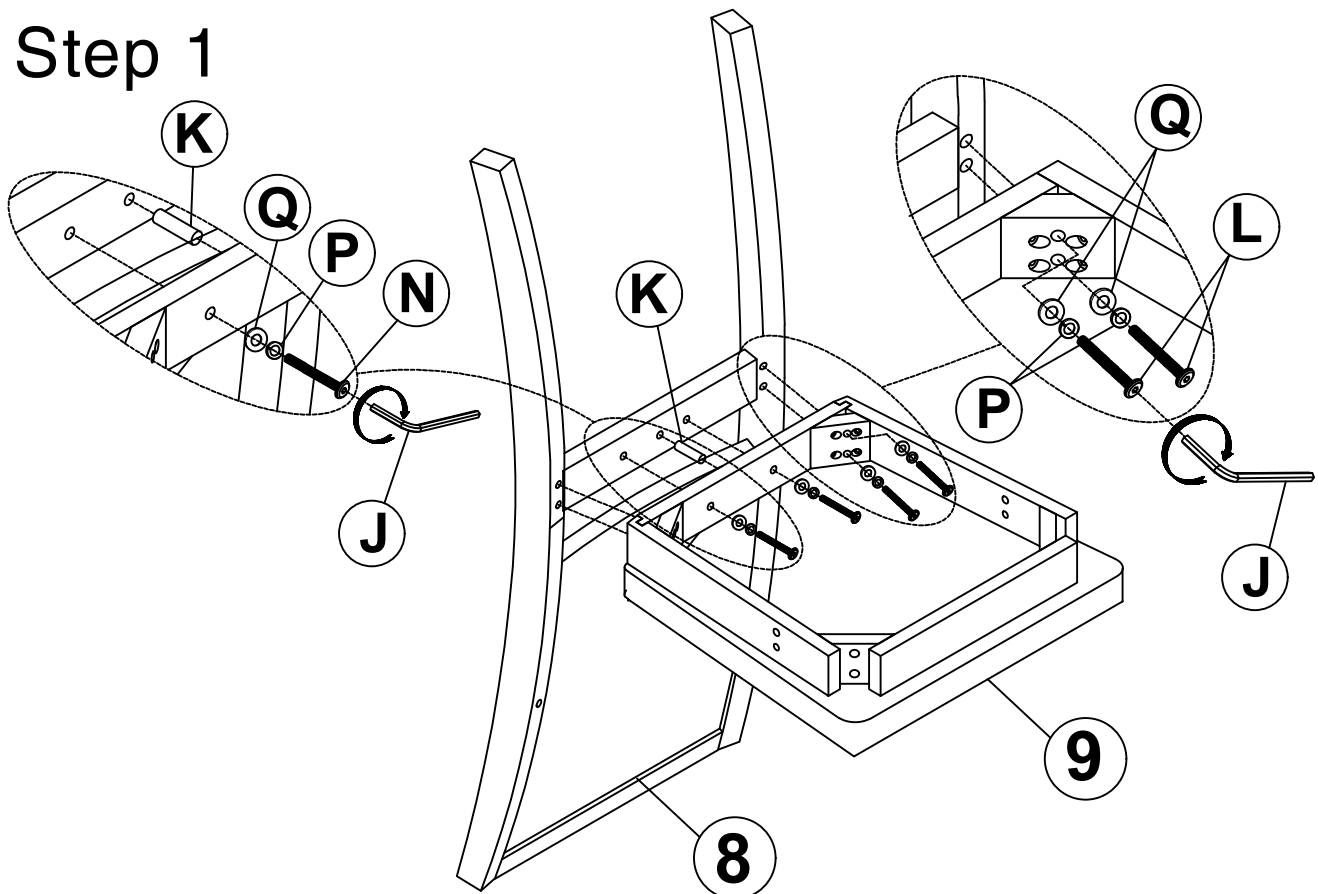Hardware List For One Chair

 
K	 Ø10 x 30mm	P	 Ø1/4" x 13mm
WOODEN PEGS (1pc)		SPRING WASHER (14pcs)	
L	 Ø1/4" x 75mm	Q	 Ø1/4" x 19mm
BOLT (4pcs)		FLAT WASHER (14pcs)	
M	 Ø1/4" x 55mm	J	 4mm
BOLT (6pcs)		ALLENKEY (1pc)	
N	 Ø1/4" x 35mm		
BOLT (6pcs)			





Step 1

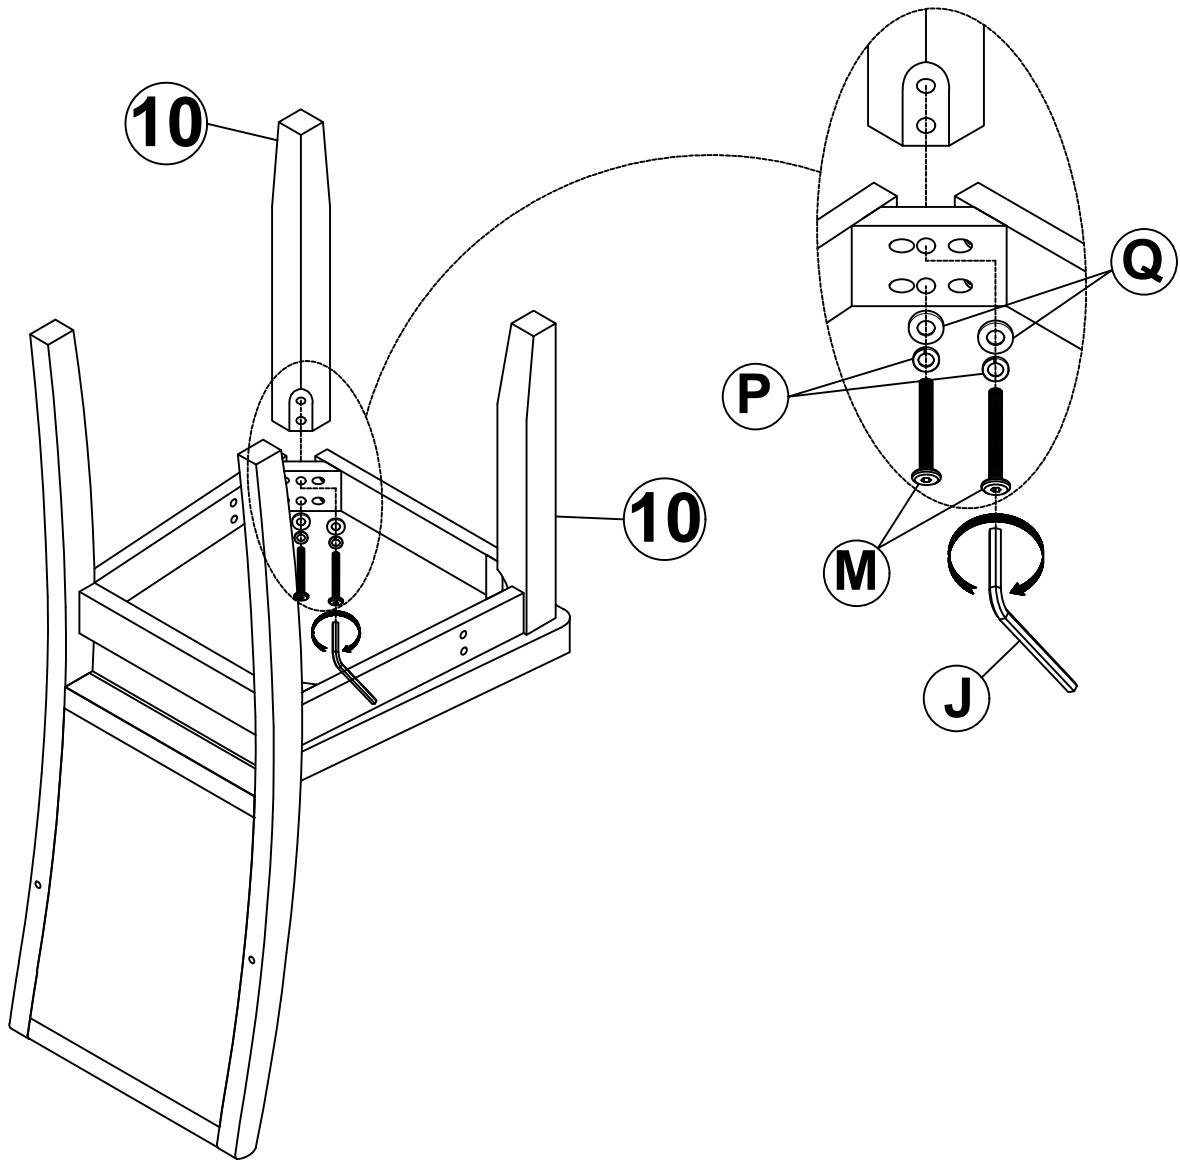

 
 
K	Ø10x30		1PC	P	Ø1/4"x13		6PCS
L	Ø1/4"x75		4PCS	Q	Ø1/4"x19		6PCS
N	Ø1/4"x35		2PCS	J	4x58		1PC





 
Step 2

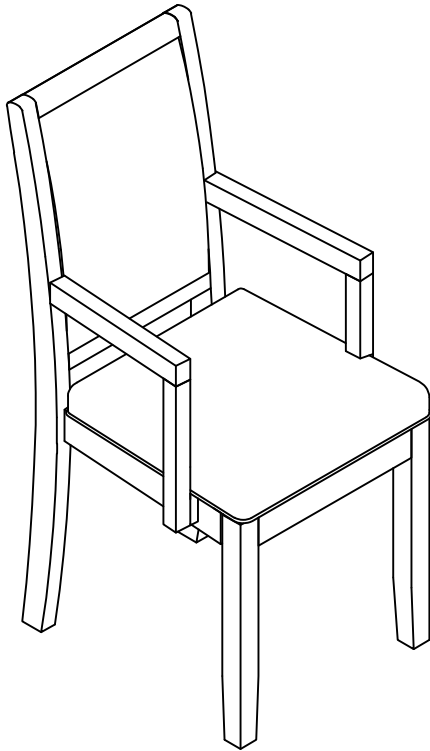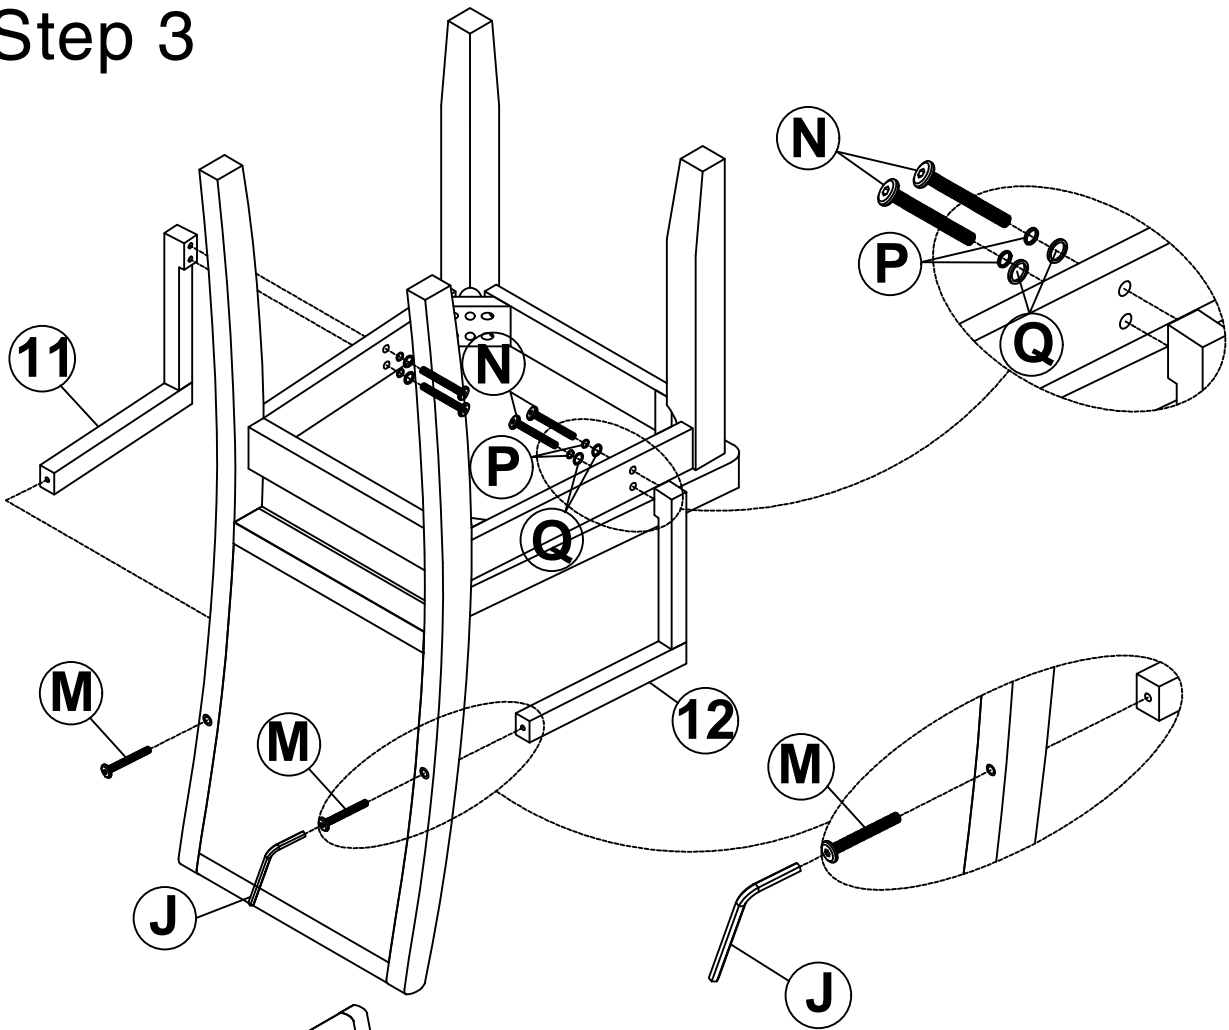

M	Ø1/4"x55		4PCS	Q	Ø1/4"x19		4PCS
P	Ø1/4"x13		4PCS	J	4x58		1PC

Step 3



				N	Ø1/4"x35		4PCS
M	Ø1/4"x55		2PCS	Q	Ø1/4"x19		4PCS
P	Ø1/4"x13		4PCS	J	4x58		1PC