
ITEM: WF316206

# **DINING TABLE**

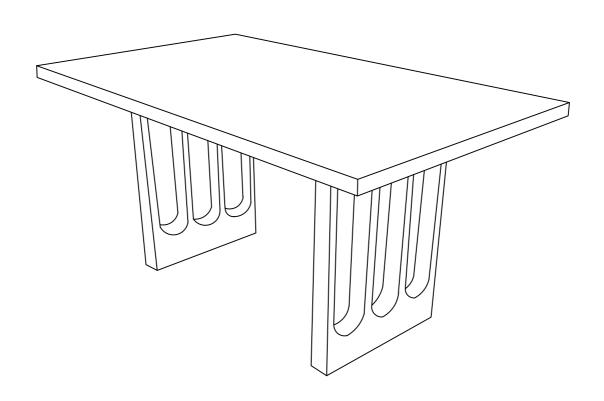

ITEM: WF316206

#### **Important Note!**


Please read these instructions fully before starting assembly:

- 1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts
- 2. Kindly follow the assembly instructions step by step.
- 3. Do not tighten all screws and bolts until the table is fully assembled.
- 4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
- 5. Parts of the assembly will be easier with 2 people.

#### Care and maintenance:

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


ITEM: WF316206

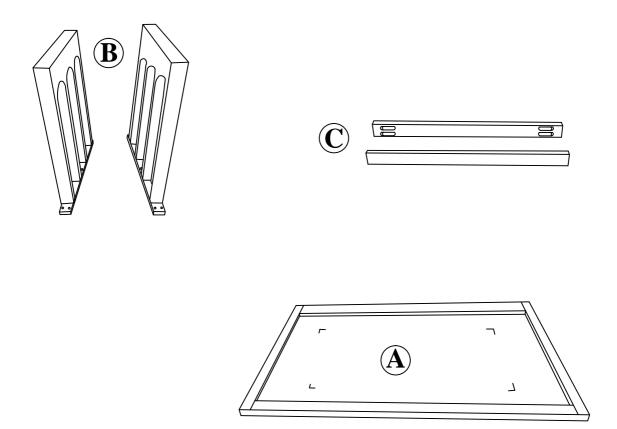


ITEM: WF316206

Part List For One	Hardware List For One
(A)	
	M4*32mm
TABLE TOP (1PC)	WOOD SCREW (12PCS)
B	(a) (b) (b) (c) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d
LEG (2PCS)	BOLT (8PCS)
C	3
SUPPORT (2PC)	SPRING WASHER (8PCS)
	4
	ALLEN KEY (1PC)


ITEM: WF316206

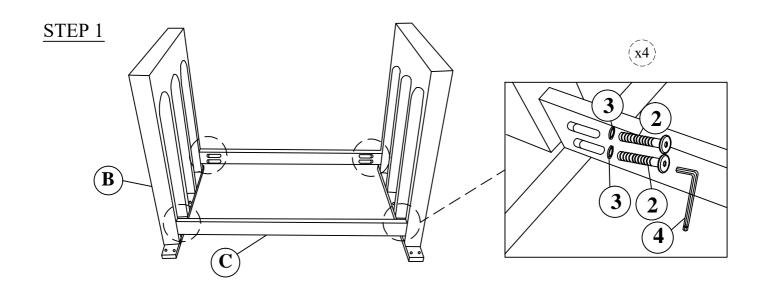

 WARNING: Please install the parts with care and on a clean surface.




NOTE: Do not fully tighten the bolt

 


# STEP 2

**WARNING:** Place the Table Top panel on a clean and smooth surface to avoid scratches!

 \* There are no pre-drilled holes on the table, please align the legs with the marking line provided and screw directly with screwdriver or electric drill.

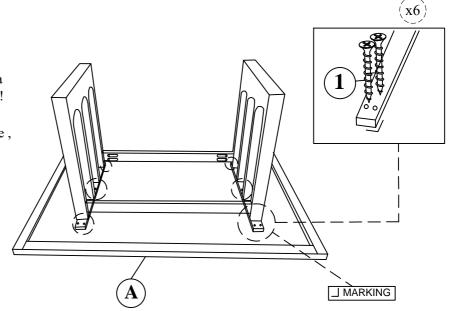



WOOD SCREW M4\*32mm

(1) x 12

ITEM: WF316206

#### **COMPLETE**

