
ITEM: WF316207

# **DINING CHAIR**

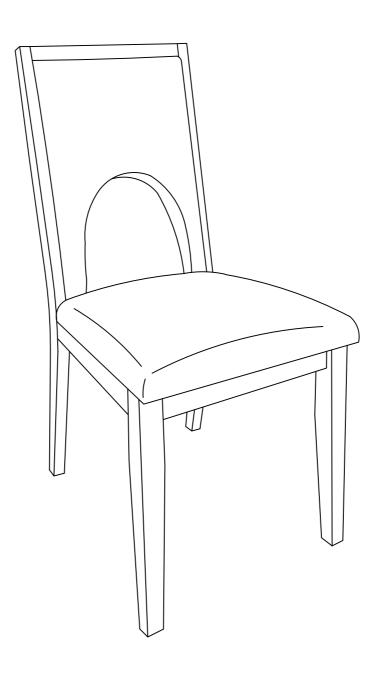

ITEM: WF316207

### **Important Note!**


Please read these instructions fully before starting assembly:

- 1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts
- 2. Kindly follow the assembly instructions step by step.
- 3. Do not tighten all screws and bolts until the table is fully assembled.
- 4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
- 5. Parts of the assembly will be easier with 2 people.

#### Care and maintenance:

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

ITEM: WF3162067

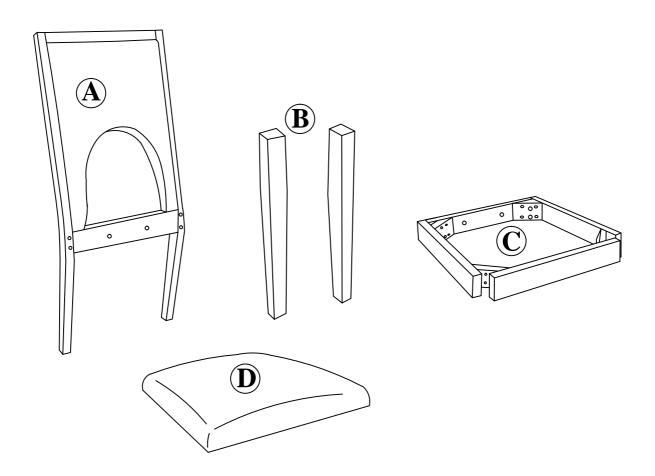



ITEM: WF316207

Part List For One	Hardware List For One		
A ·	1		
000	ALLEN KEY (1PC)		
BACK REST (1PC)	M6*40mm BOLT (2PCS)		
<b>B</b>	3 (a) (b) (b) (c) (c) (d) (d) (d) (d) (d) (d) (d) (d) (d) (d		
FRONT LEG (2PCS)	BOLT (4PCS)  4  (a) (a) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c		
C	M6*80mm BOLT (4PCS)		
	5		
BOX SEAT (1PC)	SPRING WASHER (10PCS)		
D C	6		
	FLAT WASHER (10PCS)		
CUSHION SEAT (1PC)	7 (31) → M4*32mm		
	WOOD SCREW (3PCS)		

 
ITEM: WF316207



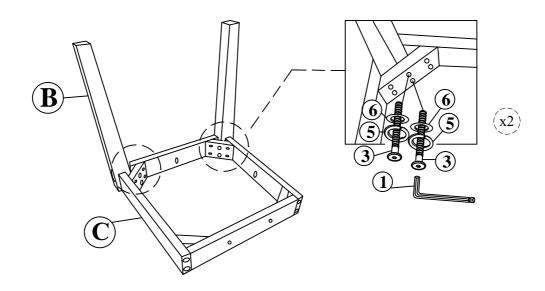





NOTE: Do not fully tighten the bolt

 

### STEP 2

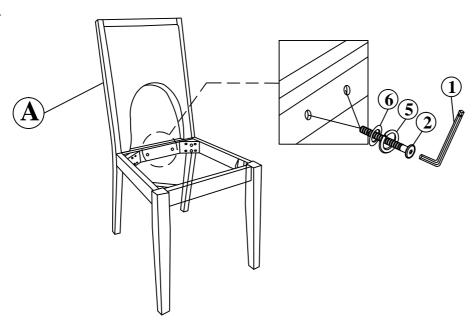

 



NOTE: Do not fully tighten the bolt

ALLEN KEY (1PC)	BOLT M6*40mm	SPRING WAHER	FLAT WASHER
		0	
① x 1	② x 2	③ x 2	⑥ x 2


ITEM: WF316207

#### STEP 3

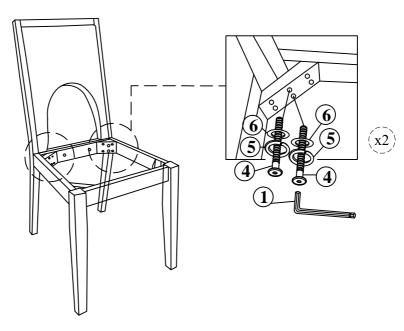


 


NOTE: Do not fully tighten the bolt

 

#### STEP 4

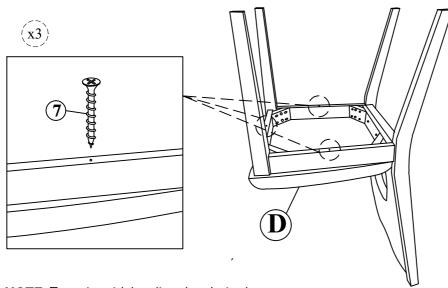

 

**NOTE:** To assist with leveling the chair, place a heavy object or have an adult sit on the Chair Seat to pressure the chair for leveling and fully tighten all bolts with Allen Key (1) to secure all legs.



ITEM: WF316207

COMPLETE

