 


ASSEMBLY INSTRUCTIONS

ITEM NO.WF318790

Dining Chair

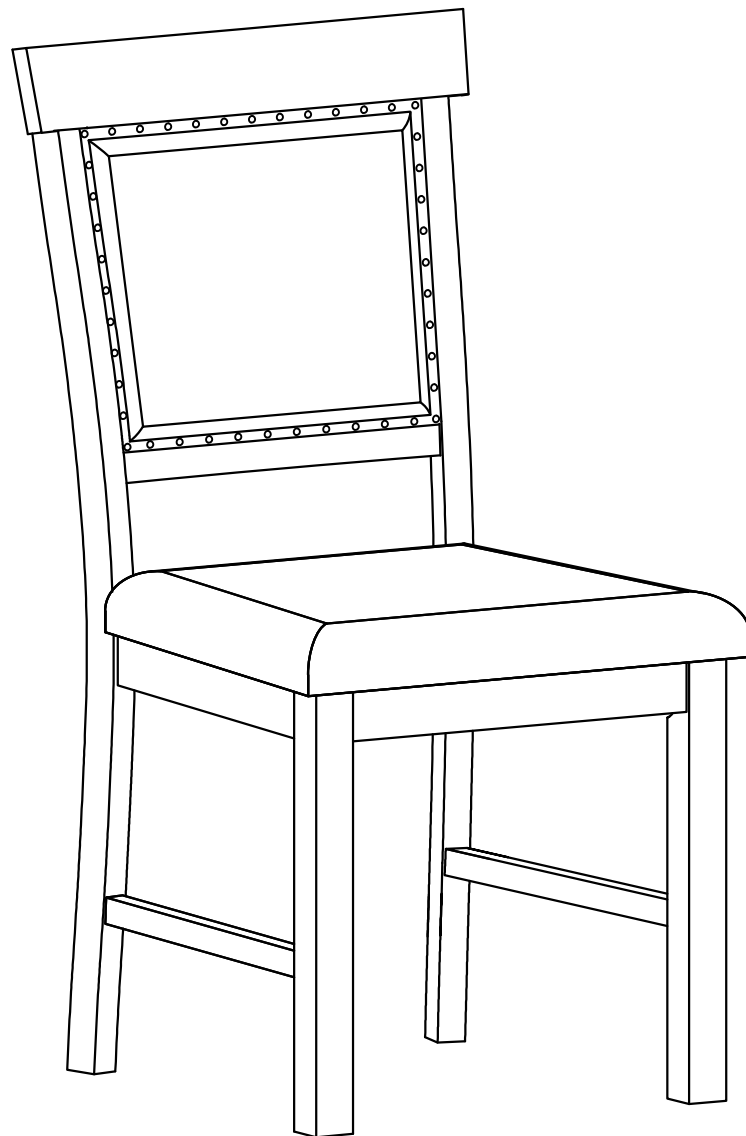

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318790

Please read these instructions fully before starting assembly:

 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318790

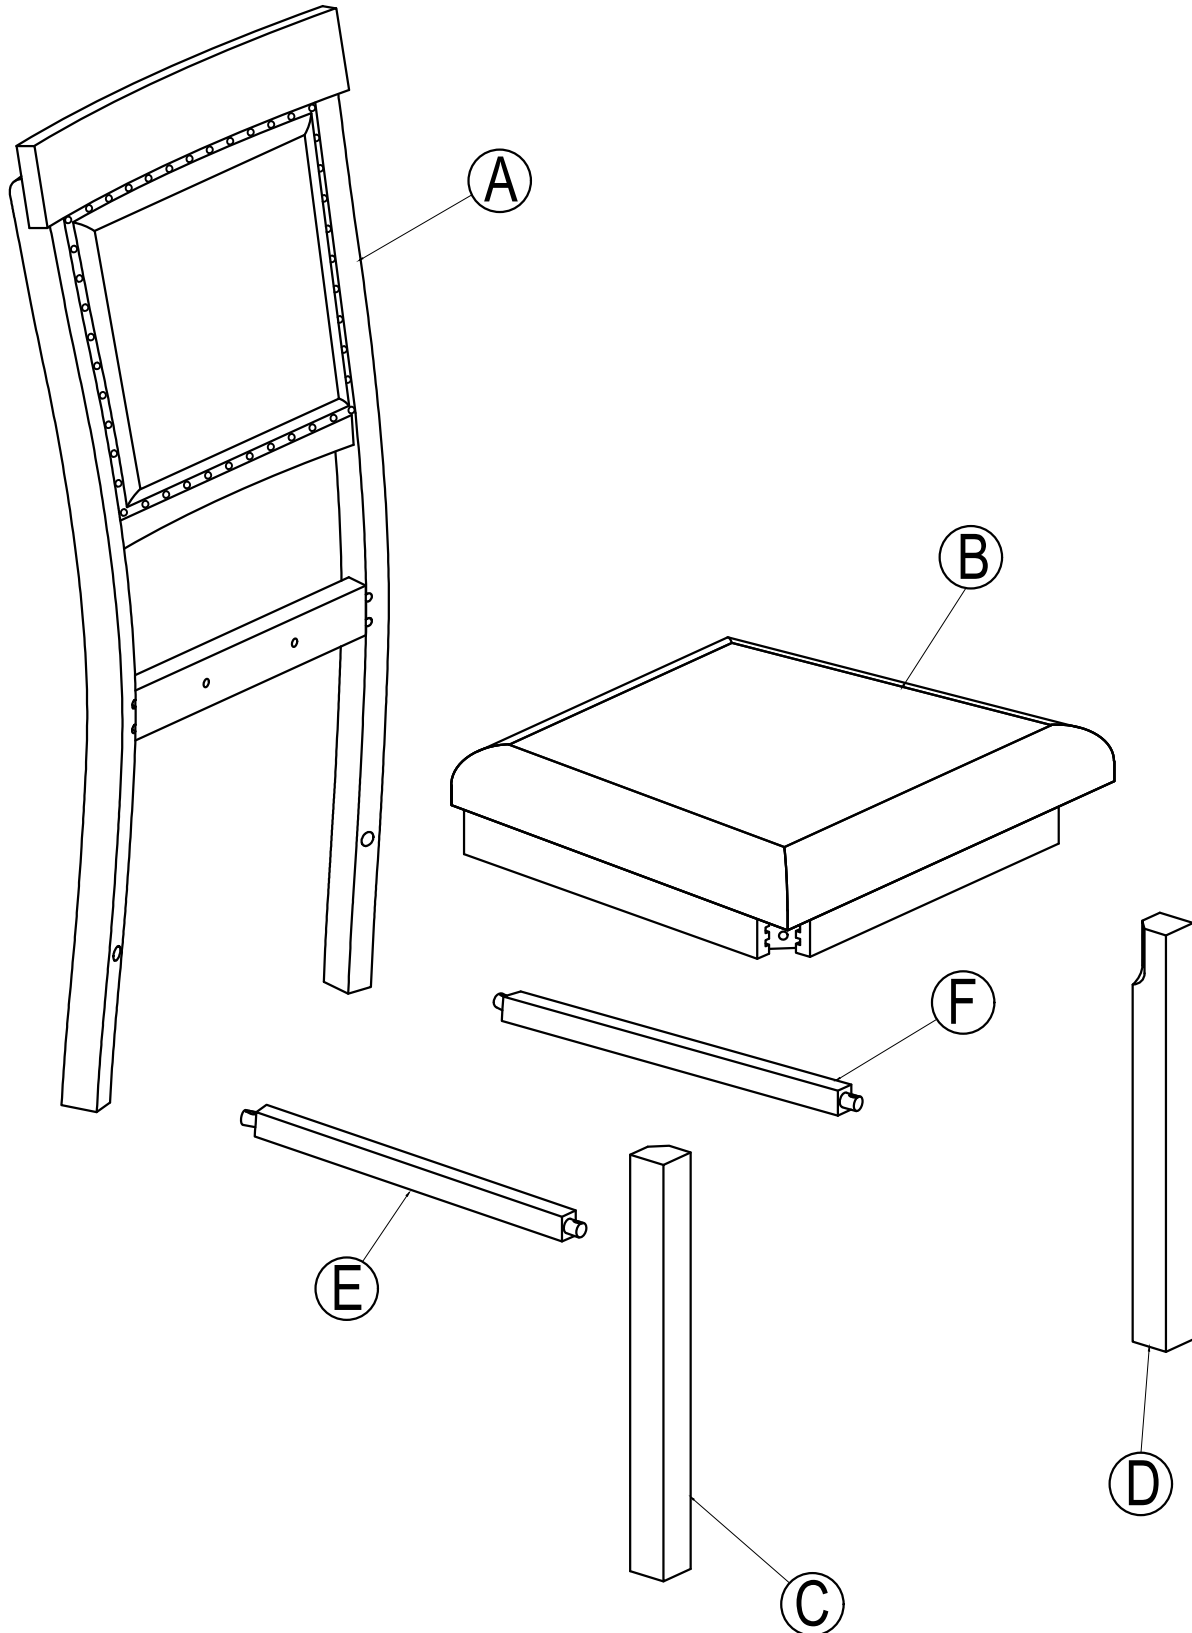


ASSEMBLY INSTRUCTIONS

ITEM NO.WF318790


Part List

 (A)

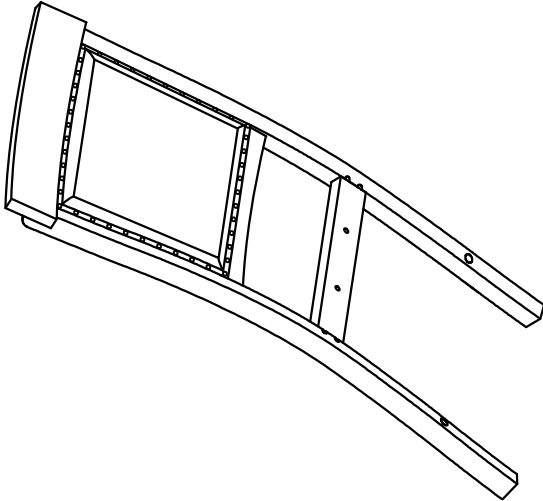


BACK FRAME (4 pcs)

 (B)

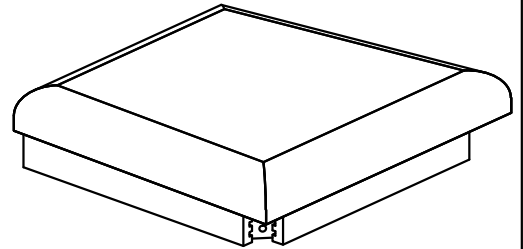


SEAT FRAME (4 pcs)

 (C)

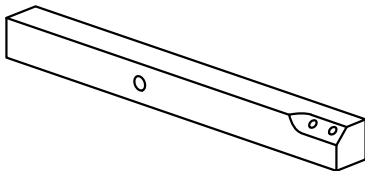


LEG LEFT (4 pcs)

 (D)

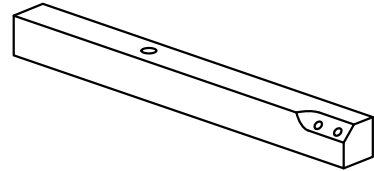


LEG RIGHT (4 pcs)

 (E)

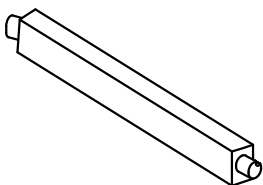

LEFT SIDE STRETCHER (4 pcs)

 (F)

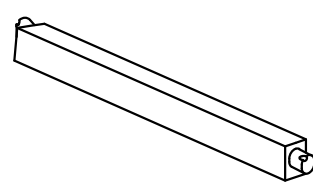


RIGHT SIDE STRETCHER (4 pcs)

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318790

Hardware List

 
①

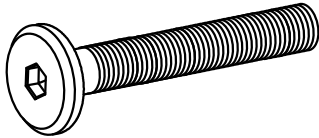

Ø 1/4" x 40mm

BOLT (8pcs)

 
②

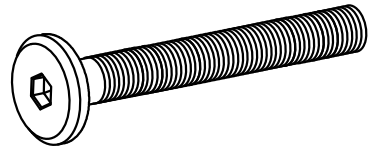

Ø 1/4" x 55mm

BOLT (16 pcs)

 
③

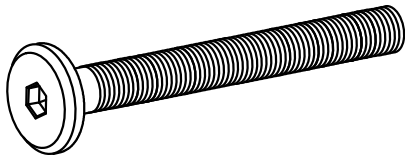

Ø 1/4" x 75mm

BOLT (16 pcs)

 
④



Ø5/16" x 13mm

FLAT WASHER (40 pcs)

 ⑤

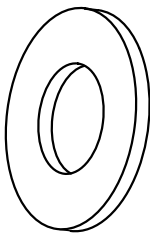

Ø5/16" x 19mm

LOCK WASHER (40 pcs)

 
⑥



4mm

ALLEN KEY (1pc)

⑦




Ø4 x 38mm



  

 
WOOD SCREWS (16 pcs)

ASSEMBLY INSTRUCTIONS


ITEM NO.WF318790

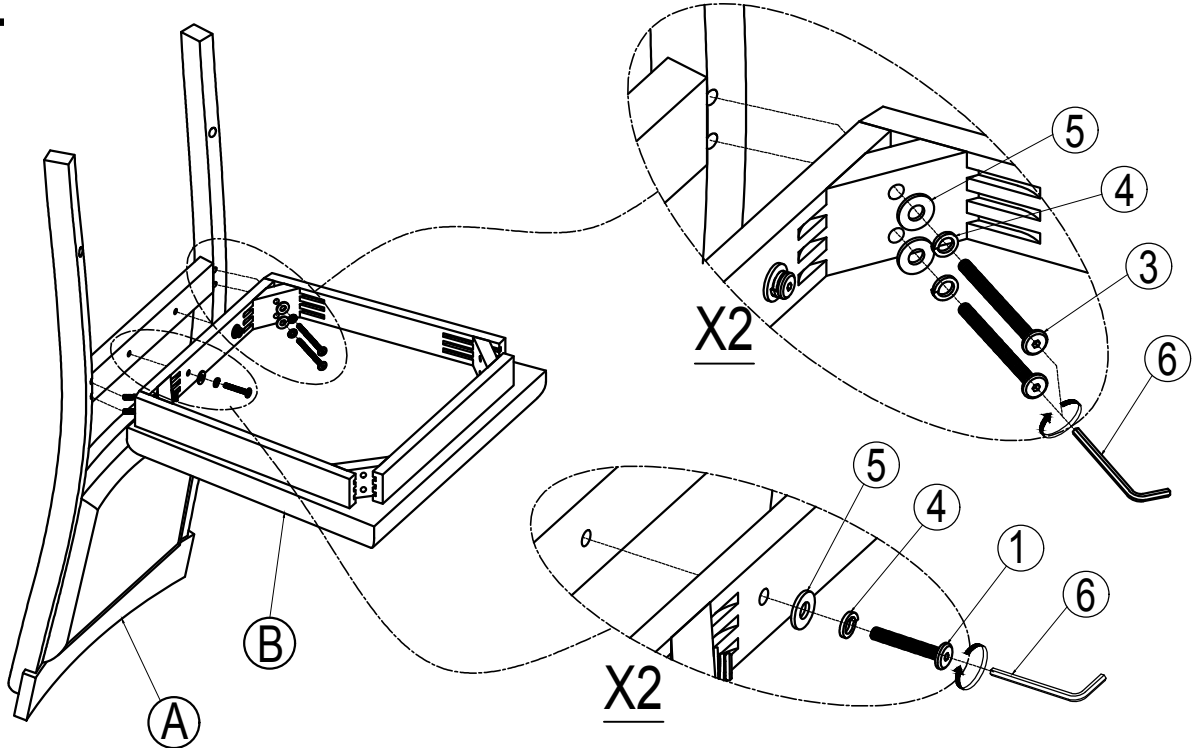
STEP 1:



BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	FLAT WASHER Ø5/16" x 13 mm	LOCK WASHER Ø5/16" x 19mm	ALLEN KEY 4 mm x 75mm
				
①x 2	③x 4	④x 6	⑤x 6	⑥x 1

  STEP 2:

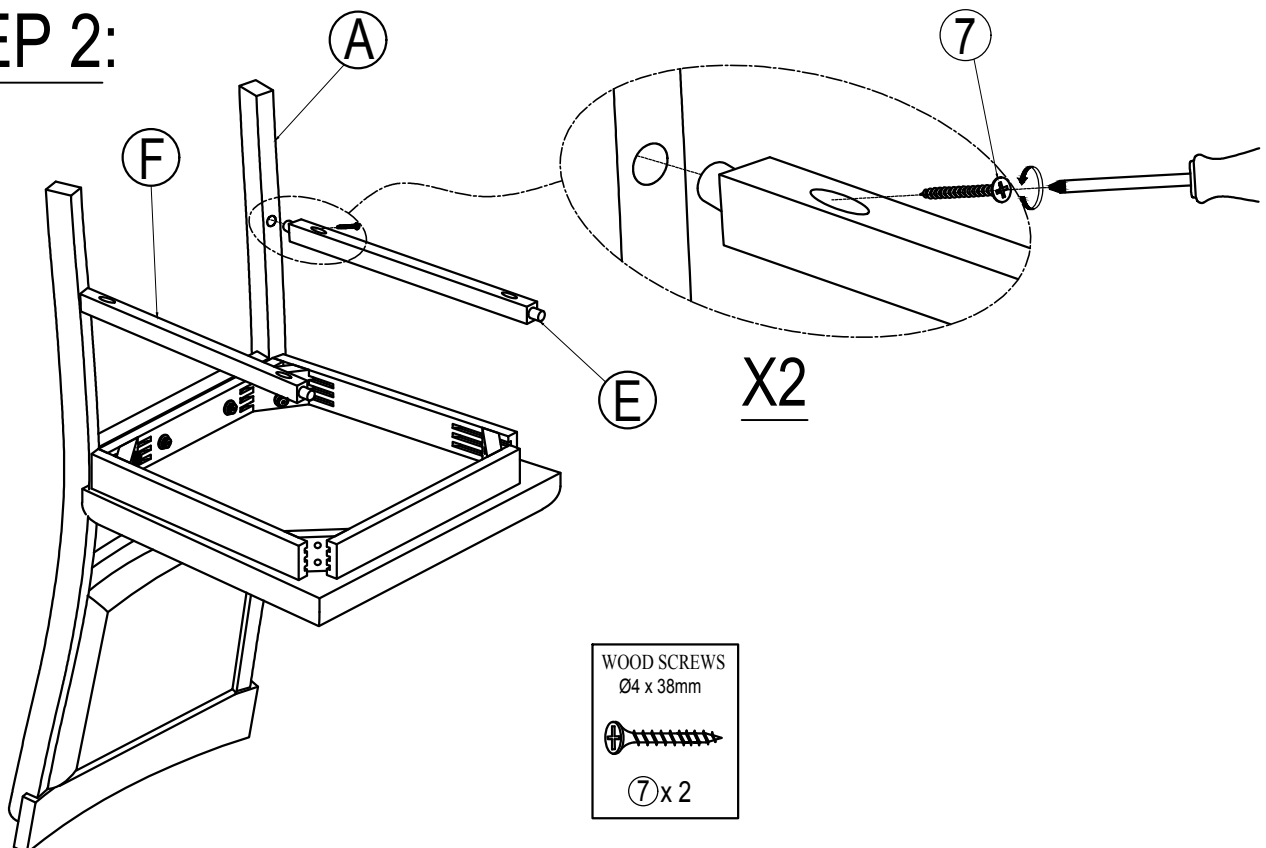 





 
 
WOOD SCREWS Ø4 x 38mm

⑦x 2

ASSEMBLY INSTRUCTIONS

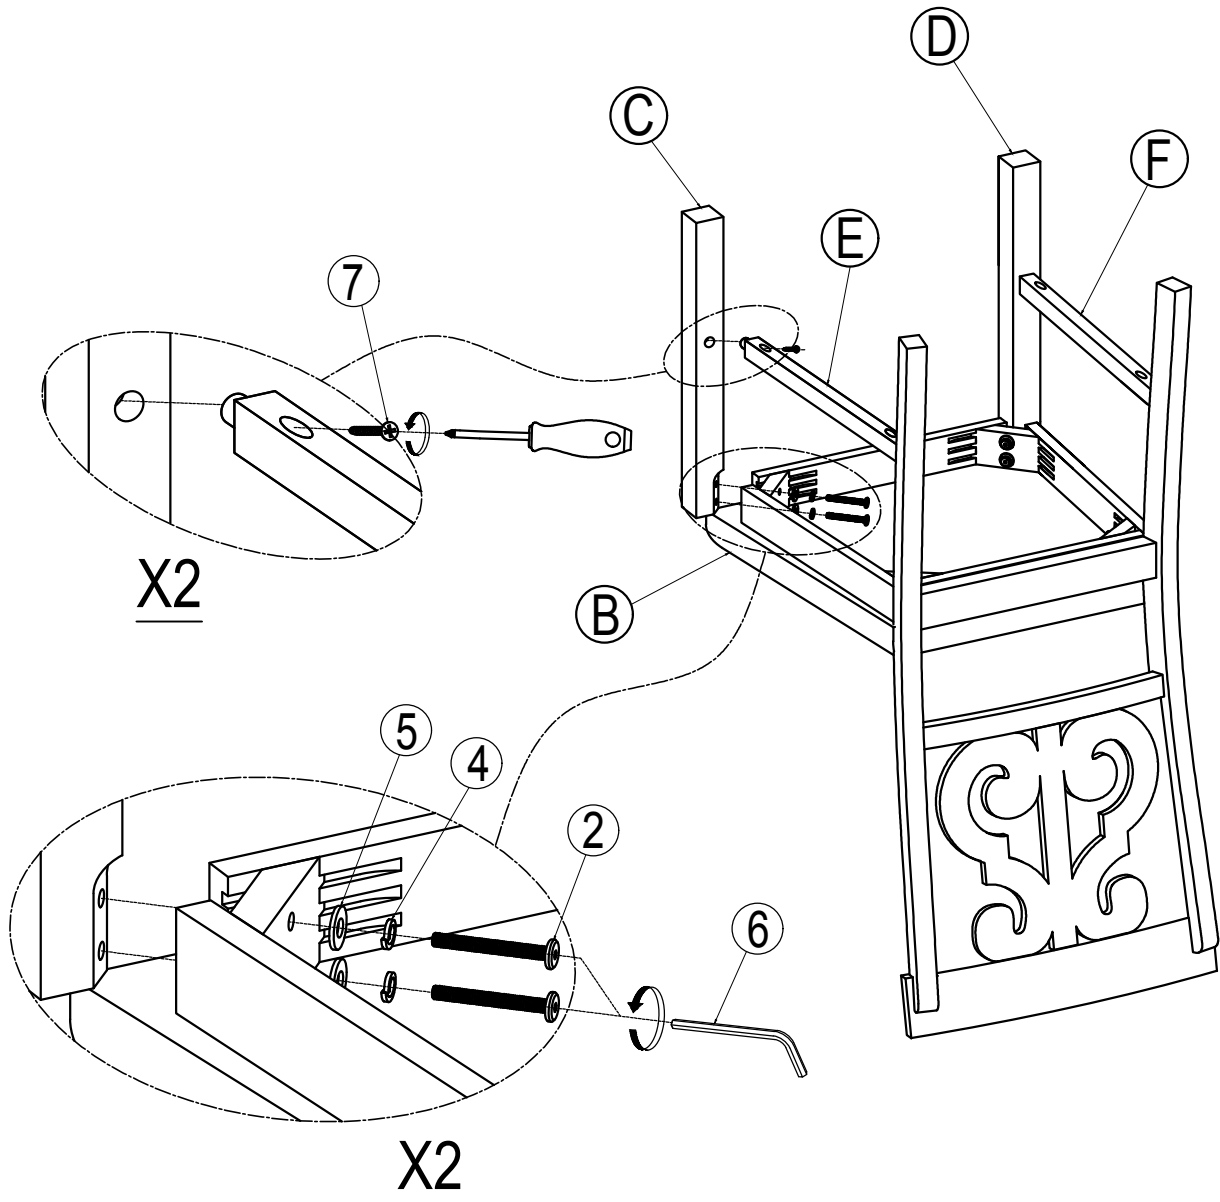ITEM NO.WF318790

STEP 3:



BOLT	FLAT WASHER	LOCK WASHER	ALLEN KEY	WOOD SCREWS
Ø 1/4" x 55 mm	Ø5/16" x 13 mm	Ø5/16" x 19mm	4 mm x 75mm	Ø4 x 38mm
				
②x 4	④x 4	⑤x 4	⑥x 1	⑦x 2

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318790

COMPLETE

