
DINING BENCH

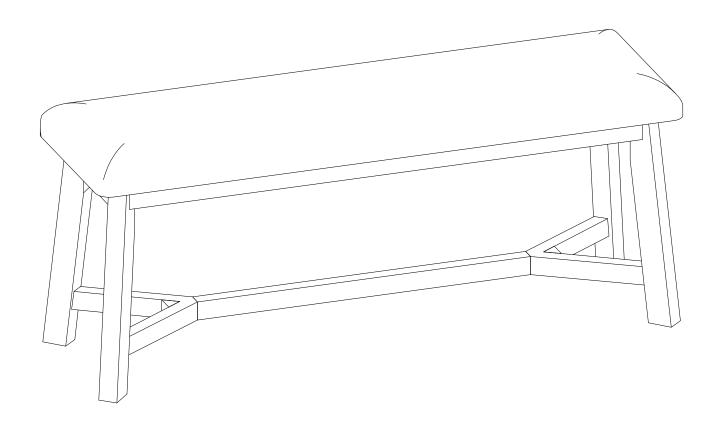



Please read these instructions fully before starting assembly:


- 1.Place all wooden parts on a clean and smooth surface such as arug or carpet to avoid scratching the parts.
- 2.Kindly follow the assembly instructions step by step.
- 3.Do not tighten all screws and bolts until the bench is fully assembled.
- 4.Unscrew the protective plastique supports from the metal insert of the legs before assembly.
- 5. Parts of the assembly will be easier with 2 people.


Care and maintenance:

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

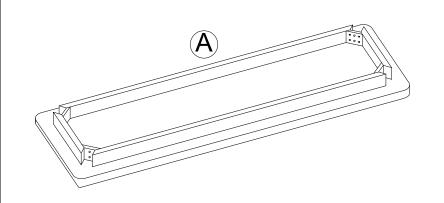


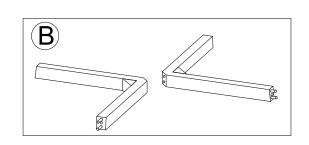

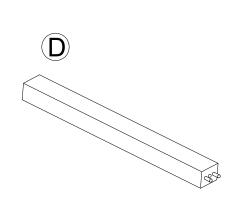

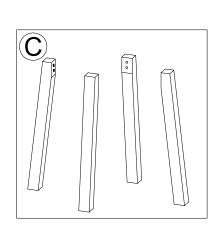

Part List For One			Hardware List For One		
A		SEAT CUSHION (1PC)	1	Ø1/4"x50mm	BOLT (12PCS)
B		BENCH LEG (4PCS)	2	Ø1/4"x65mm	LONG BOLT (2PCS)
<u>C</u>		STRETCHER (2PCS)	3	Ø1/4"x11mm	SPRING WASHER (14PCS)
D		LONG STRETCHER (1PC)	4	Ø1/4"x19mm	FLAT WASHER (14PCS)
			5	M4	ALLEN KEY (1PC)

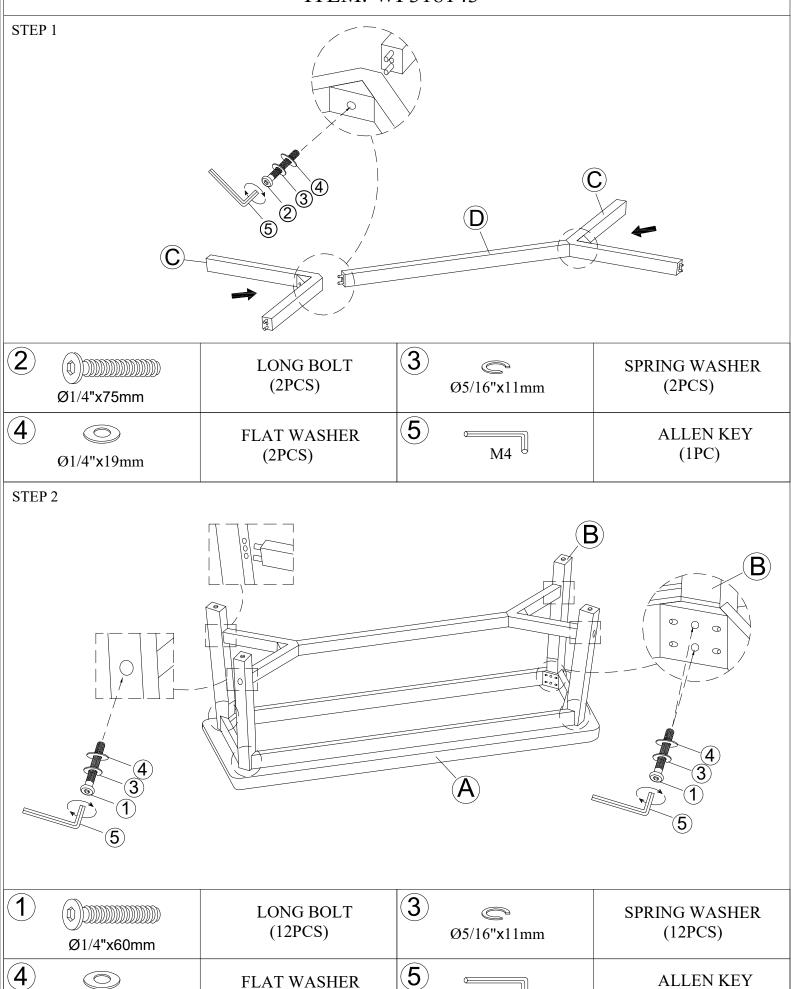

M4

FLAT WASHER (12PCS)

Ø1/4"x19mm

ALLEN KEY

(1PC)

COMPLETE

