

For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key.

\*Using an electric drill can damage the chair. Please re-tighten bolts manually.





## **Safety Information**



Sit in the center of the chair, with your back to the backrest



Do not use the chair with more than one person



Do not sit at the front edge of the chair



Do not push the chair around when a person is sitting in it



Do not stand on the chair



Do not push down on the backrest when a person is reclined

# INSTRUCTION MANUAL

Model: C-8109/C-8109-LEA

© HJ-Customer-Service@outlook.com © (909)637-7665 | (909)637-7593




# INSTRUCTION MANUAL

C-8109 C-8109-LEA

© HJ-Customer-Service@outlook.com © (909)637-7665 | (909)637-7593 EST 9:00AM--17:00PM

### **Package List**

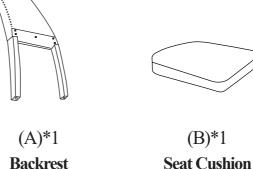









Bolts
M8\*75mm





M8\*55mm

Washer

(H)\*9



(I)\*9 Washer





Wrench

## **Assembly Instruction**

### Step 1

Lift the Non-woven at the bottom of the Seat Cushion (**B**). Take the parts out of it.

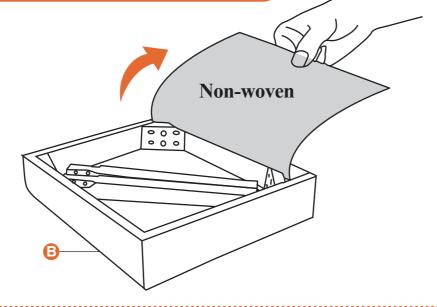


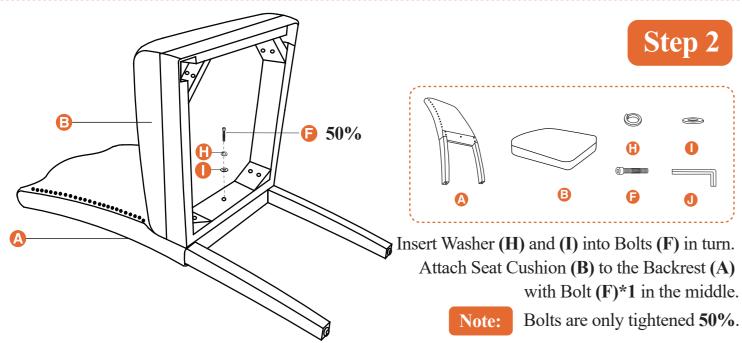


### Step 3



Insert Washer (H) and (I) into Bolts (E)\*4 in turn. Attach Seat Cushion (B) to the Backrest (A) with Bolt (E)\*4 on both sides. 100% tighten the Bolts (E)\*4 then 100% tighten the Bolts (F)\*1.

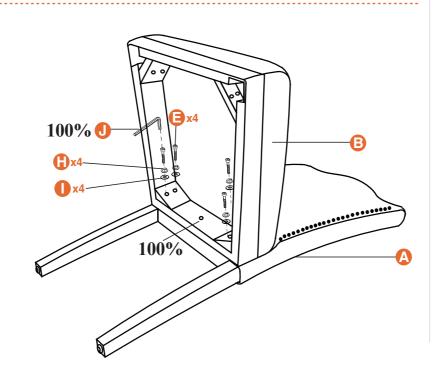


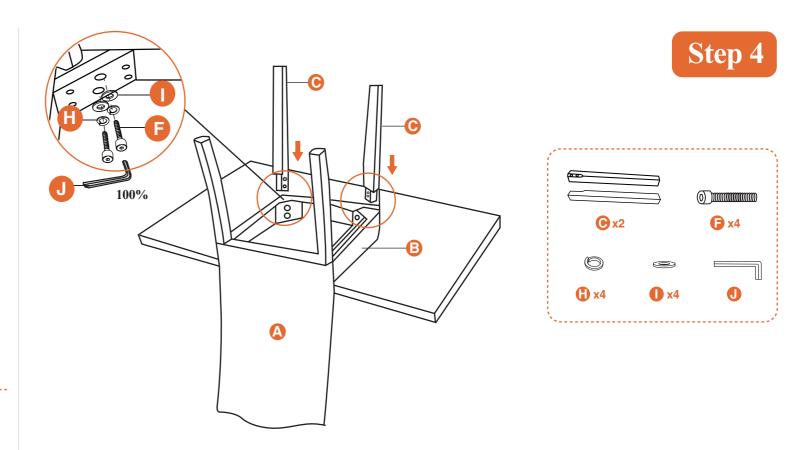


Tip the Dining Chair over. Insert Washer (H) and (I) into Bolts (F) in turn. Attach Leg (C)\*2 to both corners of the Seat Cushion (B) with Bolts (F)\*4.

### Step 5

Seal the Seat Bottom Cover at the bottom of the Seat Cushion **(B)**.

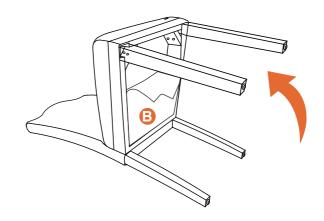

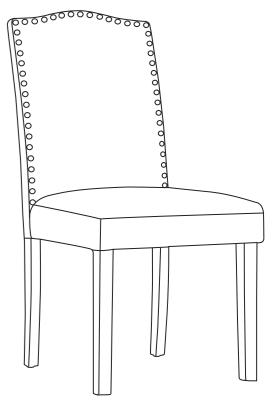

## **CAUTION:**

- \* Before using the chair, check to ensure that all bolts are fully tightened.
- \* Lubricate all parts and tighten all bolts every 6 months or whenever needed.