

For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key.

*Using an electric drill can damage the chair. Please re-tighten bolts manually.





Safety Information



Sit in the center of the chair, with your back to the backrest



Do not sit at the front edge of the chair



Do not stand on the chair



Do not use the chair with more than one person



Do not push the chair around when a person is sitting in it



Do not push down on the backrest when a person is reclined



Do not place all your weight on only the backrest

INSTRUCTION MANUAL

Model: C-3718-5A

HJ-Customer-Service@outlook.com
(909)637-7665 | (909)637-7593



INSTRUCTION MANUAL

C-3718-5A

© HJ-Customer-Service@outlook.com © (909)637-7665 | (909)637-7593 EST 9:00AM--17:00PM

Package List







(B)*1 **Seat**



(C)*1L*1R Armrests



(D)*1 Mechanism







(F)*1 **Base**



(G)*5 Legs



(H)*5 Casters



(I)*4 Bolts











(J)*6 **Bolts**


(K)*10 **Bolts**

 
(L)*4 Bolts


(M)*1 Wrench

(N)*1 Foot Ring


Assembly Instruction

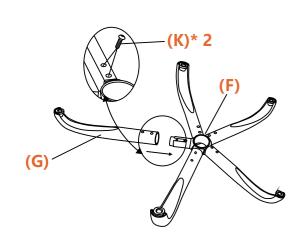




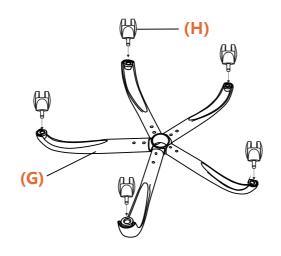

Press Casters (H)*5 into the holes at the end of Legs (G)*5.

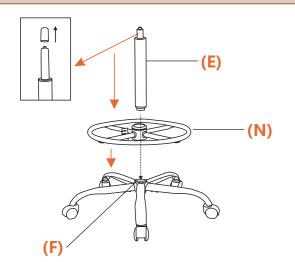

Insert Gas Lift (E) into the center hole of the Foot Ring (N) and lift the Foot Ring upward to secure it to the Gas Lift. Then insert Gas Lift (E) into the Base (F). Remove the cover from the top of the Gas Lift (E).

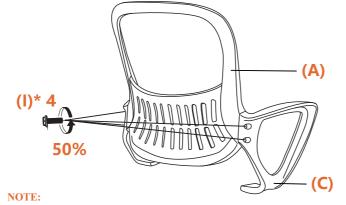


1.Bolts (I) are only tightened 50%.


2.Armrests (C)*1L*1R are marked with "L" (Left) and "R" (Right) to show which side they should be installed.




Using Wrench (M), install Armrests (C)*1L*1R to both sides of the Backrest (A) with Bolts (I)*4.

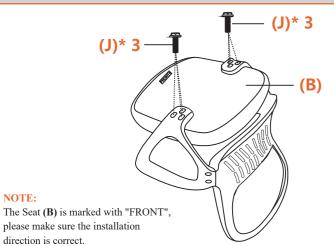


Turn the Seat (B) upside down . Using Wrench (M), install Armrests (C)*1L*1R to the Seat with Bolts (J)*6.

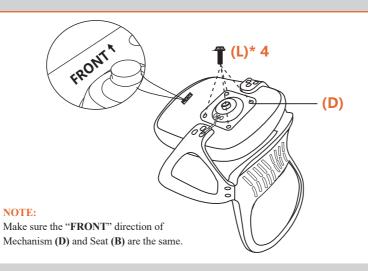

Using Wrench (M), attach Mechanism (D) to the Seat (B) with Bolts (L)*4.

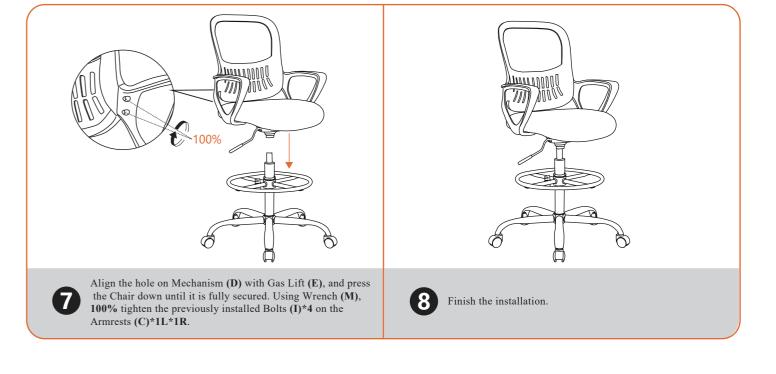

Instructions For Use

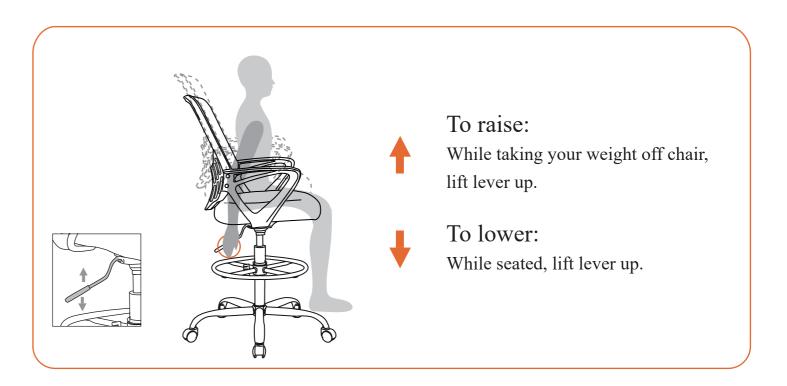

CAUTION:

- * Before using the chair, check to ensure that all bolts are fully tightened.
- * Lubricate all parts and tighten all bolts every 6 months or whenever needed.