


For longer use

Re-tighten bolts every 6 months by using

the enclosed allen-key.

*Using an electric drill can damage the chair. Please re-tighten bolts manually.

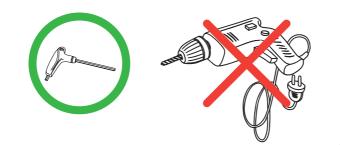

Safety Information







Sit in the center of the chair, with your back to the backrest

Do not sit at the front edge of the chair

Do not stand on the chair

 


Do not use the chair with more than one person



Do not push the chair around when a person is sitting in it








Do not place all your weight on only the backrest

INSTRUCTION MANUAL

Model: C-6462

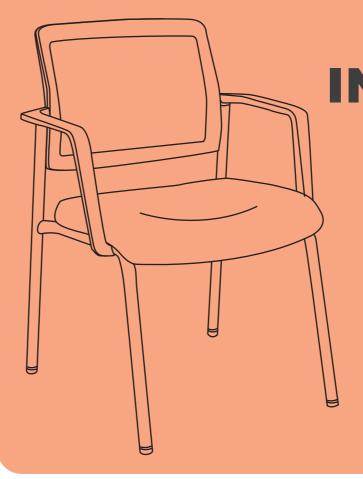

Package List





(A)*1 Backrest

(B)*1 Seat Cushion



(E)*4 **Bolts**

(F)*4 Bolts

INSTRUCTION MANUAL C-6462






(C)*1 Left Leg


(D)*1 Right Leg



(G)*1 Wrench

Assembly Instruction

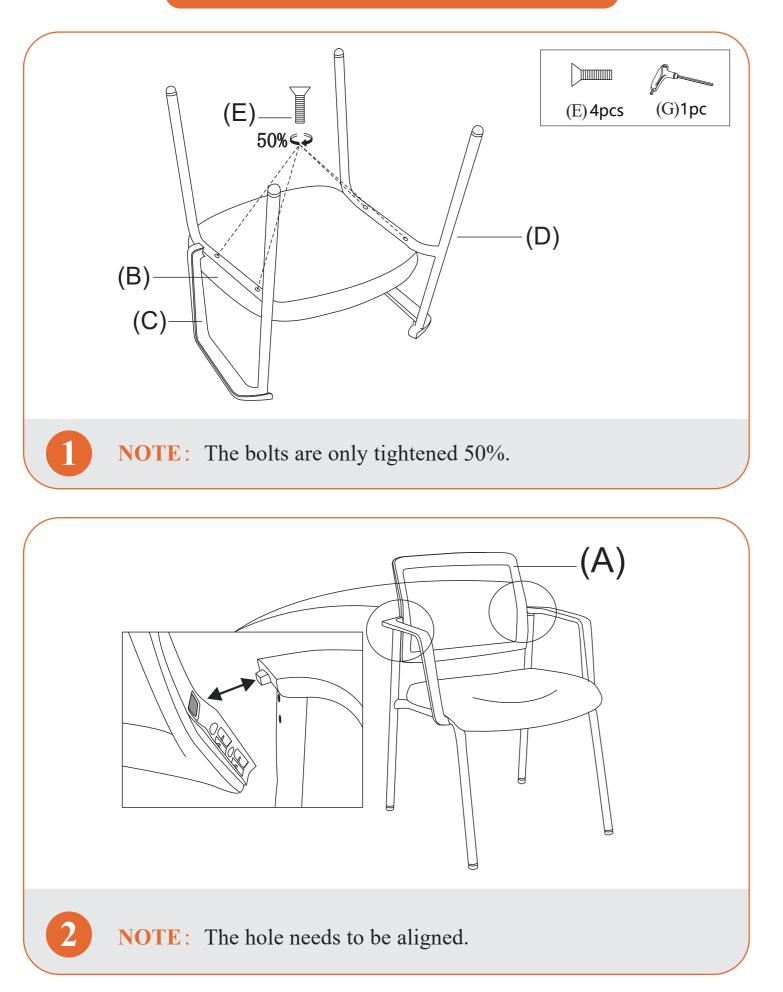

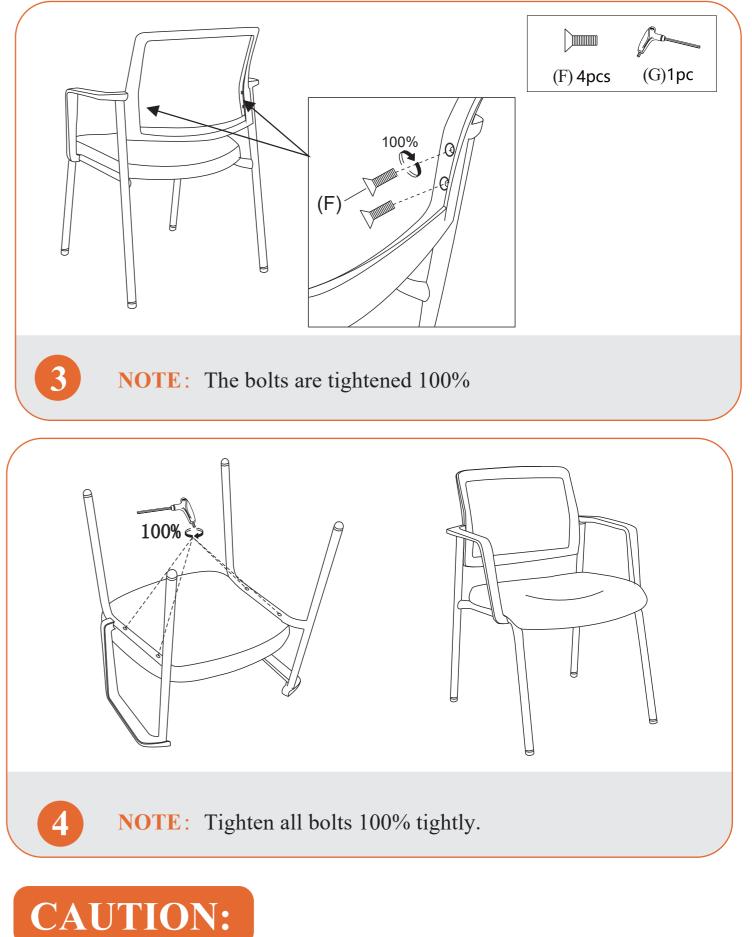

* Before using the chair, check to ensure that all bolts are fully tightened. * Lubricate all parts and tighten all bolts every 6 months or whenever needed. **NOTE**: 1. All bolts are 100% tightened.