

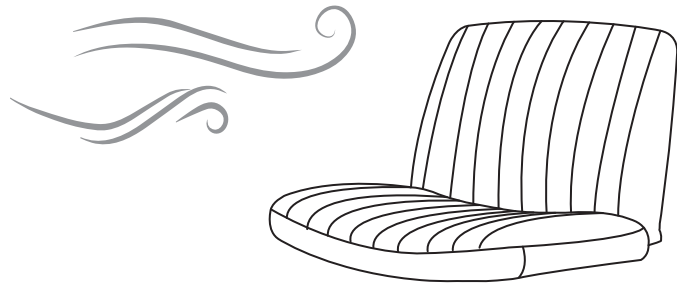


To deodorize the leather
leave the chair in a shady
outside for 1-2 days.

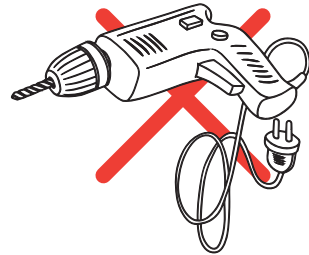

For longer use

Re-tighten bolts every 6 months by using
the enclosed allen-key.
*Using an electric drill can damage the chair.
Please re-tighten bolts manually.

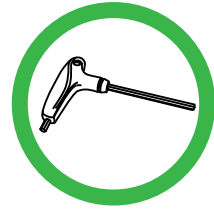

Safety Information



Sit in the center of the
chair, with your back to
the backrest



Do not sit at the front
edge of the chair



Do not stand on the
chair



Do not use the chair
with more than one
person



Do not push the chair
around when a person
is sitting in it



Do not push down on
the backrest when a
person is reclined




Do not place all your
weight on only the
backrest

INSTRUCTION MANUAL


Model: C-7262

INSTRUCTION MANUAL

C-7262

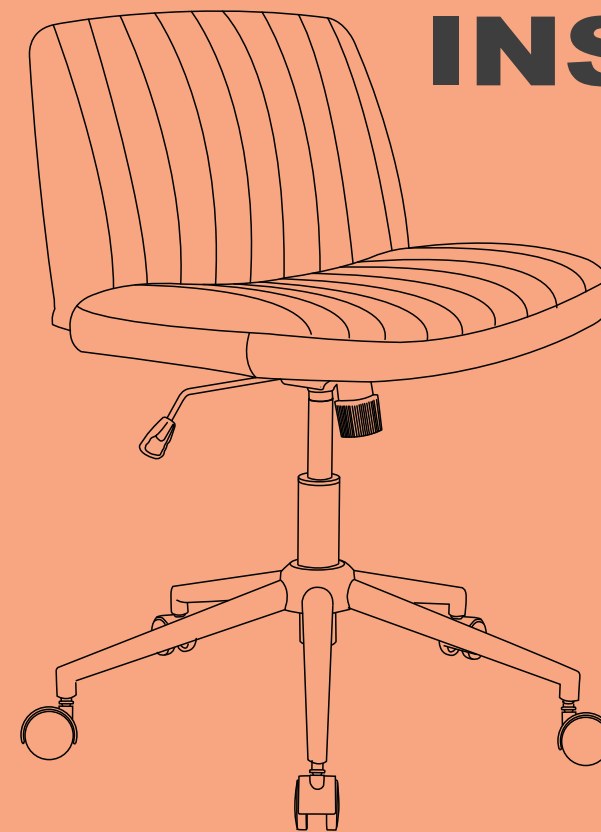


Package List

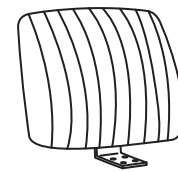


(A)*1 Backrest



(B)*1 Seat Cushion

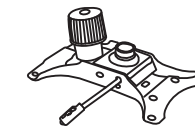

(C)*1 Mechanism

 

(D)*1 Gas Lift



(E)*1 Base



M6x22mm
(F)*4 Bolts



M6x30mm
(G)*4 Bolts



(H)*5 Leg



(I)*5 Caster



(J)*5 Foot Pad




M6x18mm
(K)*5 Bolts



(L)*1 Wrench


Assembly Instruction

(H) 5pcs (K) 5pcs (L) 1pc

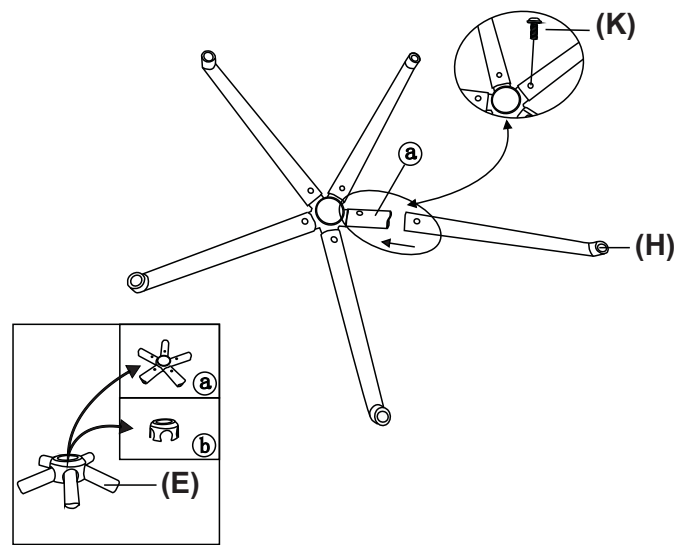


1 Remove the cover from Base E and use Wrench L * 1 and Bolt K * 5 to connect Base E to leg H * 5.

(I) 5pcs (J) 5pcs (L) 1pc

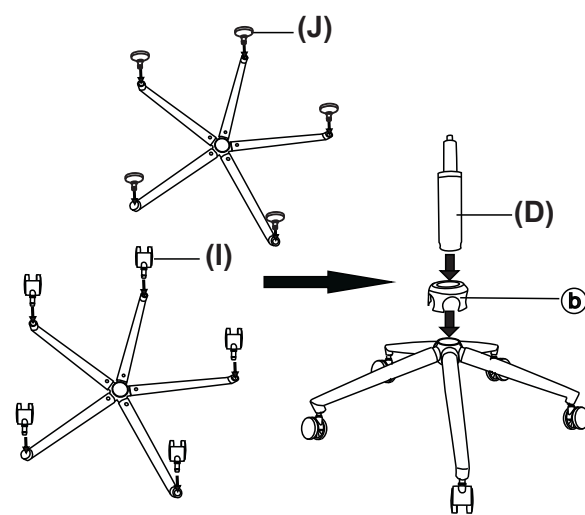

2 Press and install the Caster I * 5 or Foot pad J * 5 onto the Leg H * 5, and then place the Cover and Air Rod D onto Base E.


(F) 4pcs (L) 1pc

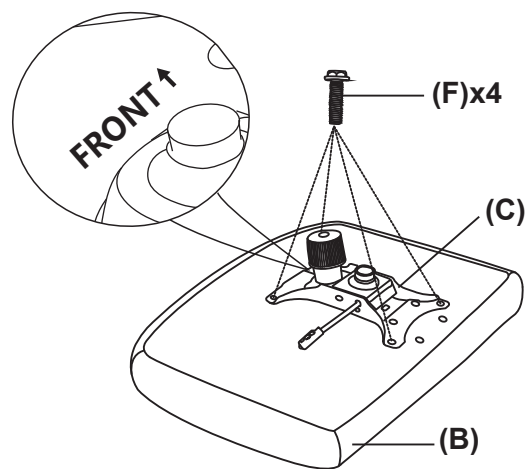

NOTE:
The Mechanical C and the Seat Cushion are labeled "FRONT" in the same direction.


3 Connect Mechanism C and Seat Cushion B with Wrench L * 1 and Bolt F * 4.

(G) 4pcs (L) 1pc

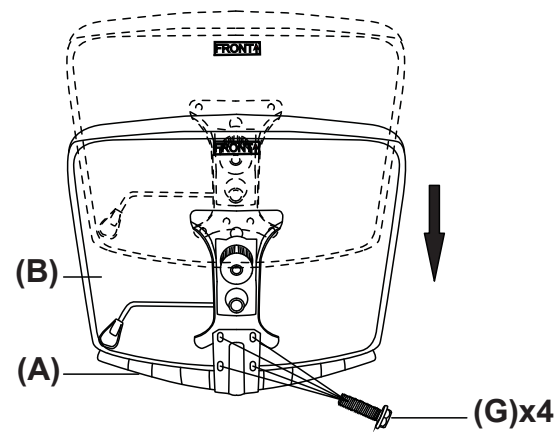


4 Align the screw holes on the Seat Cushion B and Backrest A. Using Wrench H, secure both completely with Bolts G*4.

Instructions For Use

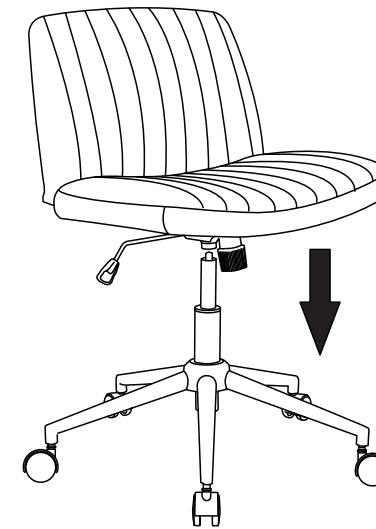

5 Align the hole on Mechanism (C) with Gas Lift (D), and press the Chair down until it is fully secured.

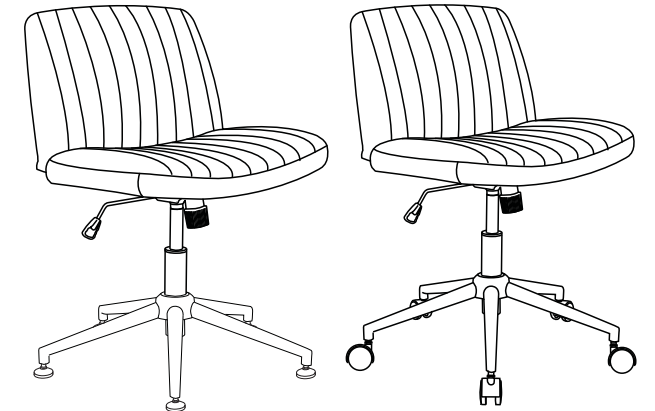

CAUTION:

- * Before using the chair, check to ensure that all bolts are fully tightened.
- * Lubricate all parts and tighten all bolts every 6 months or whenever needed.